


AL2 _Label Sample and Label Location

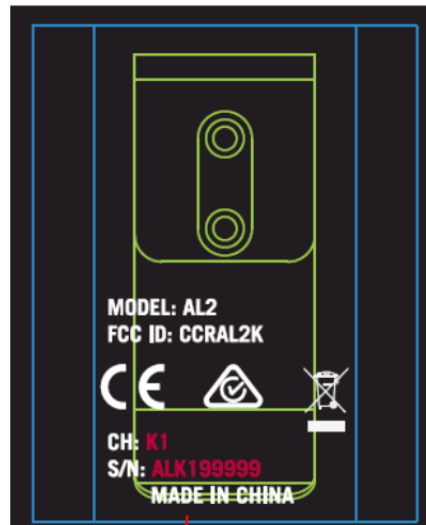

AL2 Serial Scheme:

ALK1?????	ALK4?????
ALK2?????	ALK5?????
ALK3?????	ALK6?????

Description: AL: stands for AL2; K1-K6: Channel designation; ?????: sequential number for each unit 00001-99999 when 99999 is reached start at 00001 again

ALK100001~99999	ALK400001~99999
ALK200001~99999	ALK500001~99999
ALK300001~99999	ALK600001~99999

