

'5816S' PRODUCT VARIANT

 
SEE CARTON INTERIOR DRAWING
FOR FCC/IC STATEMENTS

Perforation (1/4" x 1/8")


See inside of
carton for
installation
instructions.

FOR DOCUMENTATION AND ONLINE SUPPORT
<https://mywebtech.honeywell.com/>
FOR WARRANTY INFORMATION GO TO:
www.honeywell.com/security/hsc/resources/wa.

MOUNTING and ENROLLING NOTES
Refer to the control's instructions to select a mounting location, enroll and program the device.
Before mounting, conduct Go/No Go tests to verify adequate signal strength. Reorient or relocate the device as needed.
Program the device as an "RF" type device.
UL: Program as a "Supervised RF" device type.
Note: Product must be tested at least once each week.



To remove the mounting bracket, disengage the case locking tab through the locking tab release window and slide the mounting bracket upward.

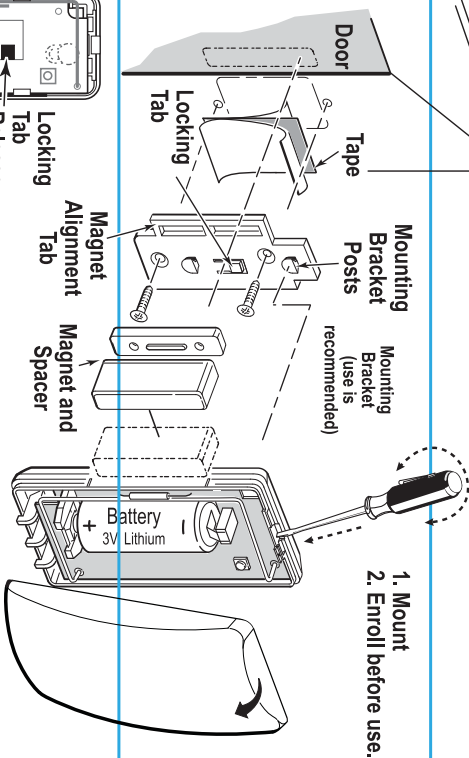

See inside of
carton for
installation
instructions.

Battery Information
Replace battery only with:
Panasonic CR123A,
Duracell DL123, DL123A or
Honeywell 466.
Observe correct polarity.

REFER TO THE INSTALLATION
INSTRUCTIONS FOR THE CONTROL WITH
WHICH THIS DEVICE IS USED, FOR
DETAILS REGARDING LIMITATIONS OF THE
ENTIRE ALARM SYSTEM.

BATTERY CAUTION: Risk of fire,
explosion and burns. Do not
recharge, disassemble, heat above
212°F (100°C), or incinerate.
Dispose of used batteries promptly.
Keep away from children.

Attention de batterie : Risque
d'incendie, d'explosion et de brûlures.
Ne rechargez pas, démontez, chauffez
au-dessus de 212°F (100°C) ou
incinérerez. Débarrassez-vous des
batteries utilisées promptement.
Gardez à partir des enfants.