

Quick Installation Guide

Full Installation Guide [Part Number 800-24918] available online at: <https://mywebtech.honeywellhome.com>

POWER / RESET
BUTTON

ARMED (RED) LED
ON – System is armed.
OFF – System is not armed.

READY (GREEN) LED
ON – System is disarmed and ready to arm.
OFF – System is armed or disarmed but not ready. If disarmed, faults or troubles are present.

MESSAGE (YELLOW) LED
FLASHING – The system contains new message(s) for the User.
OFF – No new messages.

7:27 PM

Ready To Arm

P1 H

7:27 PM

Wednesday, February 1, 2012

Multimedia

Security

Setup

6290W-008-V0

To reset the Touchscreen, press and hold the side Power Button for 3 seconds and then touch the reset button  on the screen to start the reset function. The Touchscreen can also be reset by pressing and holding the reset button for approximately 15 seconds until the touchscreen resets automatically.

TOUCHSCREEN INITIALIZATION

When initially powered, the boot sequence and the "Set ECP Address" is displayed. If using one Touchscreen, leave the address set to 1 and press **Apply**. If using more than one, power-up each Touchscreen one at a time, and set each Touchscreen address to one of the addresses enabled in the control panel.

Language Selection - If applicable, after initial ECP selection is set, the "Languages" menu is displayed. Select a language.

SYSTEM INFORMATION / UPGRADES

To view the current software version installed, Interface name and MAC Address, press **Setup**  → **System Information**.

Software upgrades may be available. Log in to MyWebTech (see above) and enter the model name in the "Search by" "My Product" field. Press **Go**; click on Touchscreen software update SBS".

ECP ADDRESS

If the screen is displaying "ECP Error", the ECP address in the Touchscreen is not valid for the panel that it is connected to. In this case, to change the ECP Address, enter the default code of "4140" to advance to the next screen.

Note: Default code "4140" is the Touchscreen default installer code before connecting to a control panel. Once connected to a control panel, use that panel's installer code.

- Press **Setup**  → **System Setup**  → **CS Setup** .
- Enter an Authorized Code, if required.
- Press **ECP Address&Options** ; enter an ECP Address. The available ECP Addresses are:
1-2, 5-6.... for residential controls
1-2, 3-30... for commercial controls under Rev. 10; supports 3 AUIs. *See Important Note below.
1-30 for commercial controls Rev. 10 or higher; supports 6 AUIs.
- *IMPORTANT NOTE:** If multiple Touchscreens are being used, they must be set to addresses 1, 2, and X (where X equals any address from 3 through 30). Only one AUI type (Touchscreen) device may be assigned to an address from 3 through 30 on commercial control panels.
- Select the Homepage and Operation Mode from the **Options** menu.

DISPLAY & AUDIO SETUP

- From the Home screen press **Setup** , slide the **Brightness / Volume** bar up or down to change settings. Press **Yes** to save.
- Press **Setup** → **Disp & Audio Setup** ; enter an Authorized Code.
 - To adjust the screen timeouts, select a time interval from the drop-down list for each option (Language, Backlight Off After, To Homepage After, and Auto Slideshow After.)
 - Select **Chime, Voice or Voice Chime** operating mode.
 - To clean the Touchscreen screen, press the **Clean Screen** icon; press **Continue**, or press **Cancel** to exit.
 - Press the **Back** arrow. Press  to save changes.

USER SETUP

- Press **Setup** → **System Setup** → **USER** .
- Press **+** and enter Authorized Code; select each field and enter the appropriate information.
- Press  to save.

For available user numbers, see control panel instructions.

TIME & DATE

- Press **Setup**  → **System Setup** → **Time/Date Setup** .
- Enter an "Authorized Code".
 - If **Get Time** is pressed, the Touchscreen downloads the time/date from the control panel and exits the "Set Time" screen. (The Get Time icon appears with residential panels and may not appear with all commercial panels.)
 - Or, set the time/date from the **Set Time/Date** screen.
- Press  and.

MULTIMEDIA

Picture Setup: Press **Multimedia**  → **Picture**.

- Insert a media card (Micro SD/SDHC) with up to 1000 stored (.bmp, jpg, png or .jpeg) photos.
- Press the viewing transition arrow; select Standard, Horizontal, Vertical, and Fade Out.
- Press the **Slide Delay** arrow to select a time interval for viewing pictures.
 - Use the icons to: **Play Image** → view **Previous Image** → go to **Next Image** → **Deselect Image** or **Add Image**. Use the slide bar to select a wallpaper file from the list and press **Set Wallpaper**.
(* While viewing photos in **Full View**, press anywhere on the screen to exit.)

Video Setup: Press **Multimedia**  → **Video**.

Insert a media card (Micro SD/SDHC) with stored video files. Supported video playback formats are (avi, .ts, .mpg, .mp4, .mov, .mkv, or .flv).
Maximum video resolution should not exceed 400 x 240.

- Highlight a video file from the list and press **Play** to start the selected video file.
 - Press **Repeat** to continually replay selected video.
 - Deselect the **Repeat** icon to play the list of video files starting with the first video and ending with the last.
 - Use the icons to: **Pause** → view a **Full View**.
(* While viewing videos in **Full View**, press anywhere on the screen to exit.)

SCREEN SECURITY

See the full Installation Guide for user Authority Levels.

- Press **Setup** → **System Setup** → **CS Setup** .
- Enter an Authorized Code; press **Screen Security** .
 - To make changes, select the line to change and the level of user to have access, and then press .

CODE AUTHORITY

- Press **Setup** → **System Setup** → **CS Setup**.
- Press **Code Authority** .
- Enter the 4-digit Code for the user you want to obtain authority level information about.

PANEL CONFIGURATION

- Press **Setup** → **System Setup** → **CS Setup**.
- Enter an Authorized Code and press **Panel Config** .
Touch  to clear the Touchscreen and reload the panel configuration into the Touchscreen.

NIGHT SETUP

The NIGHT function can be set to arm the system in one of five arming modes. To change the arming mode;

- Press **Setup** → **System Setup** → **Advanced Setup**.
- Enter an Authorized Code.
- Press **Night Setup**; select desired mode:
Away - Stay - Instant (default) - **Night** (Residential Panel Only) – **Maximum**.
- Press  to save changes.

EMERGENCY MESSAGES

- Press the **PANIC** Icon.
- Press and hold (for at least 2 seconds) the associated alarm icon (**FIRE, POLICE** or **MEDICAL**).

Panel Faults – If Panel Fault icons are displayed on the Security screen, contact your alarm company. See the full Installation Guide.										
										
AC Loss	Bell Failure	Expander Failure	Low Battery	LRR Supervision Failure	Max Attempts Exceeded	Pager Failure	Telco-1 Cut	Telco-2 Cut	Wireless Failure	Panic

