

OPERATION

1. Rotate the VOLUME/ON/OFF control on each walkie talkie clockwise until a click is heard to turn the unit on.
2. Rotate the VOLUME/ON/OFF control on each walkie talkie clockwise to raise volume as desired.
3. To transmit using, press the PUSH-TO-TALK button and speak into the Speaker/Microphone grill.

NOTE: The range is approximately 150 feet. If messages are not transmitted/received properly, move closer.

4. To send Morse Code signals: While the PUSH-TO-TALK button is pressed, press the Signal button to emit a tone.
5. To turn the units off, rotate the VOLUME/ON/OFF control counter-clockwise until a click is heard.

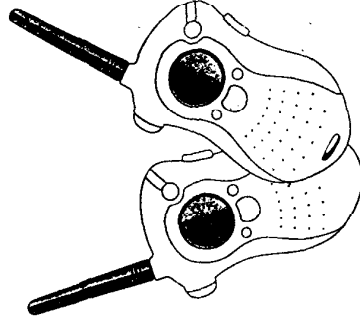 
NOTES:

- Take care when using these walkie talkies. Do not play around automobiles or near street while using walkie talkies.
- If you place any of the units too close to each other, you will hear feedback. If this occurs, move the units away from each other.
- After use, make sure all units are in the Off position.

WARNING: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate the equipment.



OWNER'S MANUAL



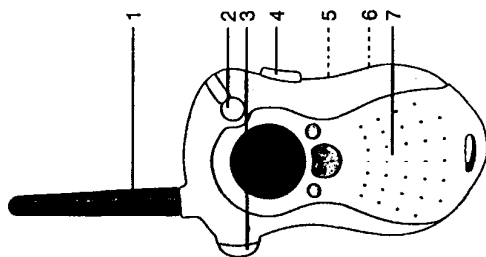 
WALKIE TALKIES

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LOCATION OF CONTROLS

1. Antenna
2. Signal Button
3. VOLUME/ON/OFF Control
4. PUSH-TO-TALK Button
5. Belt Clip (Rear of Unit)
6. Battery Compartment (rear of unit)
7. Speaker/Microphone

INSTALLING THE BATTERIES**BATTERY OPERATION**

1. Open the battery compartment by removing the screw
2. Insert a 9V battery into the compartment following the diagram in the compartment.
3. Replace the battery compartment cover and the screw and make sure it snaps shut securely.

**BATTERY PRECAUTIONS**

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries. Reversed batteries may cause damage to the device.
3. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

OPERATION

1. Rotate the VOLUME/ON/OFF control on each walkie talkie clockwise until a click is heard to turn the unit on.
2. Rotate the VOLUME/ON/OFF control on each walkie talkie clockwise to raise volume as desired.
3. To transmit using, press the PUSH-TO-TALK button and speak into the Speaker/Microphone grill.

NOTE: The range is approximately 150 feet. If messages are not transmitted/received properly, move closer.

4. To send Morse Code signals: While the PUSH-TO-TALK button is pressed, press the Signal button to emit a tone.
5. To turn the units off, rotate the VOLUME/ON/OFF control counter-clockwise until a click is heard.

NOTES:

- Take care when using these walkie talkies. Do not play around automobiles or near street while using walkie talkies.
- If you place any of the units too close to each other, you will hear feedback. If this occurs, move the units away from each other.
- After use, make sure all units are in the Off position.

LIMITED WARRANTY

Kids Station warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required please return the product to the store where it was purchased for exchange, or pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$5.00 (to cover shipping and handling costs) payable to Kids Station Toys International Ltd. Ship your product freight pre-paid. Your unit will be repaired, replaced or a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Kids Station Toys International Ltd
P.O. Box 694660
Miami, Fla. 33269

This warranty is void if: a) Used in a commercial application or rental b) Damaged through misuse, negligence, or abuse, c) Modified or repaired by anyone other than authorized Kids Station service. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchases. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Kids Station be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

TO OBTAIN SERVICE ON YOUR PRODUCT,

PLEASE CALL: 1-888-321-7191

© 2004 THE LITTLE TIKES COMPANY
DESIGNED AND LICENSED BY
KIDS STATION TOYS INTERNATIONAL LTD.
P.O. BOX 694660
MIAMI, FLORIDA 33269-4660

Printed in China