

LIMITED WARRANTY

Kids Station warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange, or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$5.00 (to cover shipping and handling costs) payable to Kids Station Toys International Ltd. Ship your product freight pre-paid. Your unit will be repaired, replaced or a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Kids Station Toys International Ltd
P.O. Box 694660
Miami, Fla. 33269

This warranty is void if the product has been: a) Used in a commercial application or rental, b) Damaged through misuse, negligence, or abuse, c) Modified or repaired by anyone other than an authorized Kids Station service center, d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer, b) Damage to equipment not properly connected to the product, c) Any cost incurred in shipping the product for repair, d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Kids Station be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

**TO OBTAIN SERVICE ON YOUR PRODUCT,
PLEASE CALL: 1-888-321-7191**

 
© 2004 THE LITTLE TIKES COMPANY
DESIGNED AND LICENSED BY
KIDS STATION TOYS INTERNATIONAL LTD.
P.O. BOX 694660
MIAMI, FLORIDA 33269-4660

Printed in China

KSL4002EE01



OWNER'S MANUAL

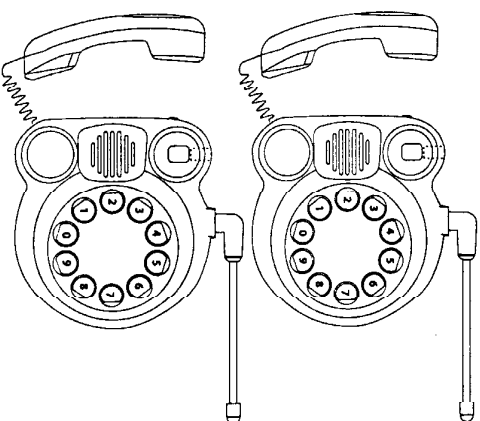

**CHIT CHAT "TWO WAY
COMMUNICATOR PHONE"**

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: KSL4002

 
in m/l. 20/5/04

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LOCATION OF CONTROLS

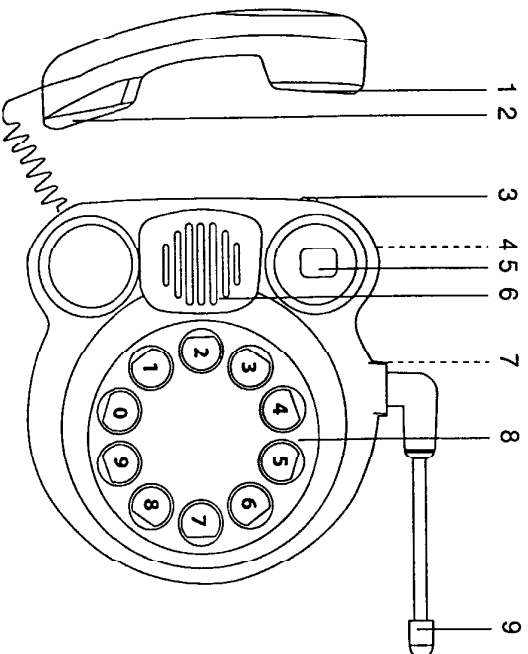


1. Handset Speaker
2. Microphone
3. ON/OFF-VOLUME Control
4. DC Jack (rear of unit)
5. Control Switch
6. Base Speaker
7. Battery Compartment (bottom of unit)
8. Keypad
9. Flexible Antenna

POWER SOURCES

BATTERY OPERATION

 1. Remove the Battery Compartment cover on the bottom of the unit by removing the screw and then lifting it out.
2. Insert a 9V battery into the compartment following the diagram shown.
3. Replace the Battery Compartment cover and screw.

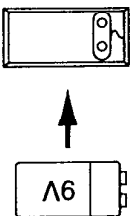

BATTERY PRECAUTIONS

- Follow these precautions when using a battery in this device:
1. Use only the size and type of battery specified.
 2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
 3. If the device is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.
 4. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)

AC OPERATION

To operate the unit using AC power, connect a UL approved AC adapter (not included) having a 9V negative center (⊖) to the DC jack on the rear of the unit and to a wall outlet having 120V, 60Hz AC only. The battery is automatically disconnected when an AC adapter is used.

OPERATION

1. Rotate both ON/OFF/VOLUME controls clockwise until a click is heard to turn the units on. Continue to rotate to adjust the volume.
2. Lift Handset (which will release the Control switch) and press the "7", "8", "9" or "0" keys on the Keypad to ring the other unit.
3. Lift the second Handset to answer.
4. These units are designed so both parties can talk at the same time. When transmitting, speak in a normal tone.
5. After use, rotate both ON/OFF/VOLUME controls counter-clockwise until a click is heard to turn the units off.

NOTE: When the sound becomes weak, replace the battery.

WARNING: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate the equipment.