



8.3.5 JMR-9225-6XH Interconnection Diagrams

Stand alone type

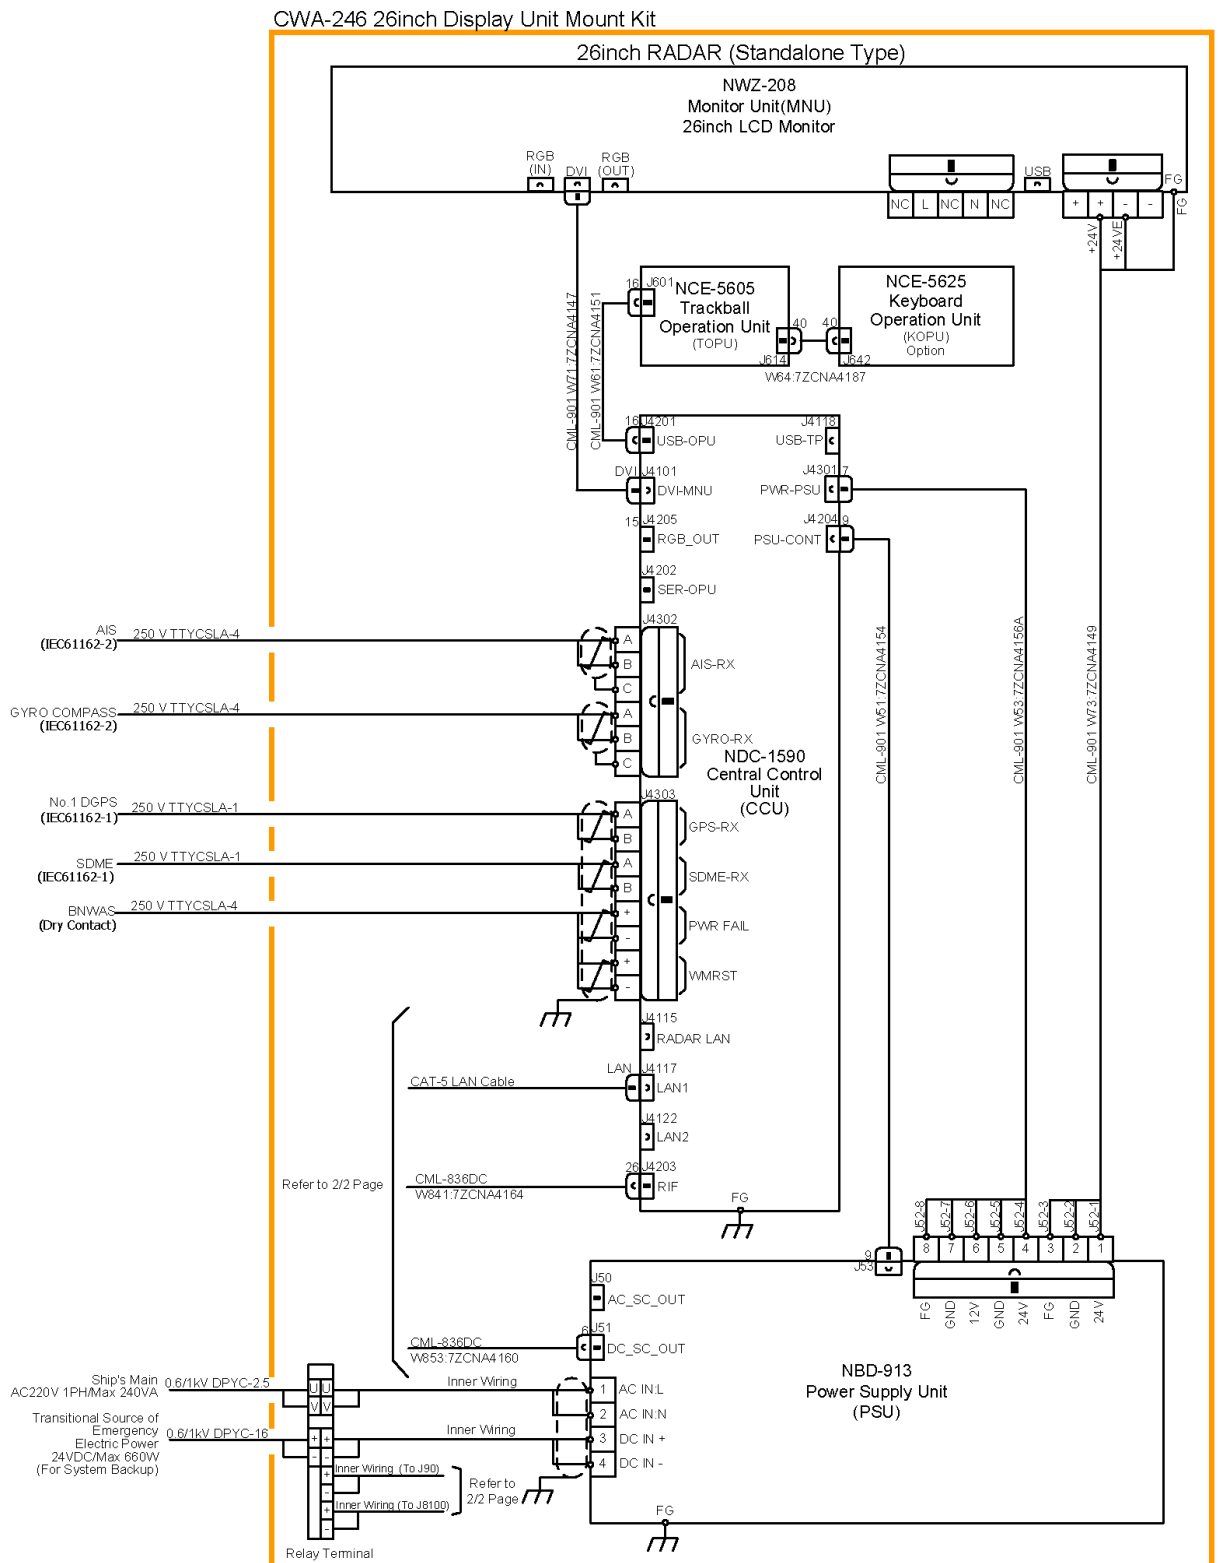


Interconnection Diagram of JMR-9225-6XH RADAR (1/2)

CWA-246 26inch Display Unit Mount Kit

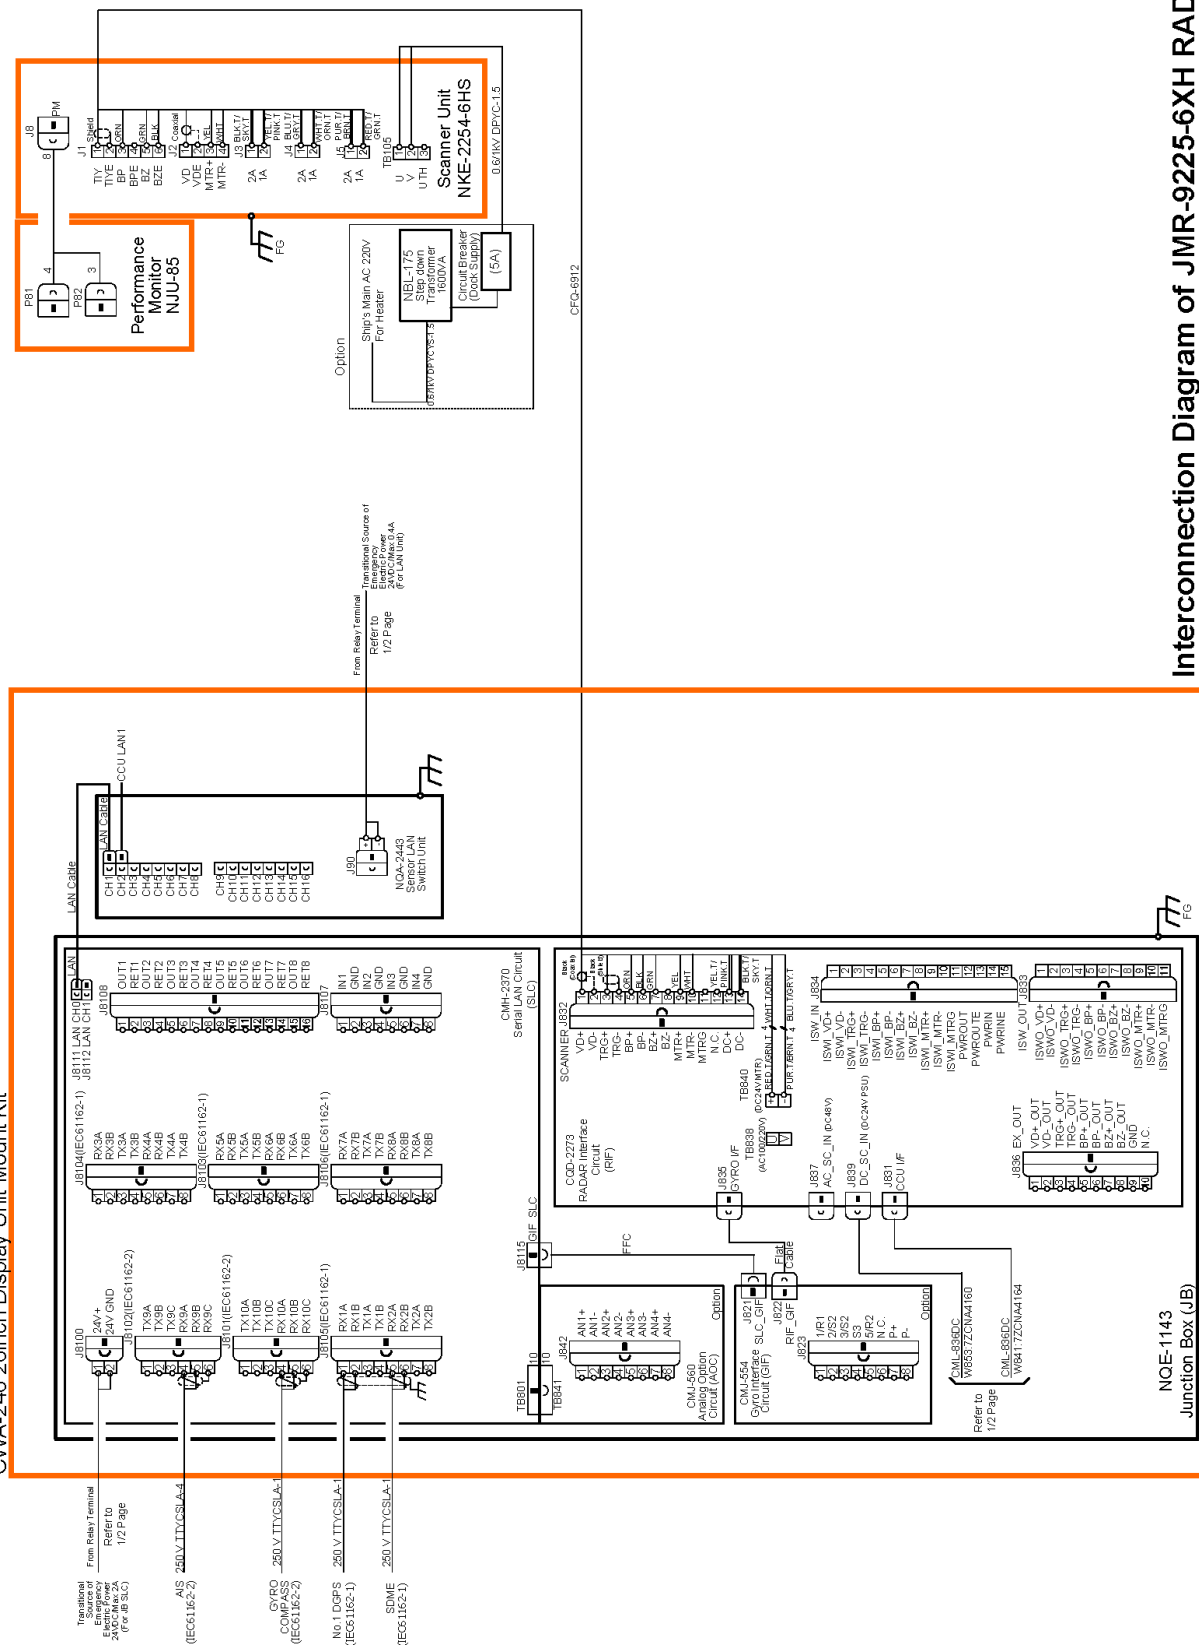

Interconnection Diagram of JMR-9225-6XH RADAR (2/2)


Desktop type

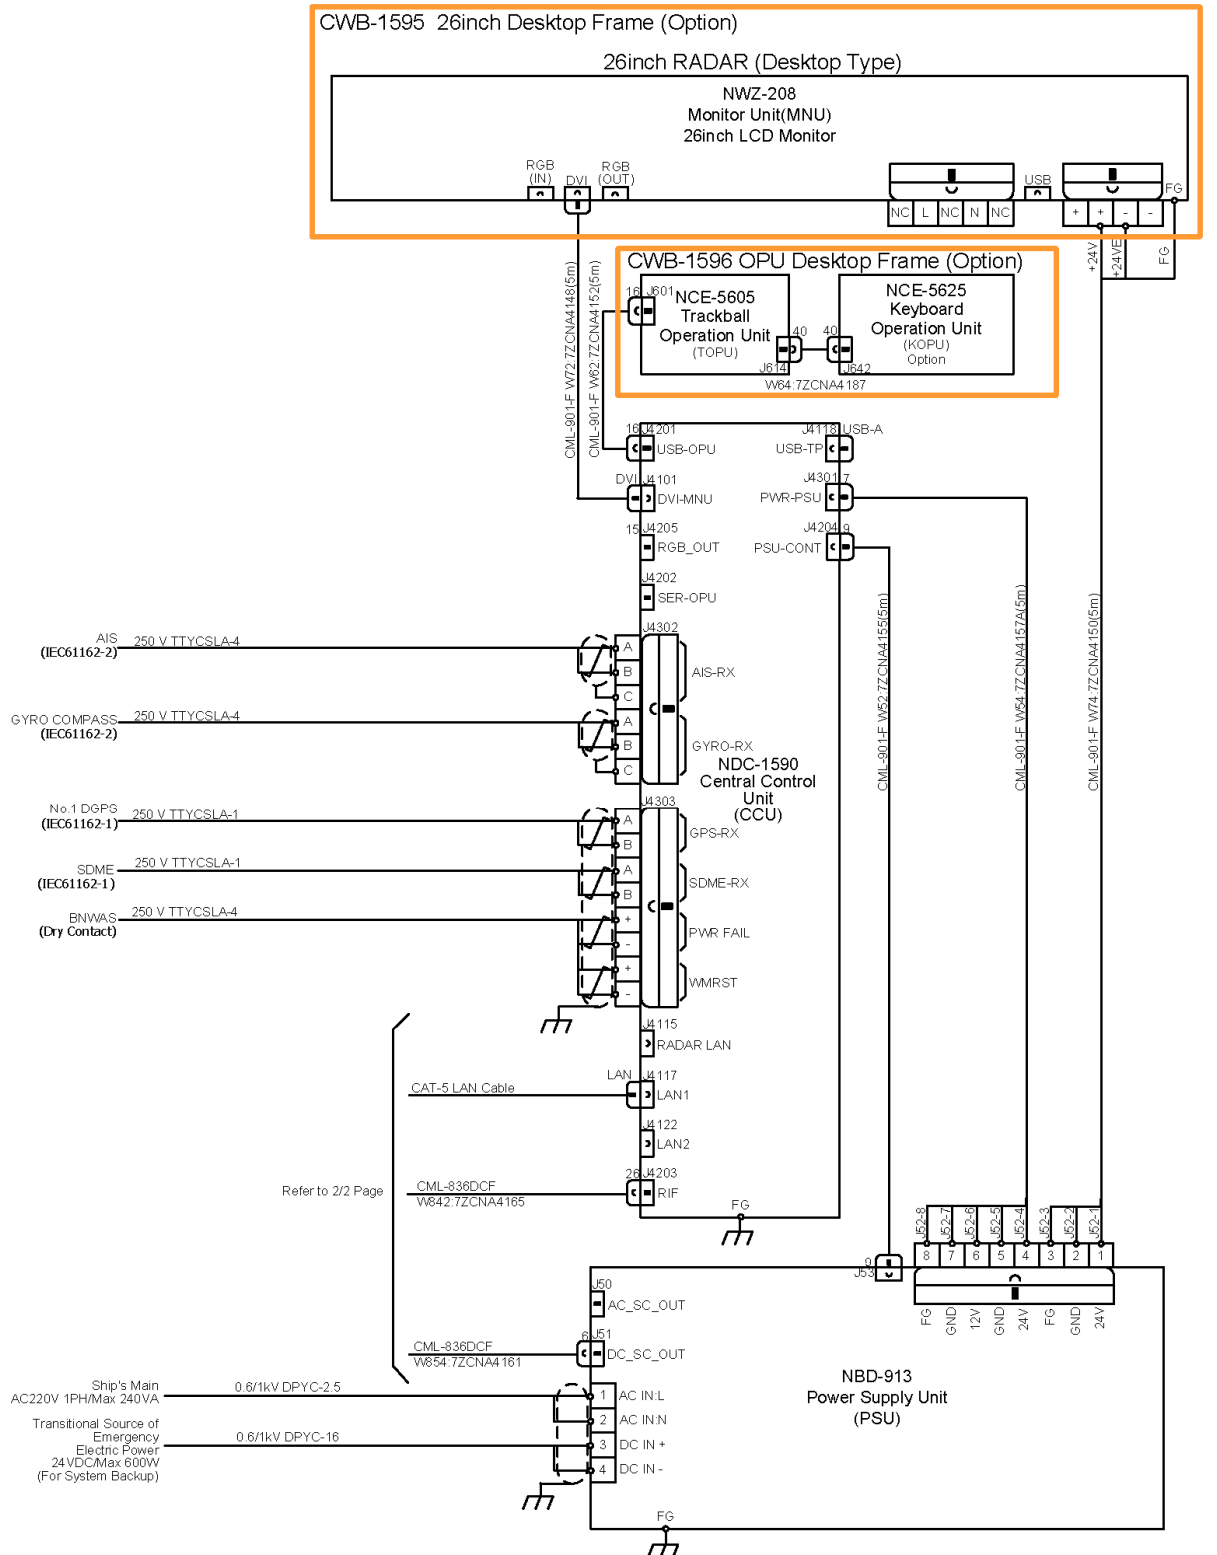


Interconnection Diagram of JMR-9225-6XH RADAR (1/2)

8.3.6 JMR-9210-6X/6XH Interconnection Diagrams


Stand alone type

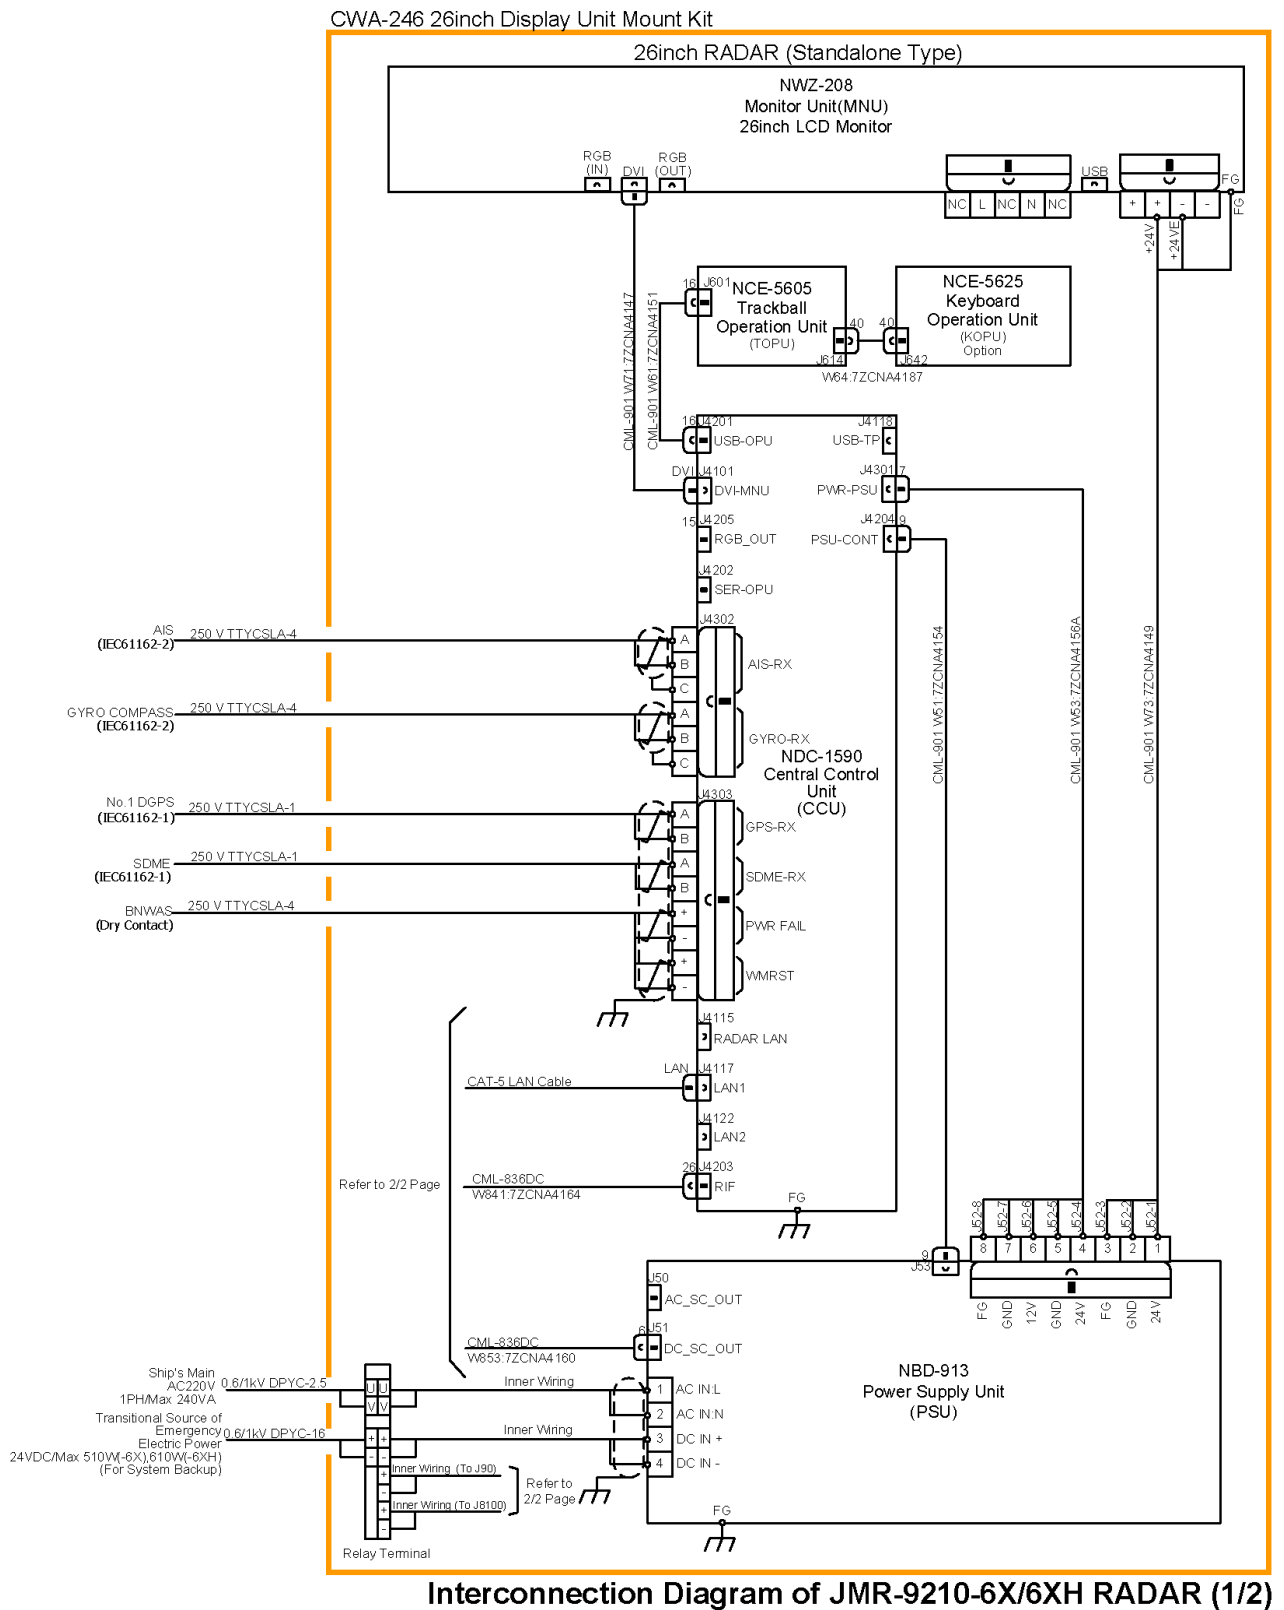


CWA-246 26inch Display Unit Mount Kit

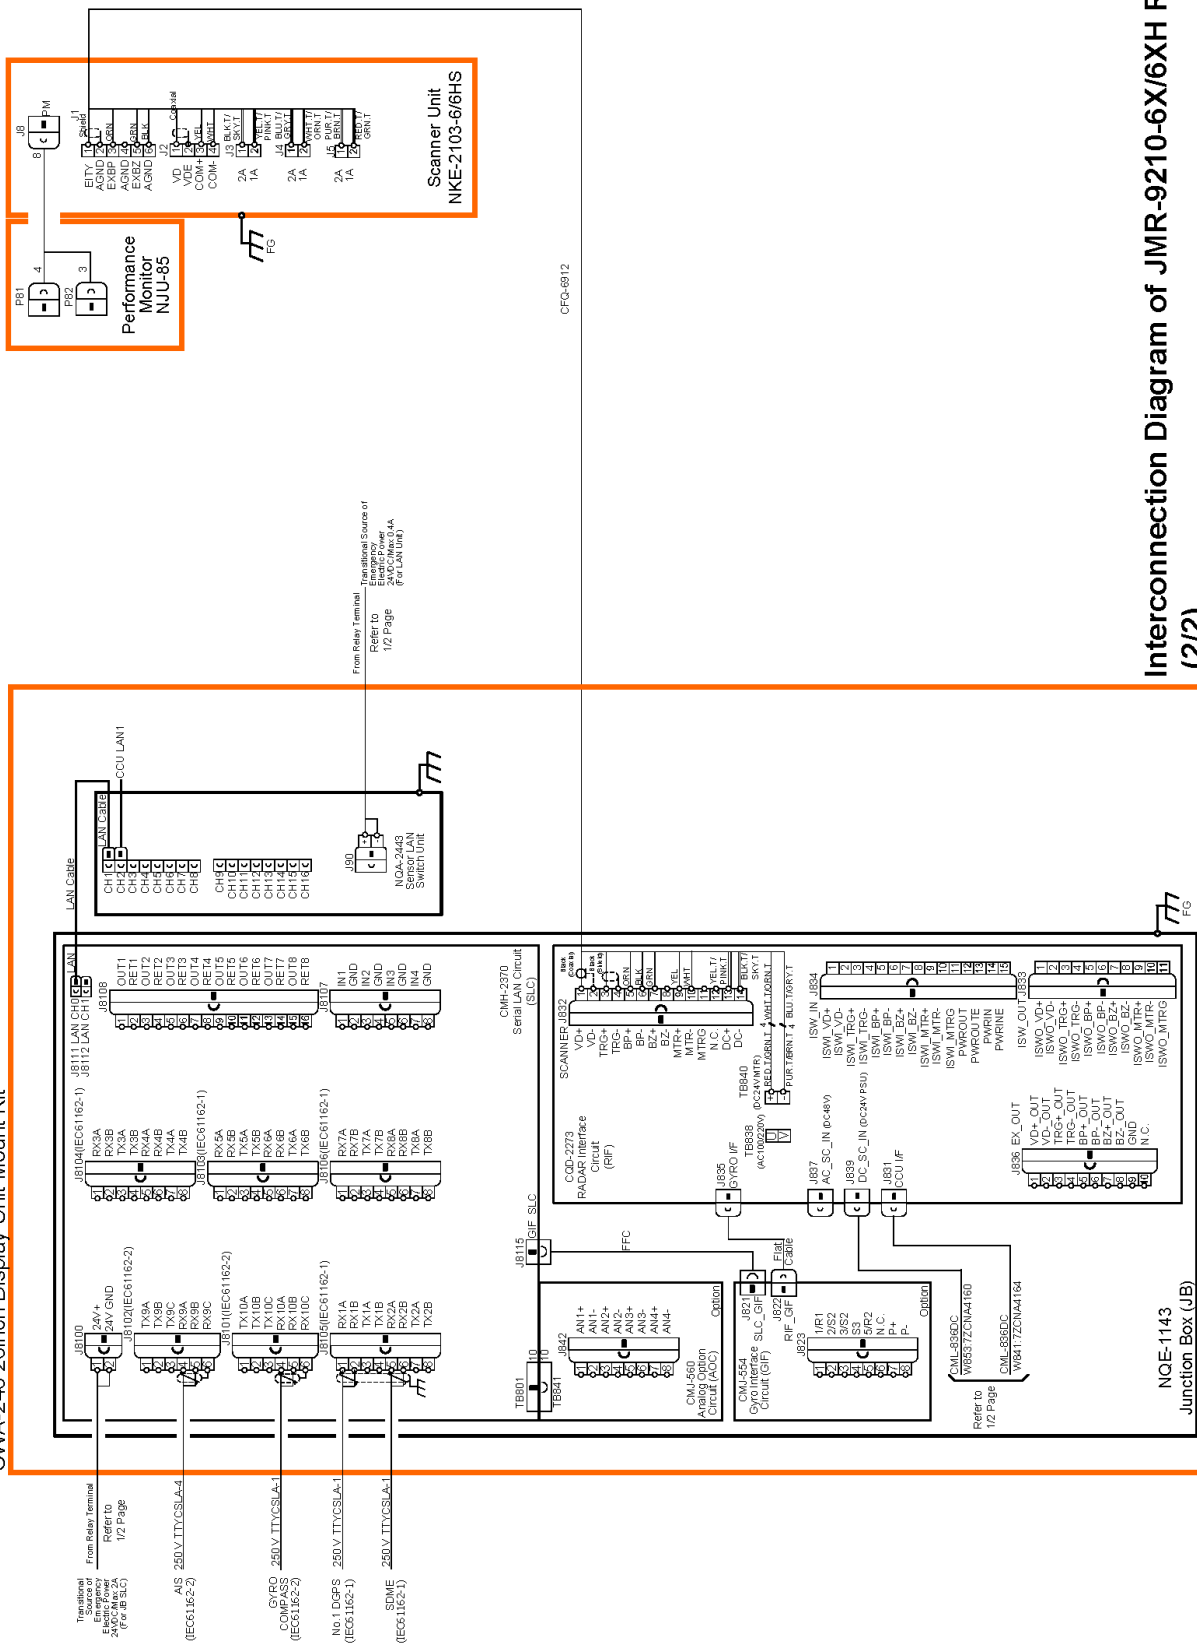

Desktop type

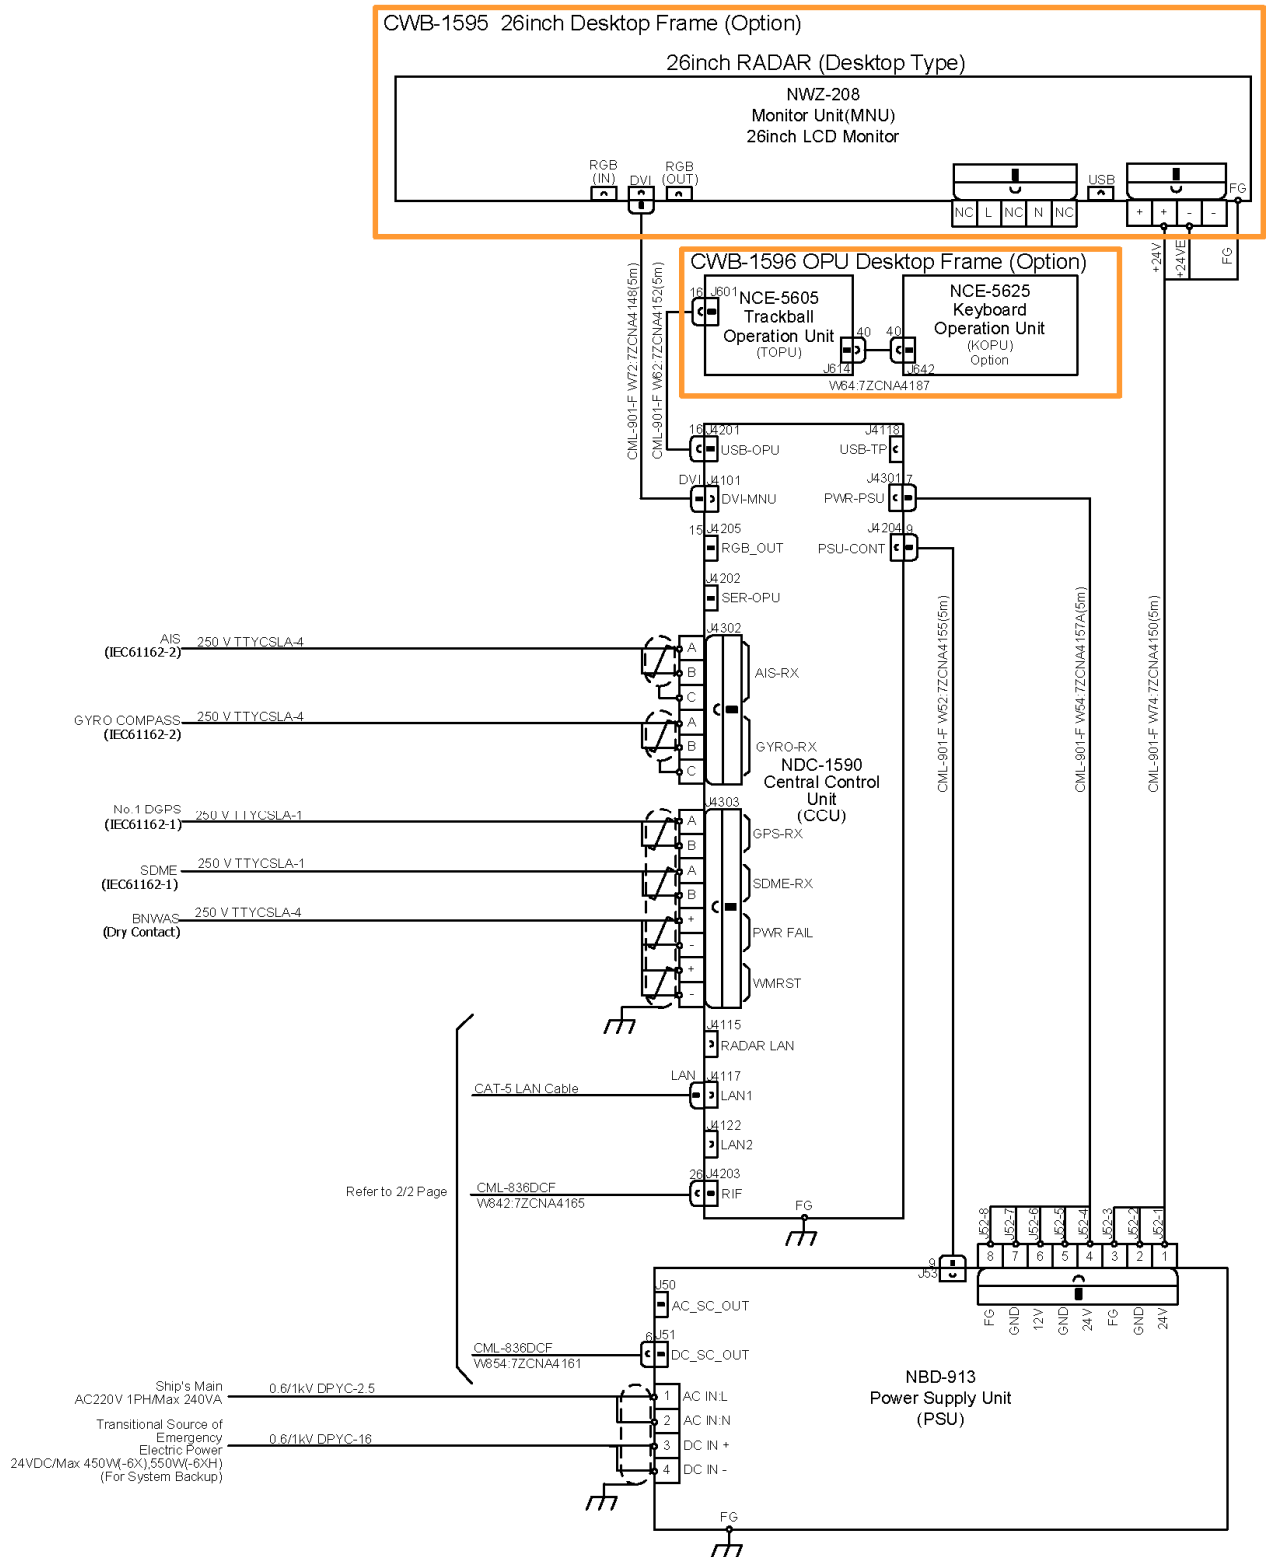


Interconnection Diagram of JMR-9210-6X/6XH RADAR (1/2)

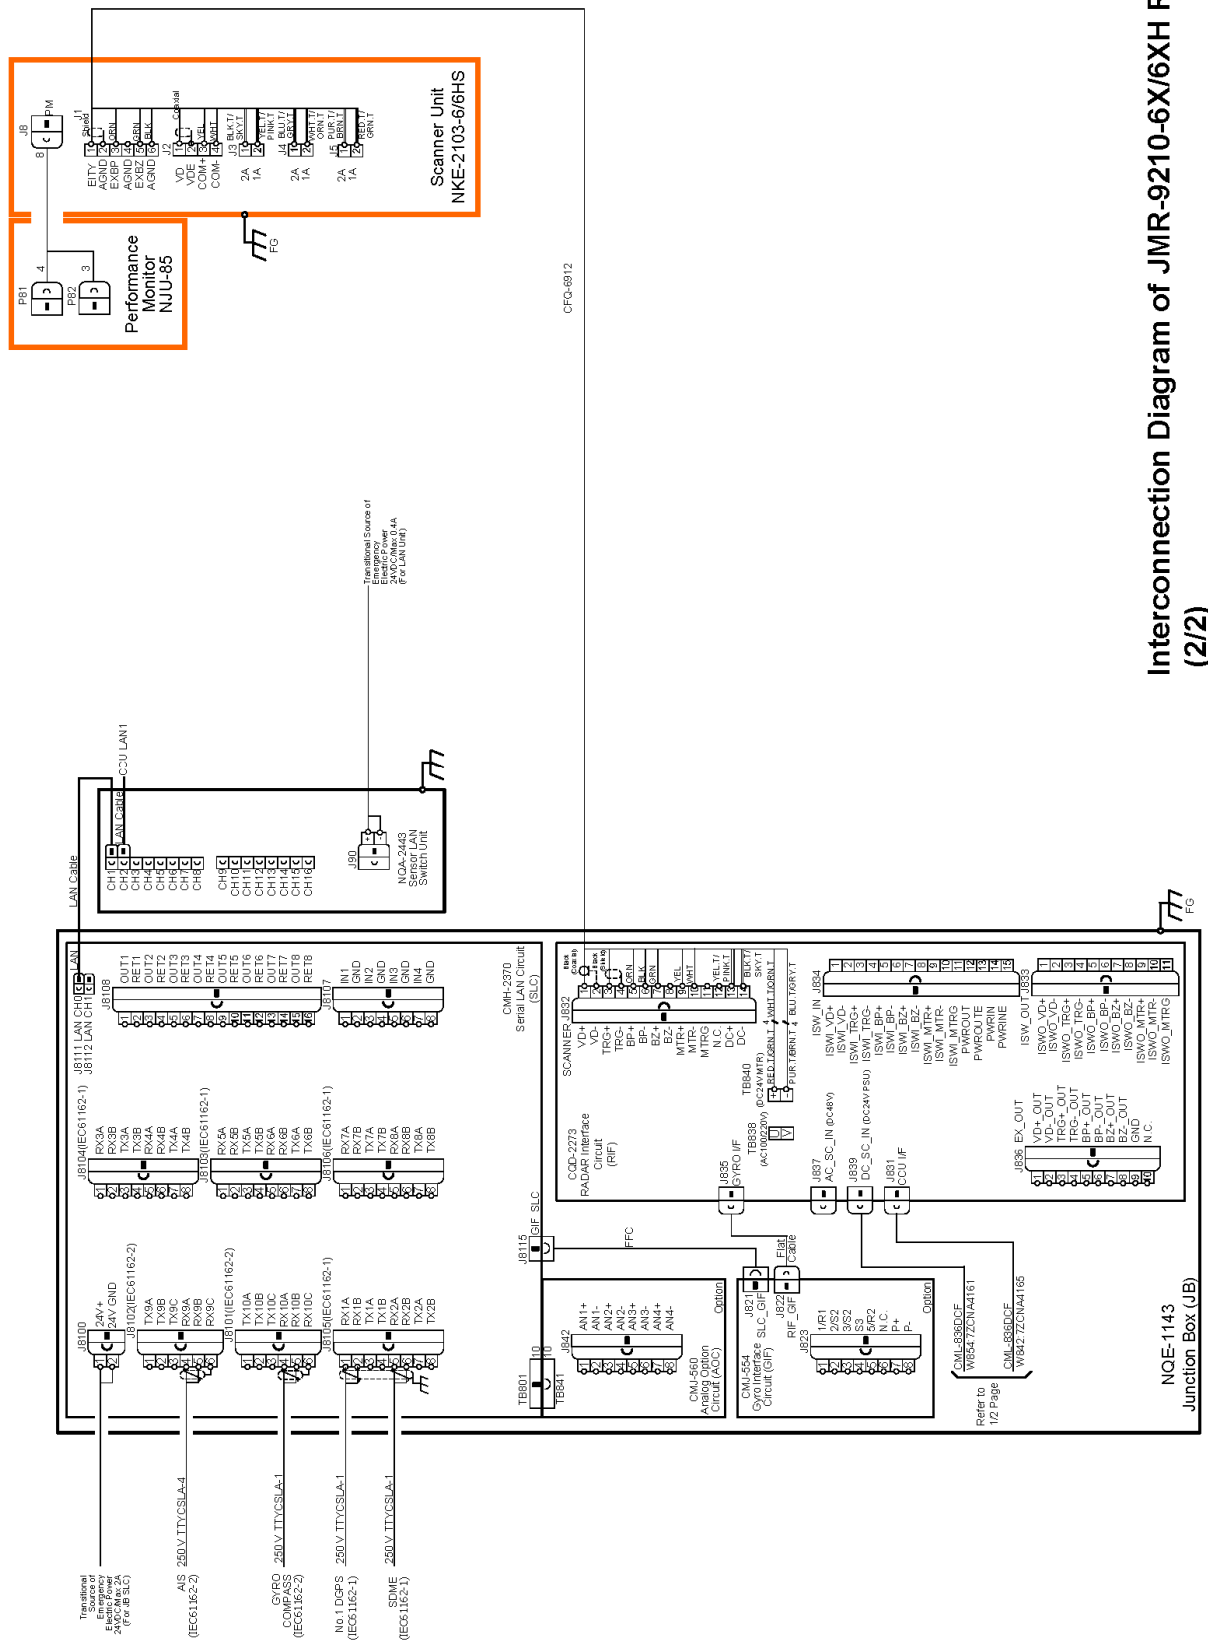

8.3.7 JMR-9272-S Interconnection Diagrams

Stand alone type

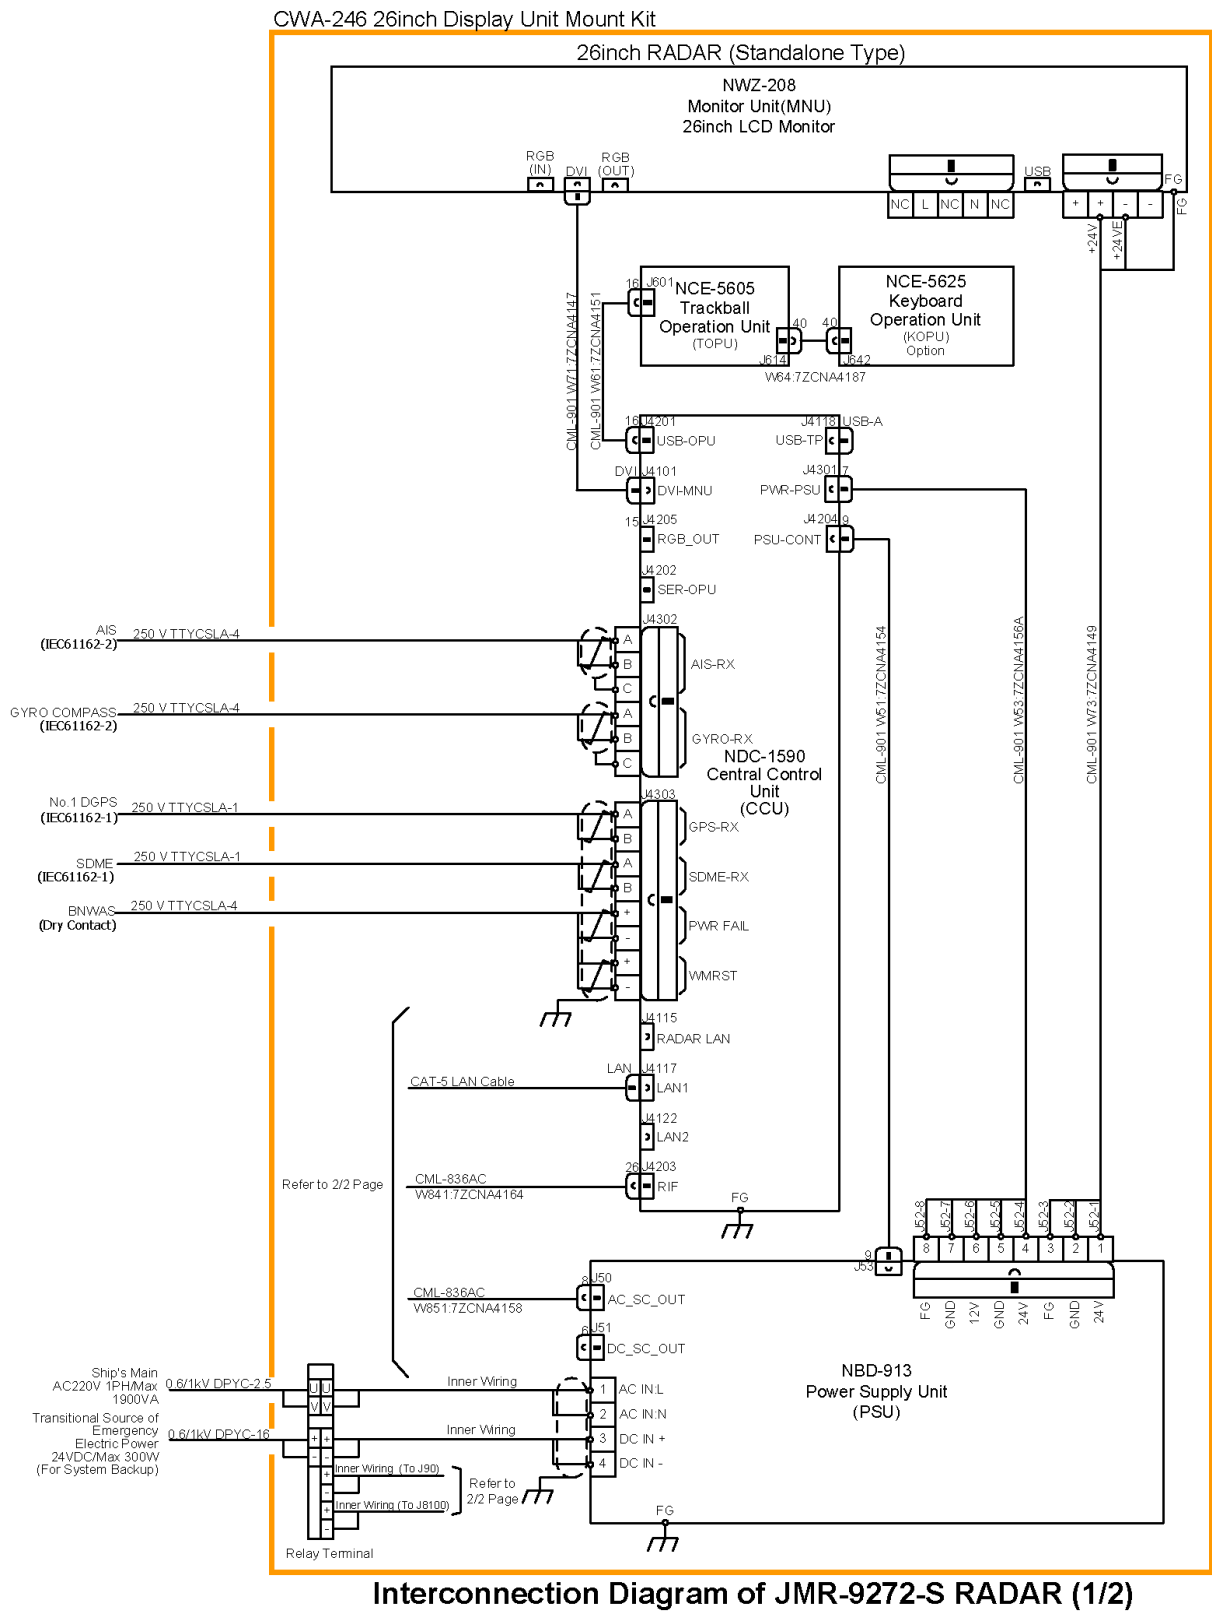

com Relay Terminal Transitional Source of
Emergency Power
24VDC Max. 0.4A
1/2 Page (for LAN Unit)

H-2695110056

Option [Neck header]

Ship's Main AC 100V / 220V
For Heater

Circuit Breaker
(Doct Supply)

(5A)

0.6/1KV DPVC-1.5

Scanner Unit
NKE-1632-1/2

0.6/1KV DPVC-1.5

VD+
TRIGH
TRIG-
BP+
BZ+
BZ-
MTR+
MTR-
N.C.
DC48V+
DC48V-
FG

TB101


TB102

U1
U2
U3
U4
U5
U6

TRIG-
BP+
BZ+
BZ-
MTR+
MTR-
N.C.
DC48V+
DC48V-
FG

H-2695110056

Desktop type

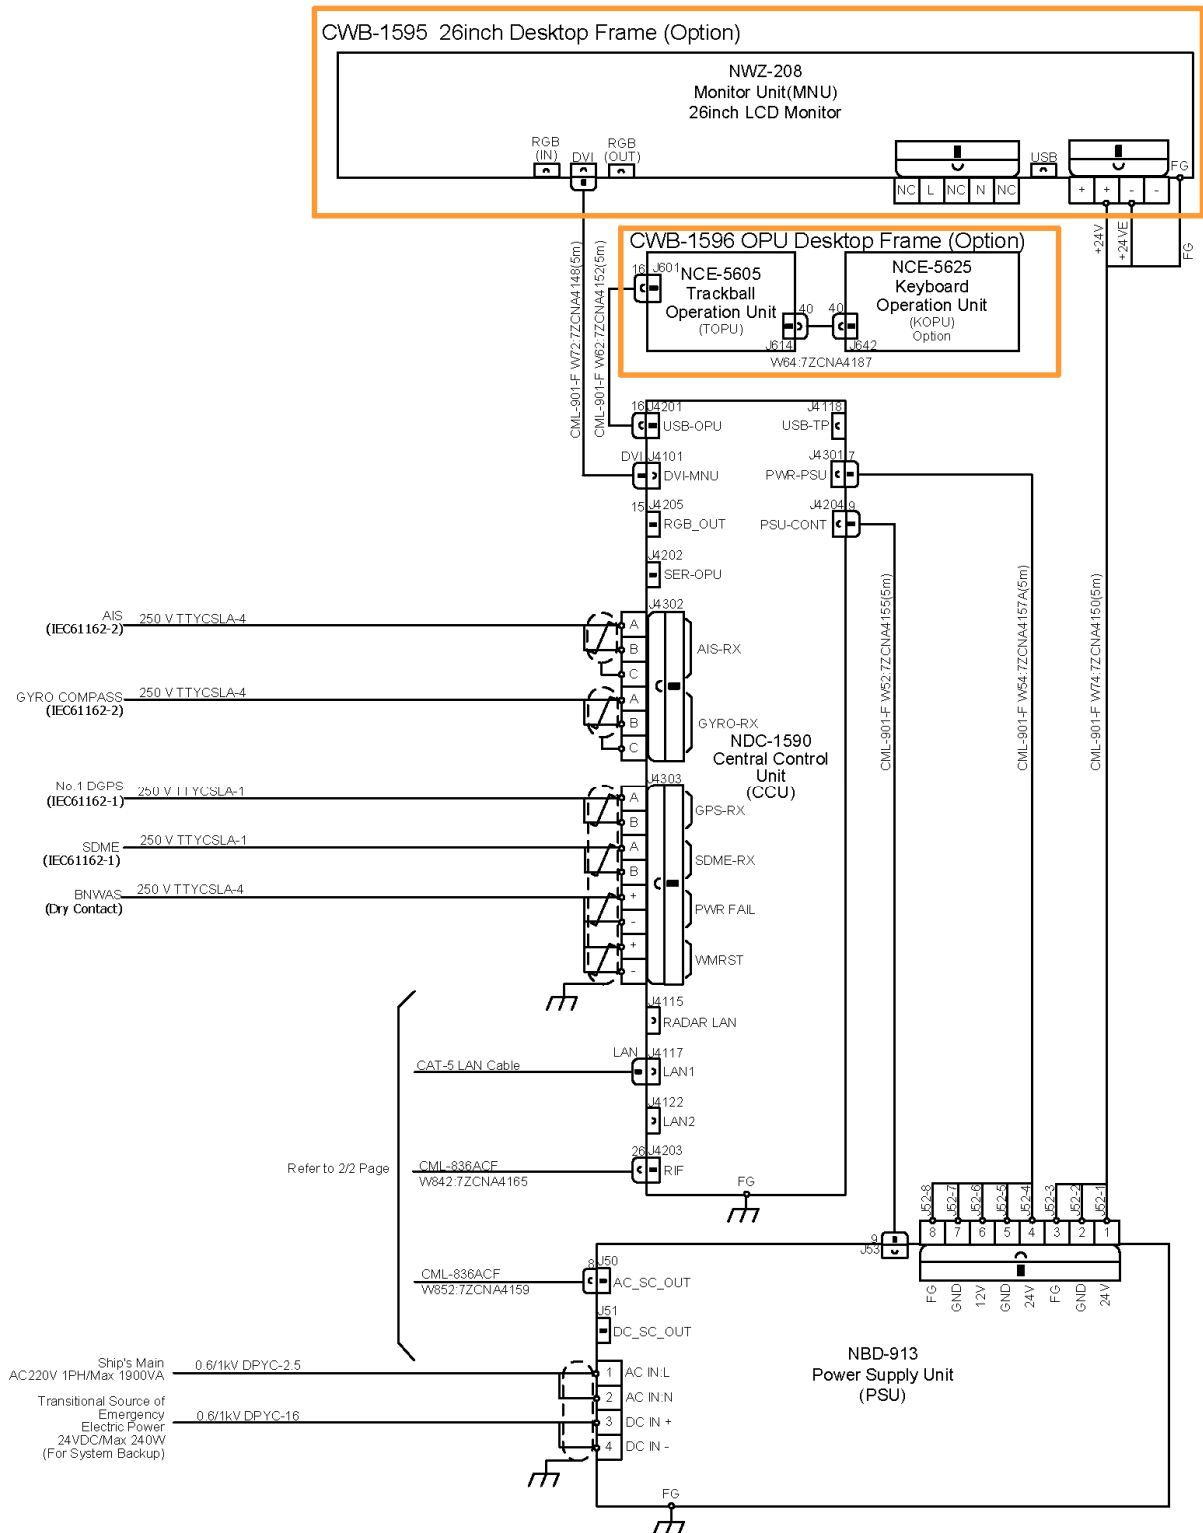


Interconnection Diagram of JMR-9272-S RADAR (1/2)

8.3.8 JMR-9282-S/SH Interconnection Diagrams

Stand alone type


CWA-246 26inch Display Unit Mount Kit

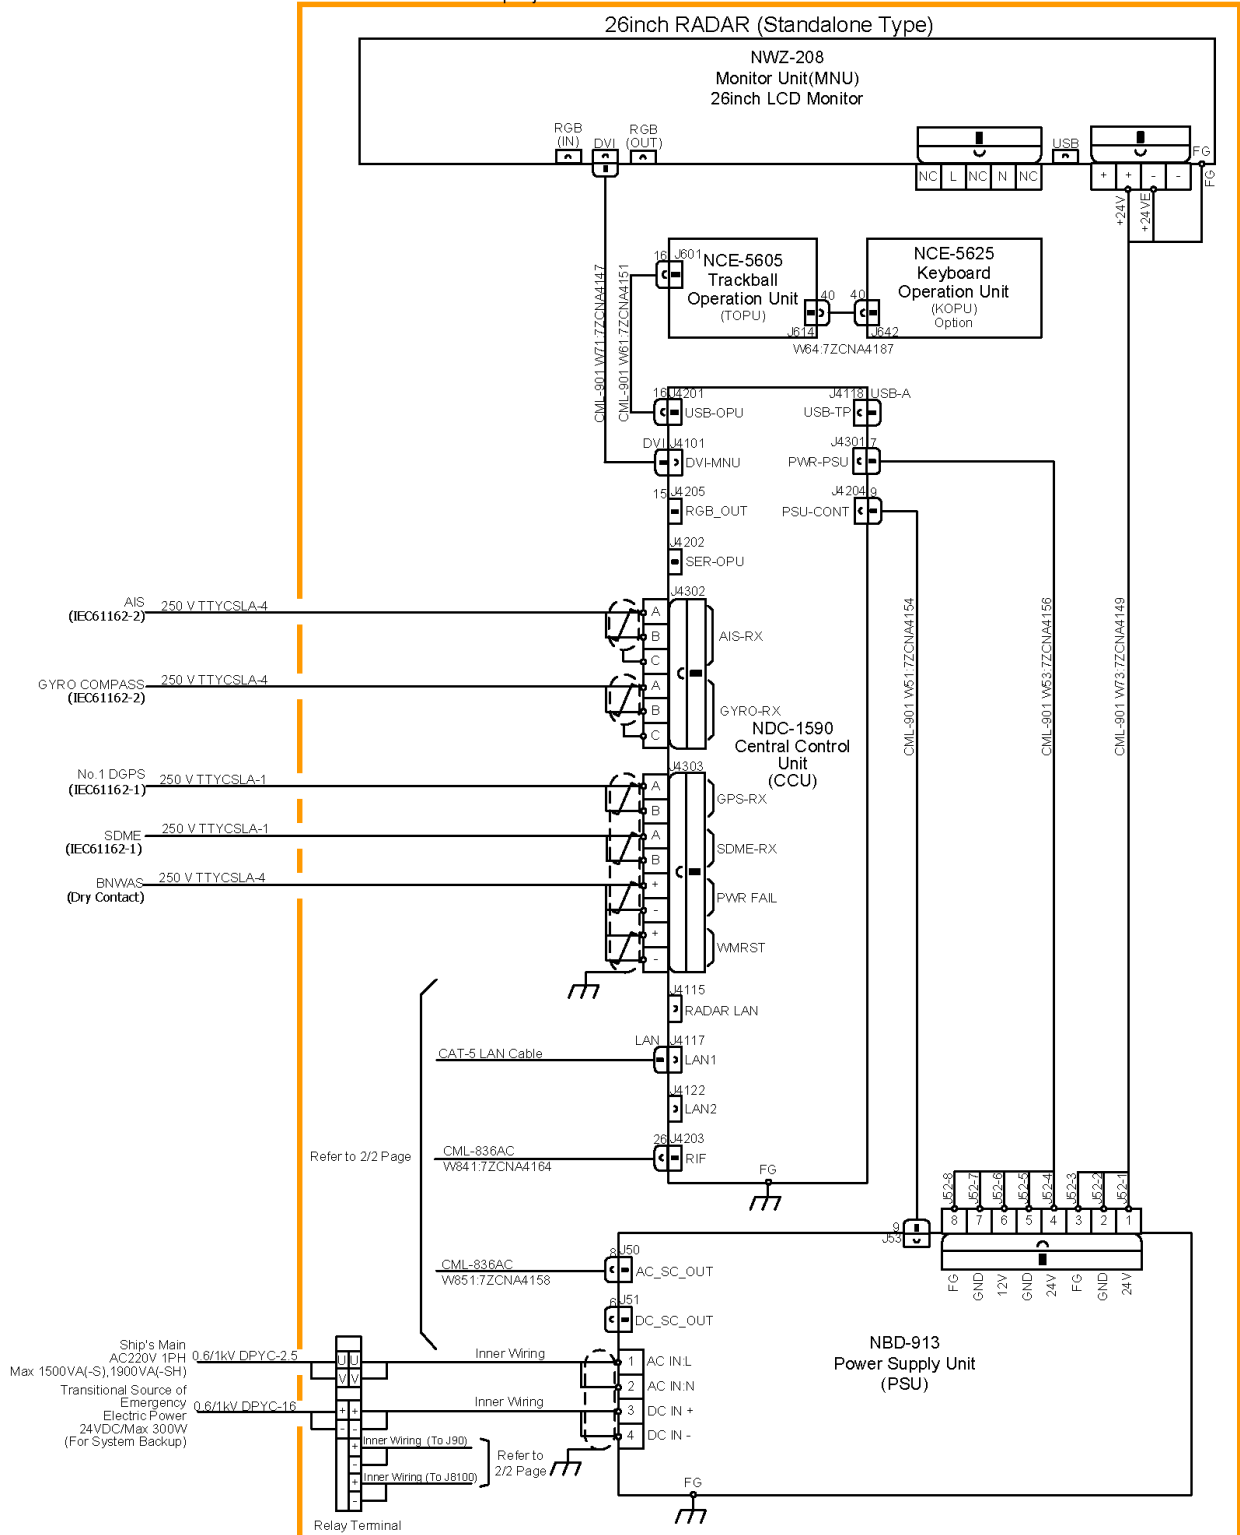


Interconnection Diagram of JMR-9282-S/SH RADAR (1/2)

[illegible]

Desktop type

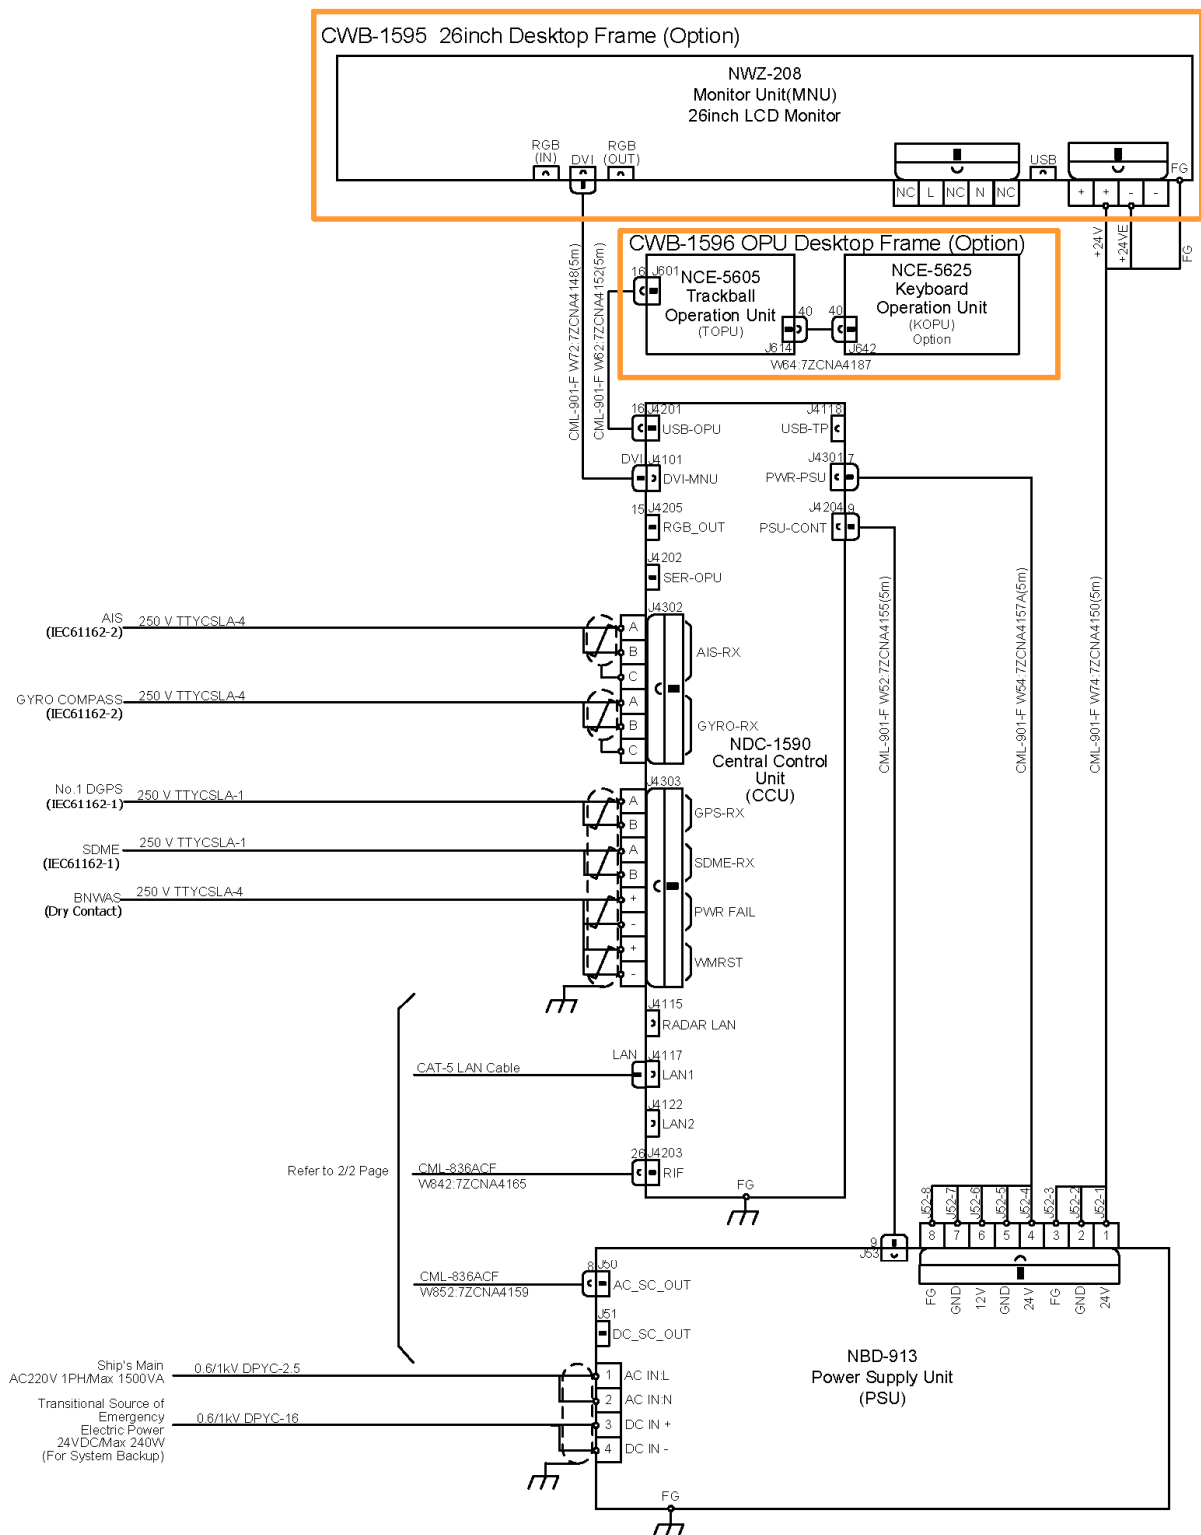


Interconnection Diagram of JMR-9282-S/SH RADAR (1/2)

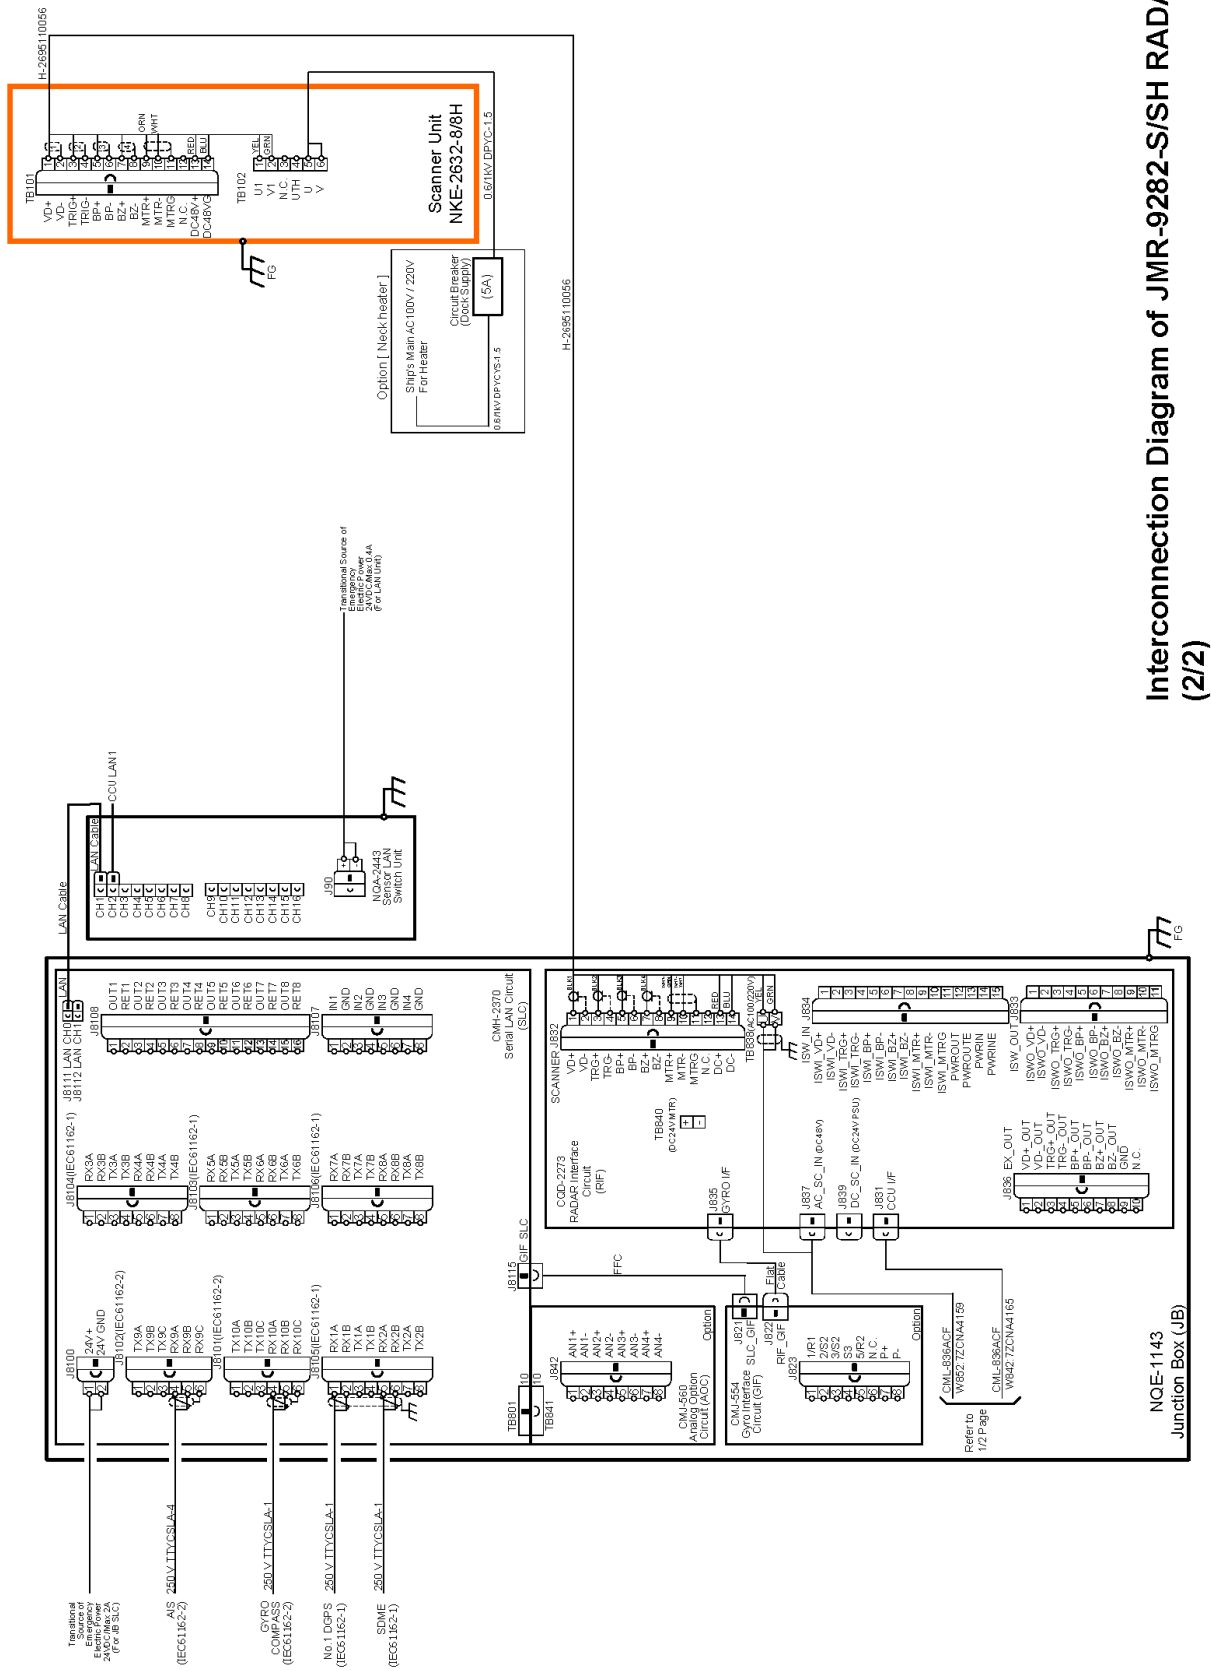

8.3.9 JMR-7230-S3 Interconnection Diagrams


Stand alone type

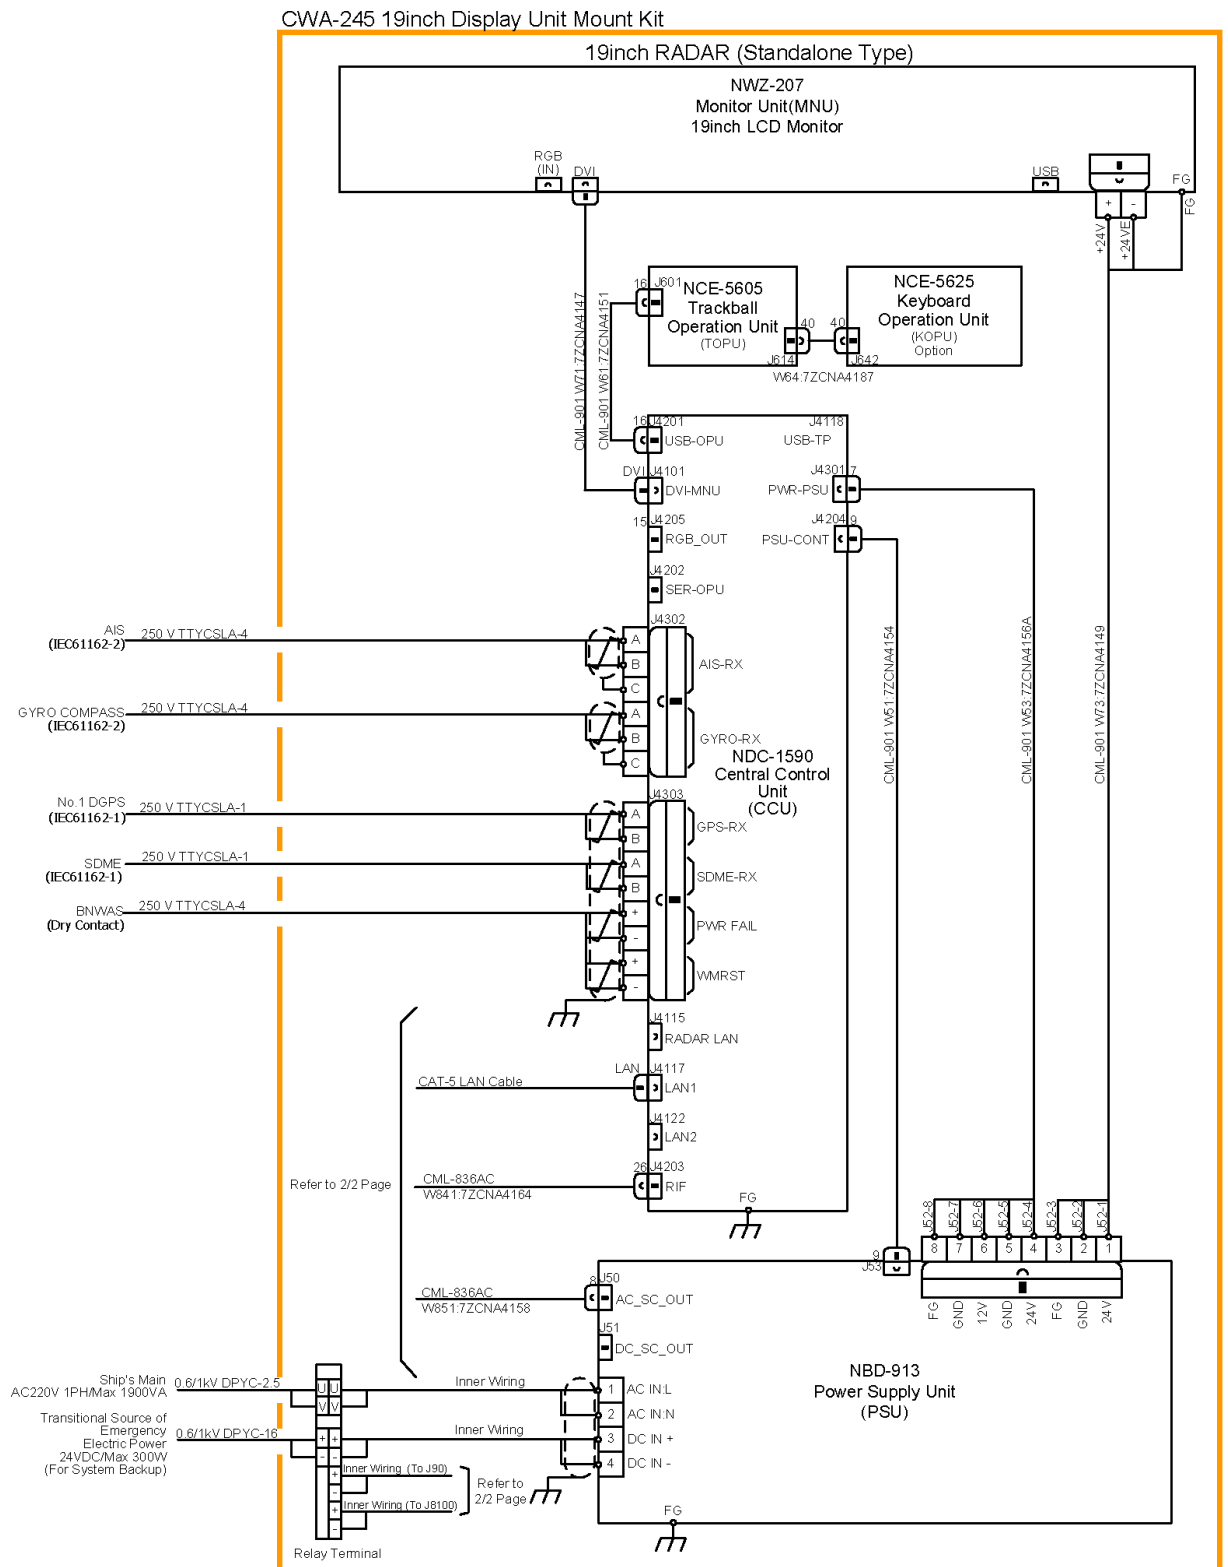

Interconnection Diagram of JMR-7230-S3 RADAR (1/2)

[illegible]


Desktop type

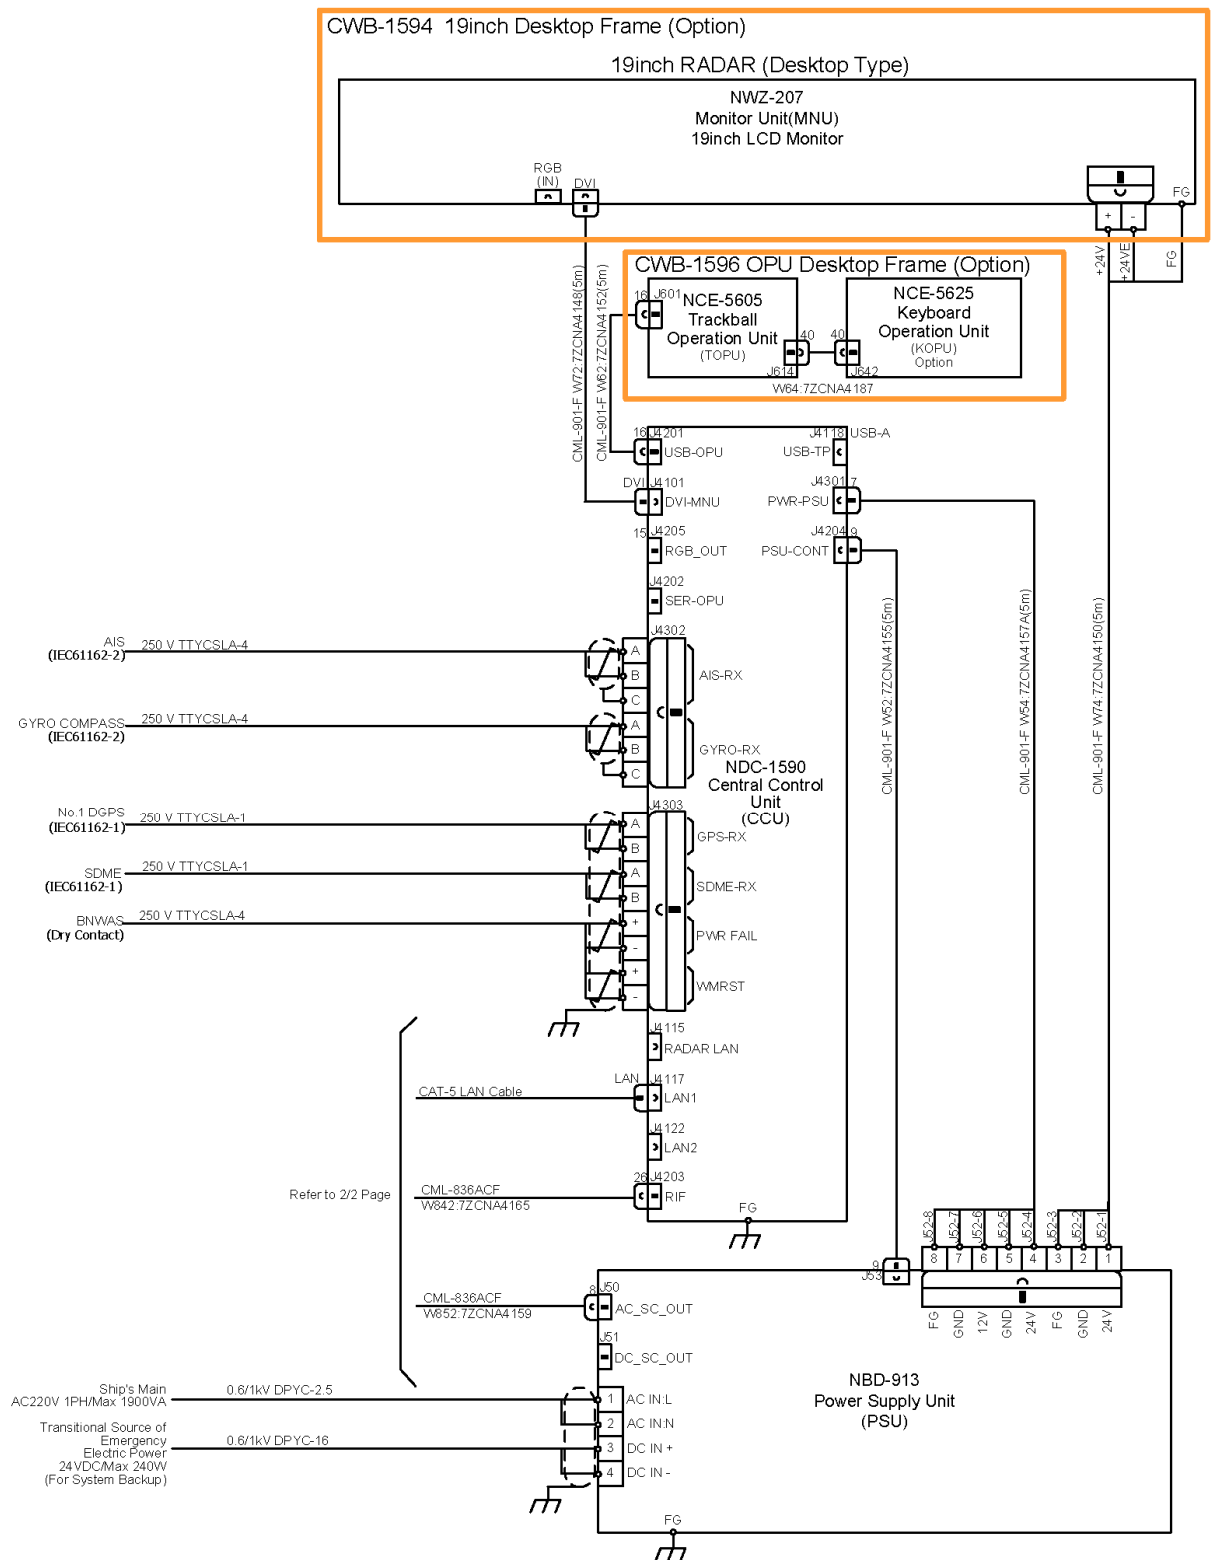

Interconnection Diagram of JMR-7230-S3 RADAR (1/2)


8.3.10 JMR-7230-S Interconnection Diagrams

Stand alone type

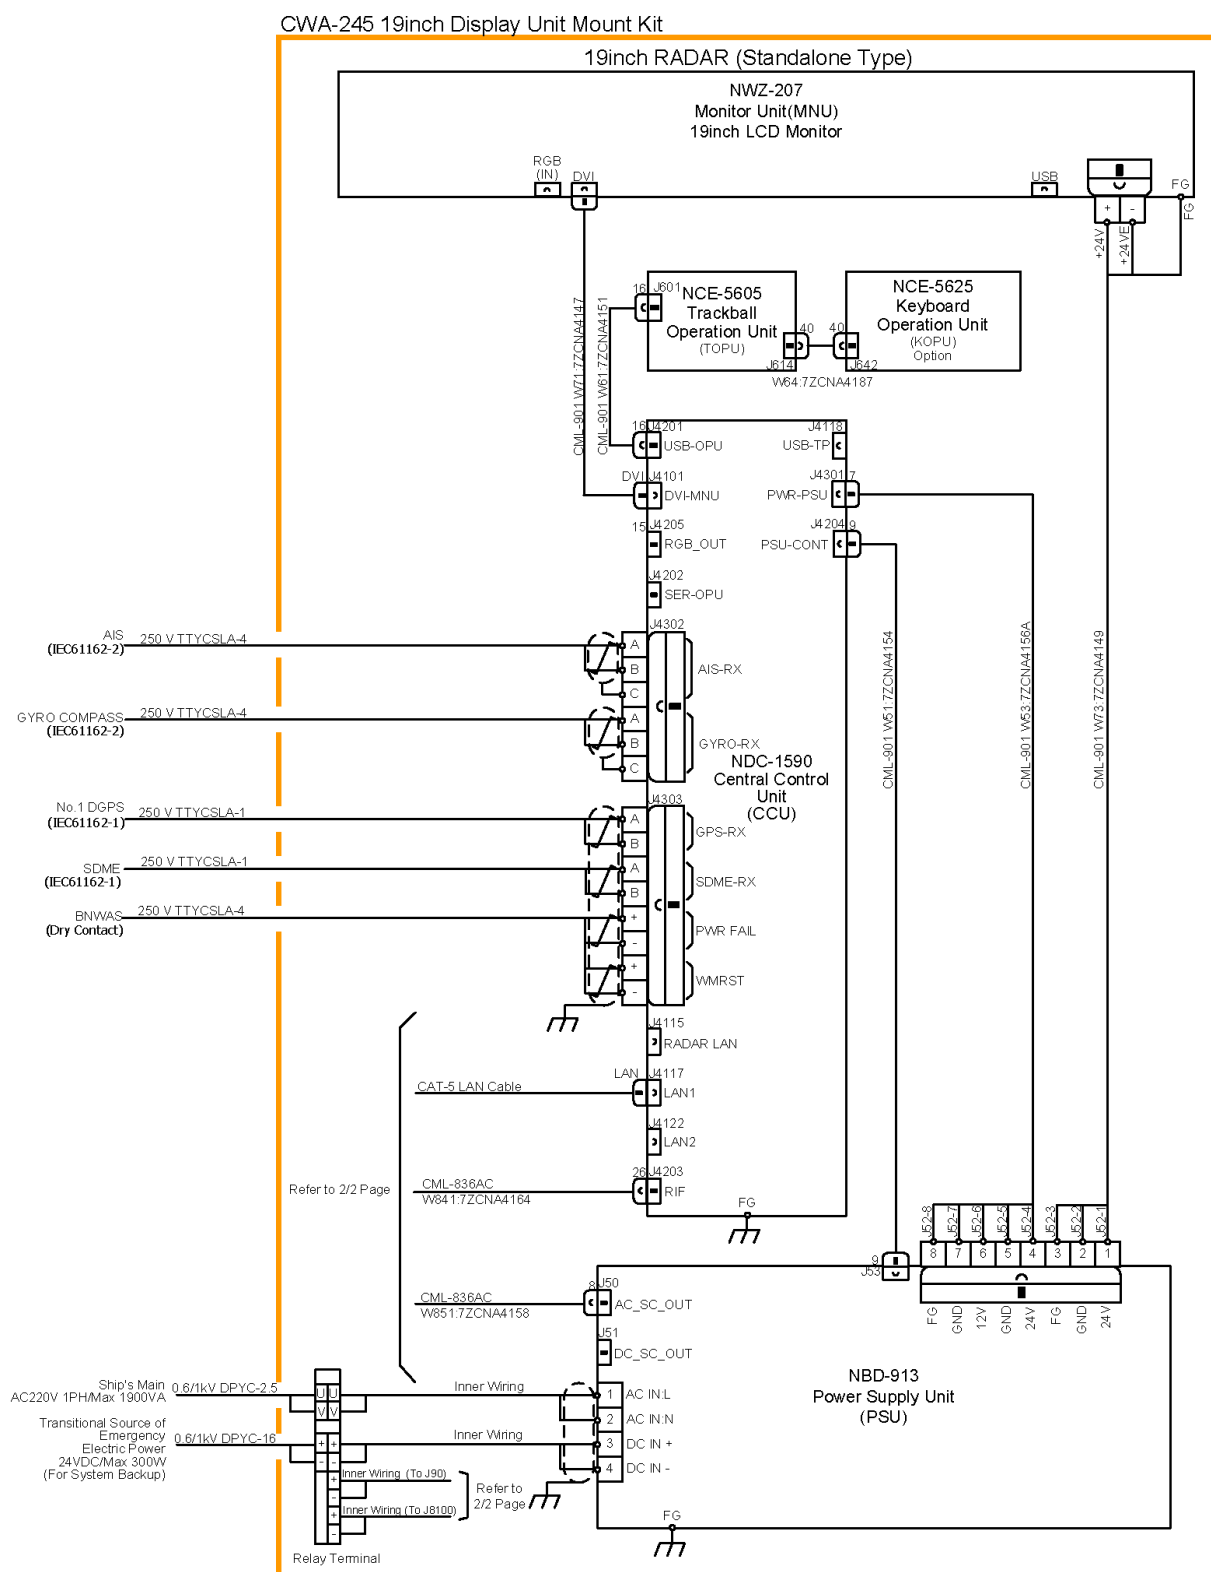


Interconnection Diagram of JMR-7230-S RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

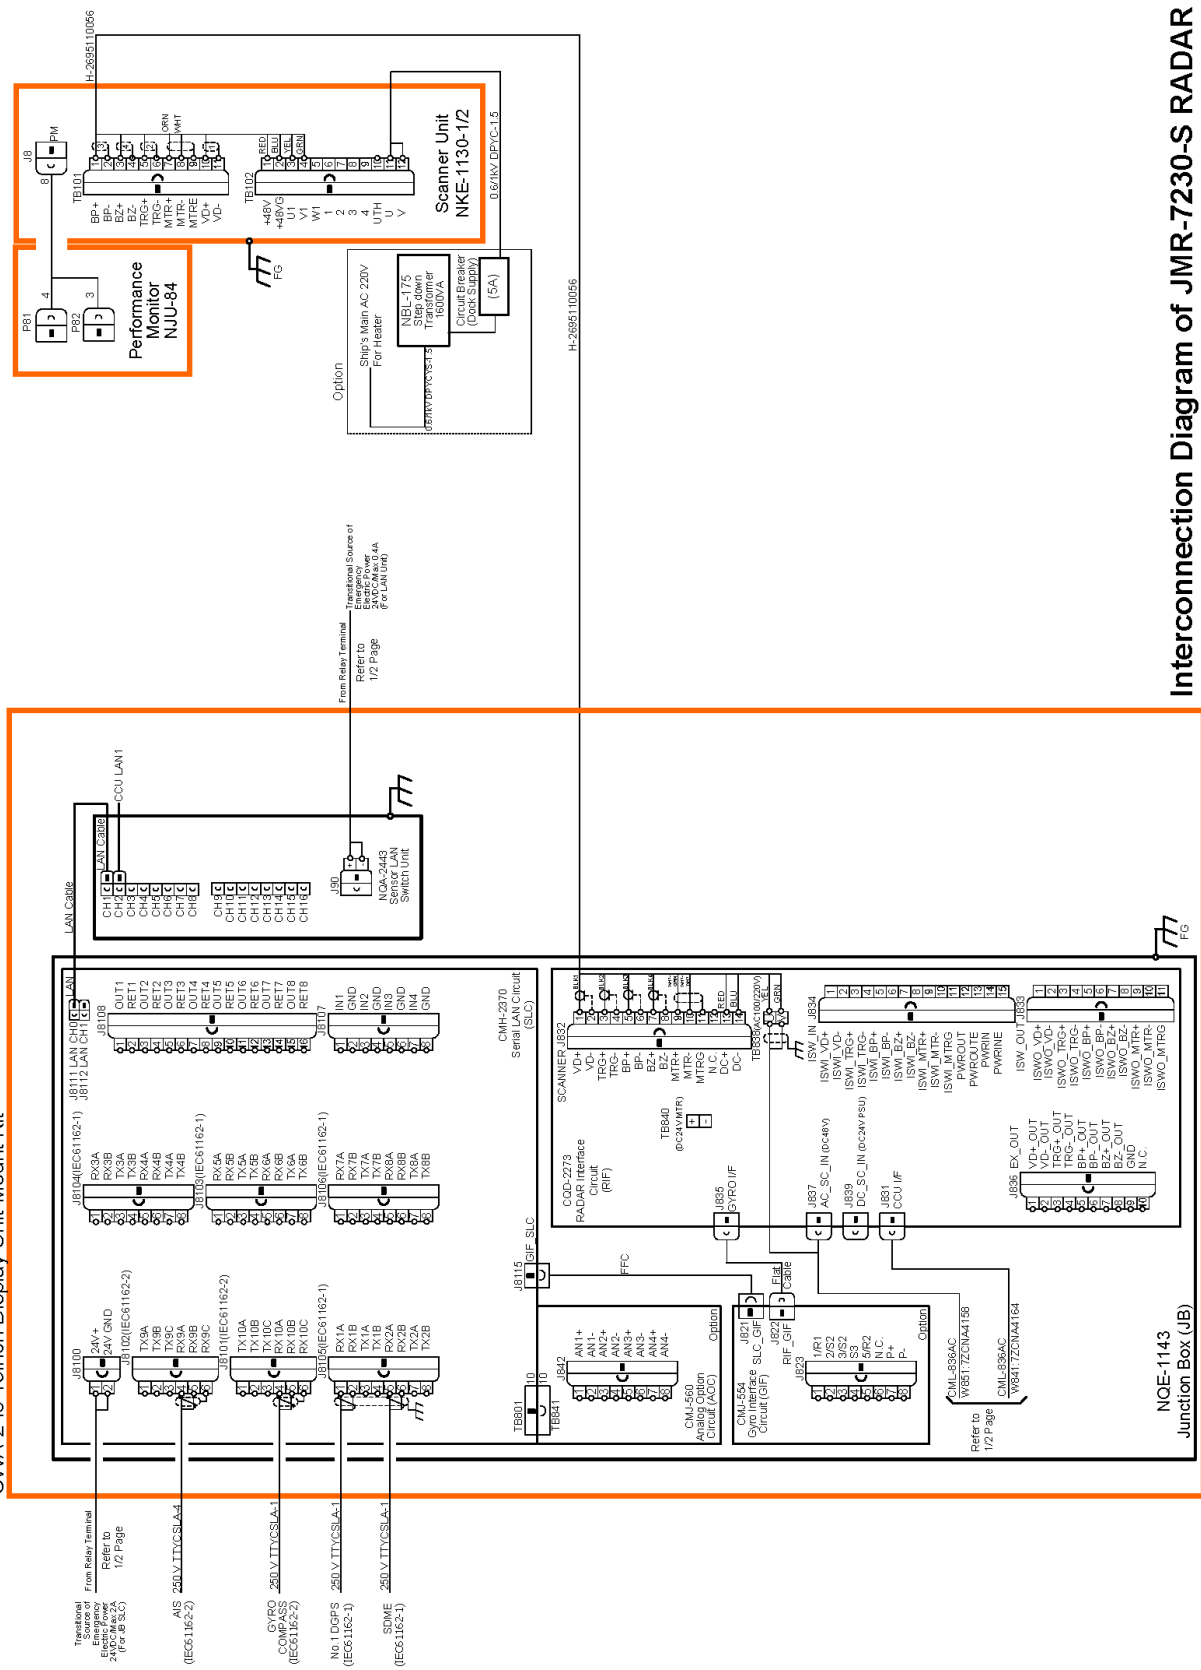


Interconnection Diagram of JMR-7230-S RADAR (2/2)

Desktop type

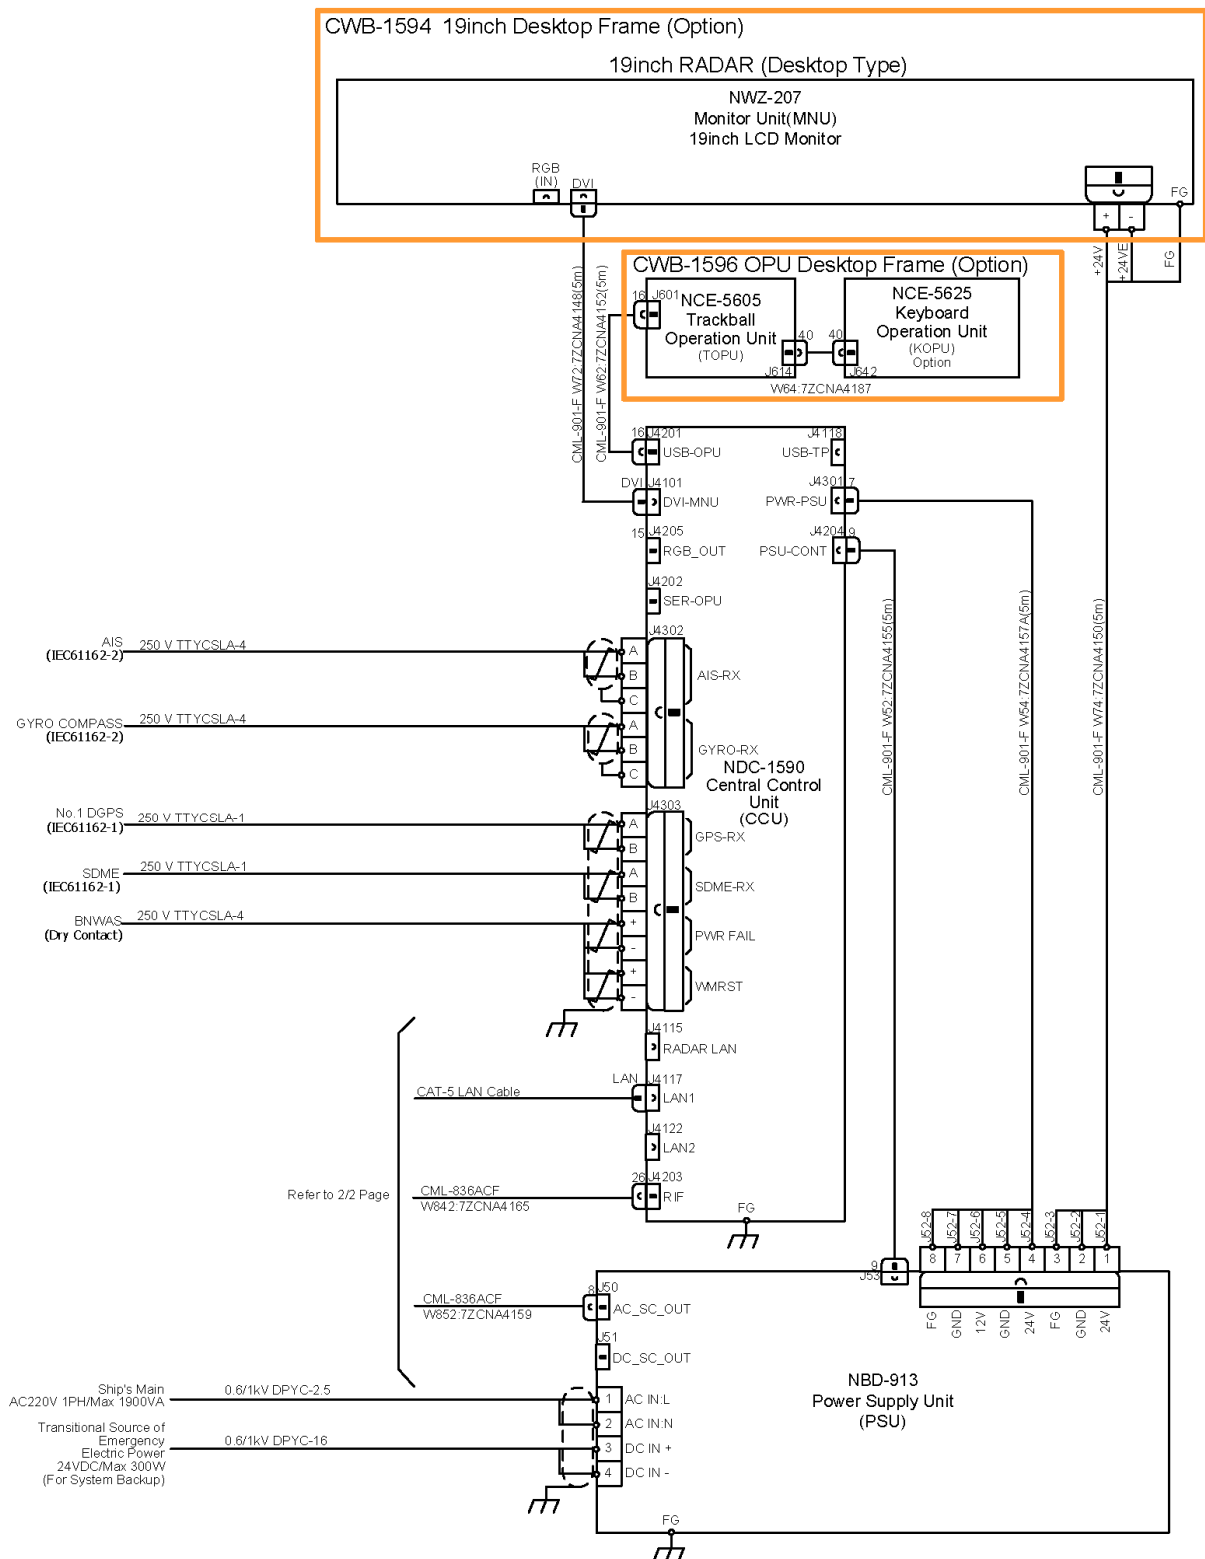

Interconnection Diagram of JMR-7230-S RADAR (1/2)

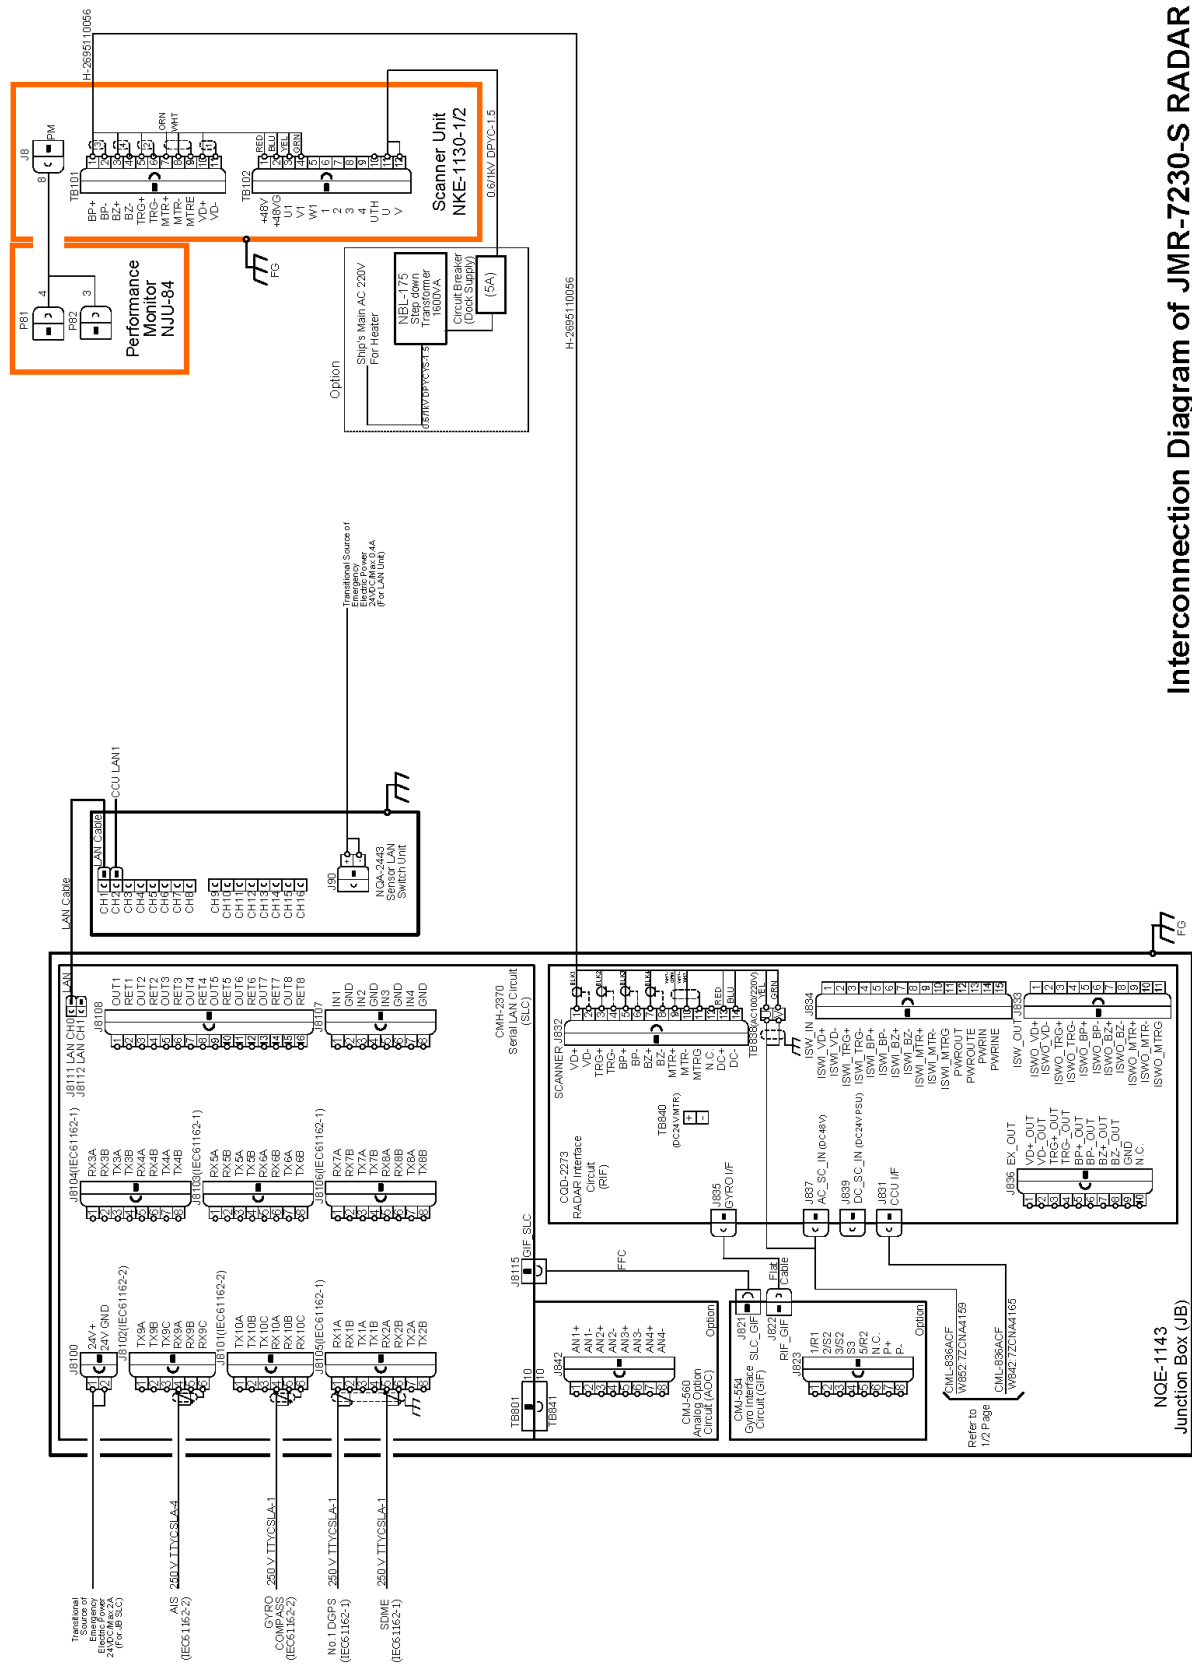


Interconnection Diagram of JMR-7230-S RADAR (2/2)

8.3.11 JMR-7225-7X3/9X3 Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

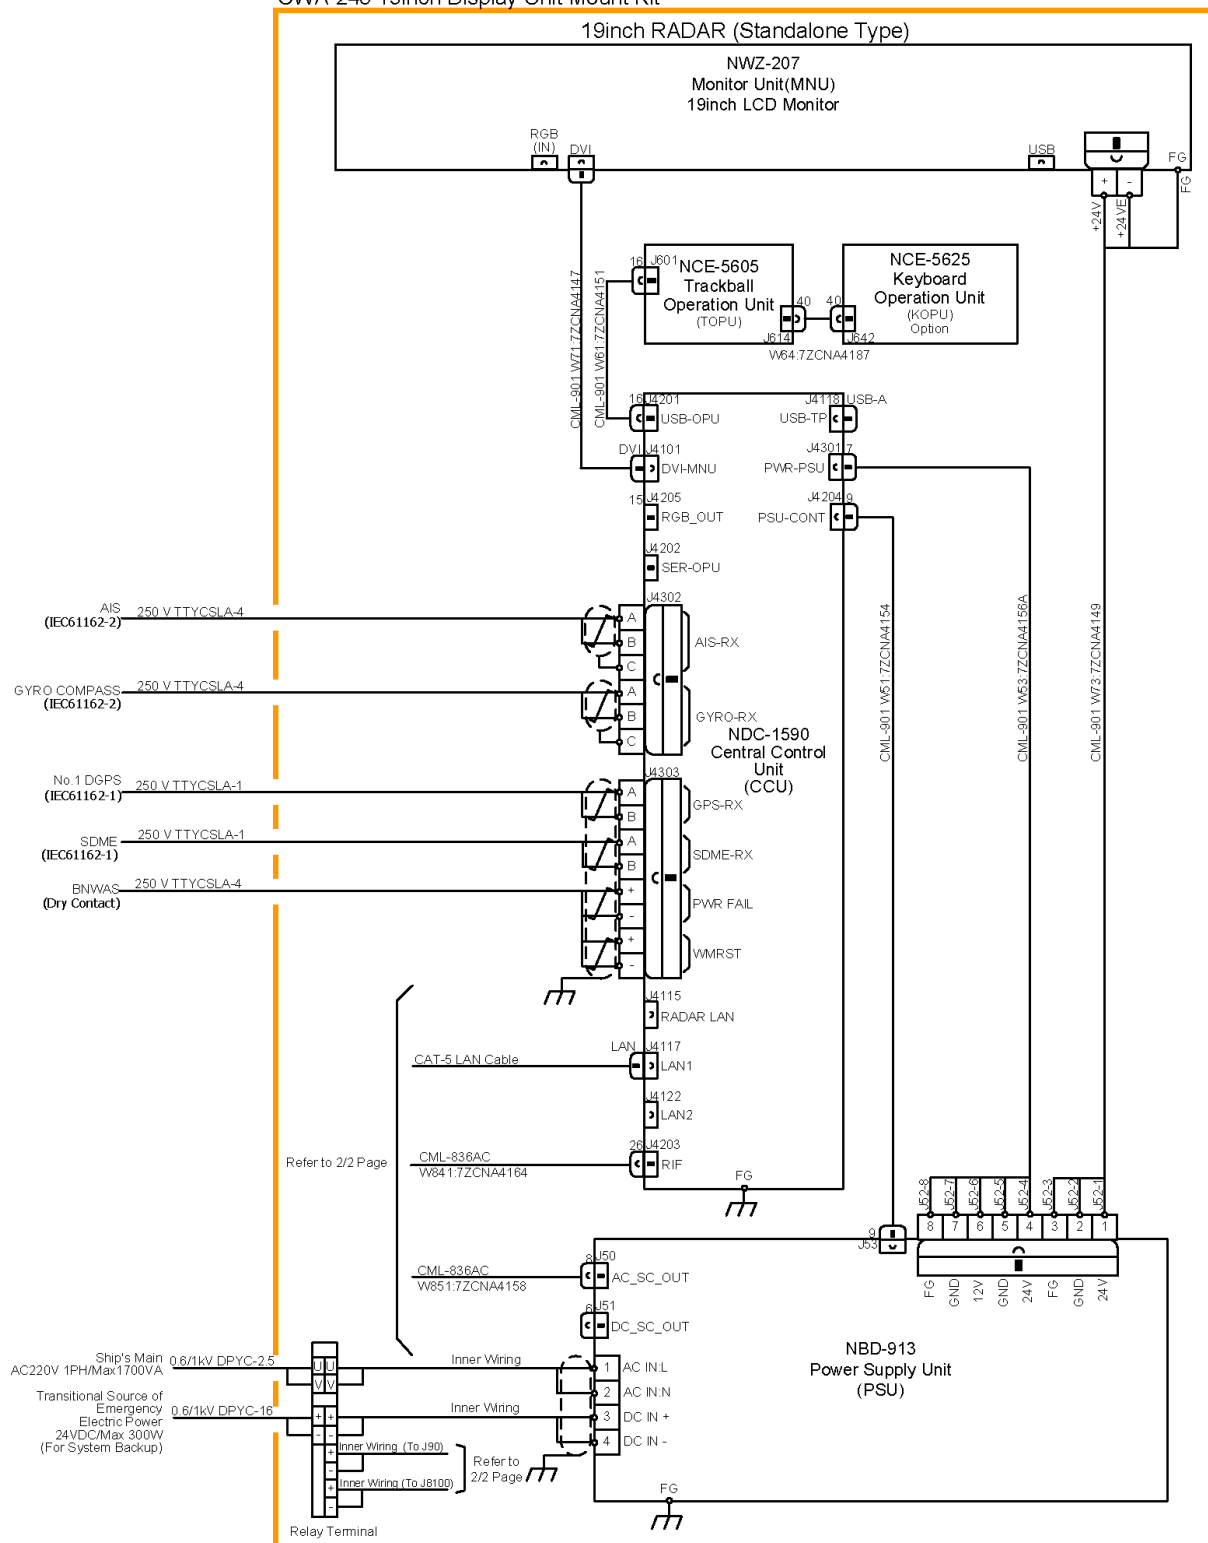


Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

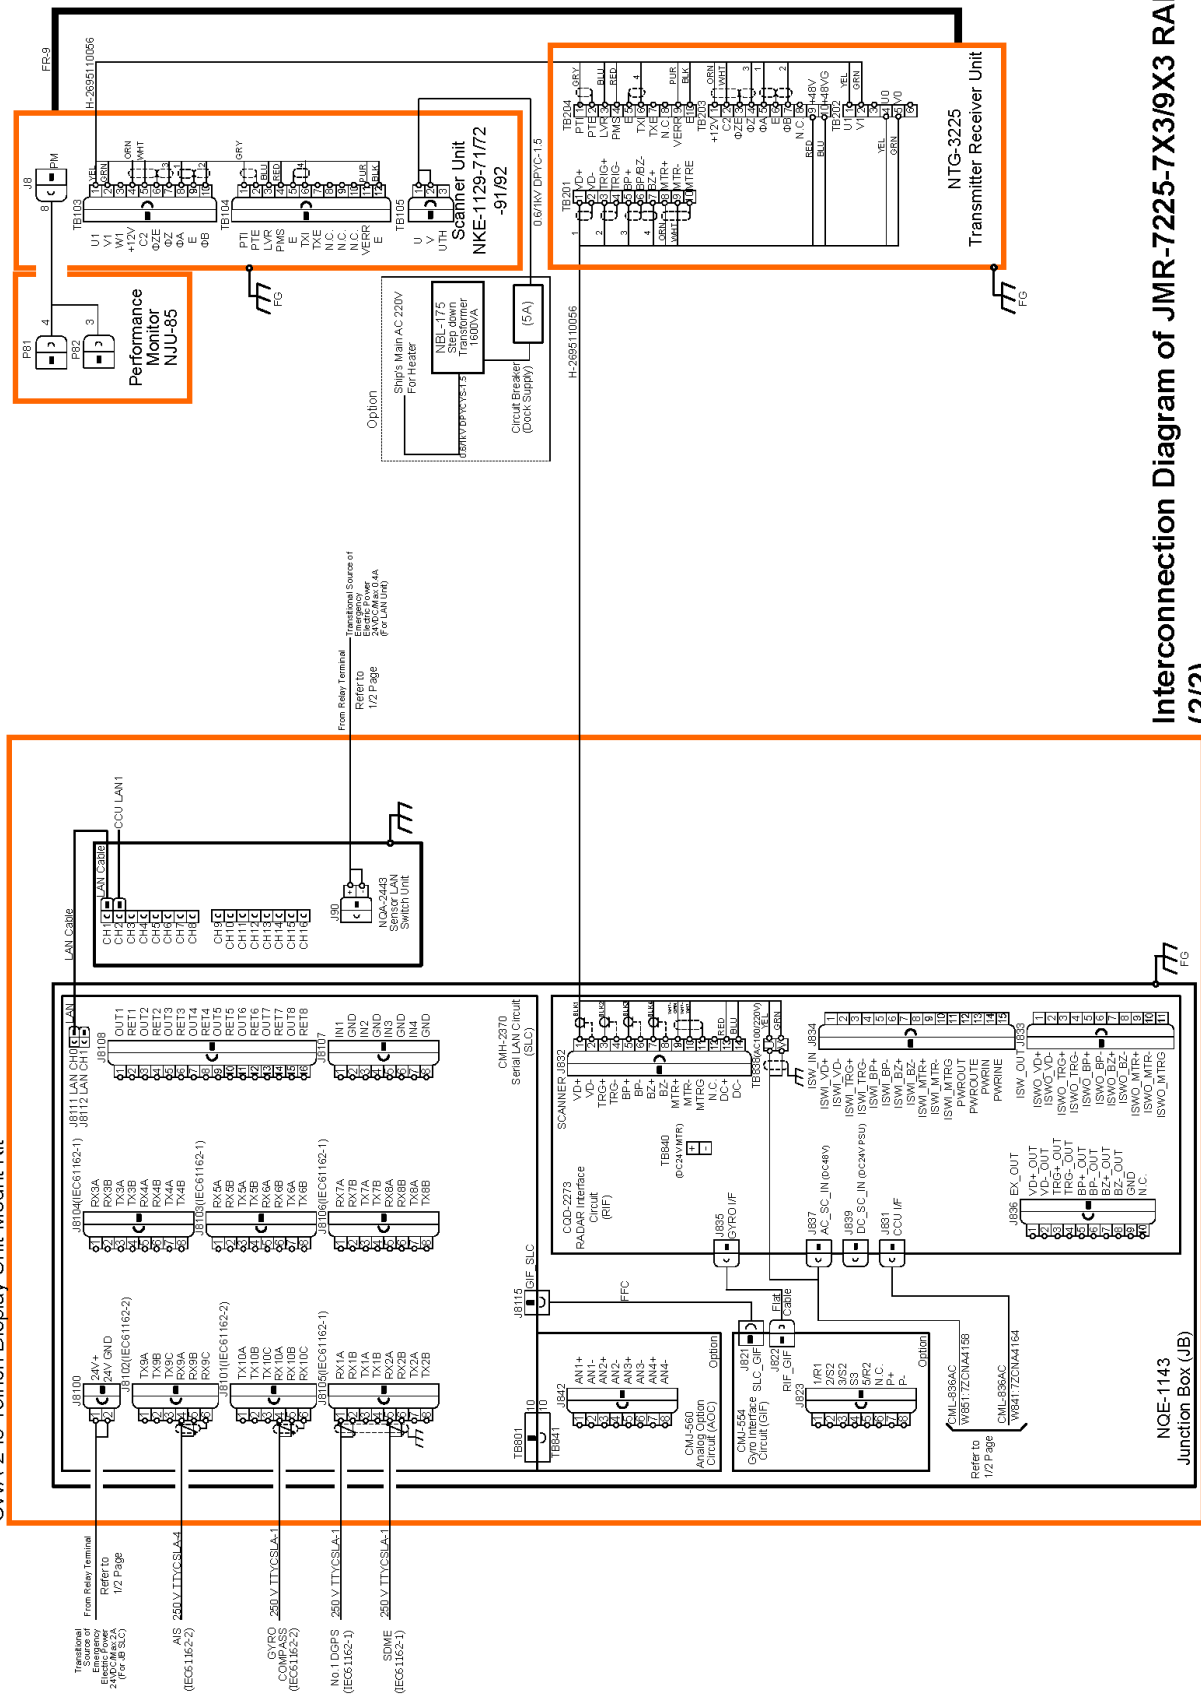


Interconnection Diagram of JMR-7225-7X3I9X3 RADAR (2/2)

Desktop type

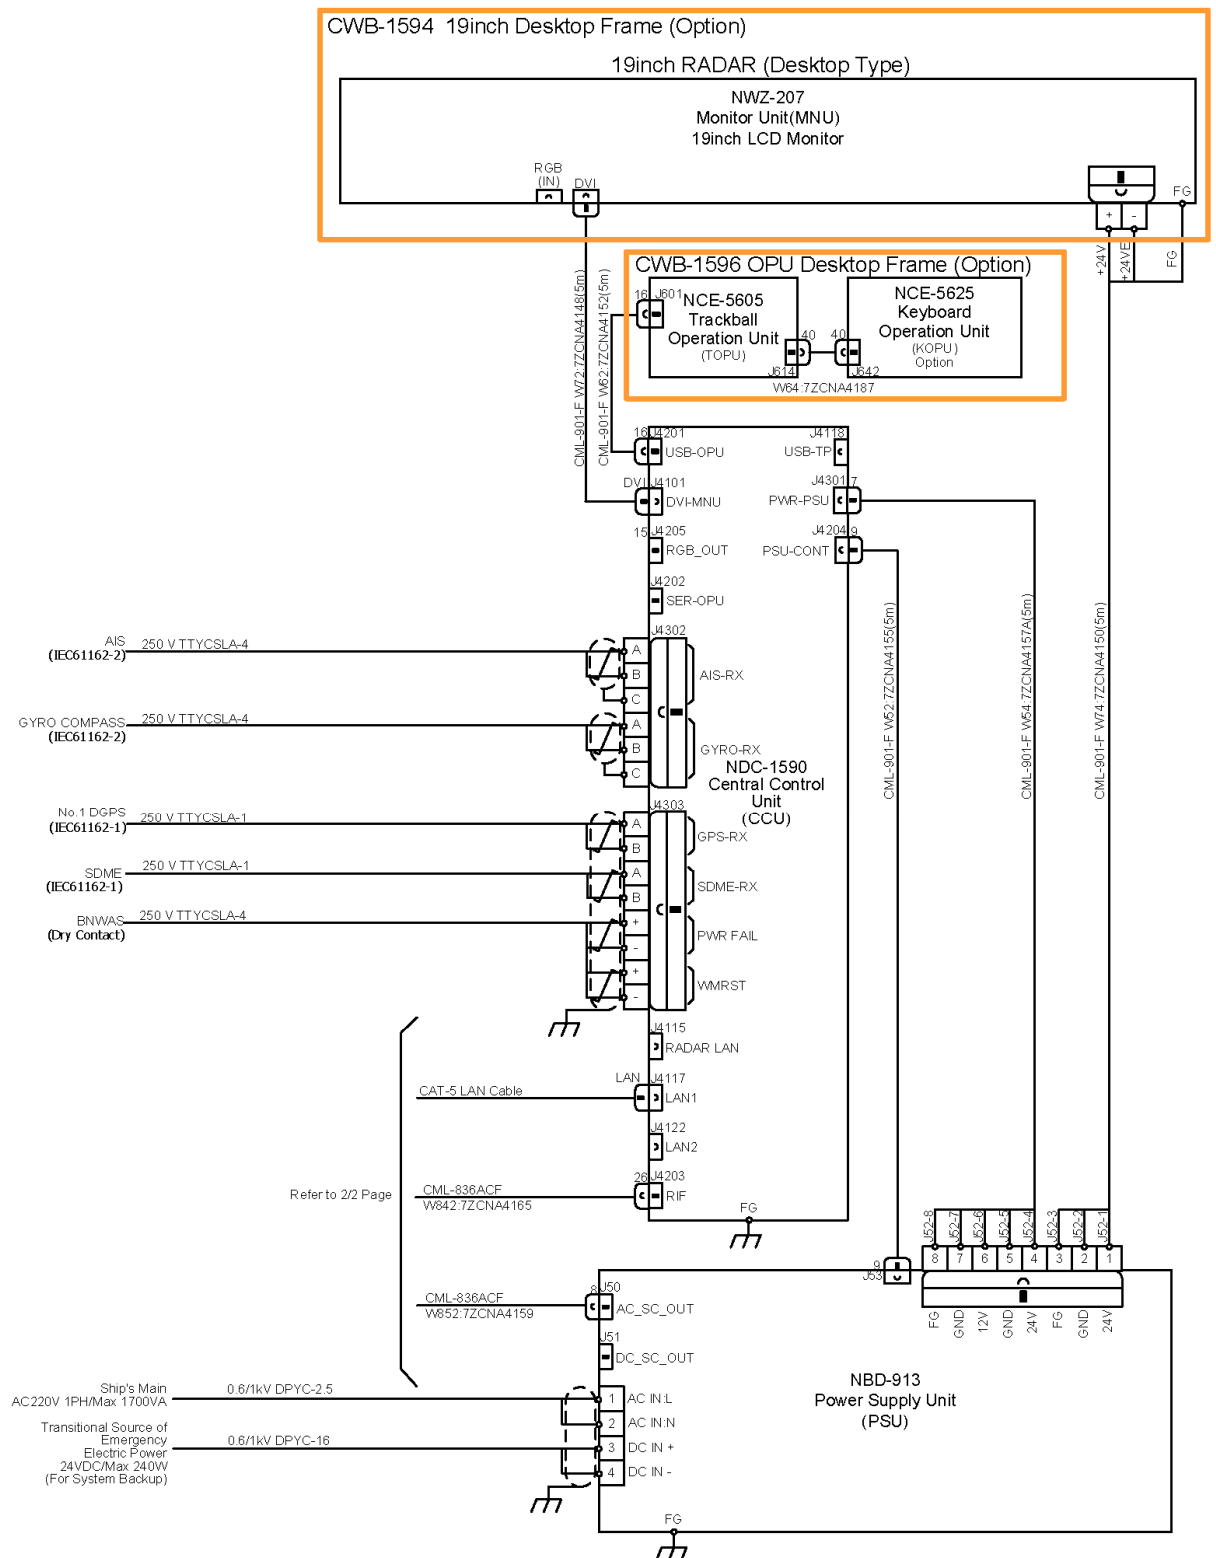


Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (1/2)

 


8.3.12 JMR-7225-6X/9X Interconnection Diagrams

Stand alone type

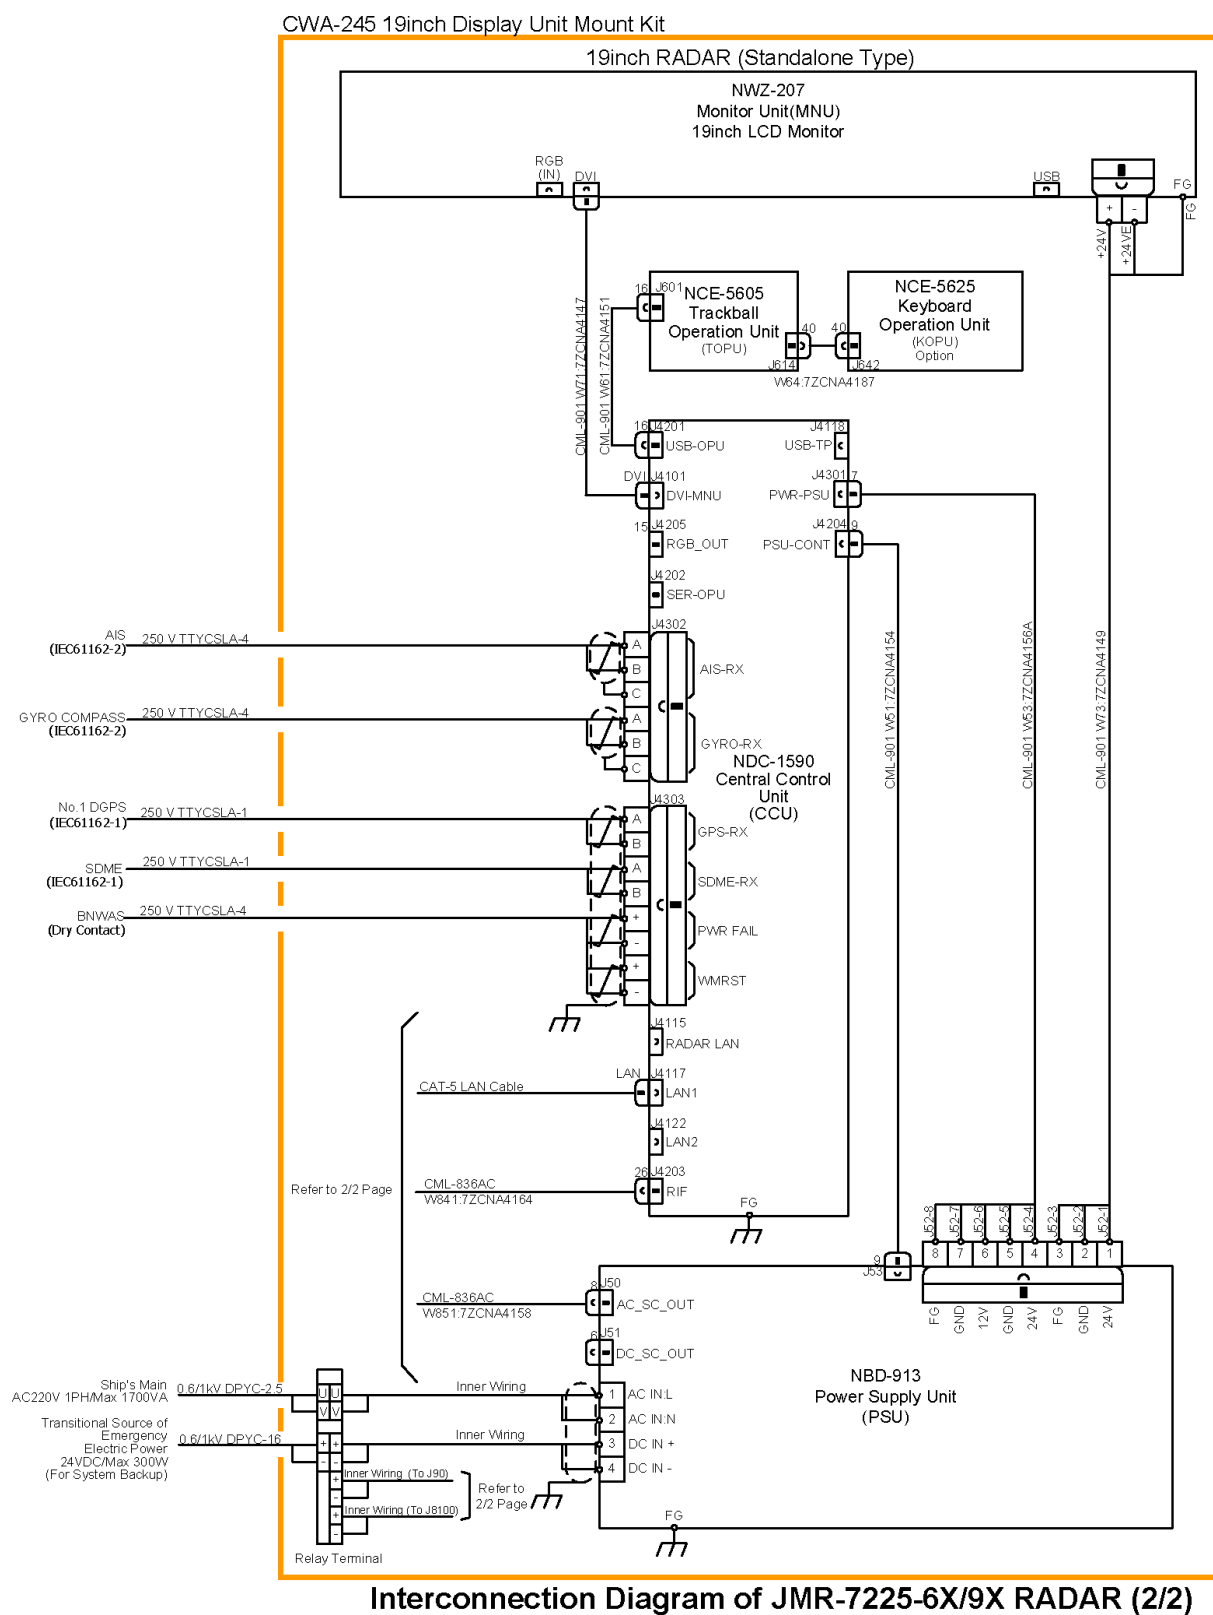


Desktop type

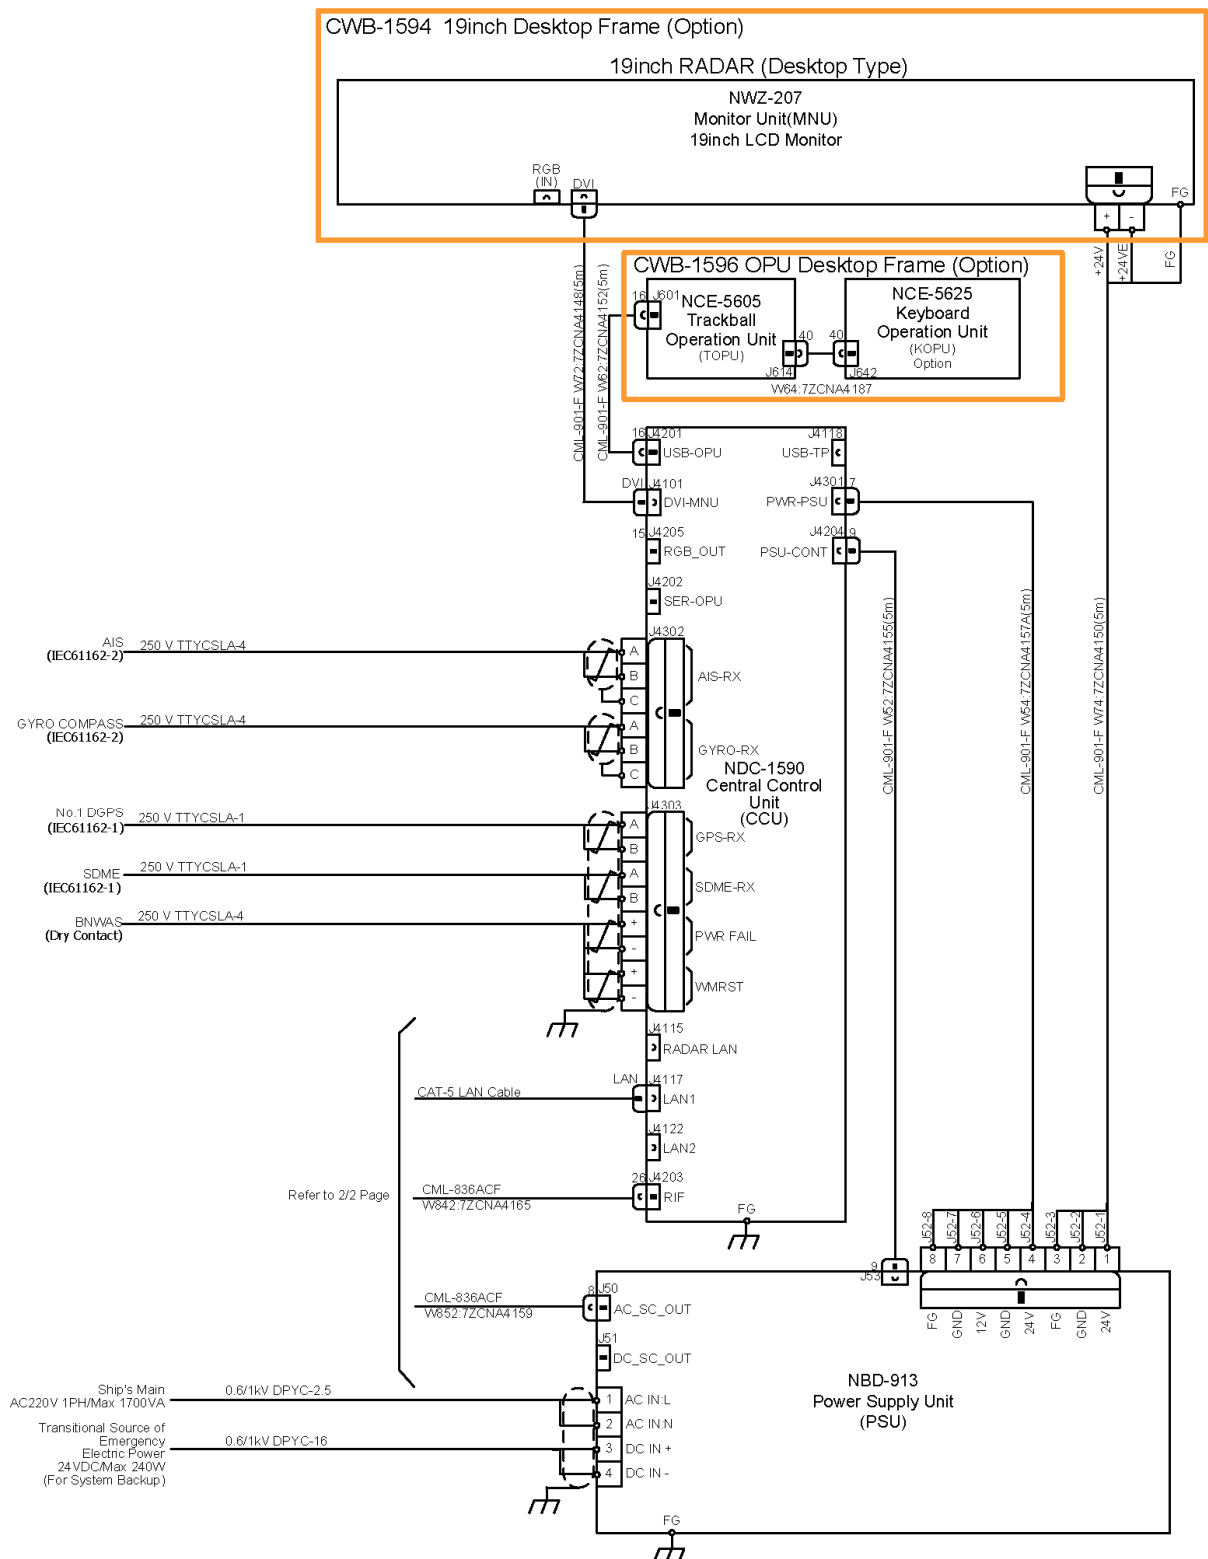


Interconnection Diagram of JMR-7225-6X/9X RADAR (2/2)

8.3.13 JMR-7225-6XH Interconnection Diagrams

Stand alone type

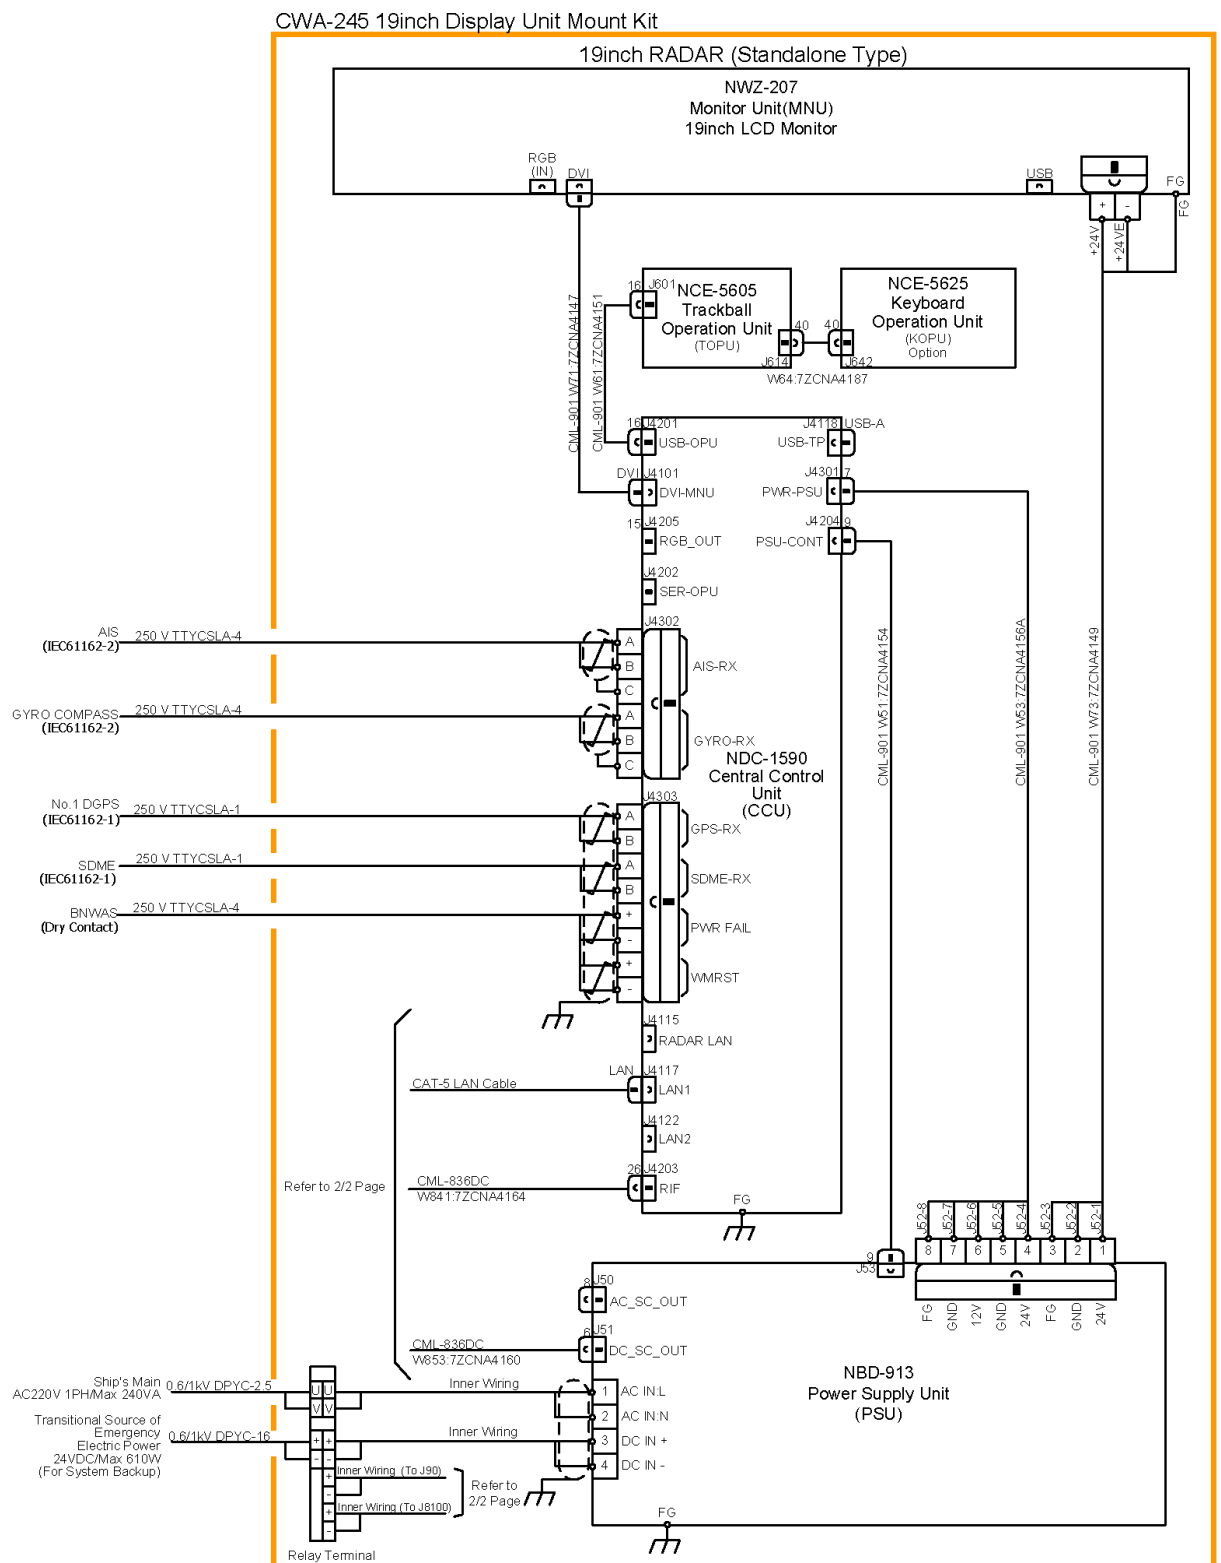


Interconnection Diagram of JMR-7225-6XH RADAR (1/2)

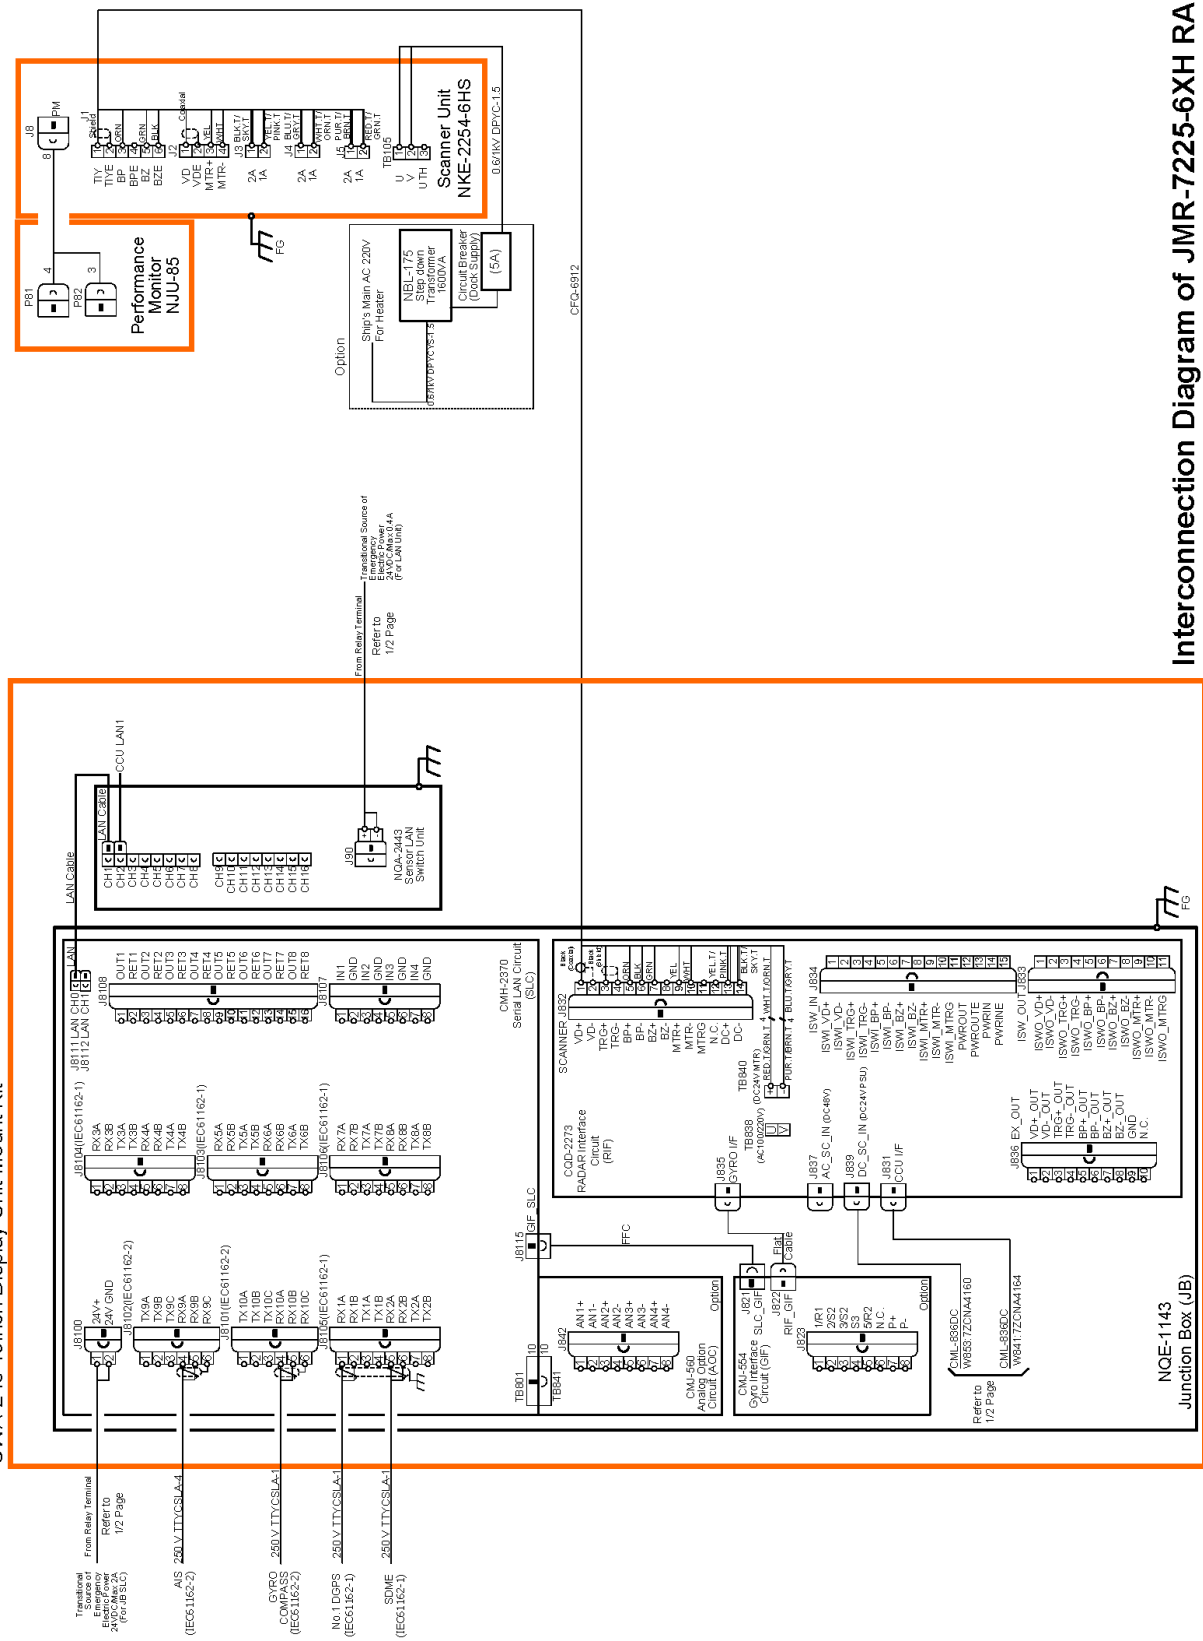

NQE-1143
Junction Box (JB)

Desktop type

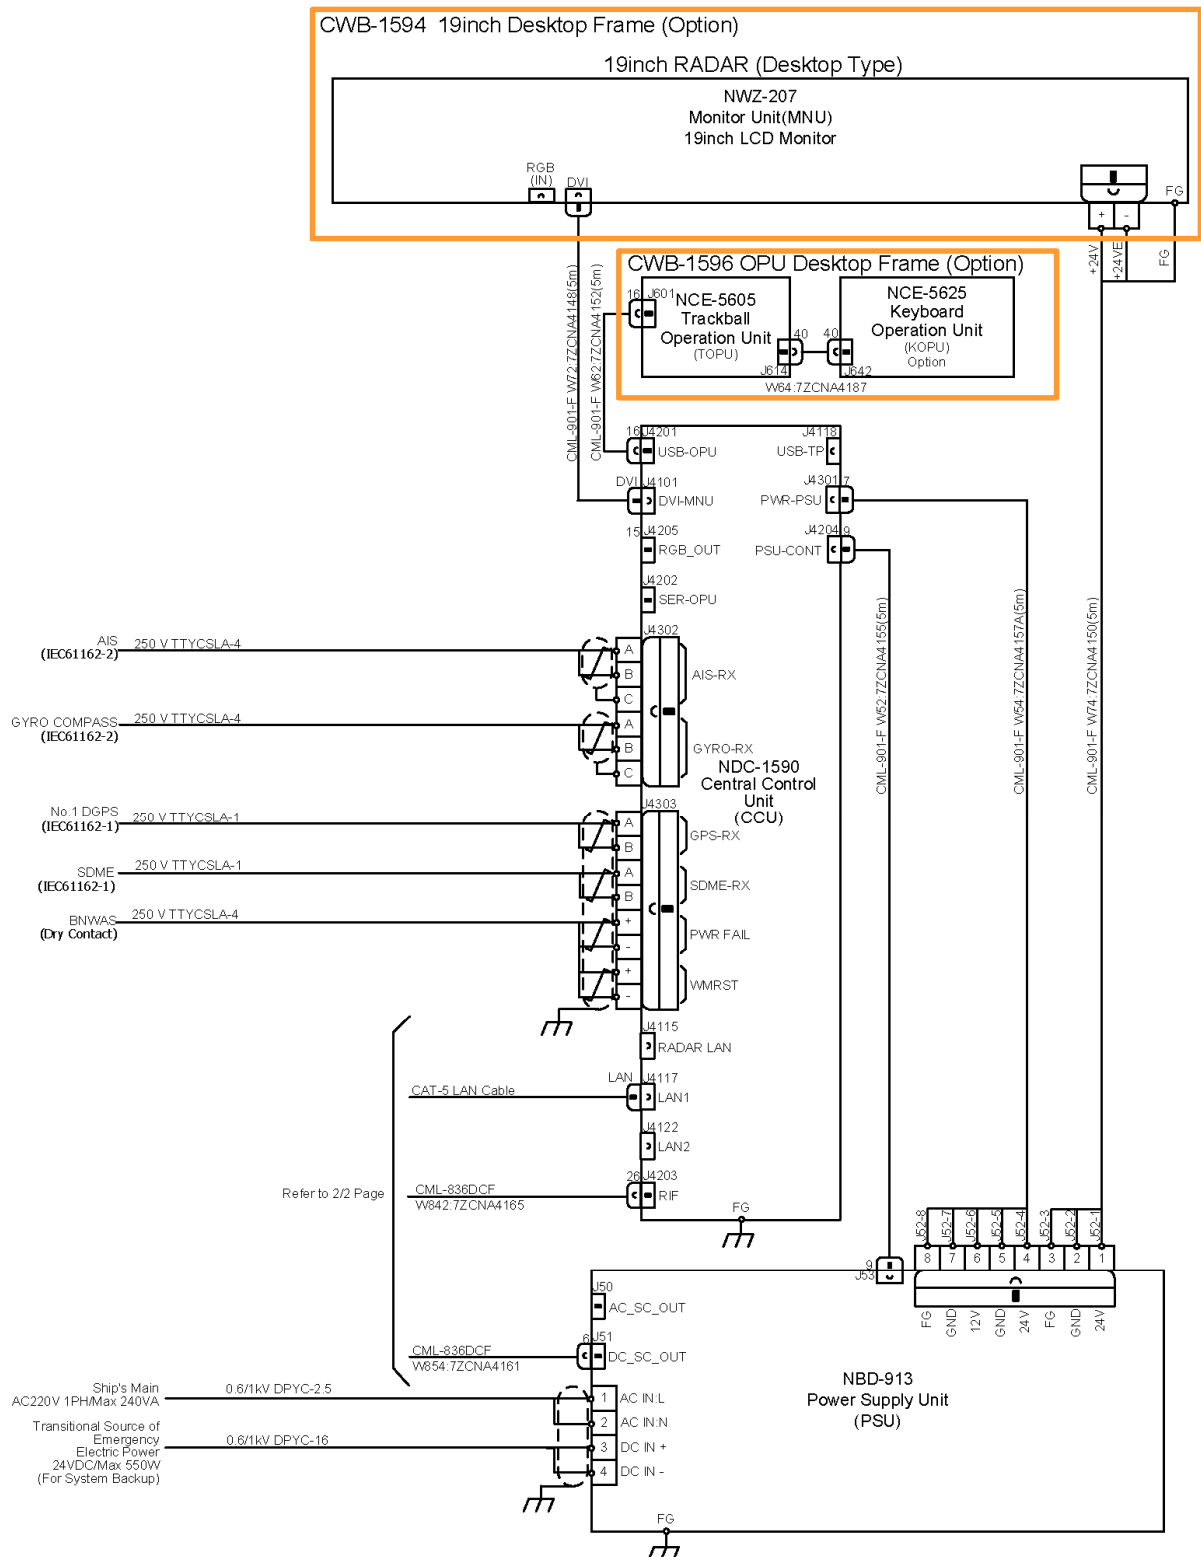


Interconnection Diagram of JMR-7225-6XH RADAR (1/2)


8.3.14 JMR-7210-6X/6XH Interconnection Diagrams

Stand alone type


CWA-245 19inch Display Unit Mount Kit

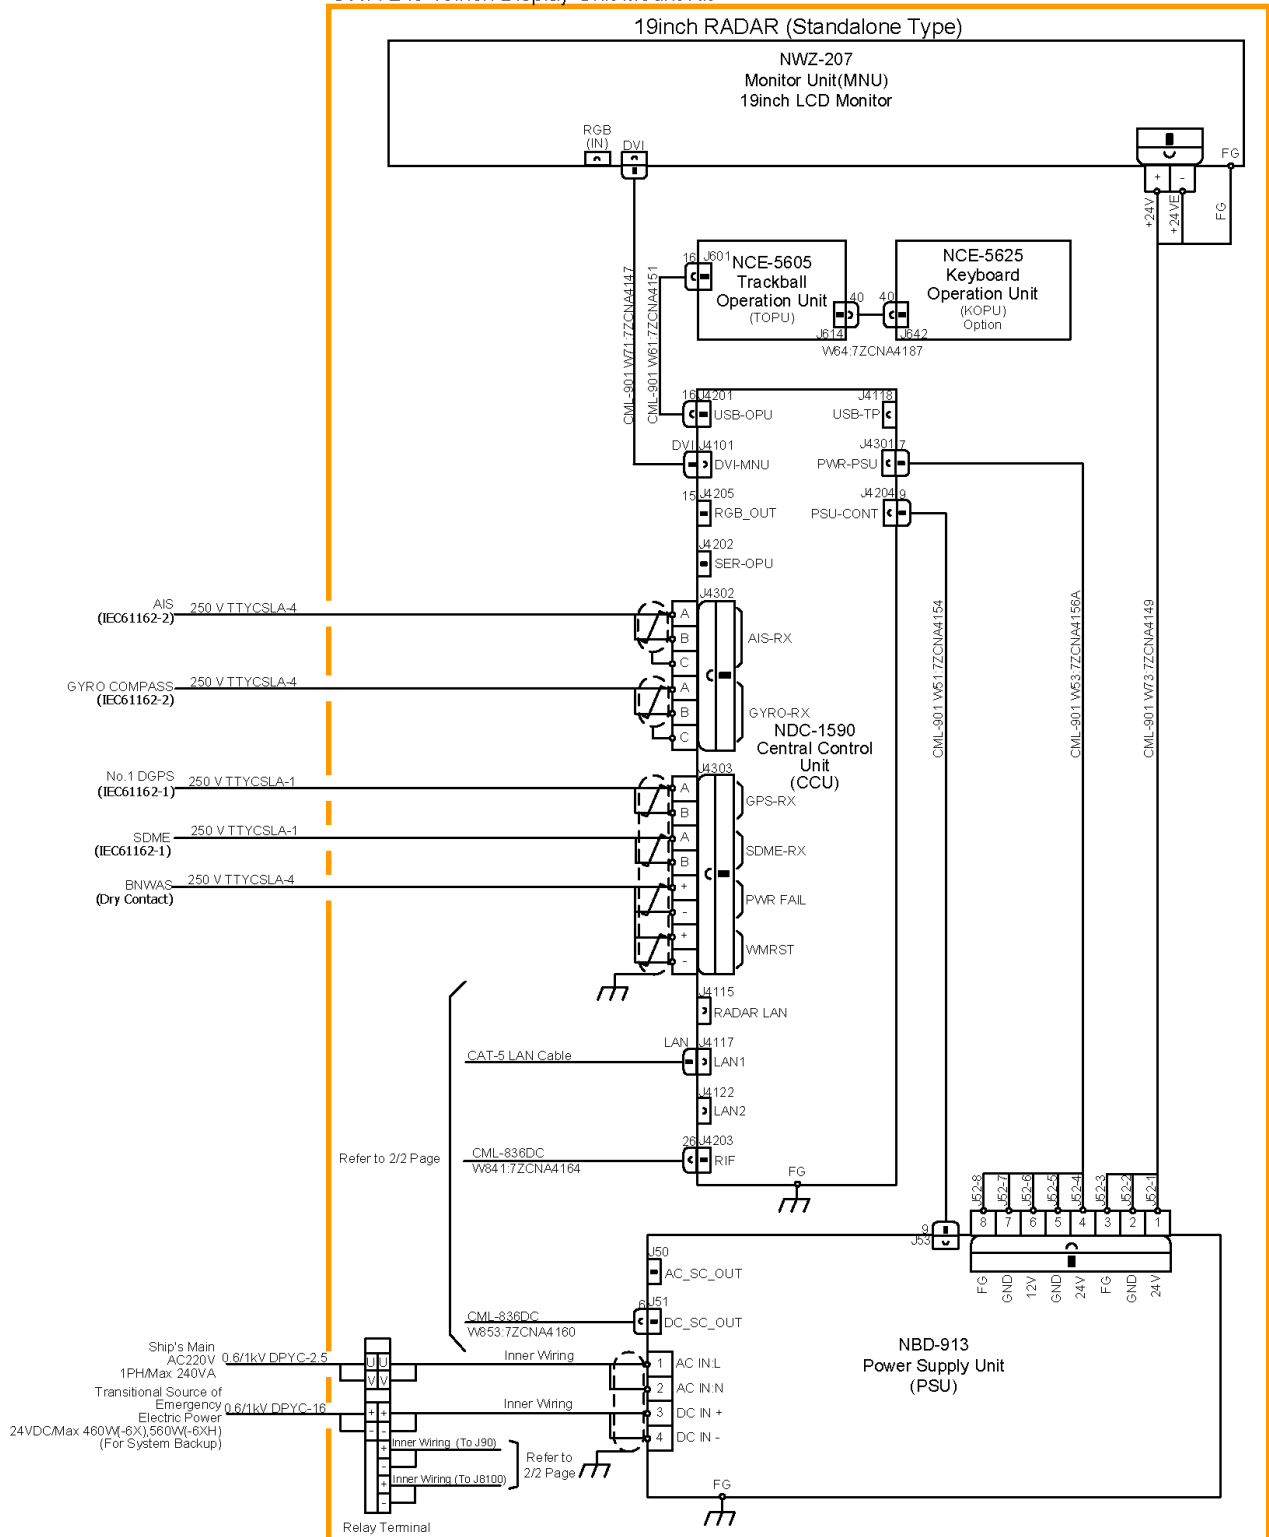


Interconnection Diagram of JMR-7210-6X/6XH RADAR (1/2)

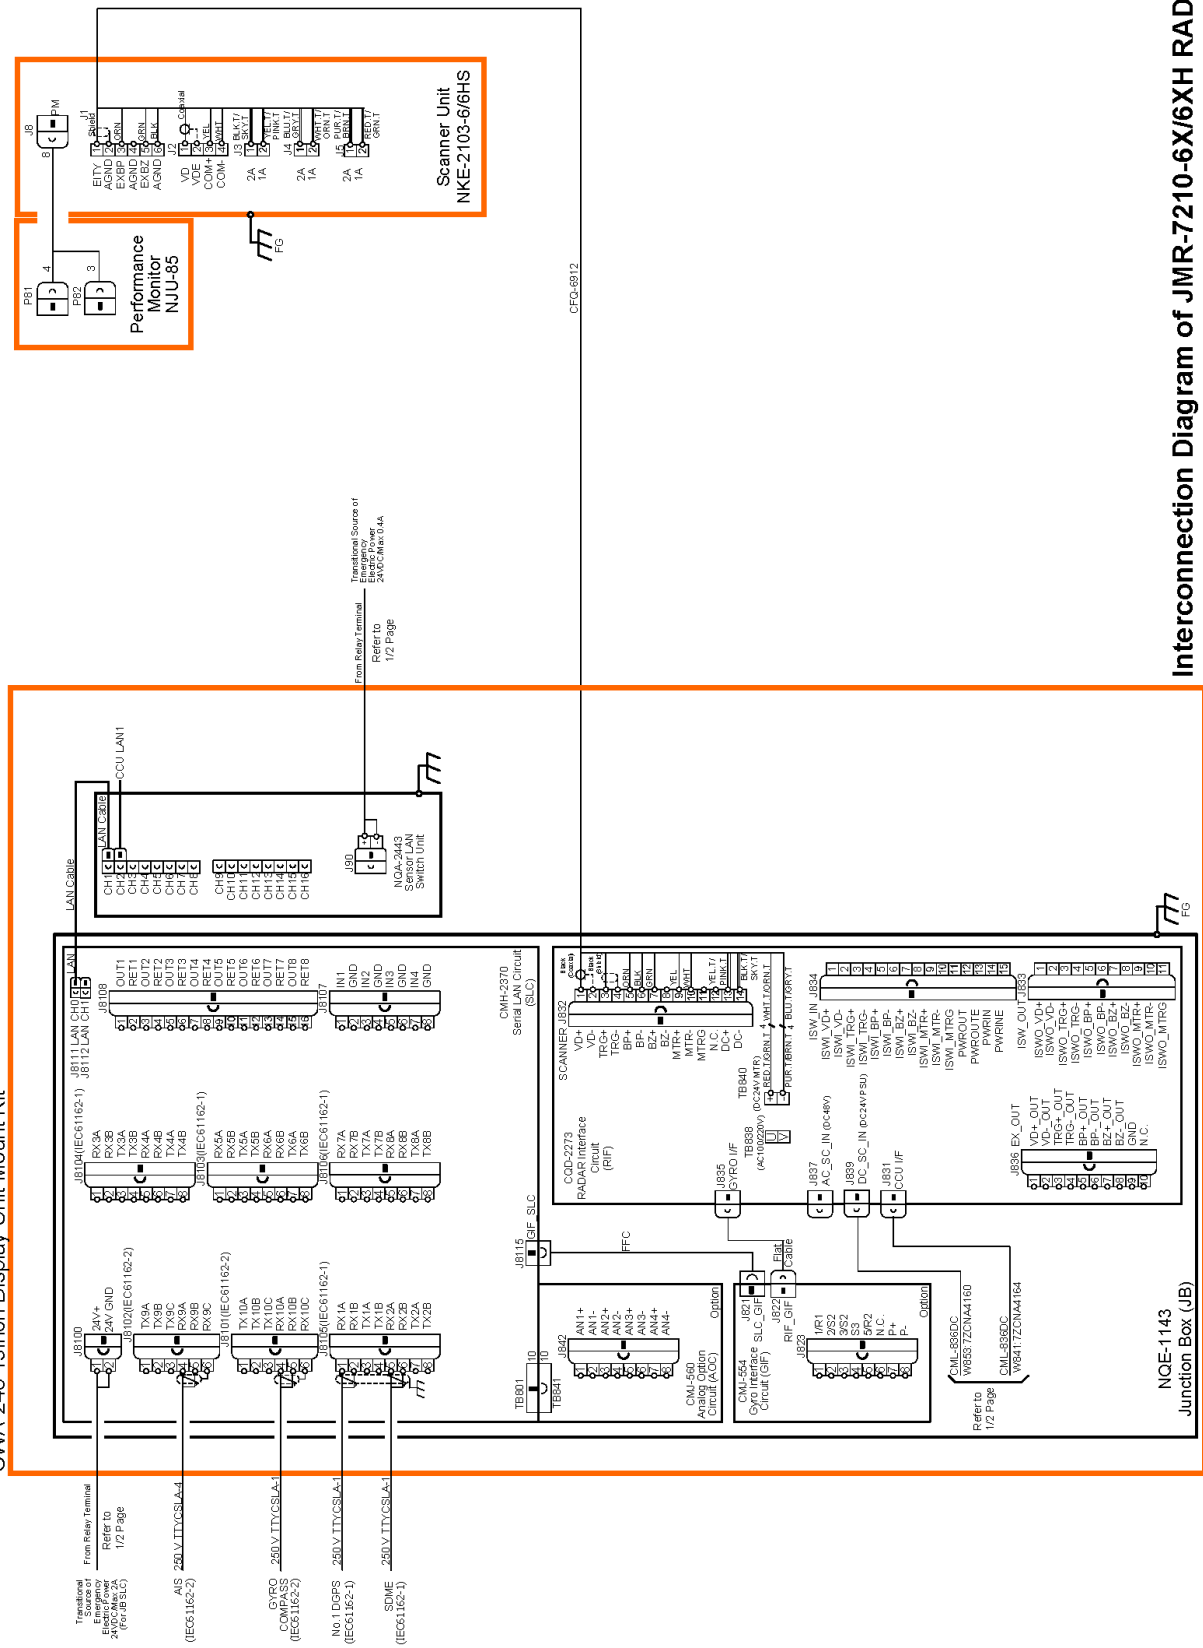

Desktop type

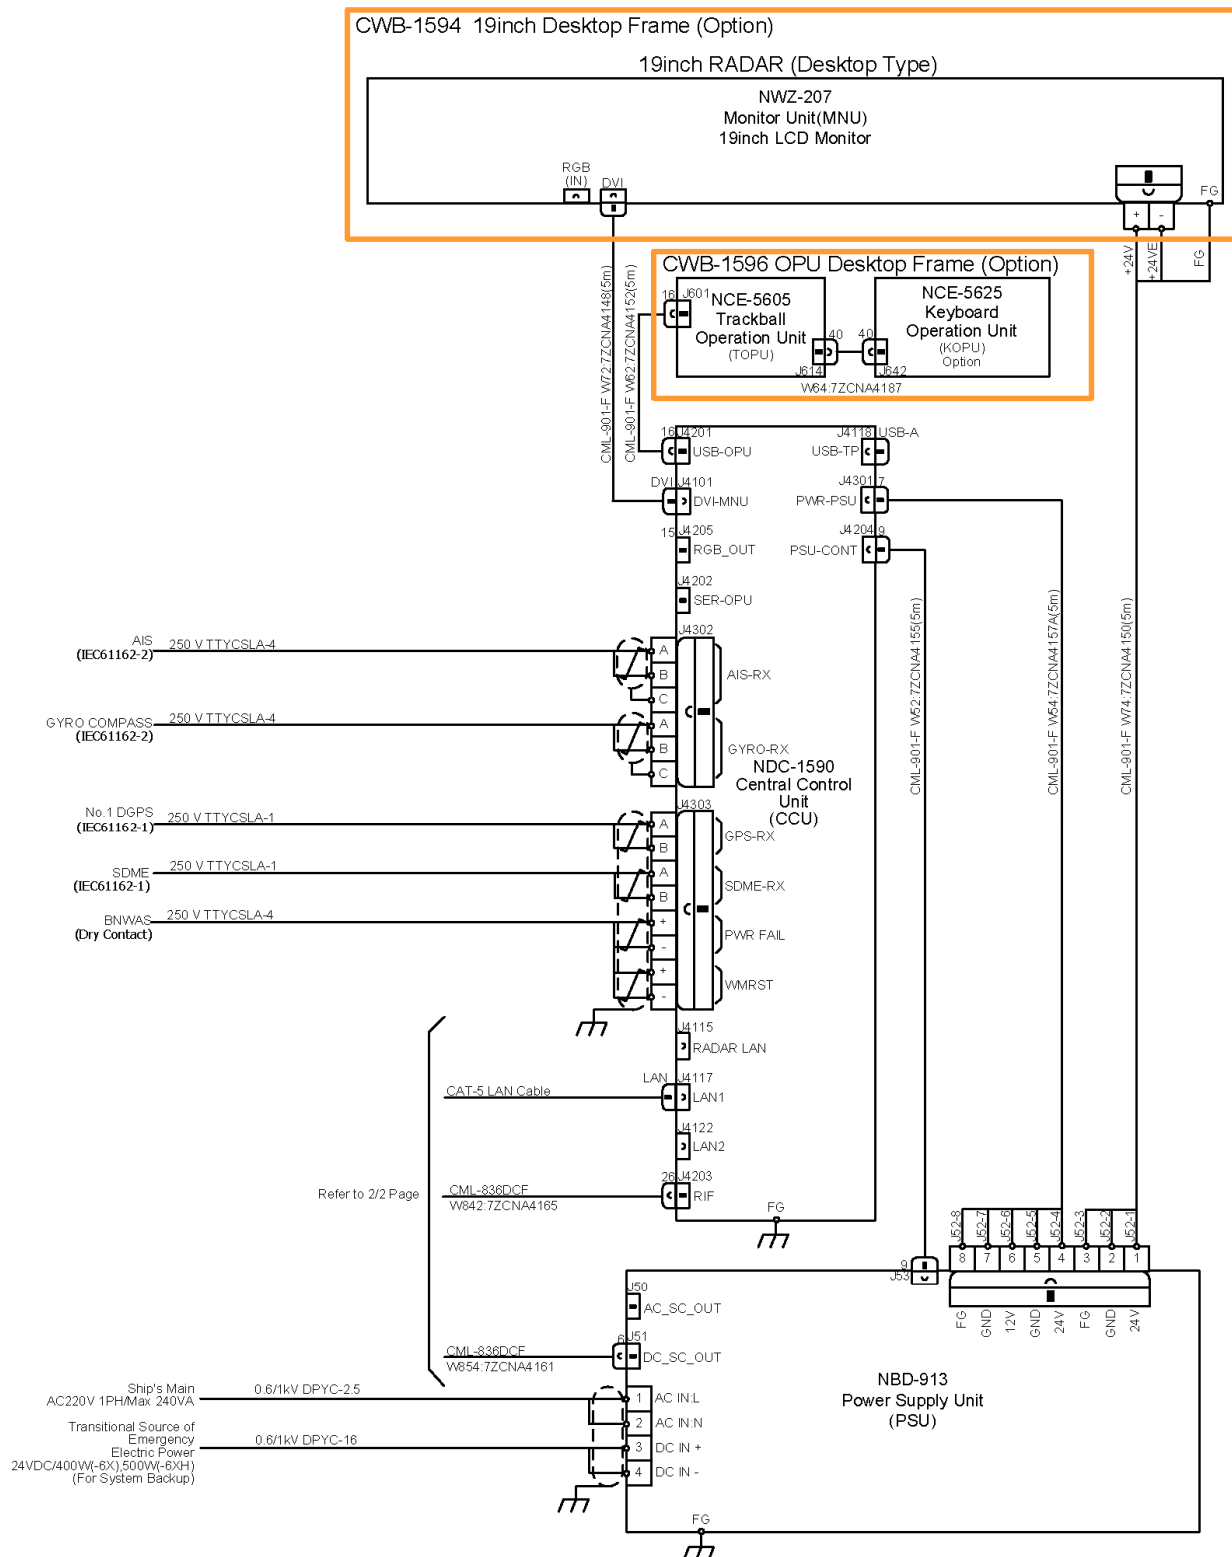


Interconnection Diagram of JMR-7210-6X/6XH RADAR (1/2)

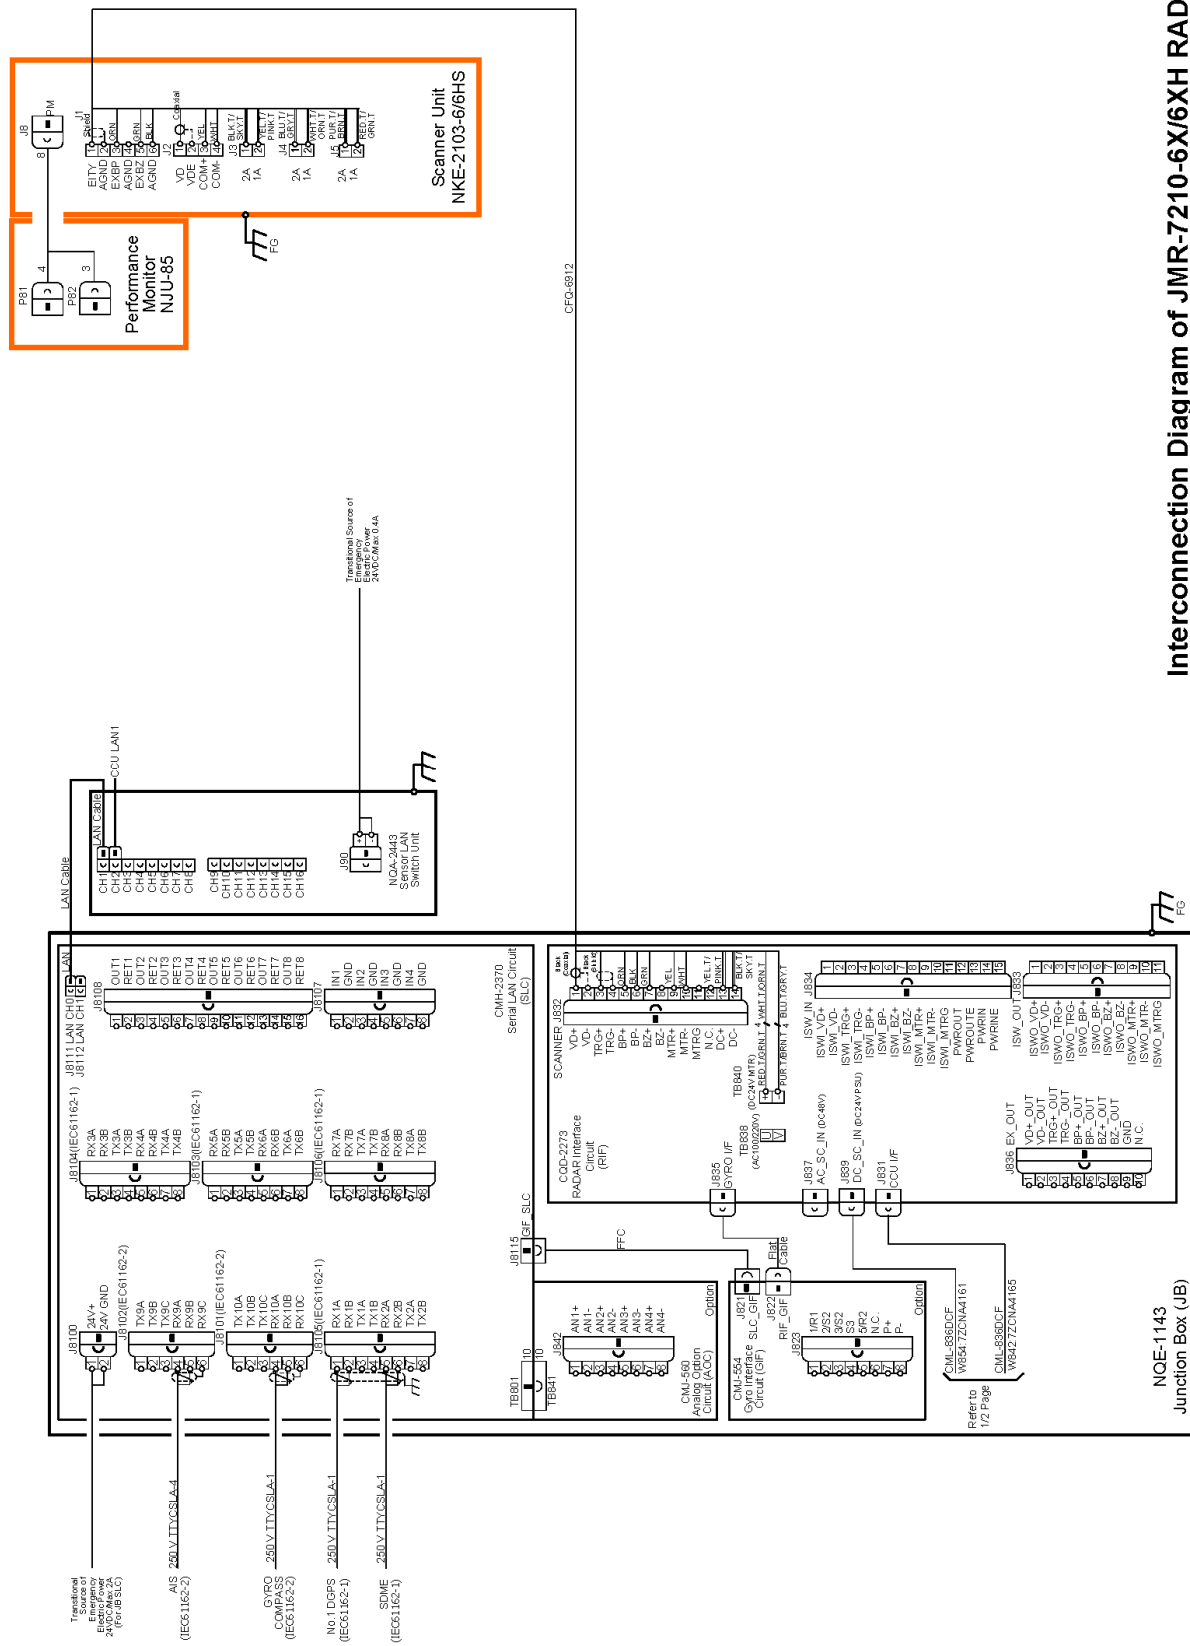

Interconnection Diagram of JMR-7210-6X/6XH RADAR (2/2)

8.3.15 JMR-7272-S Interconnection Diagrams

Stand alone type

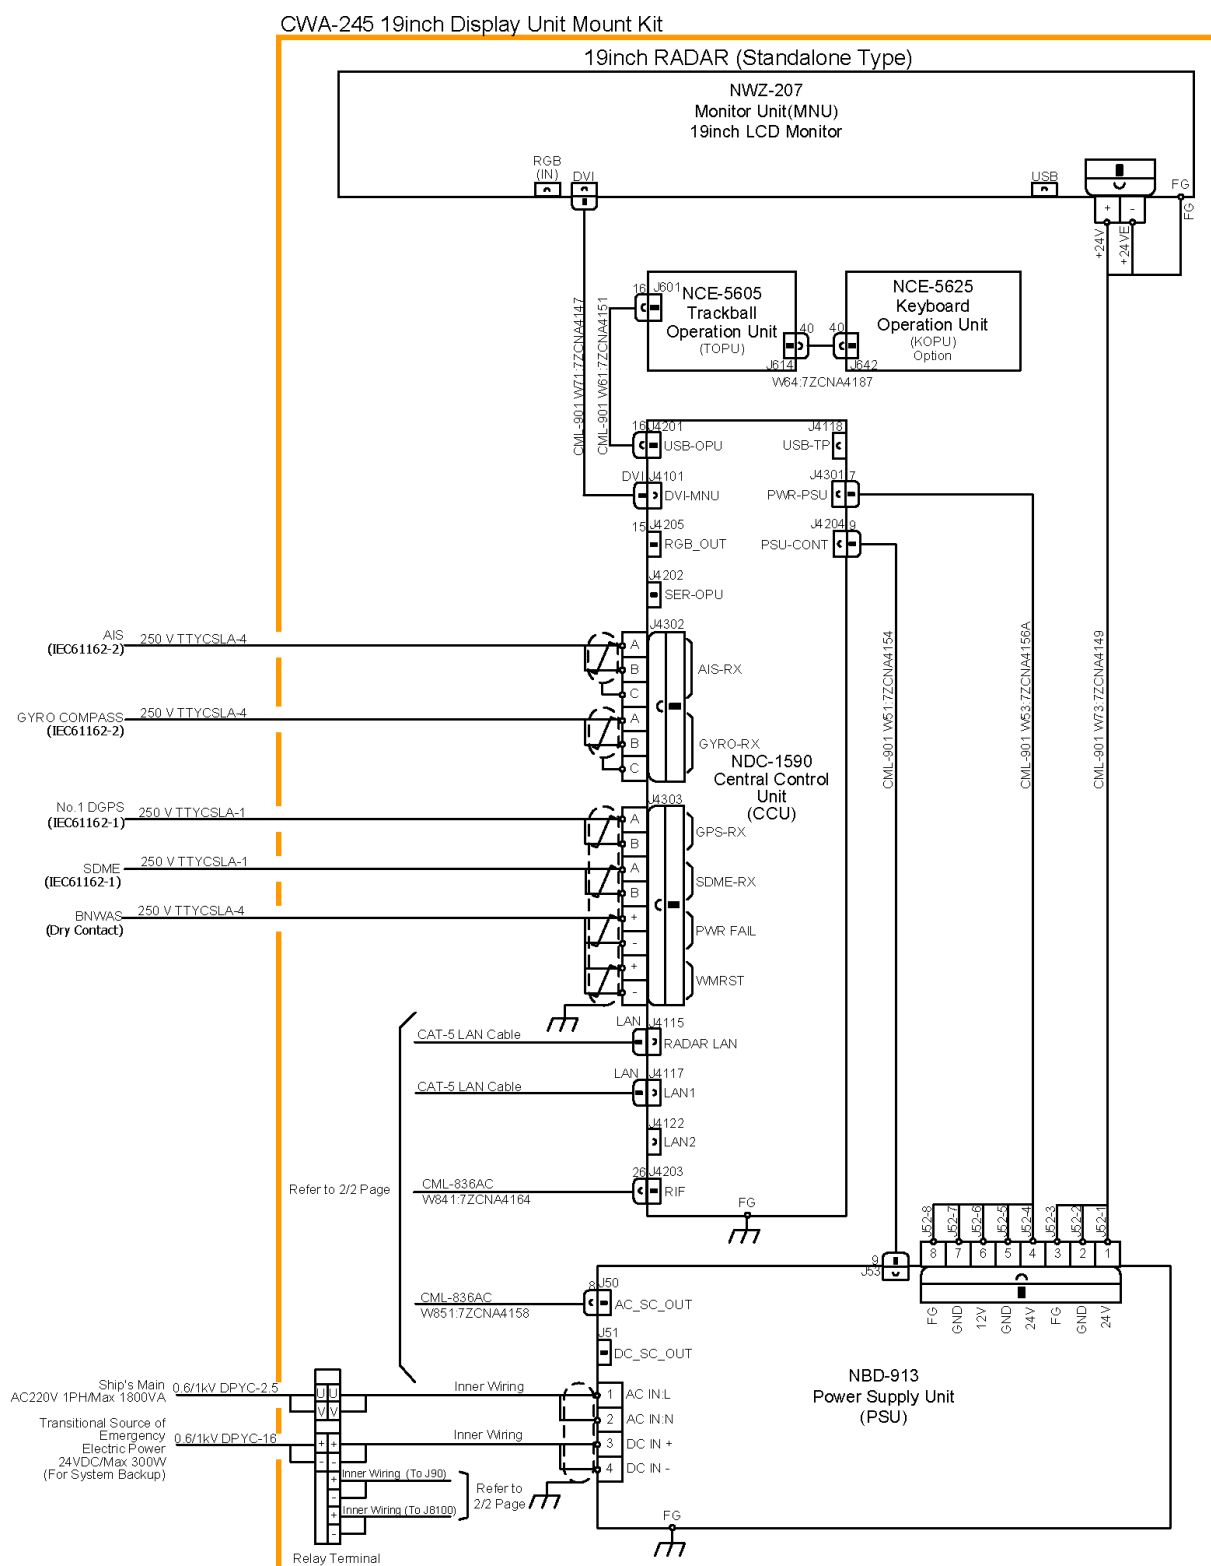

Interconnection Diagram of JMR-7272-S RADAR (1/2)

From Relay Terminal

Refer to
 Emergency
 1/2 Page

240VAC Max 5.4A
 (ø or L4/L5 UM)

Option

Ship's Main AC 100V / 220V
 For Heater

Circuit Breaker
 (Circuit Supply)

(5A)

0.61KV DPVC-1.5

Scanner Unit
 NKE-1632-1/2

0.61KV DPVC-1.5


VD+
 VD-
 TRIG+
 TRIG-
 BP+
 BP-
 BZ+
 BZ-
 MTR+
 MTR-
 MTRG
 N.C.
 DC48V+
 DC48V-
 FG

TB101

TB102

U1
 U2
 U3
 U4
 U5
 U6
 U7
 U8
 U9
 U10
 U11
 U12
 U13
 U14
 U15
 U16
 U17
 U18
 U19
 U20
 U21
 U22
 U23
 U24
 U25
 U26
 U27
 U28
 U29
 U30
 U31
 U32
 U33
 U34
 U35
 U36
 U37
 U38
 U39
 U40
 U41
 U42
 U43
 U44
 U45
 U46
 U47
 U48
 U49
 U50
 U51
 U52
 U53
 U54
 U55
 U56
 U57
 U58
 U59
 U60
 U61
 U62
 U63
 U64
 U65
 U66
 U67
 U68
 U69
 U70
 U71
 U72
 U73
 U74
 U75
 U76
 U77
 U78
 U79
 U80
 U81
 U82
 U83
 U84
 U85
 U86
 U87
 U88
 U89
 U90
 U91
 U92
 U93
 U94
 U95
 U96
 U97
 U98
 U99
 U100

Desktop type

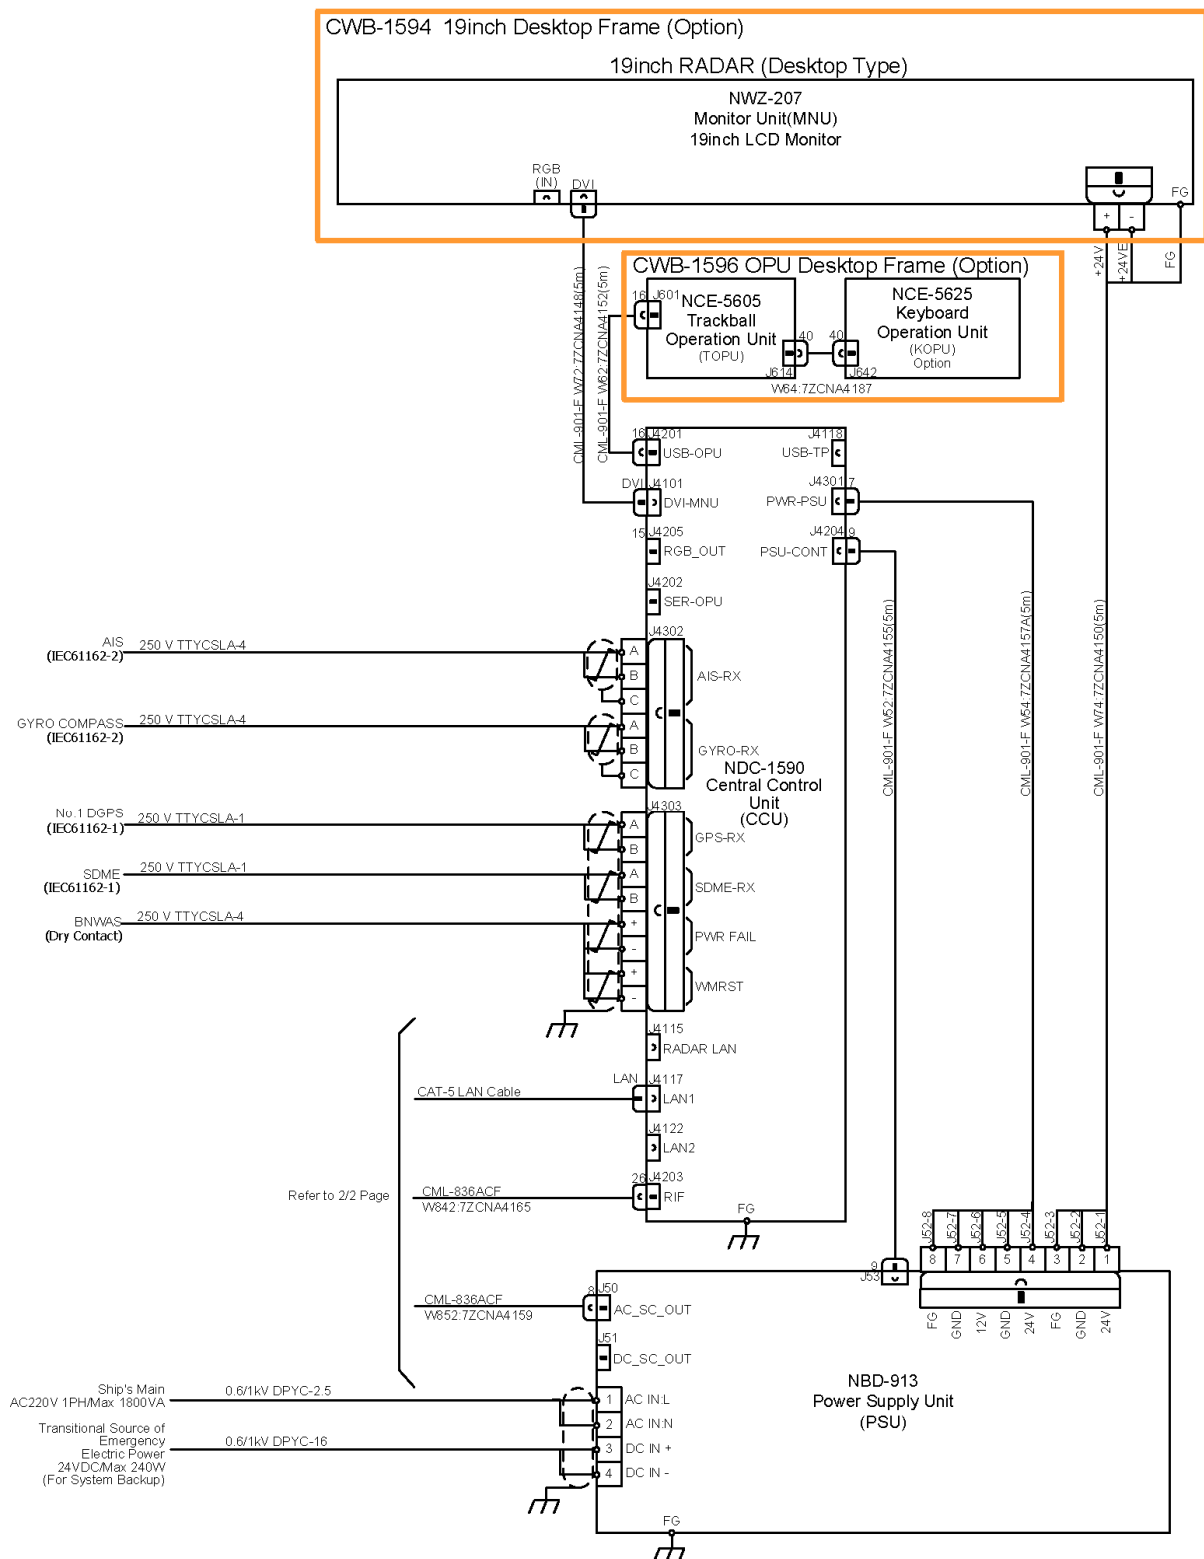


Interconnection Diagram of JMR-7272-S RADAR (1/2)

8.3.16 JMR-7282-S/SH Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

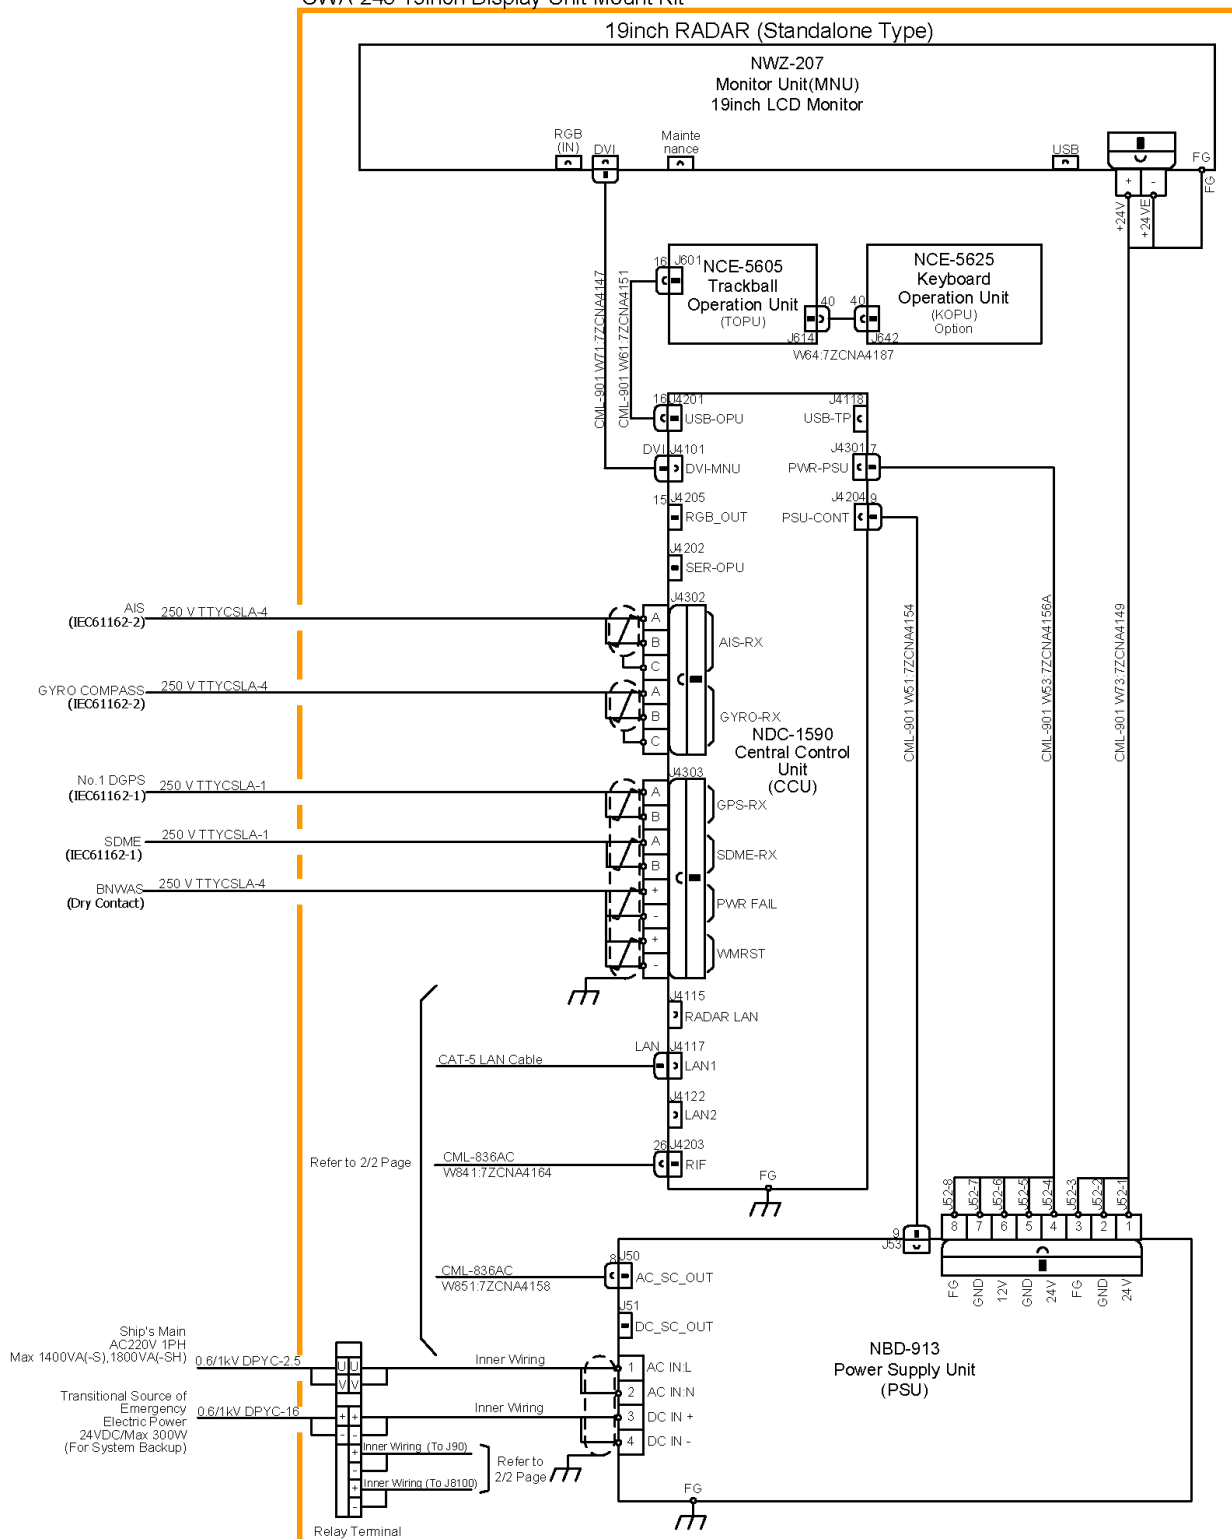


Interconnection Diagram of JMR-7282-S/SH RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

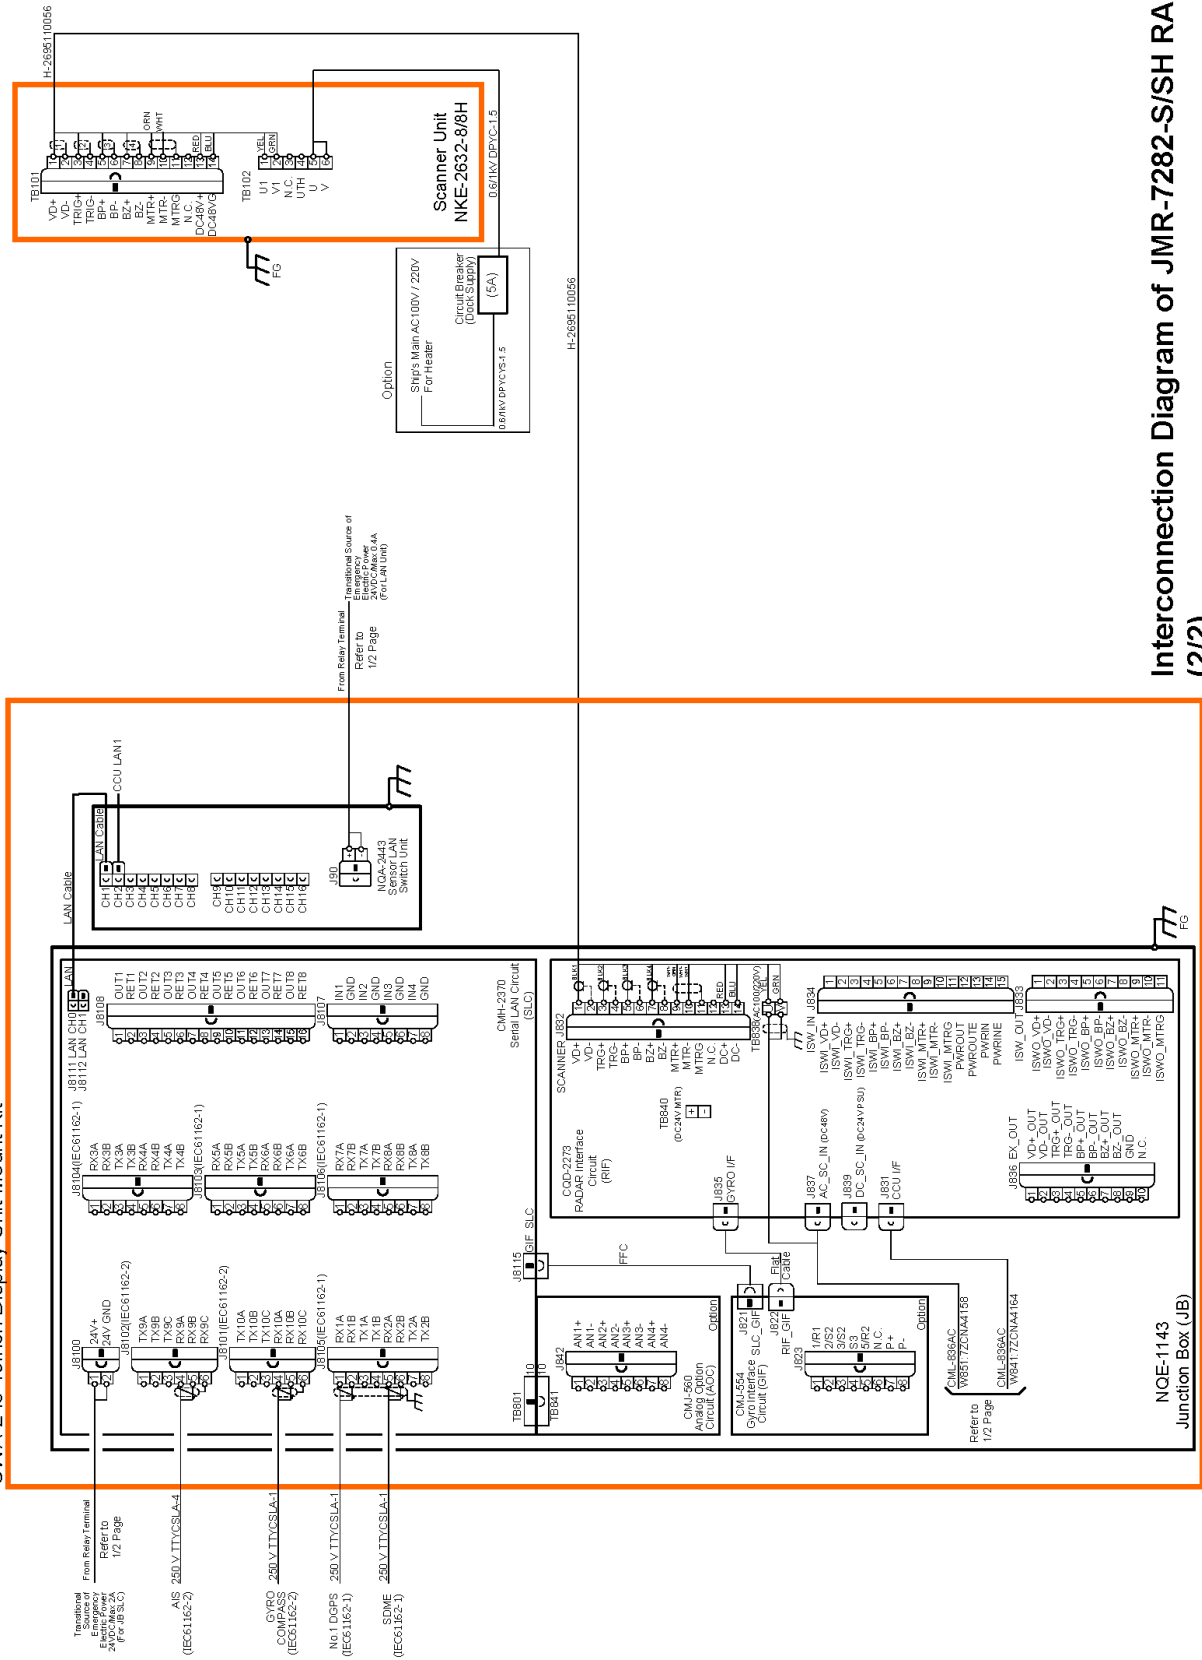


Interconnection Diagram of JMR-7282-S/SH RADAR (2/2)

Desktop type

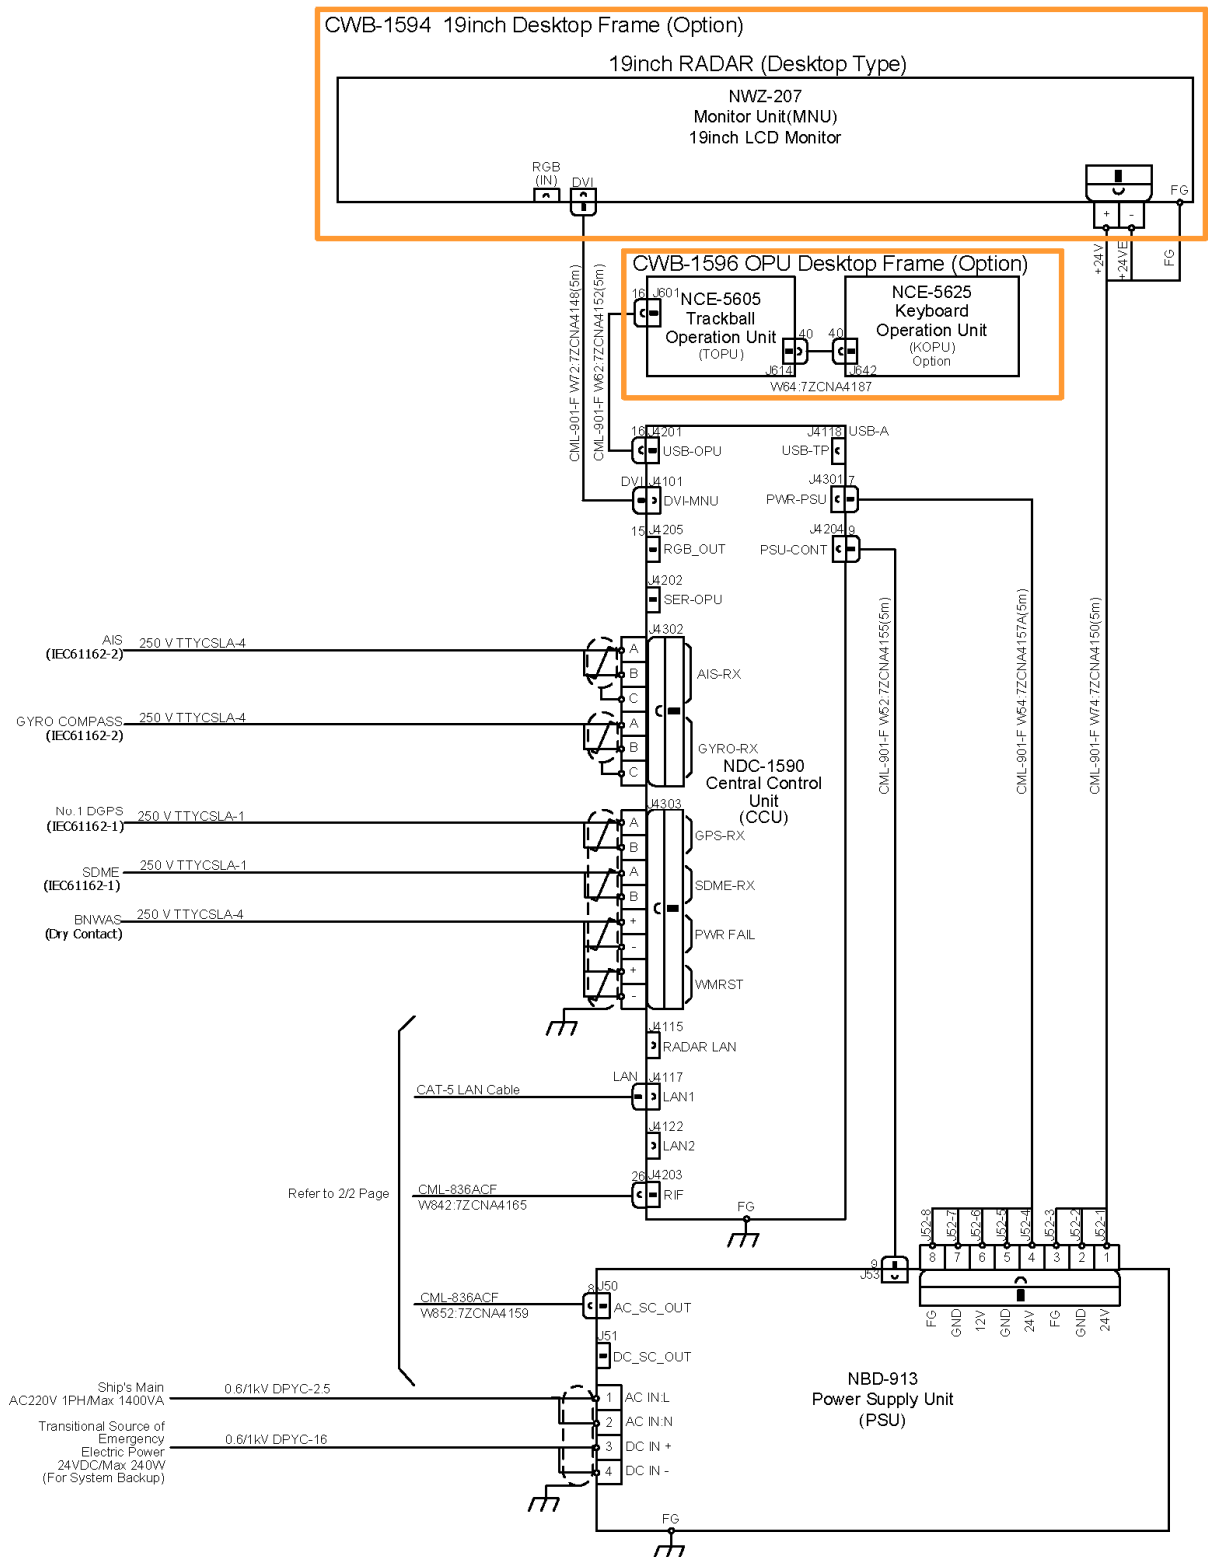


Interconnection Diagram of JMR-7282-S/SH RADAR (1/2)

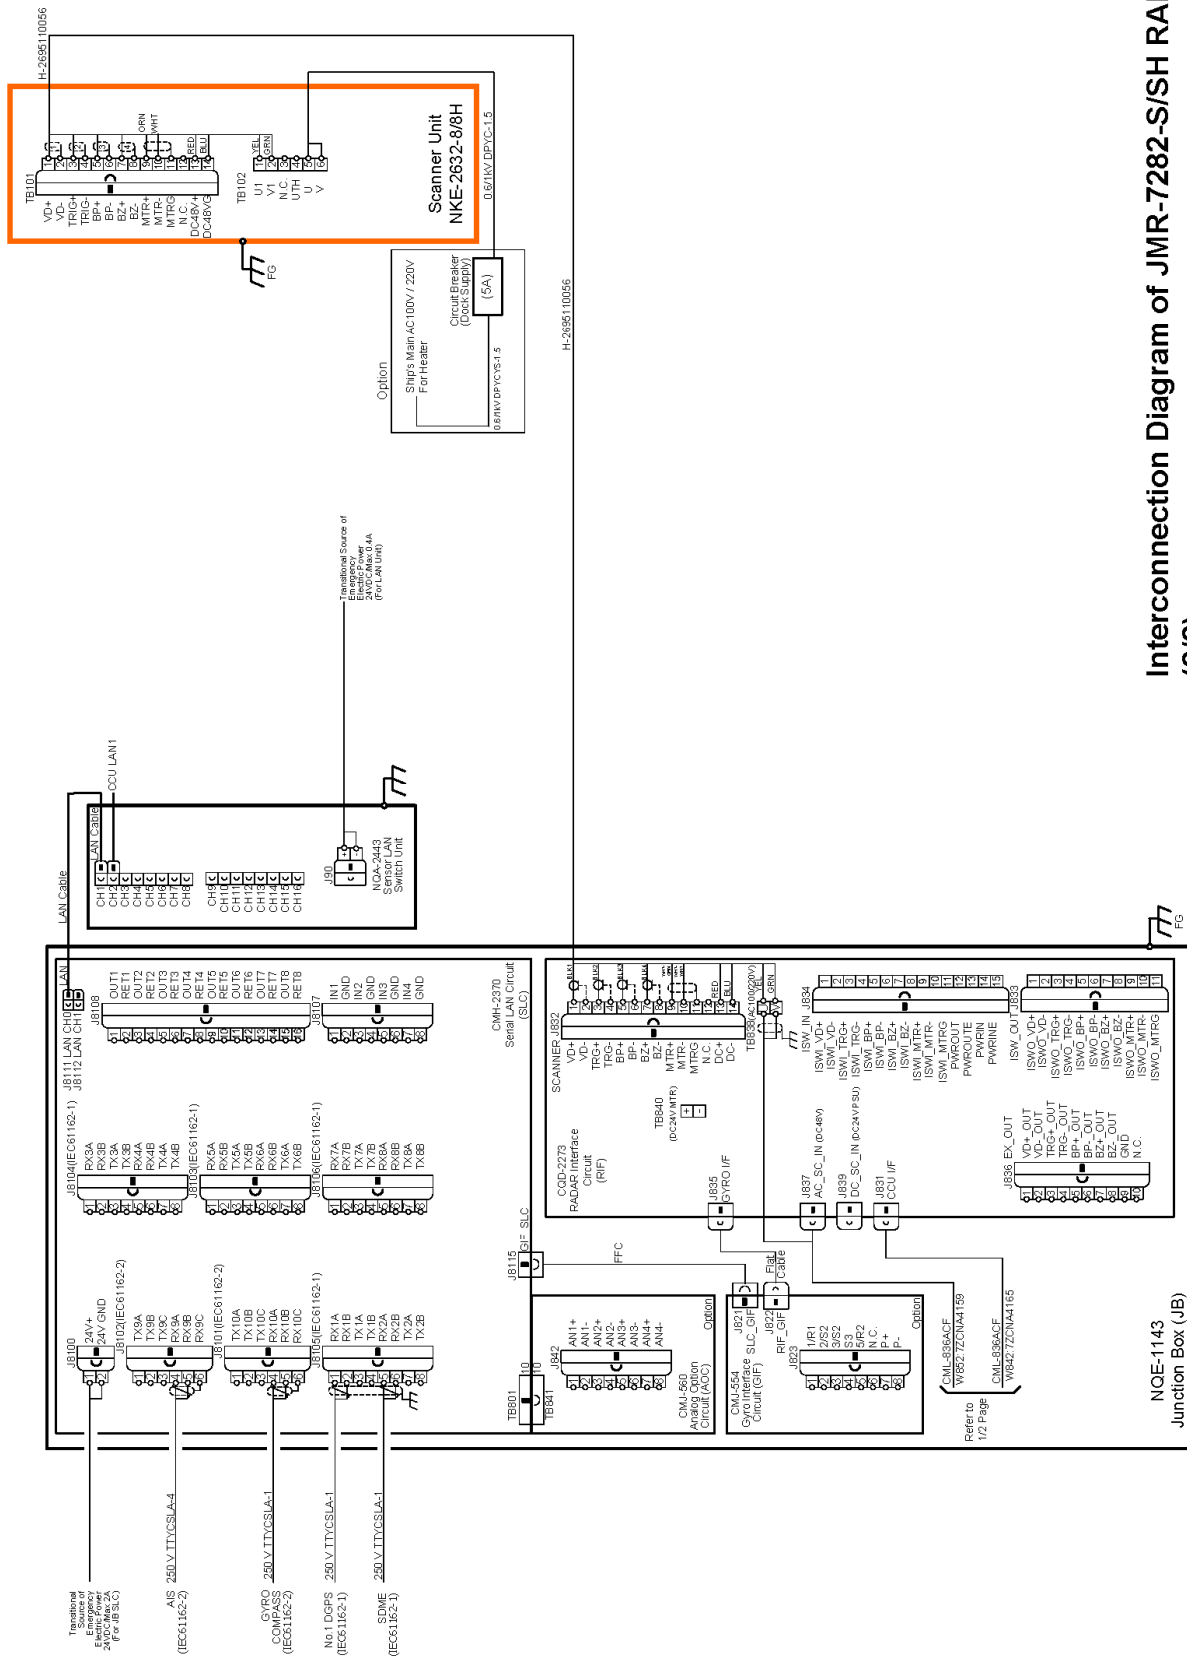

Interconnection Diagram of JMR-7282-S/SH RADAR
(2/2)


Chapter 8 Appdendix

8-150

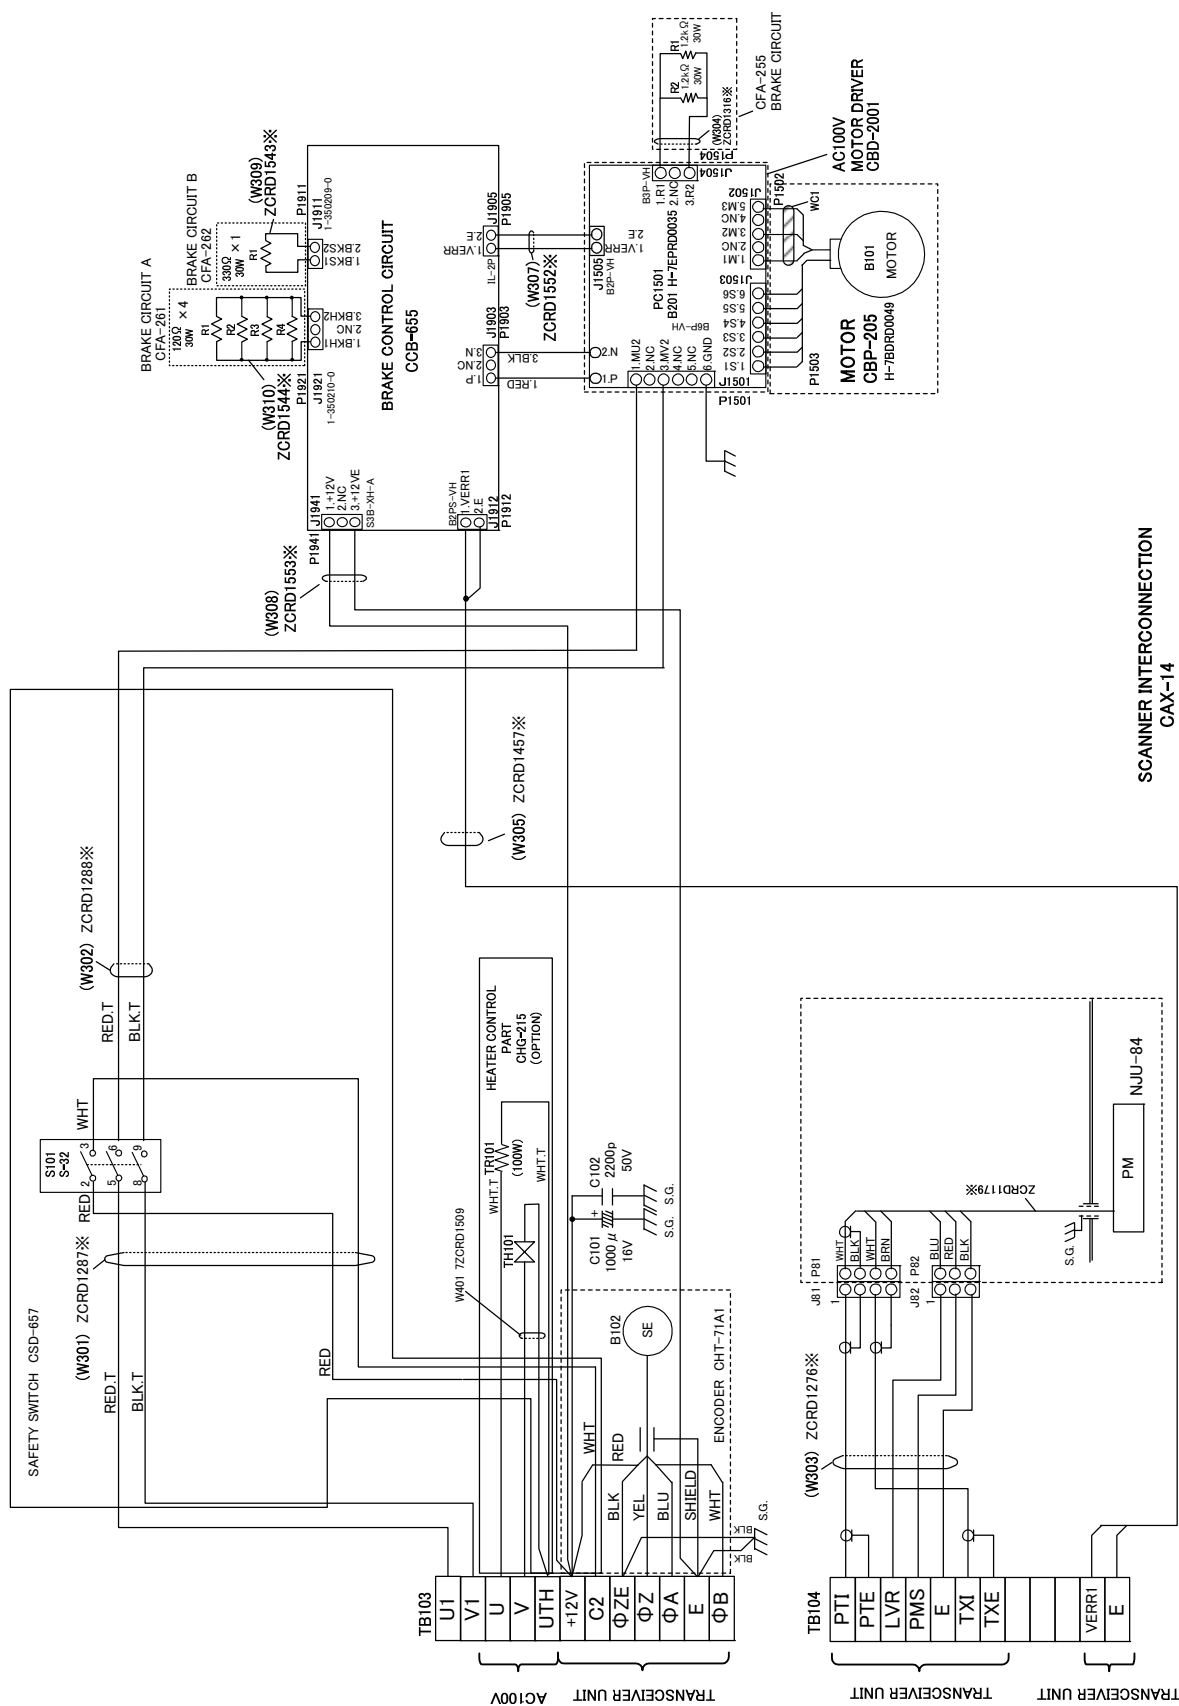


NKE-1139PM (AC100V) Sバンド、3ユニット
空中線機内接続図

8.3.18 NKE-1139 (AC220V)

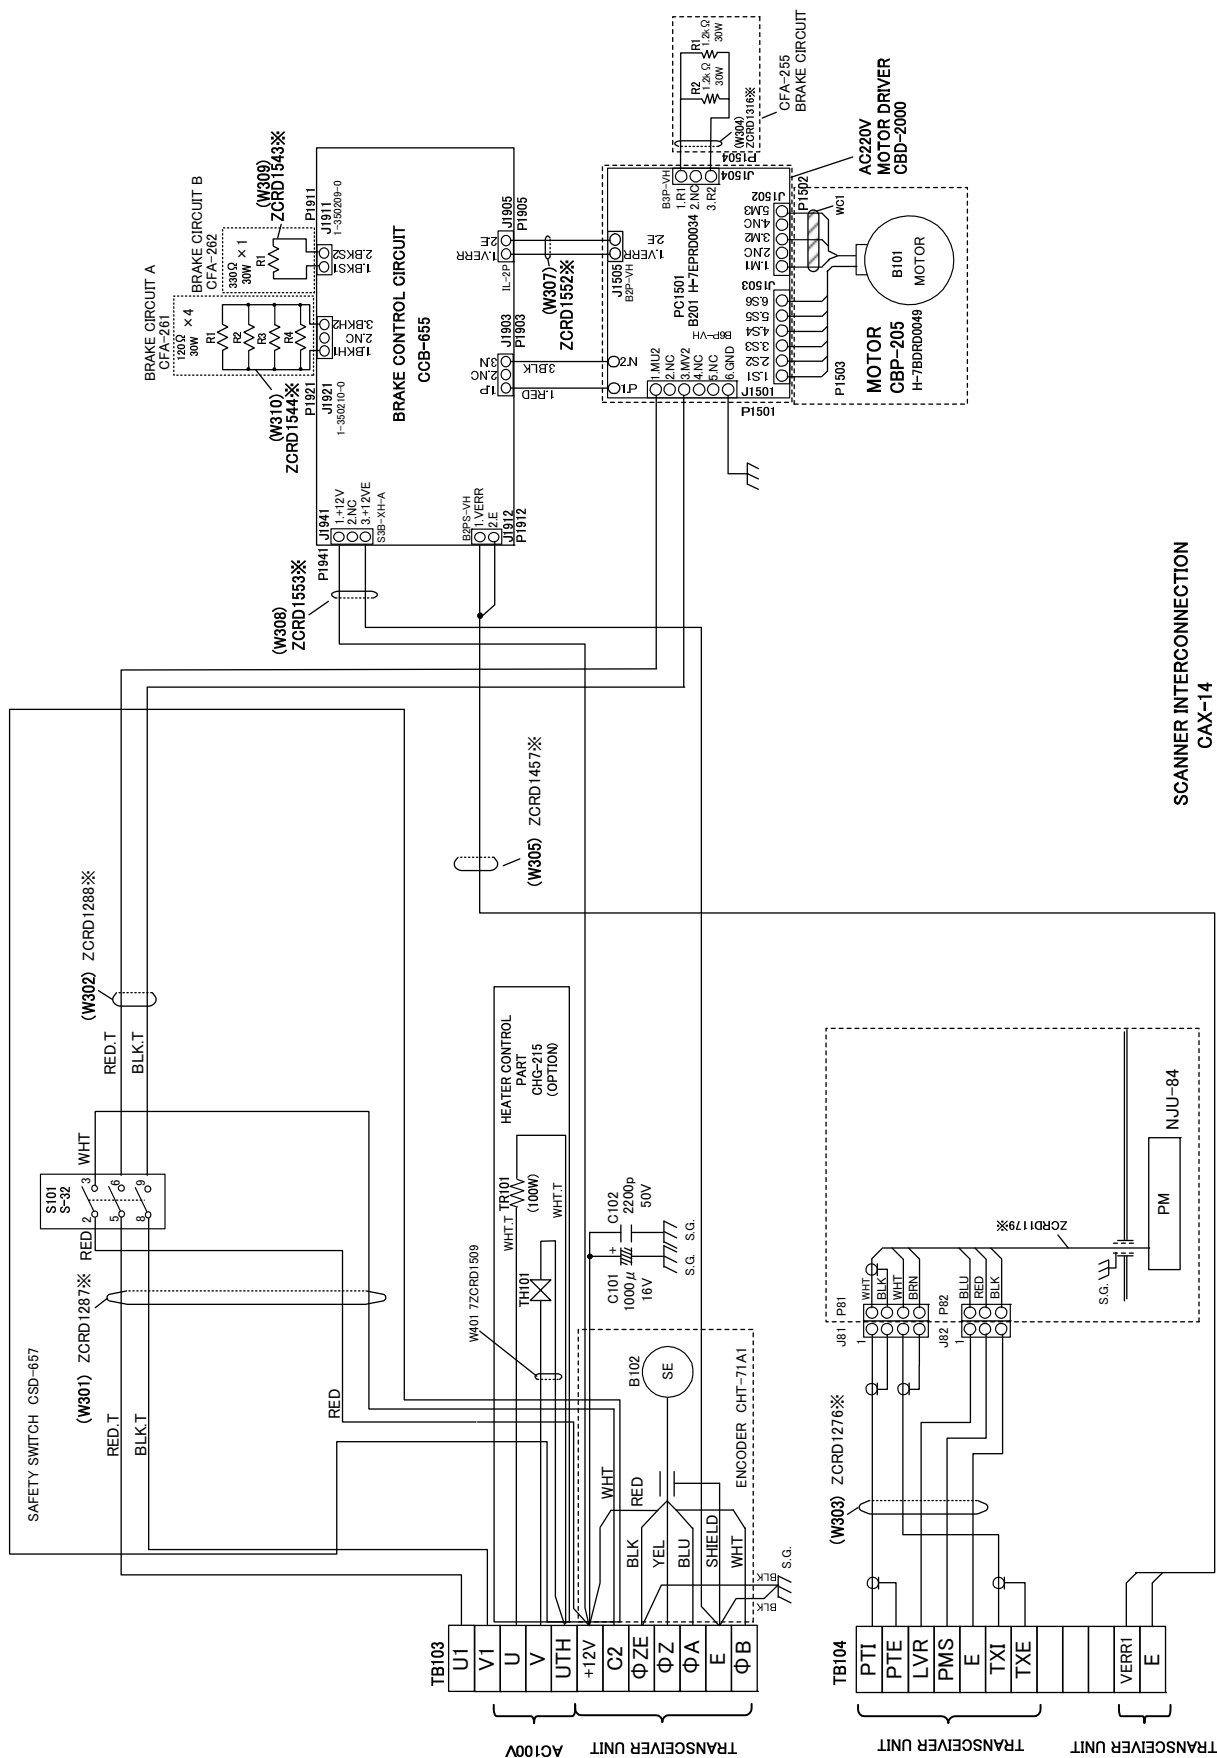

NTG-3230

 

H-7ZCRD####*:
 “#” means specification document No.
 “*” means revision of the specification document.


NKE-1130 (AC110V)



NKE-1130 (AC220V)




8.3.22 NKE-1129 (AC110V)

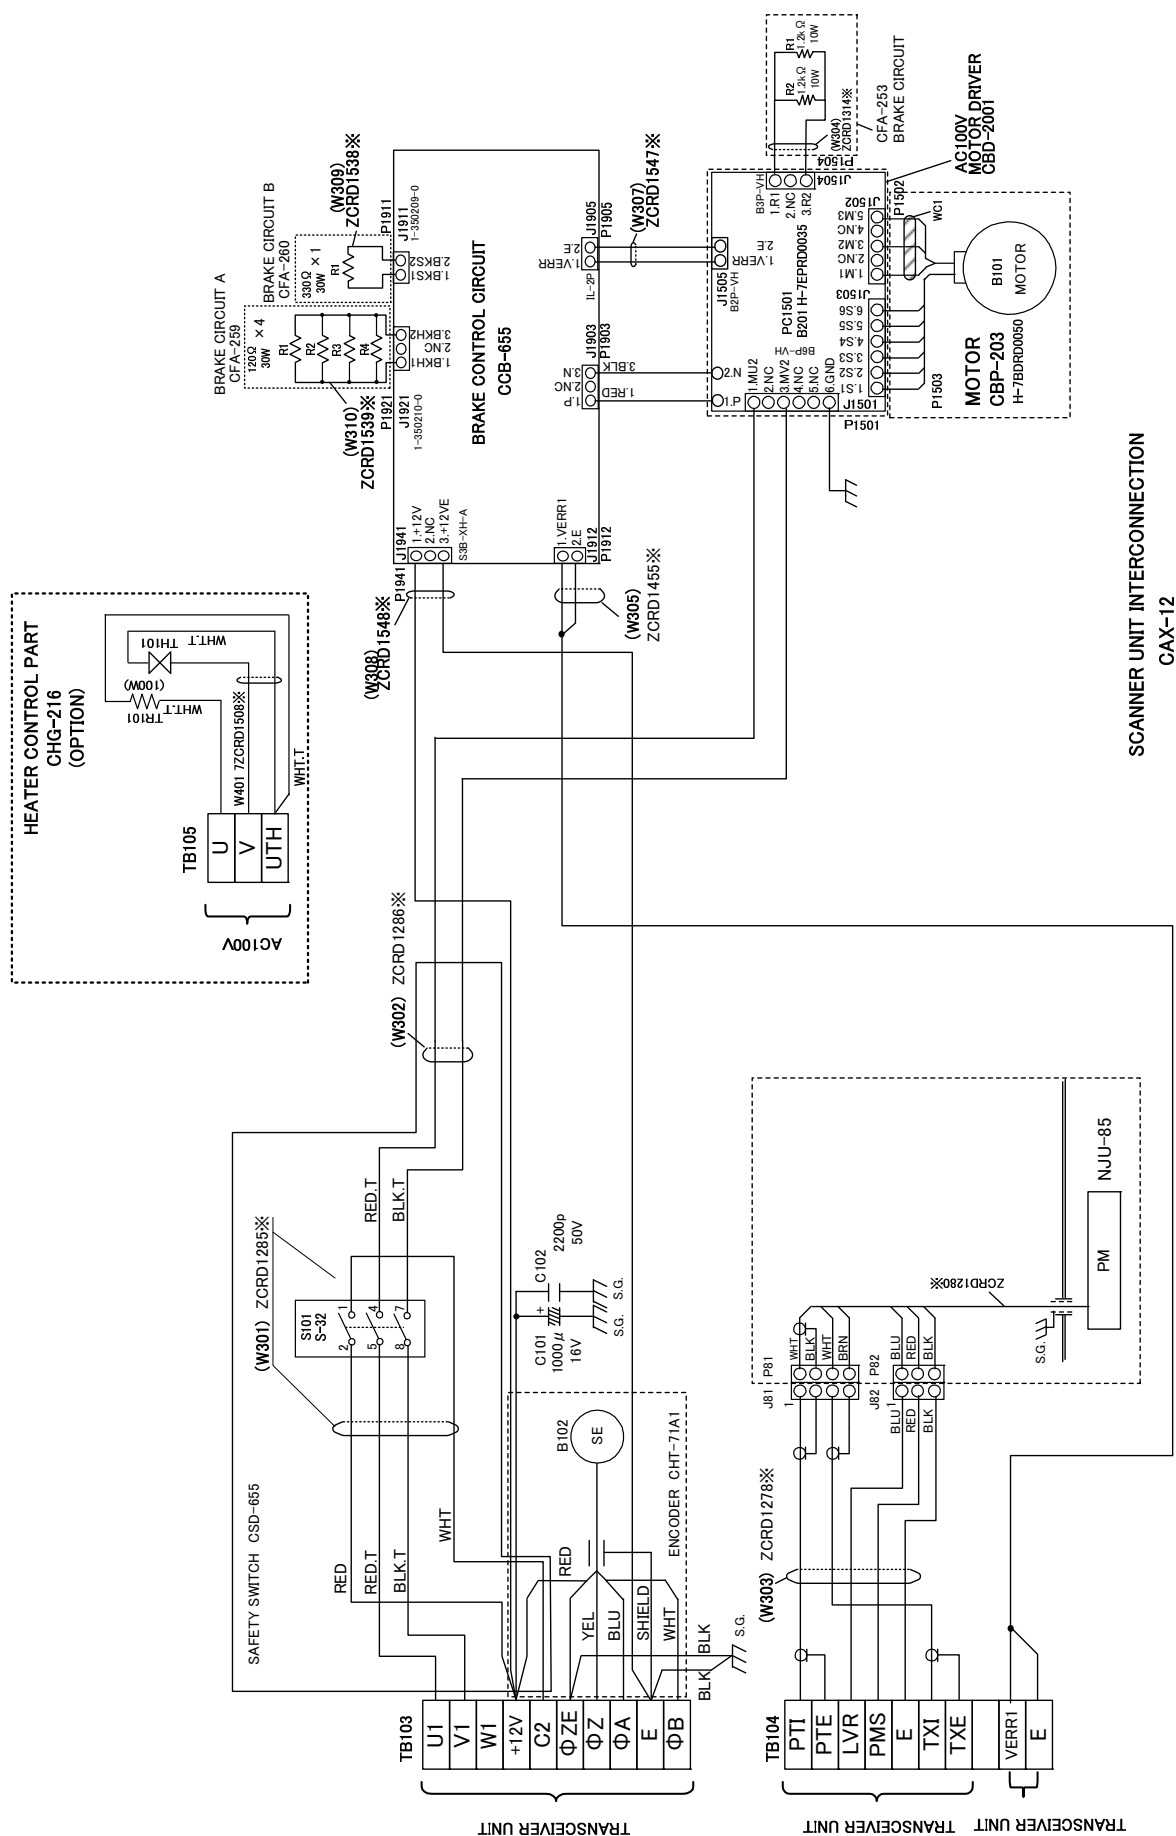


NKE-1129PM (AC100V) Xハンド, 3ユニット
空中線機内接続図

8.3.23 NKE-1129 (AC220V)

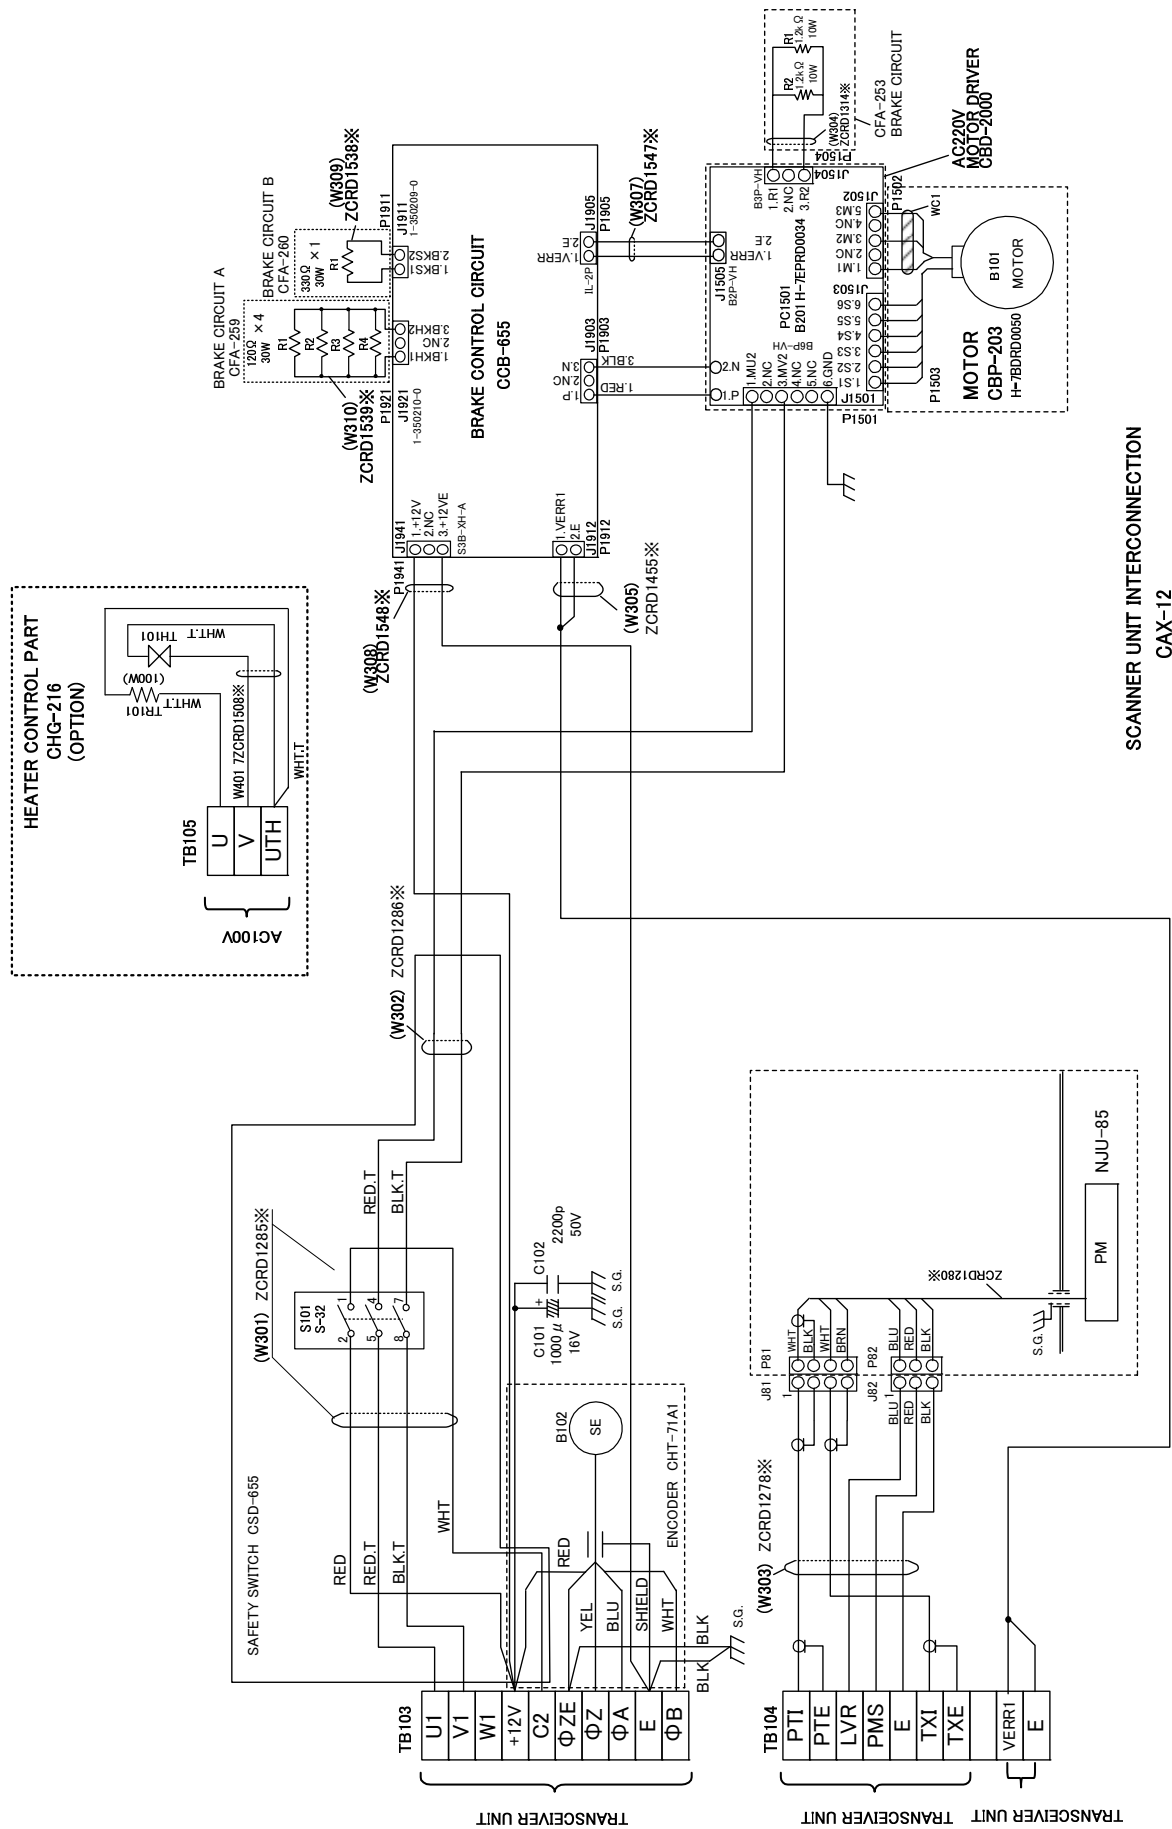

SCANNER UNIT INTERCONNECTION
CAX-12

 
NKE-1129PM (AC220V) Xバンド, 3ユニット
空中線機内接続図


NTG-3225

NTG-3225
送受信機機内接続図

NKE-1125 (AC110V)




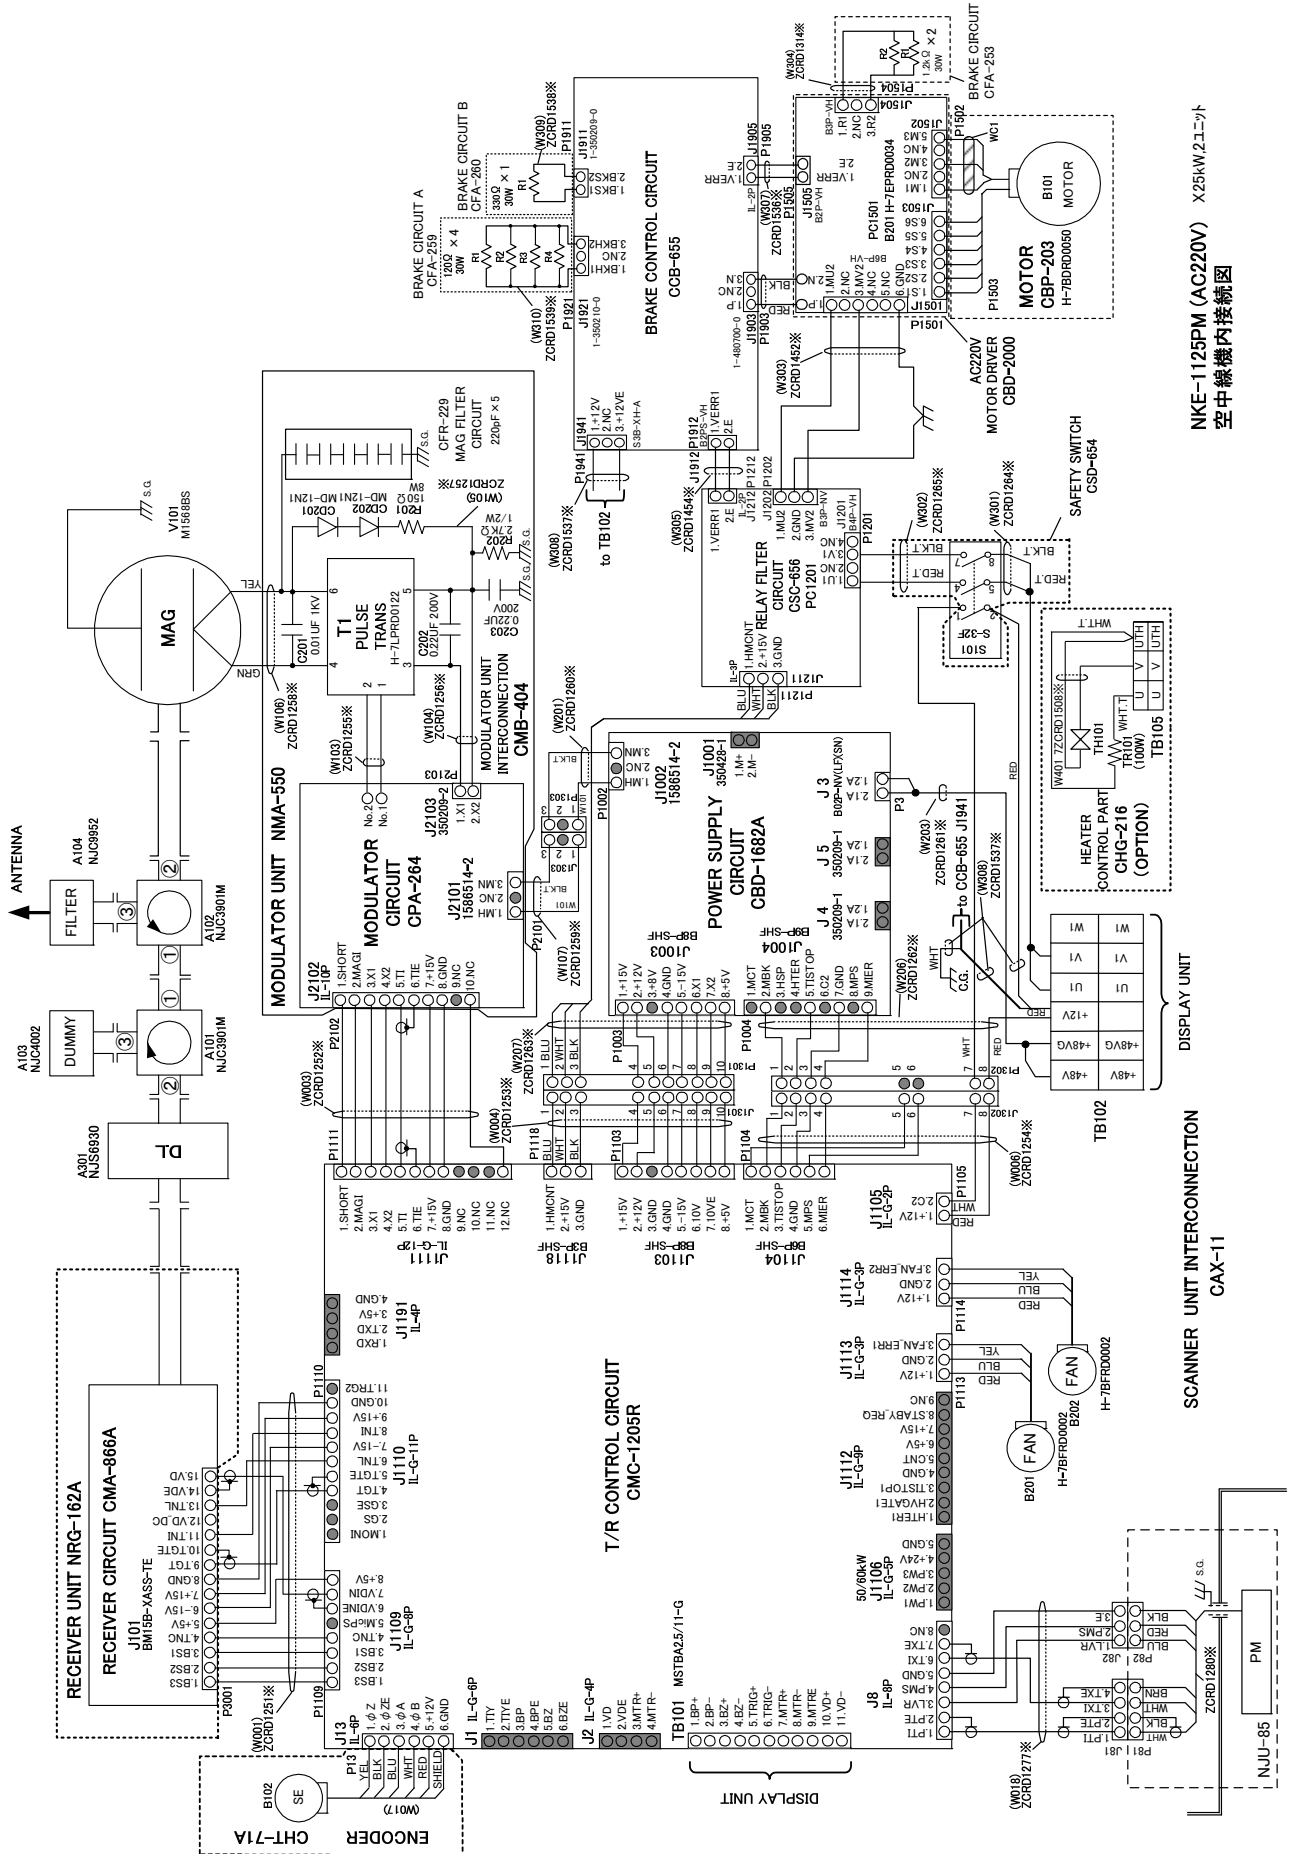

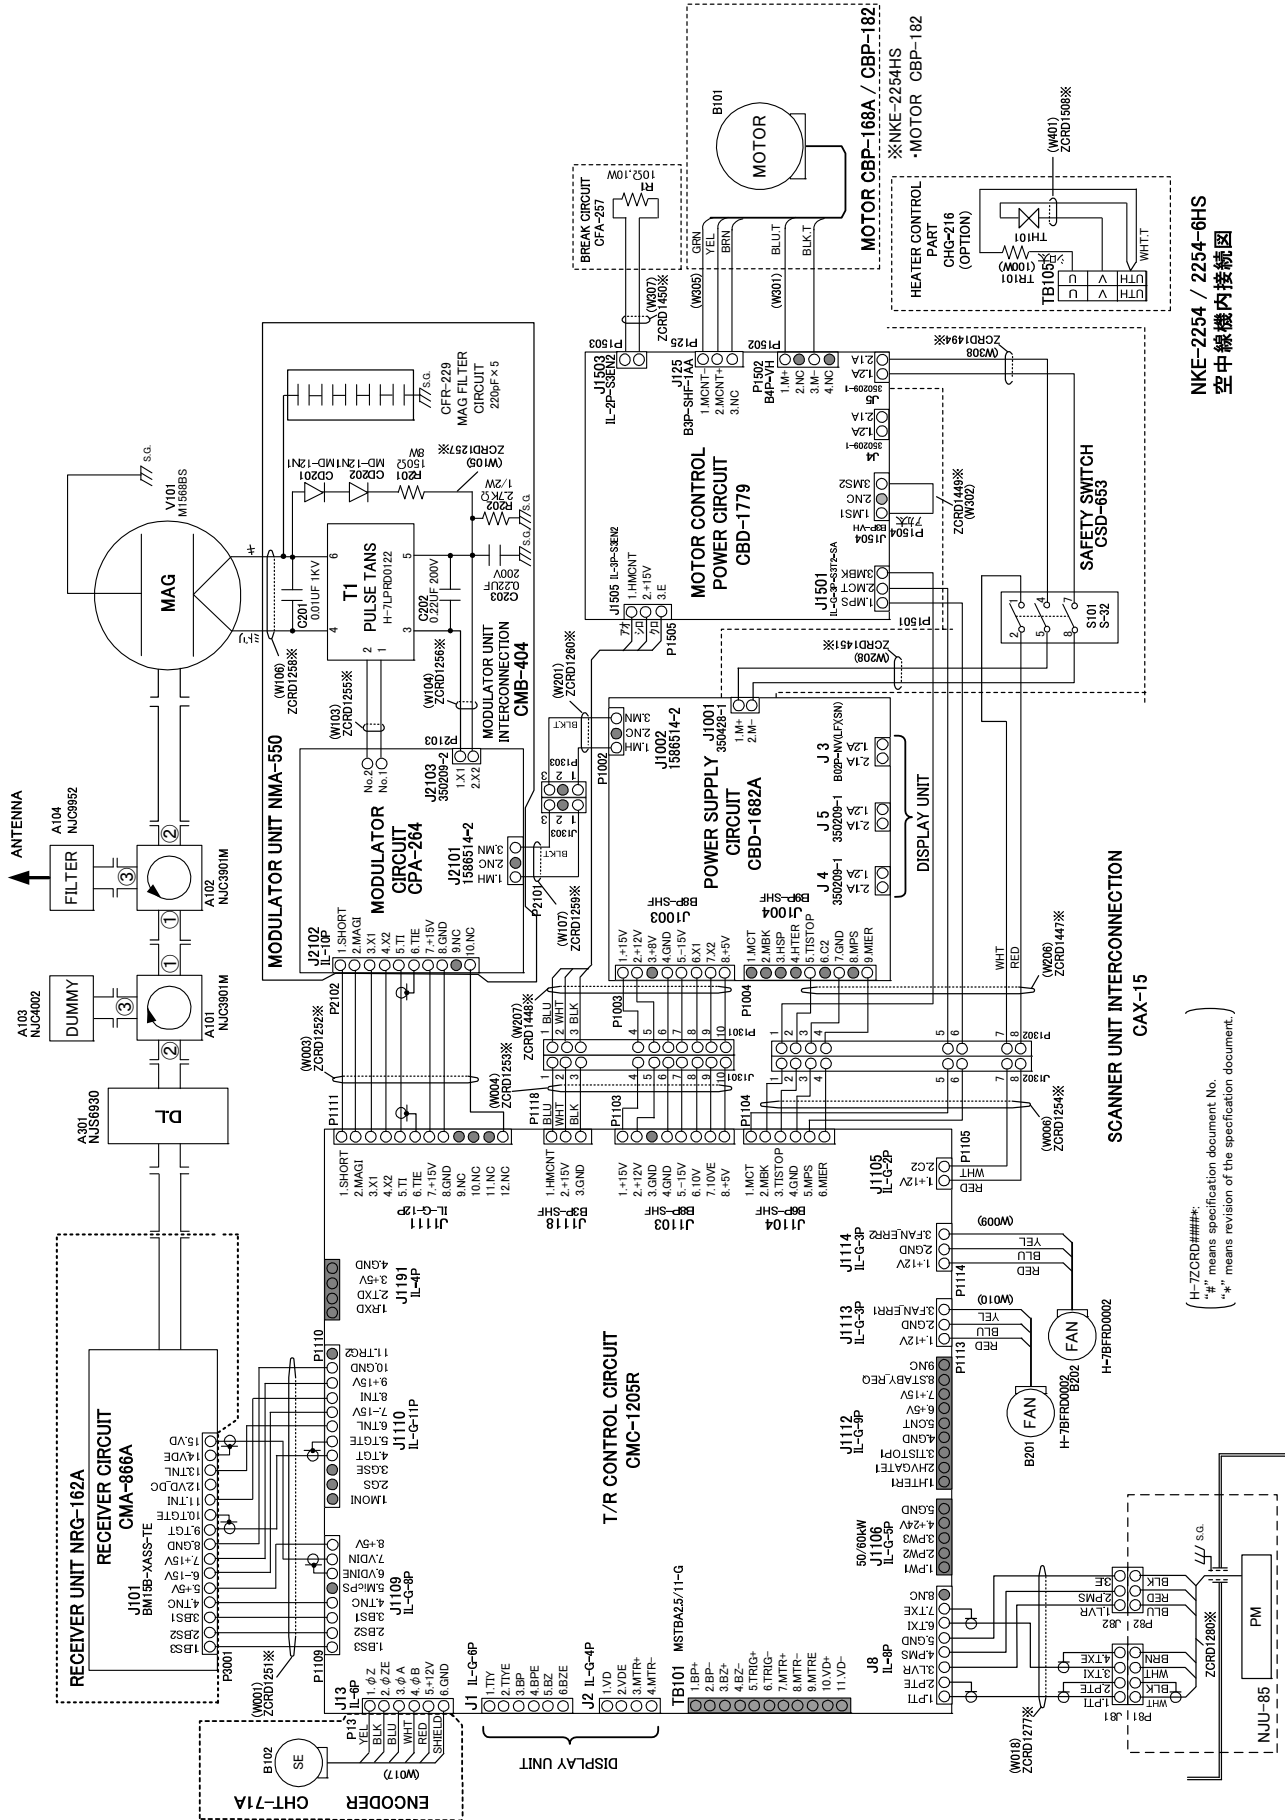

NKE-2254 / 2254-6HS
空中縦機内接線図


(H-ZCRD####:
"##" means specification document No.
"##" means revision of the specification document.)

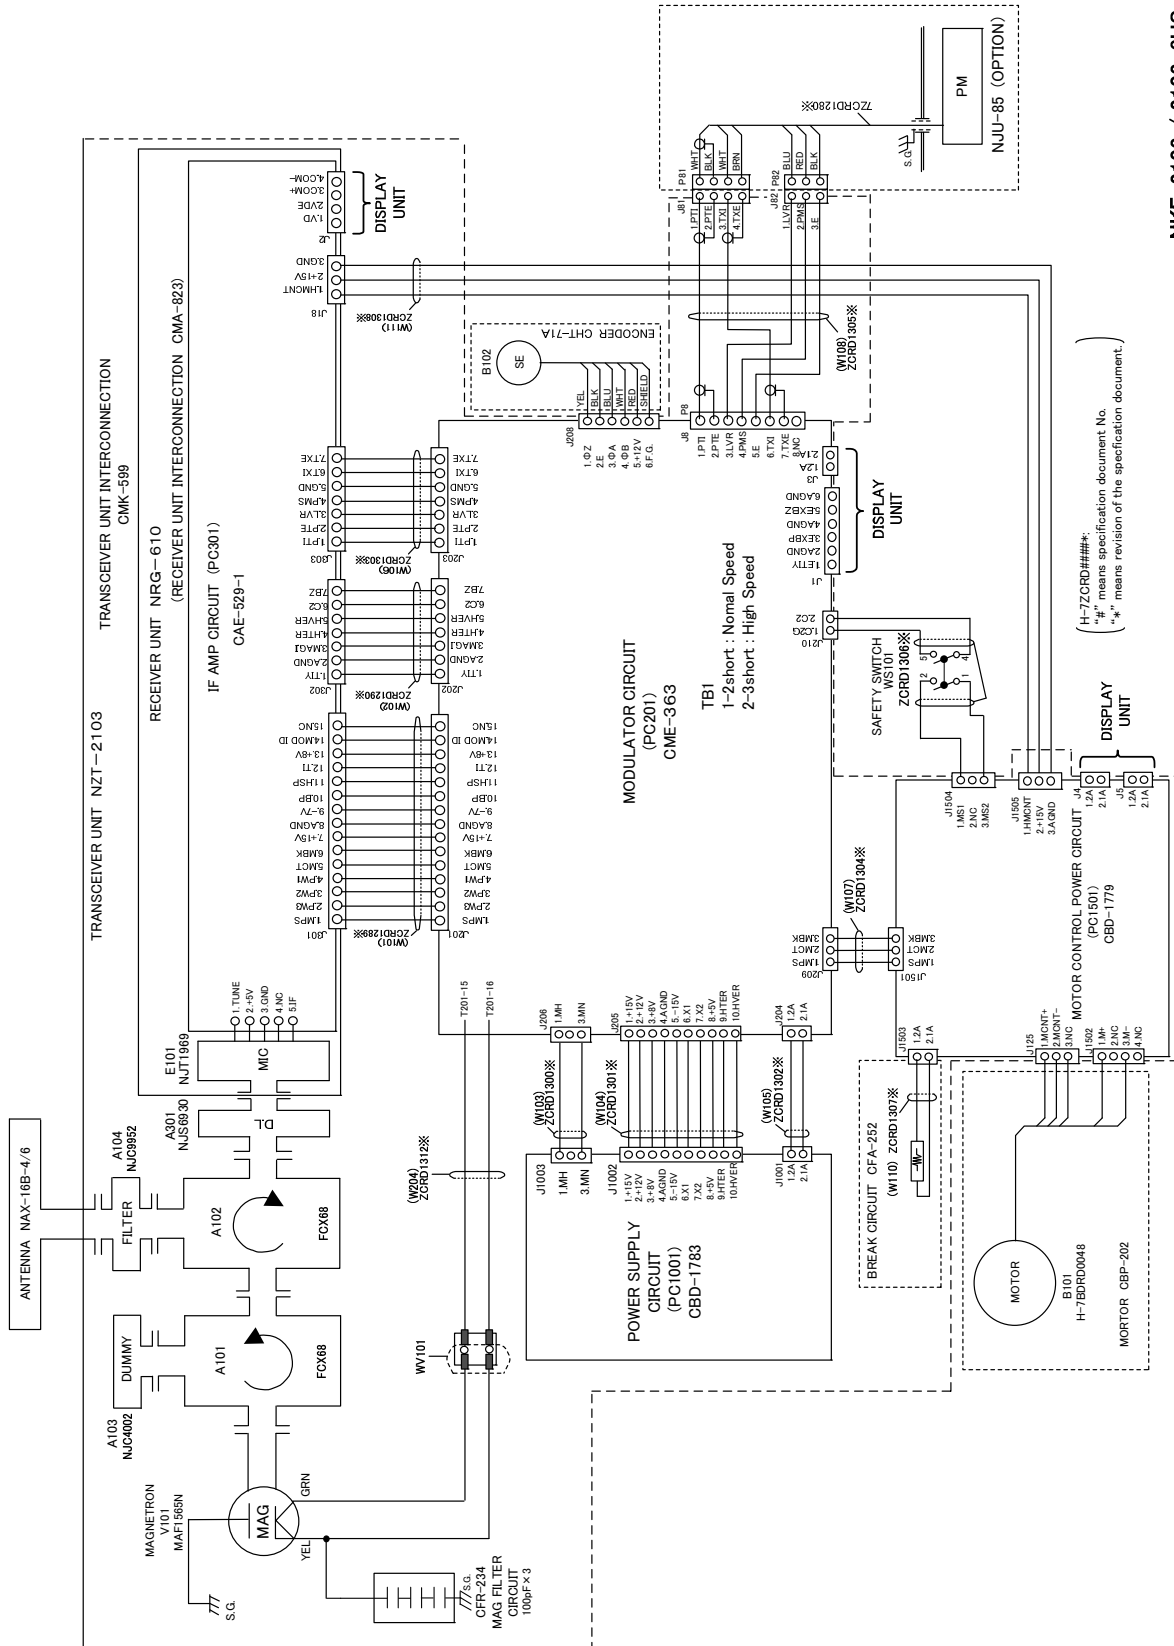

NKE-2103 / 2103-6HS
空中線機内接続図

SCANNER UNIT INTERCONNECTION
CAX-10


8.3.29 NKE-1632

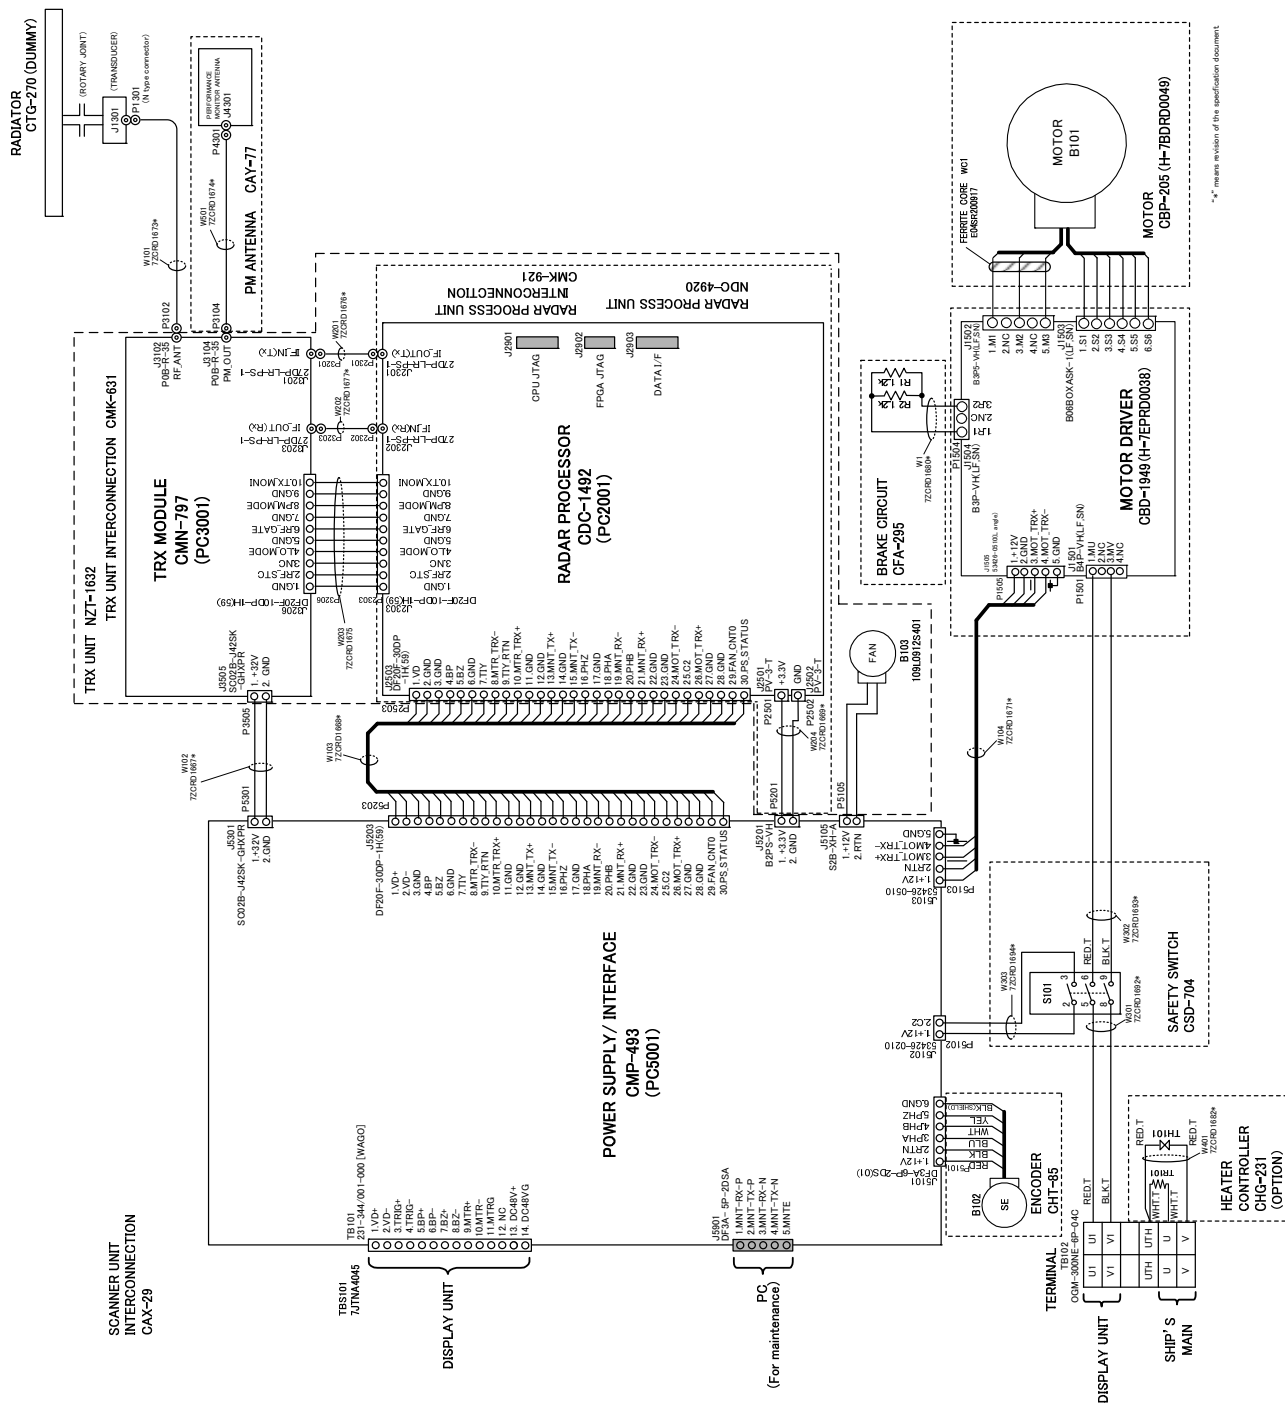

NKE-1632 INTERCONNECTION

8.3.30

NKE-2632/NKE-2632-H

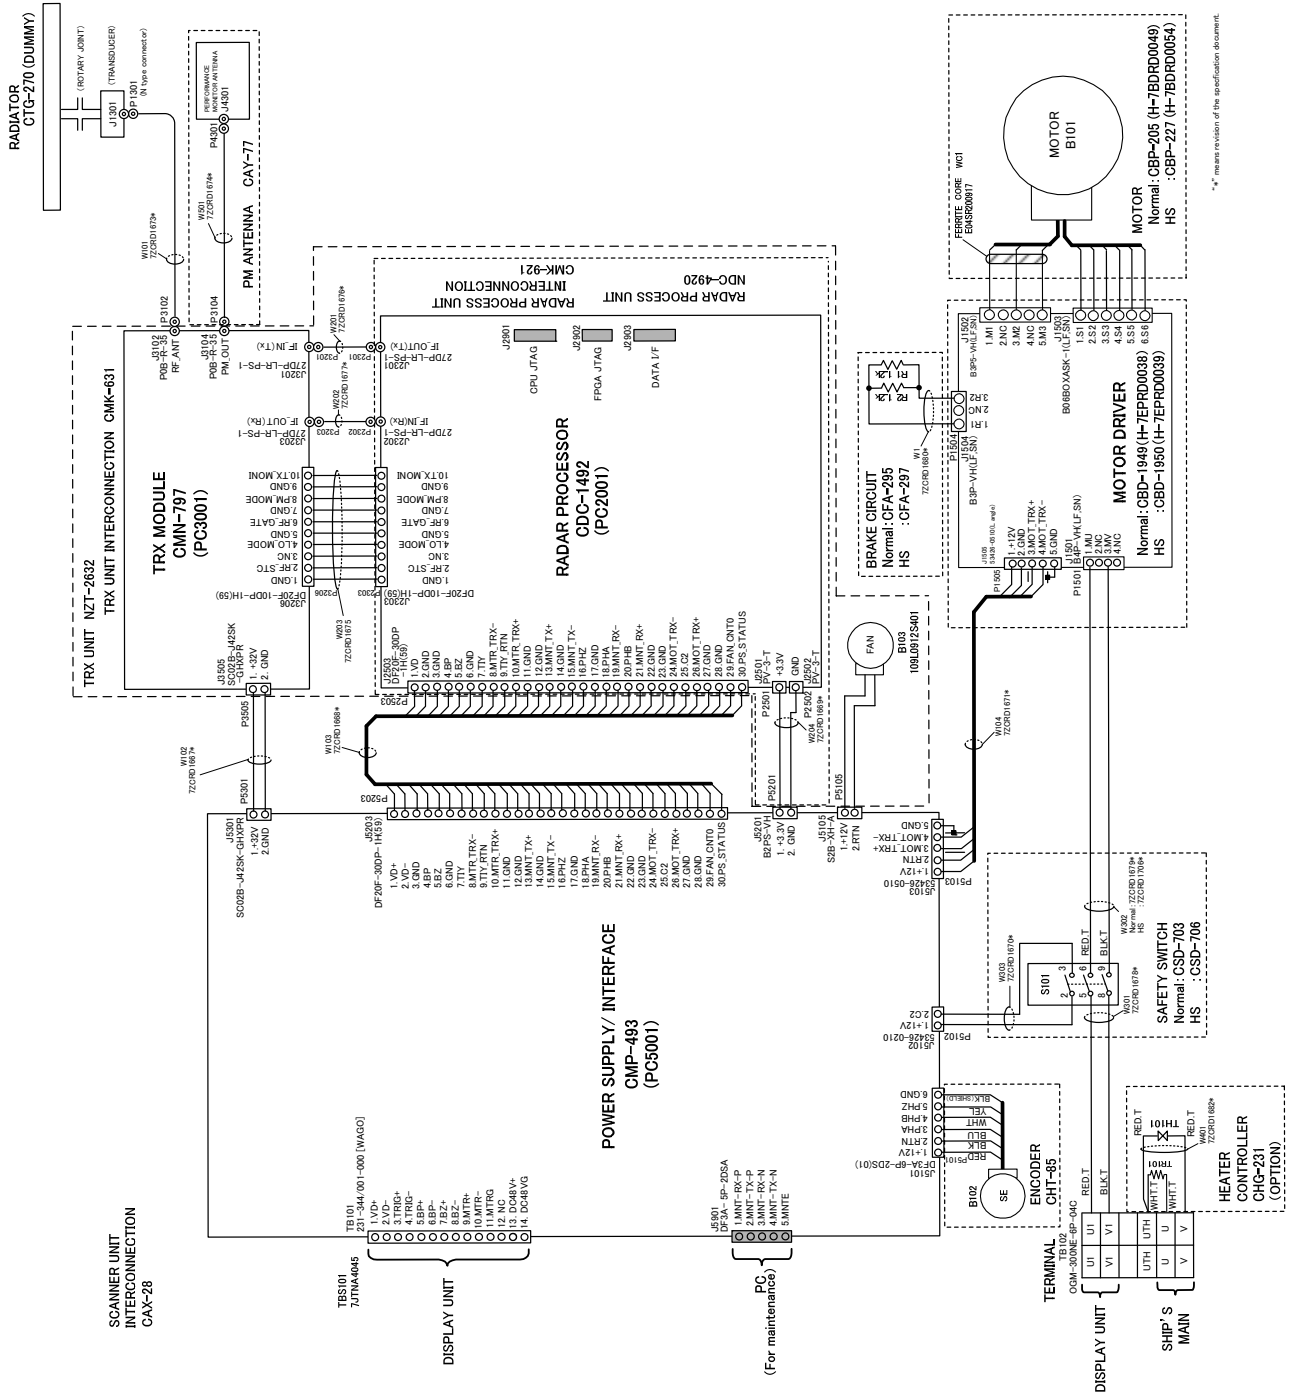

*H: means revision of the specification document.

NKE-2632/2632-H INTERCONNECTION

アスベストは使用していません

Not use the asbestos

CODE No.7ZPNA4467A

For further information, contact:



Since 1915

Japan Radio Co., Ltd.

URL <http://www.jrc.co.jp>

Marine Service Department

Telephone : +81-3-3492-1305

Facsimile : +81-3-3779-1420

e-mail : tmsc@jrc.co.jp

SEATTLE Branch

Telephone : +1-206-654-5644

Facsimile : +1-206-654-7030

e-mail : marineservice@jrcamerica.com

ALPHATRON

Alphatron Marine BV

URL <http://www.alphatronmarine.com>

Rotterdam (Head office)

Alphatron Marine B.V.

Telephone : +31 (0)10- 453 4000

Facsimile : +31 (0)10- 452 9214

e-mail : service@alphatronmarine.com

Singapore Branch

Alphatron Marine Systems Pte Ltd

Telephone : +65 6863 0335

Facsimile : +65 6863 3305

e-mail : service@alphatronmarinesystems.com

01ETM

ISO 9001, ISO 14001 Certified

©JUL. 2015 Edition 3 JRC

Printed in Japan