 




CONSTRUCTION PHOTOS OF EUT



Left Earbud



Brand: SENNHEISER, Model: CX400TW1 L

       
 
Black color

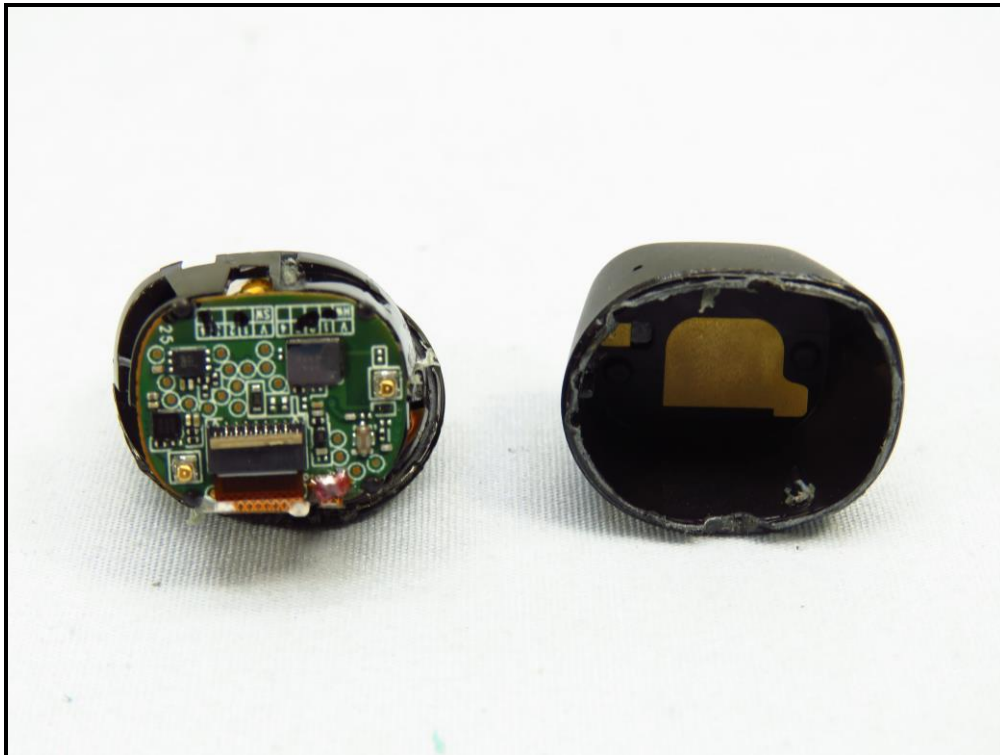

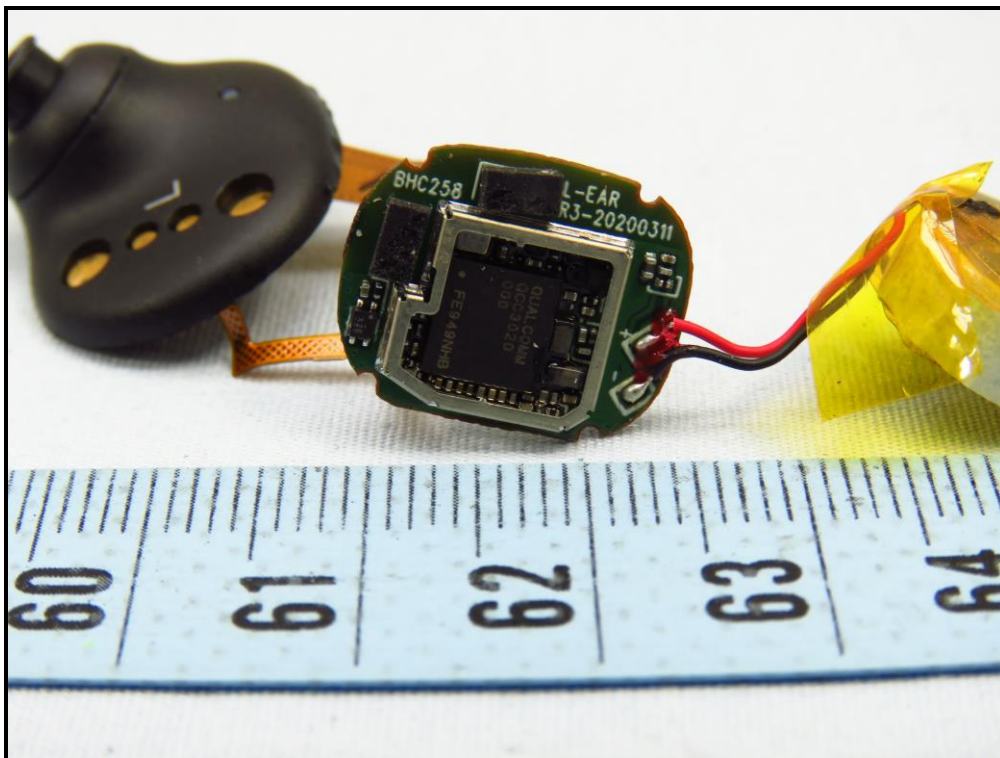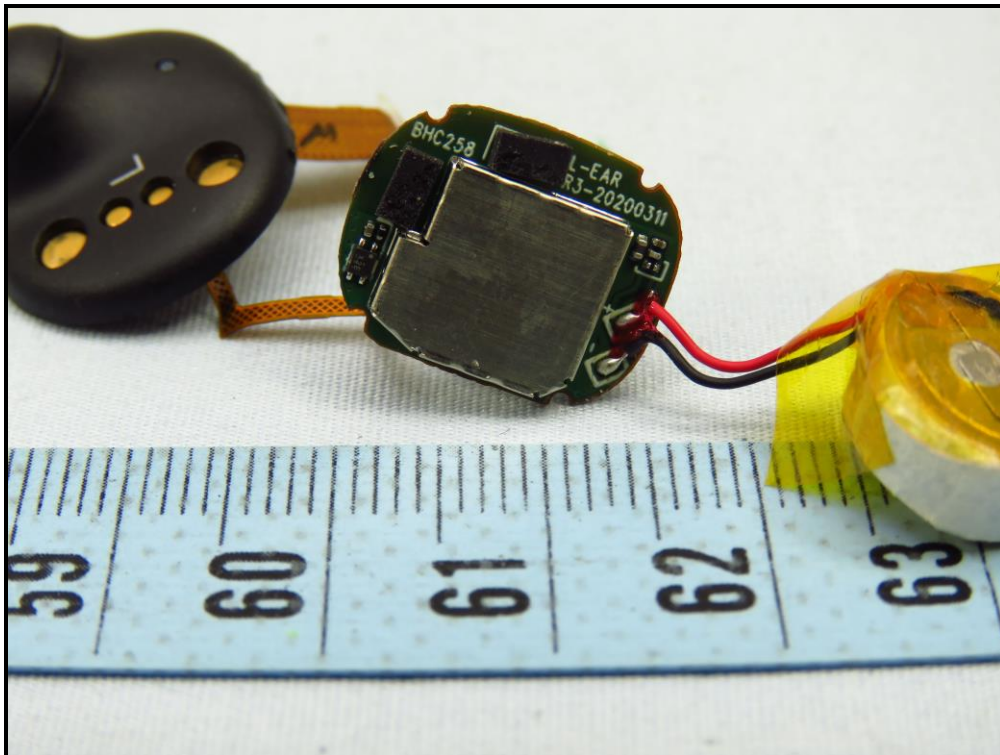

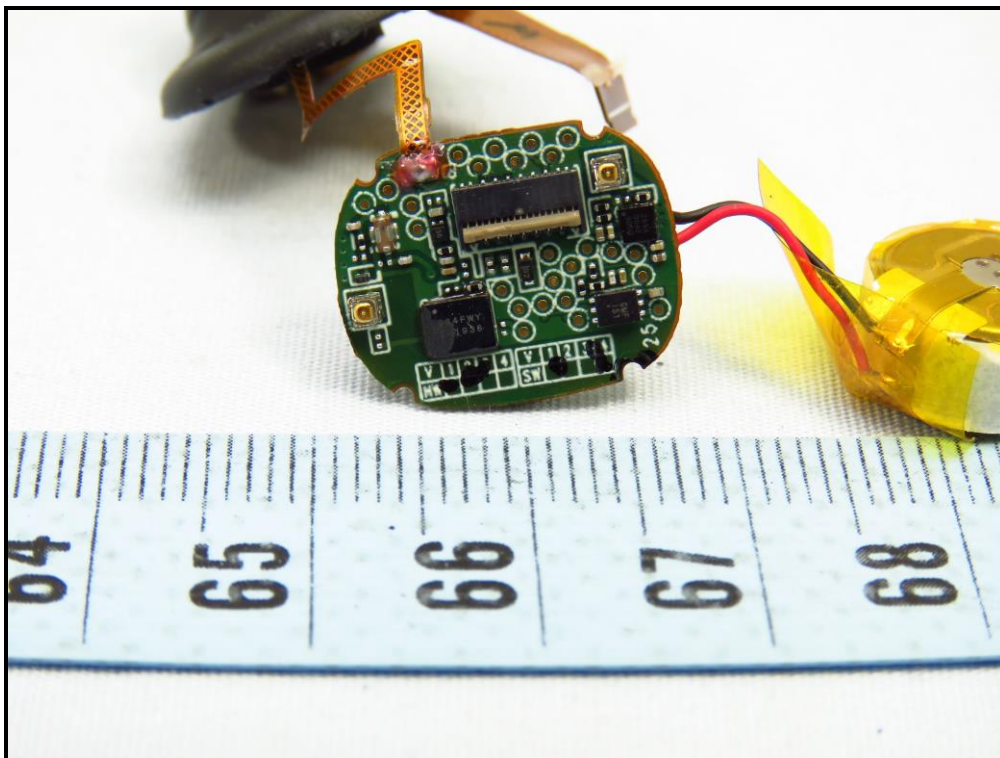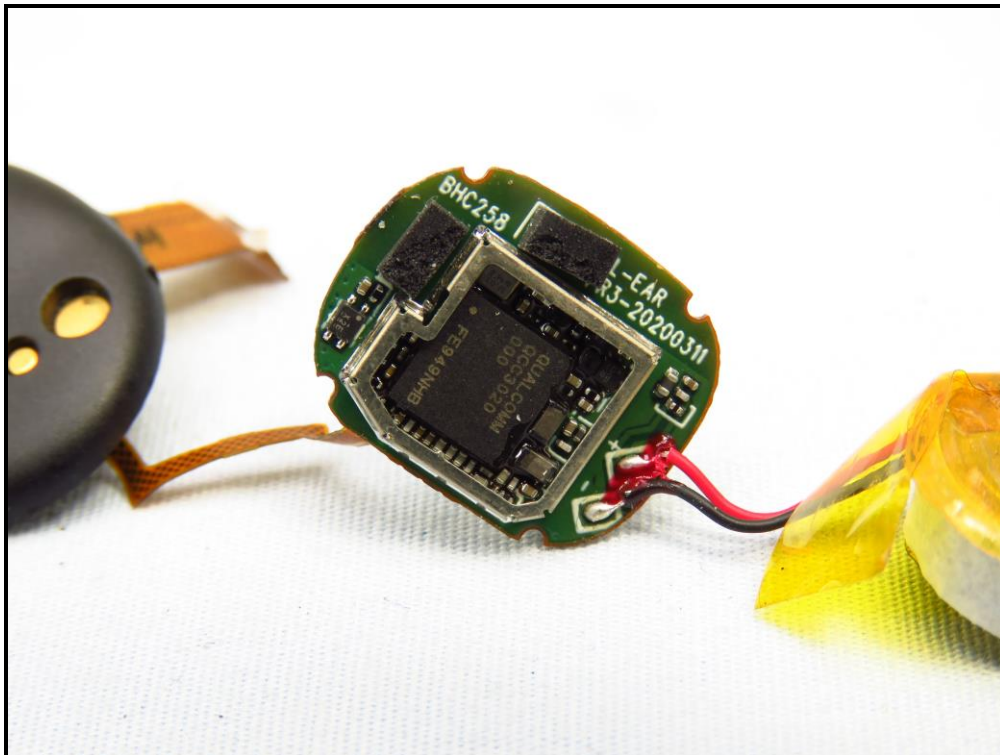


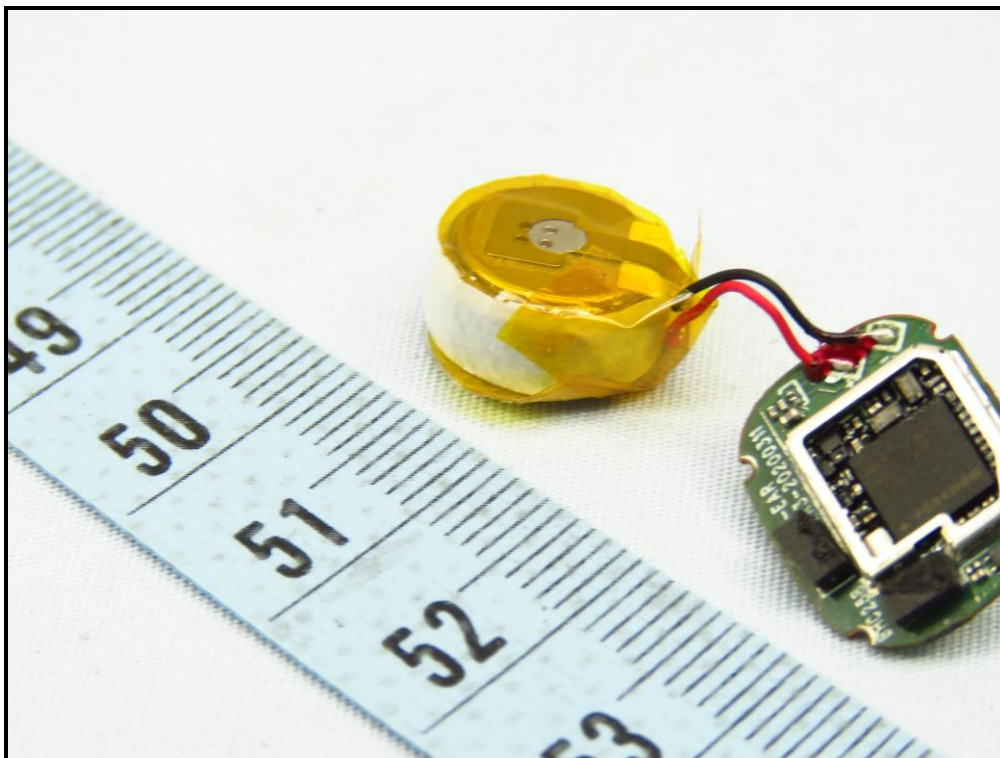
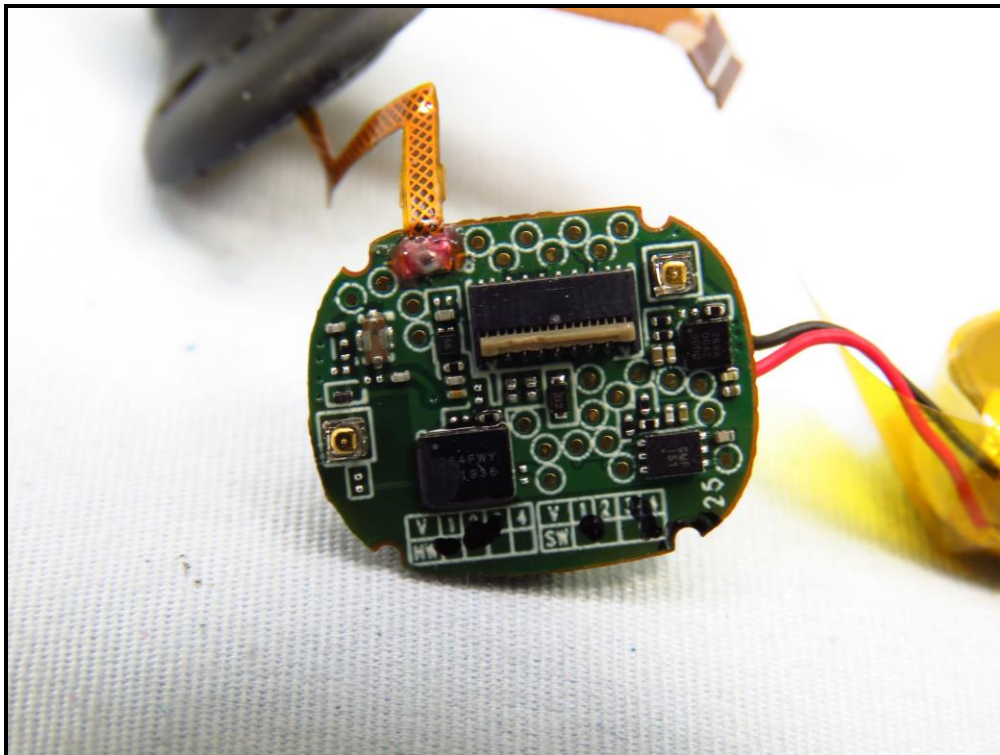


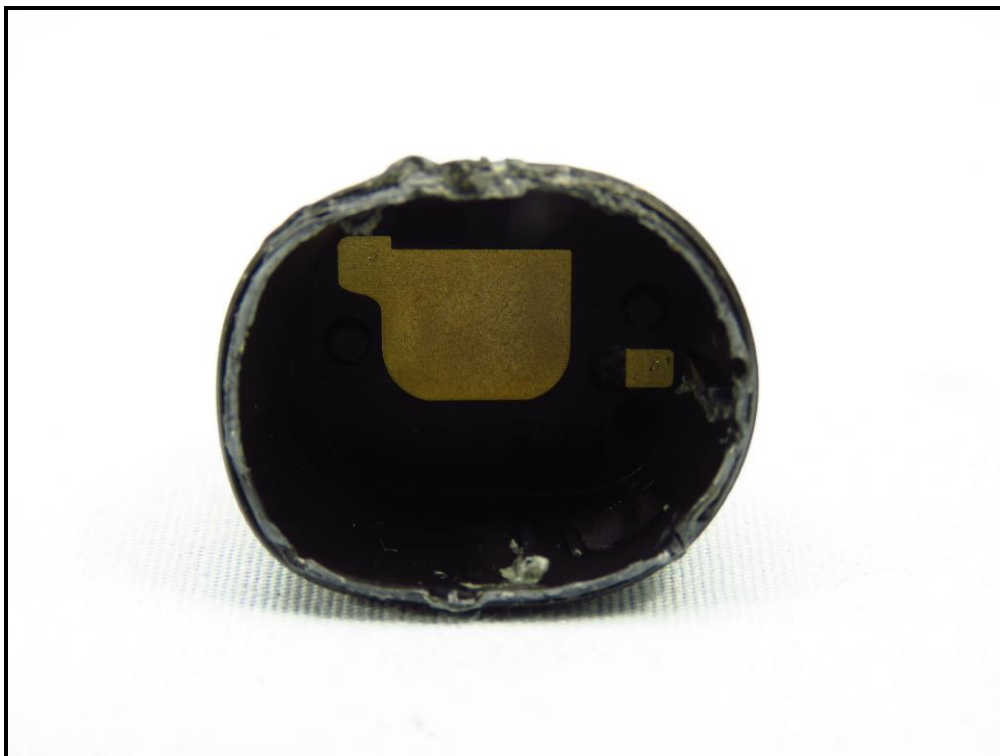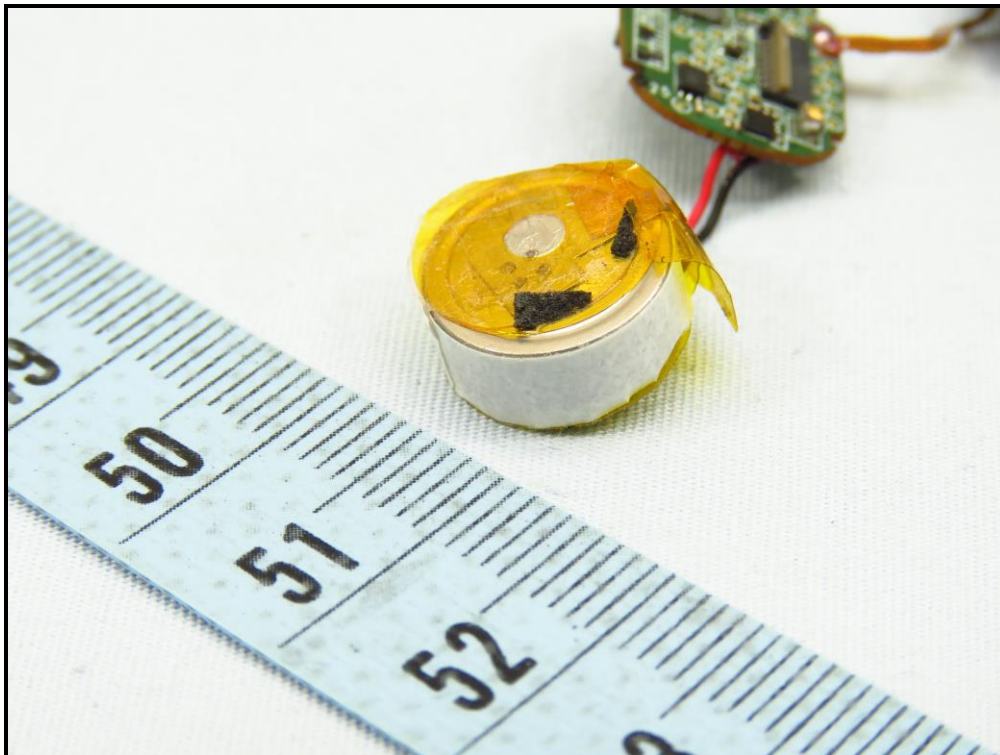


Right Earbud

    
Brand: SENNHEISER, Model: CX400TW1 R
Black color

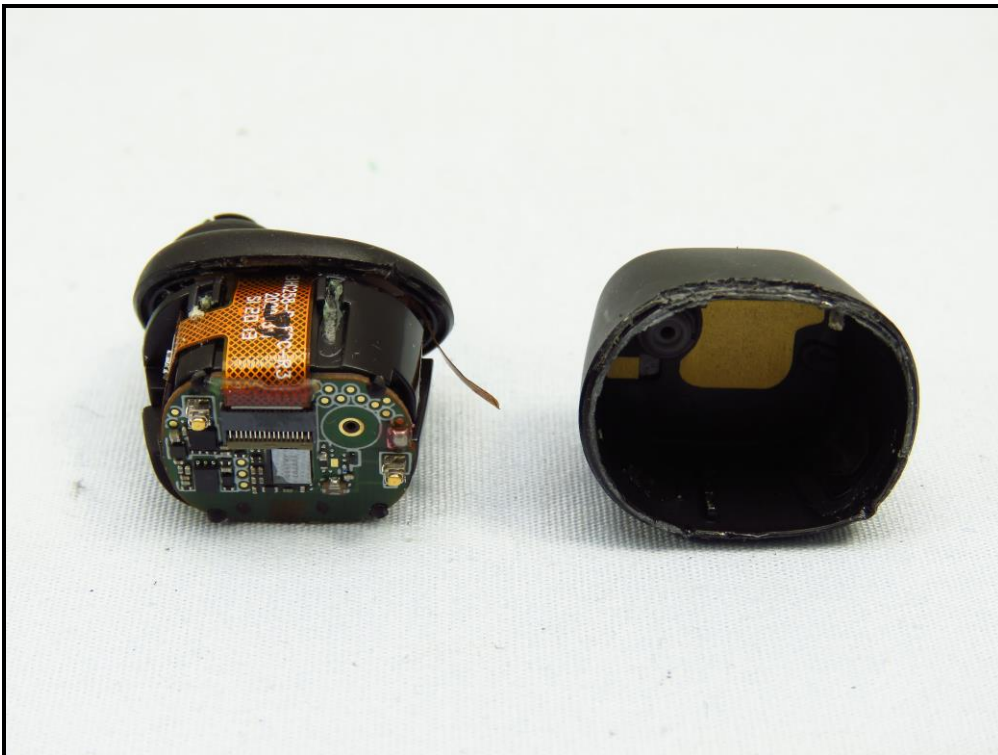


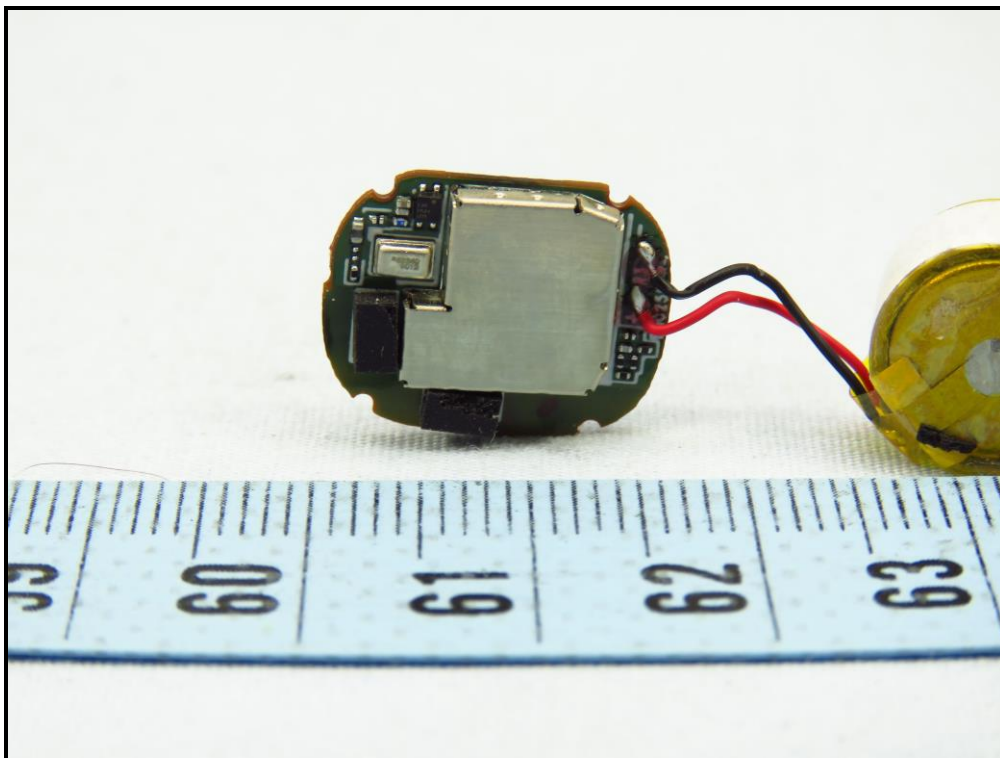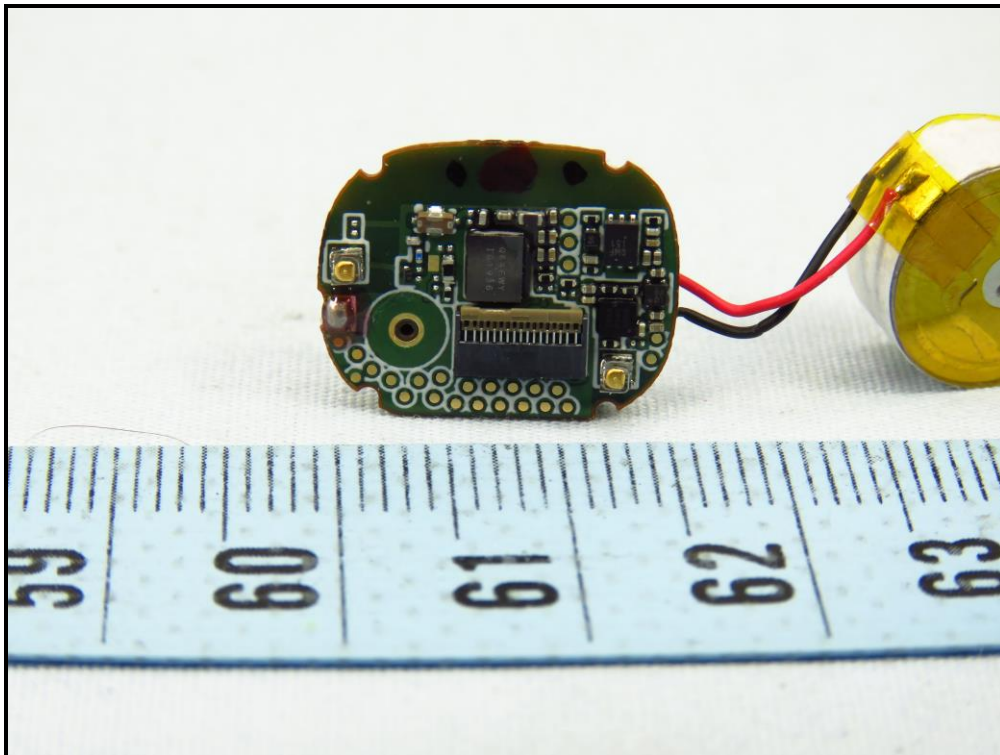

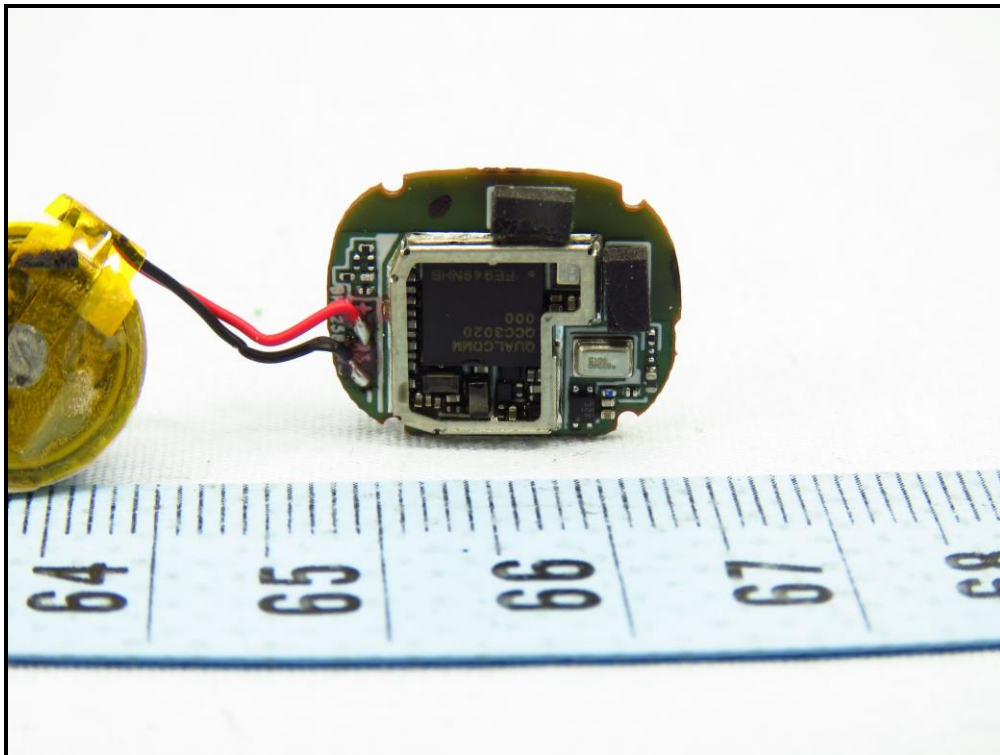

Earbud (main battery cell)

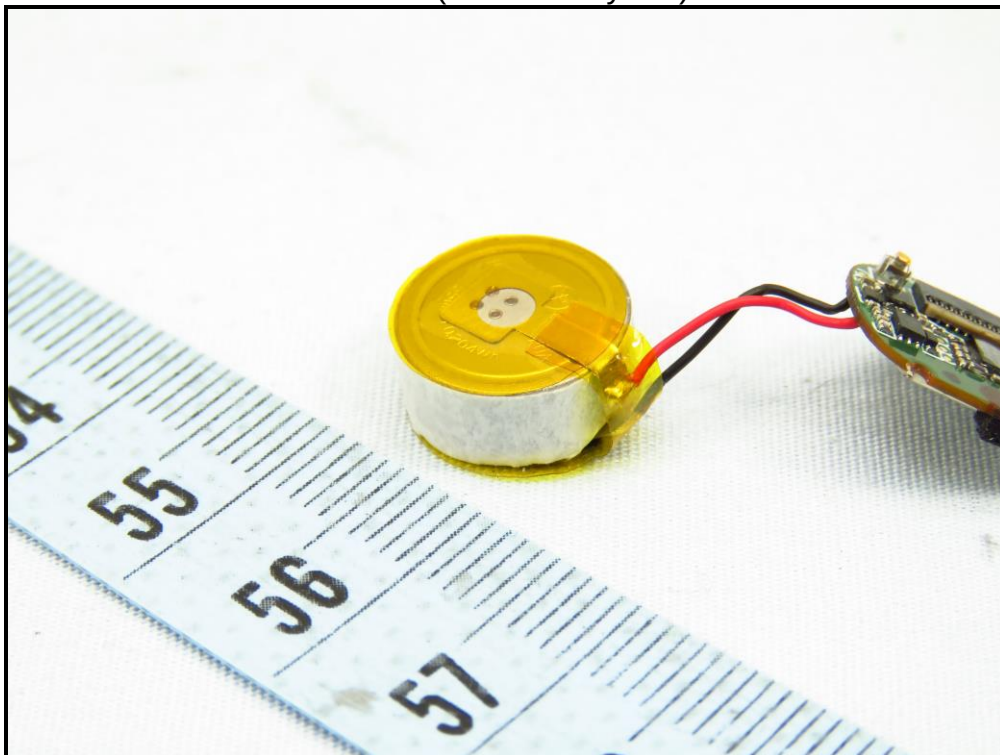 


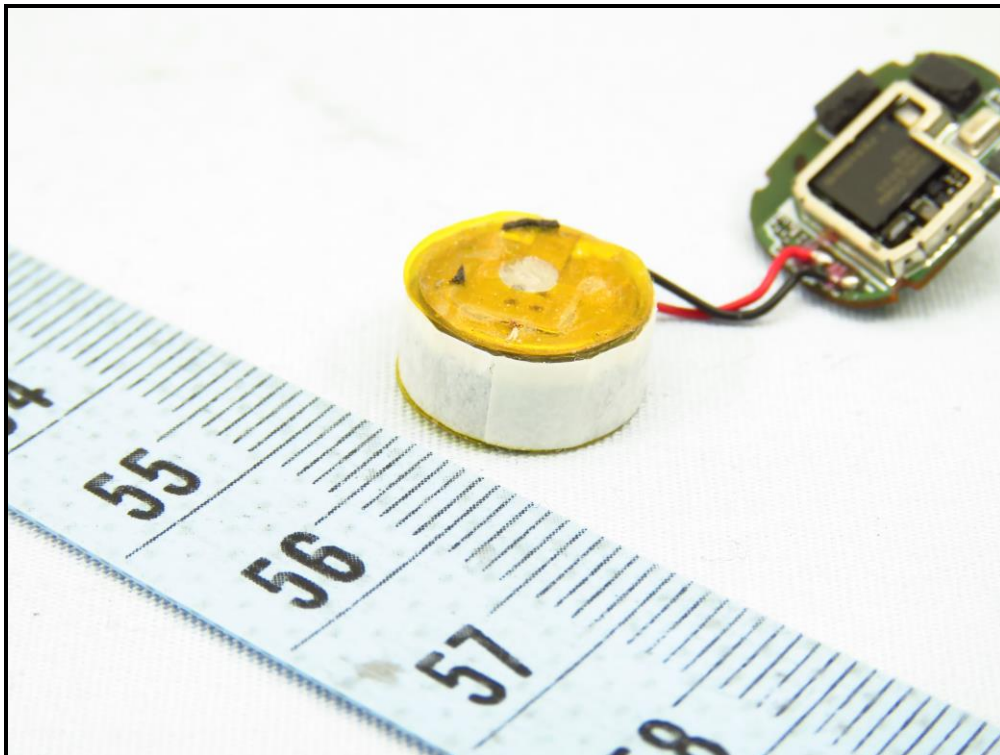 




Charging Case

Brand: SENNHEISER, Model: CX400TW1 C

    Black color



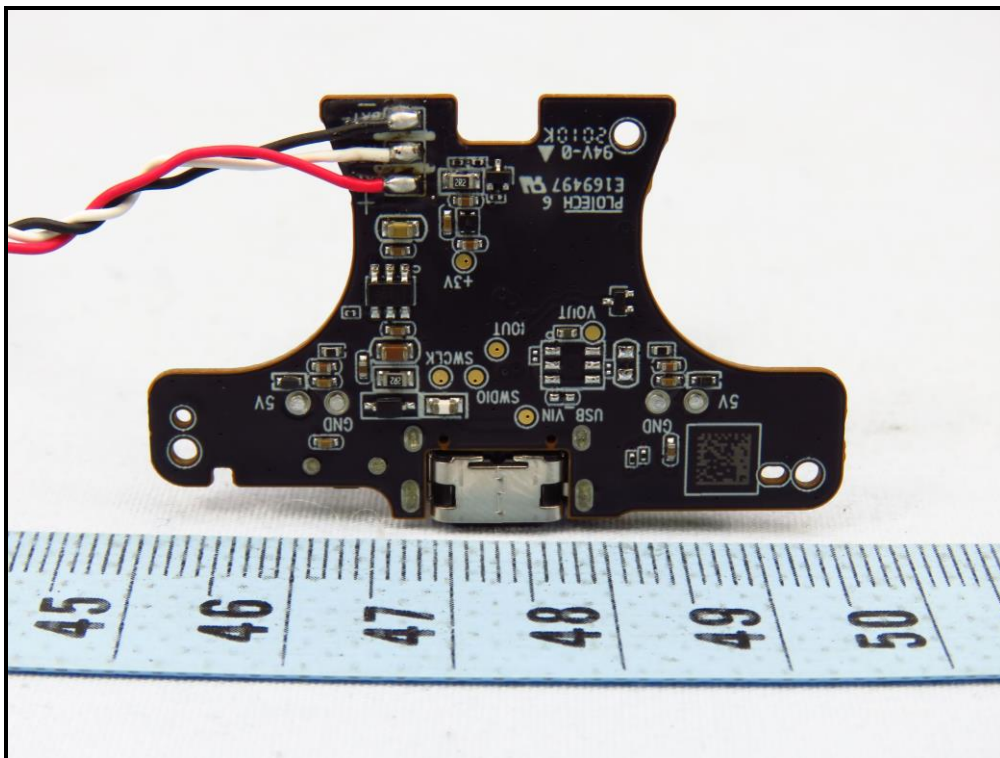
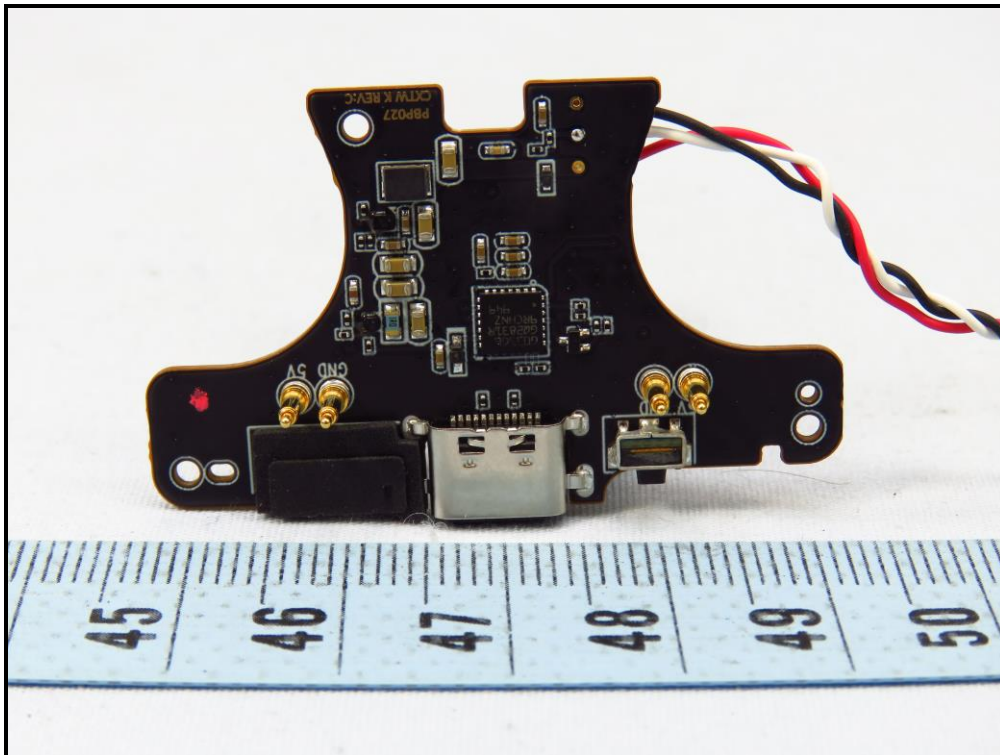


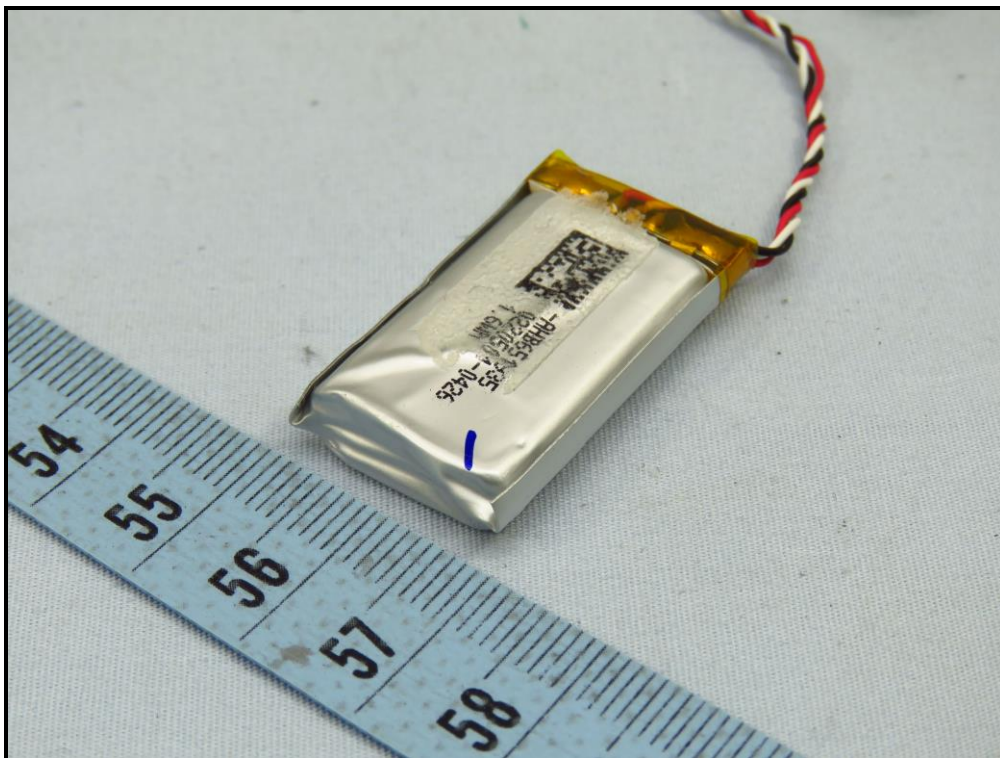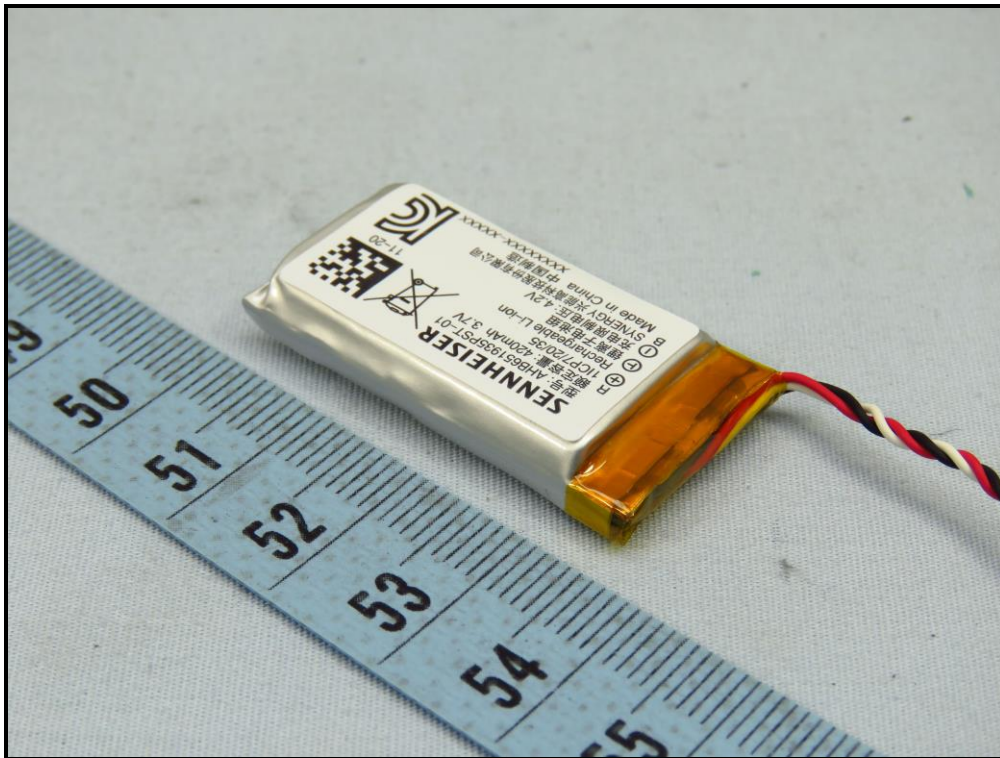

Charging case (Main battery cell)



  Charging Case
Brand: SENNHEISER, Model: CX400TW1 C
White color
Charging case (alternative battery cell)

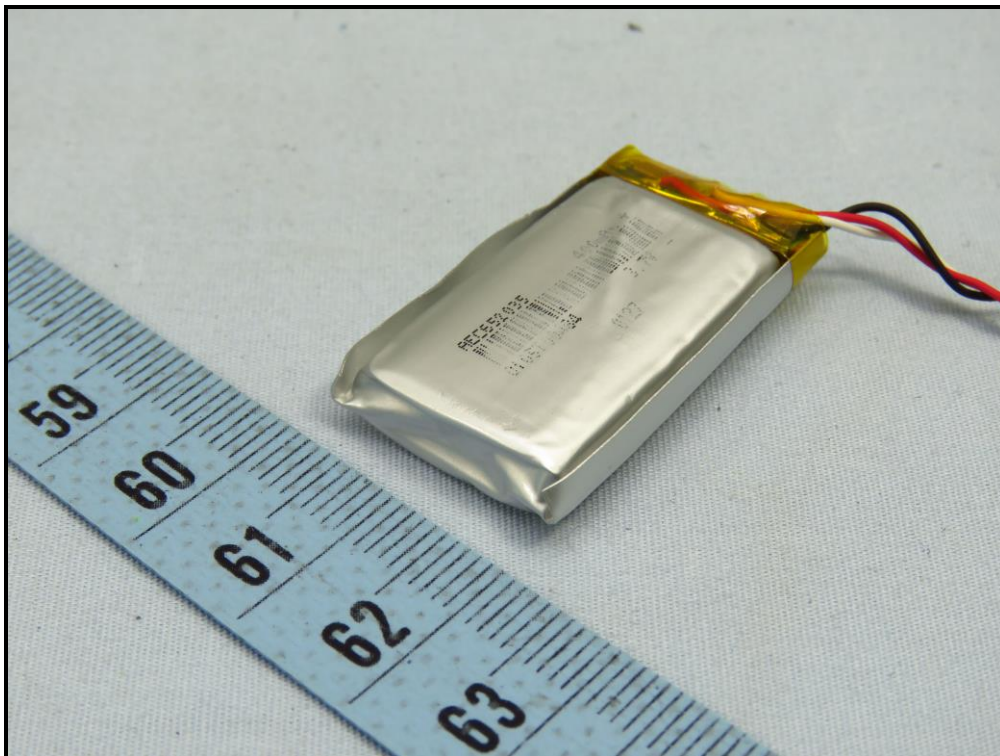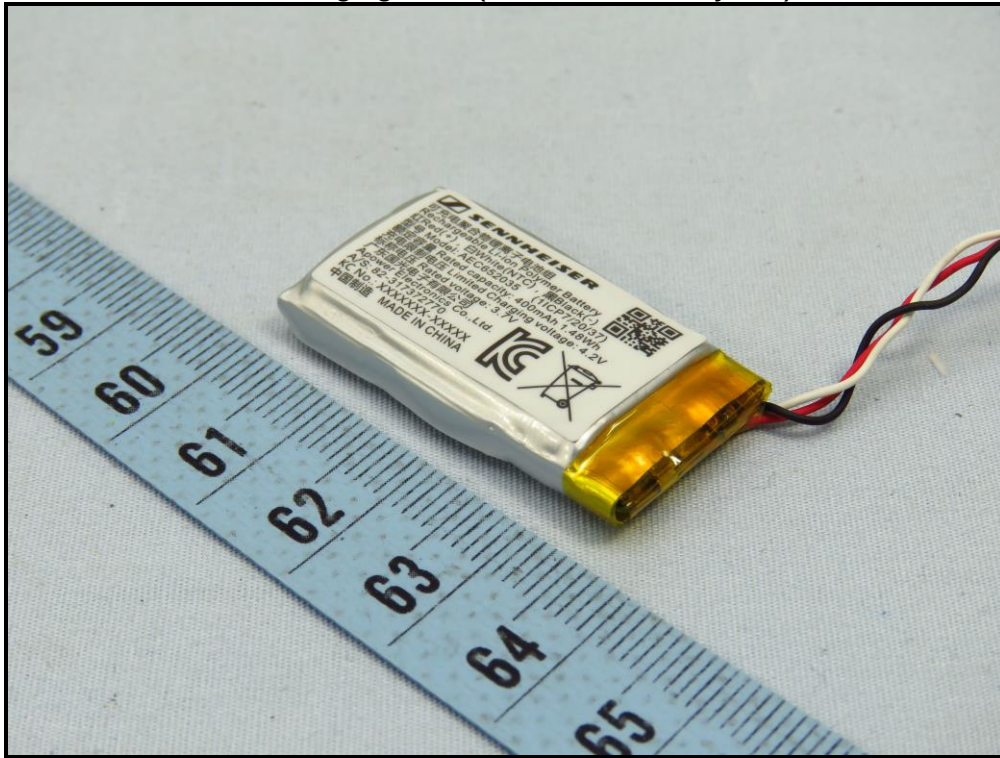



Earbud (alternative battery cell)



