 
 


Display

Default screen



PRESS 

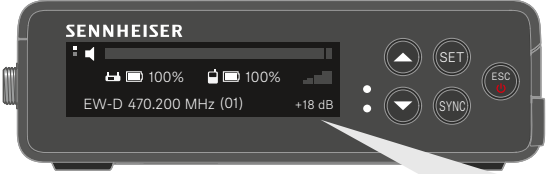

 → 

Instruction Manual

Display page

Mute switch

Receiver battery (EK)

Transmitter battery (SK or SKM-S)

Audio output level

PEAK display

Designation

 
Frequency

Channel

Gain

RF Signal strength

Menu



→ SET →

Gain

Output level

SET

↓

→ SET →

Gain

+24

Gain

+21 dB

+18

SET

↓

↓

Output level

Headphone

SET

↓

→ SET →

Output level

Headphone

0 dB

-15 dB

-20 dB

SET

↓

↓

Headphone

Mute switch

SET

↓

→ SET →

Headphone

Mute switch

ignored

active

SET

↓

↓

Auto scan

Channel

SET

↓

→ SET →

Auto scan

Channel

526.000 MHz (94)

SET

↓

↓

Channel

Frequency

SET

↓

→ SET →

Channel

Frequency

93

94

526.000 MHz

1

SET

↓

↓

Frequency

Brightness

SET

↓

→ SET →

Frequency

Brightness

471

470 .200 MHz

526

SET

↓

↓

Brightness

Reset

SET

↓

→ SET →

Brightness

Reset

80

60 %

40

SET

↓

↓

Reset

Yes

SET

↓

→ SET →

Reset

Reset to factory defaults?

No

ESC

↓



Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso | Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing | Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje | Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 | 使用説明書 | 取扱説明書 | 사용 설명서

EW-D Smart Assist

Available on the App Store

ANDROID APP ON Google play

Sennheiser Documentation App

Available on the App Store

ANDROID APP ON Google play

LEDs

LINK LED



- Link ok
- audio active



- Link ok
- audio muted or no capsule on SKM



- Link ok
- audio clip



- No link

 


- Link ok
- Low transmitter battery



- Device switched off


EK

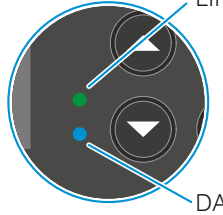

LINK

DATA

 
SKM-S

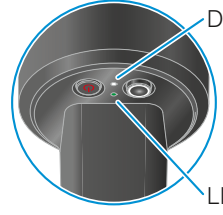

DATA

LINK

 SK

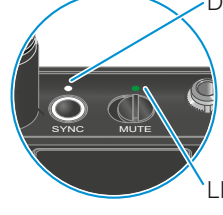

DATA

LINK

DATA LED



 
Bluetooth active to
- sync with transmitter
- connect with app




Firmware update in progress

Sync



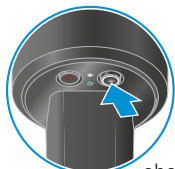


short press

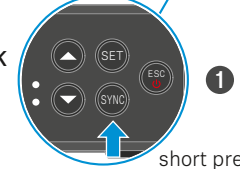 

1

short press

 2 OR

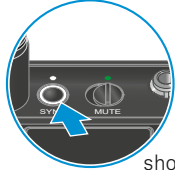

short press

Cables



3.5 mm Y-Cable*
Art.-No. 588180



3.5 mm - XLR male
Art.-No. 588178



 
3.5 mm jack
Art.-No. 586347




USB-C Power
Art.-No. 575385

* for stacking two EK's

Cheeseplate

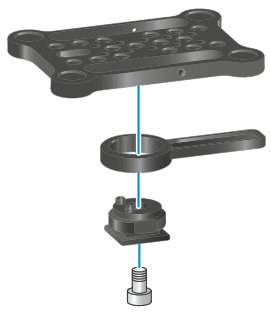

OR

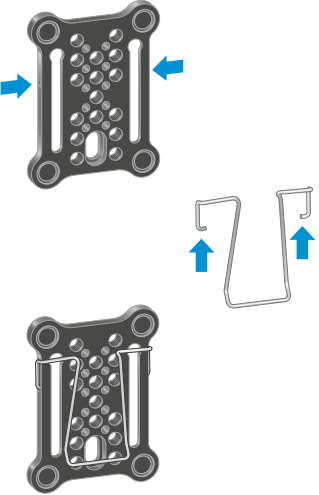 


Stacking








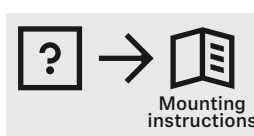 

 → 


Mounting instructions

 Handling

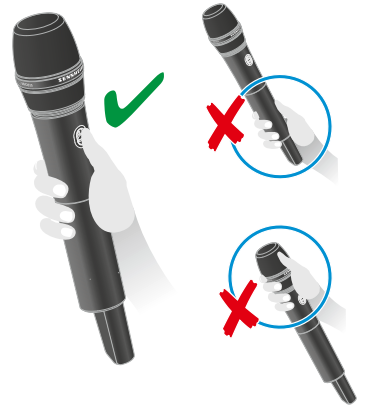




ME 2

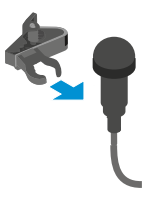 


ME 3



  
ME 4

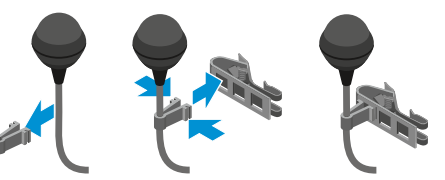

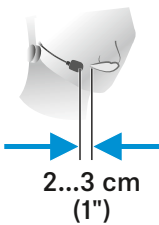


2...3 cm (1")

 Setup

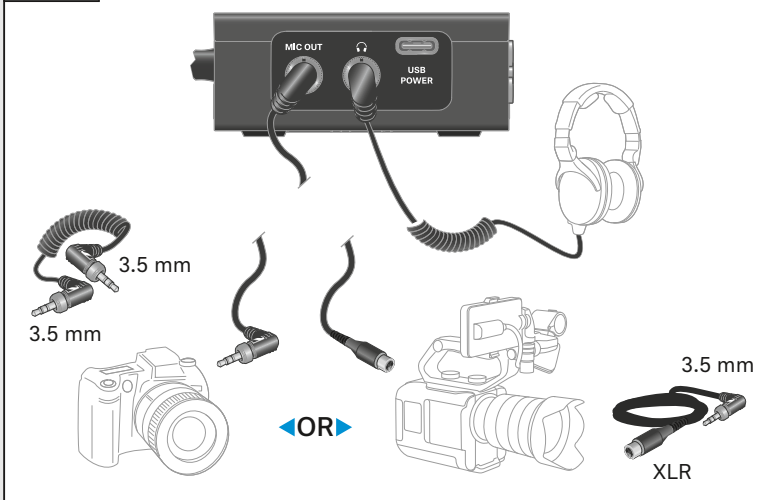

Mute

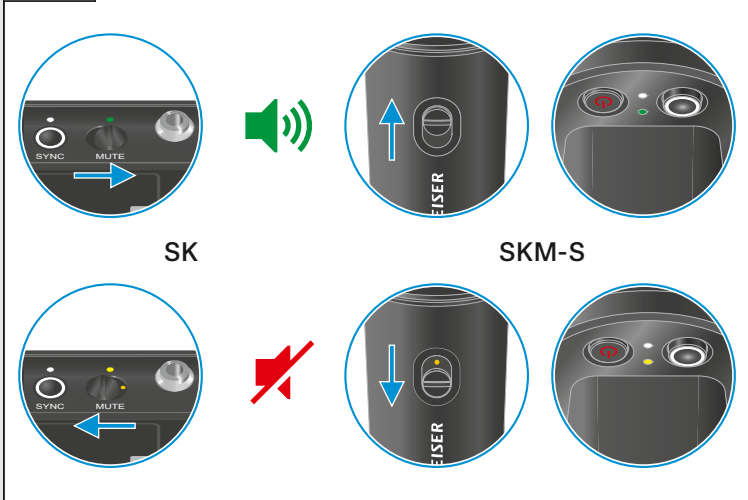 

Instruction Manual

EW-D Smart Assist

Download on the App Store

GET IT ON Google Play

Sennheiser Documentation App

Download on the App Store

GET IT ON Google Play

or online at www.sennheiser.com/download

EW-D_

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 10/22, 592859/A01



Evolution Wireless Digital Portable

 
EW-DP EK, EW-D SK, EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guía rápida
Guia de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide


Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
简要说明
快速使用指南
クイックガイド
요약 안내서

SENNHEISER

Power Supply

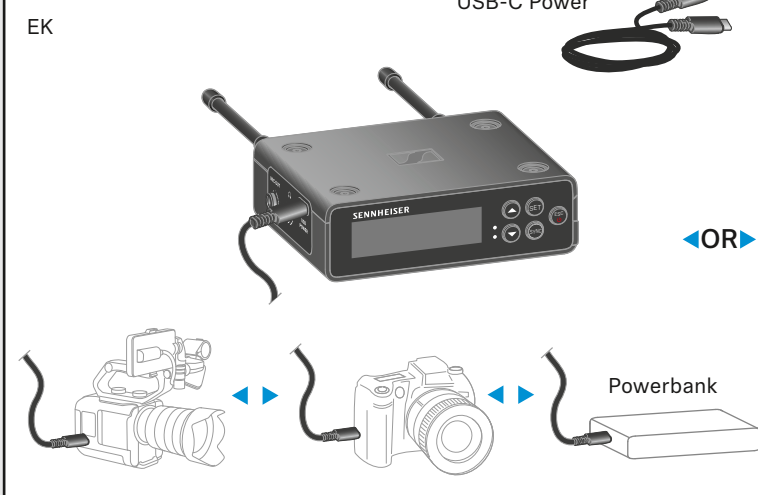


Battery

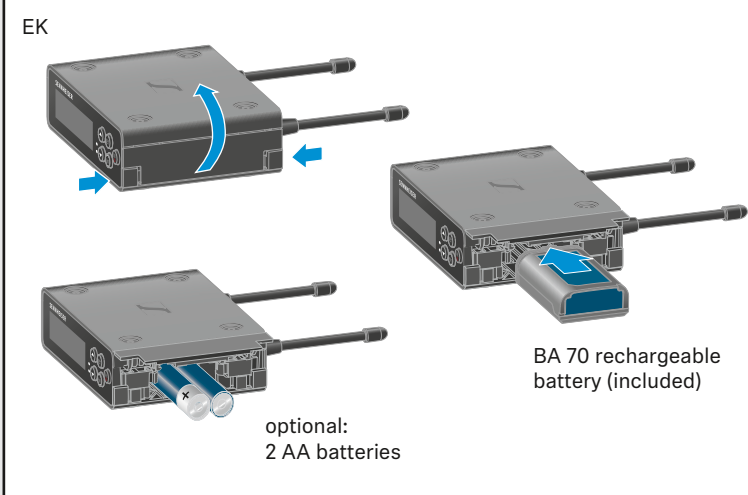 


EW-D Smart Assist


 
The EW-D Smart Assist app simplifies your workflow

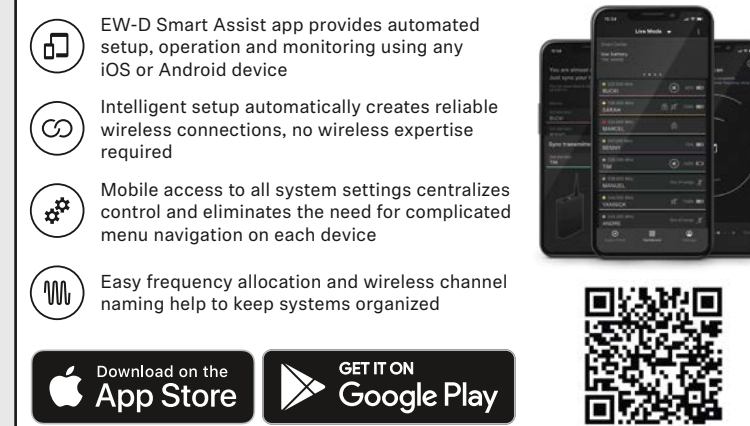



EW-DP EK

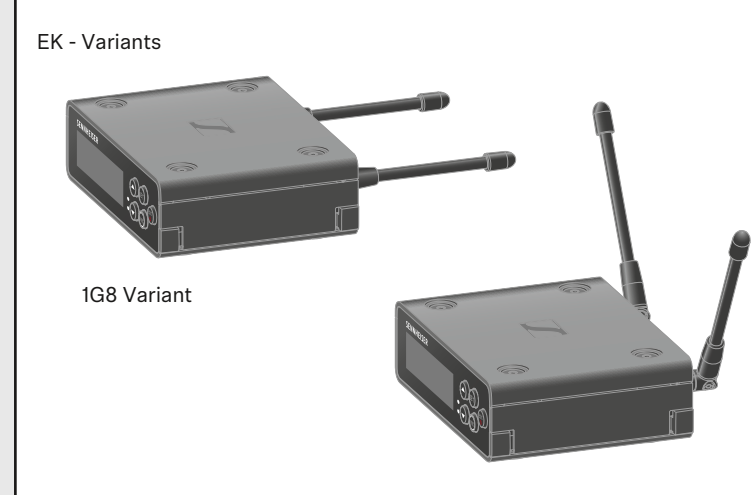 


Battery

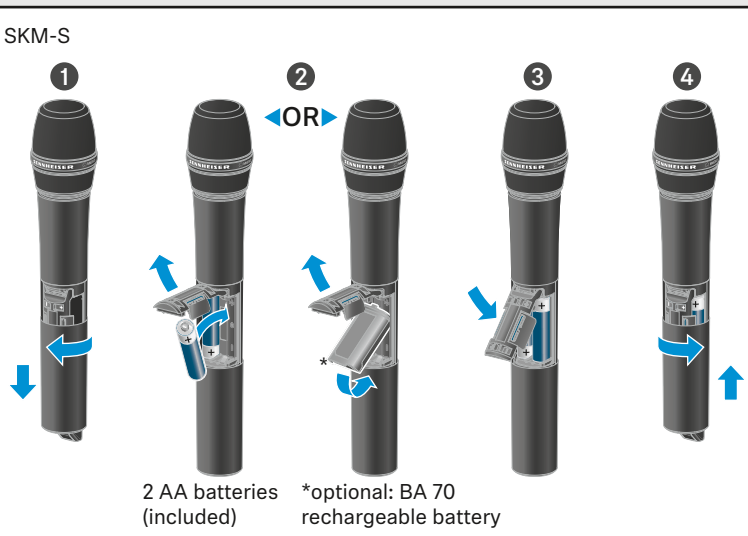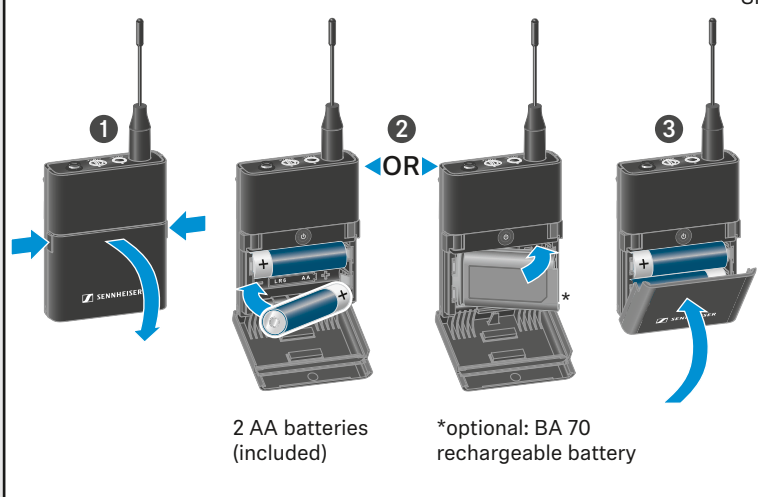  


EW-DP EK

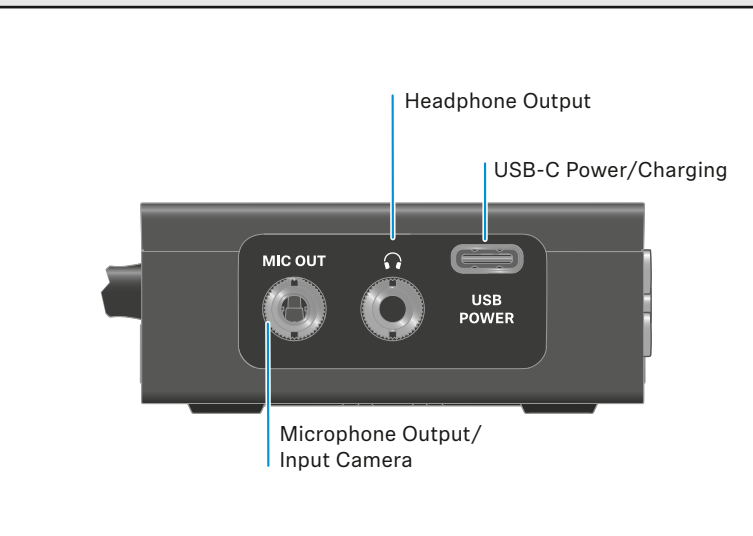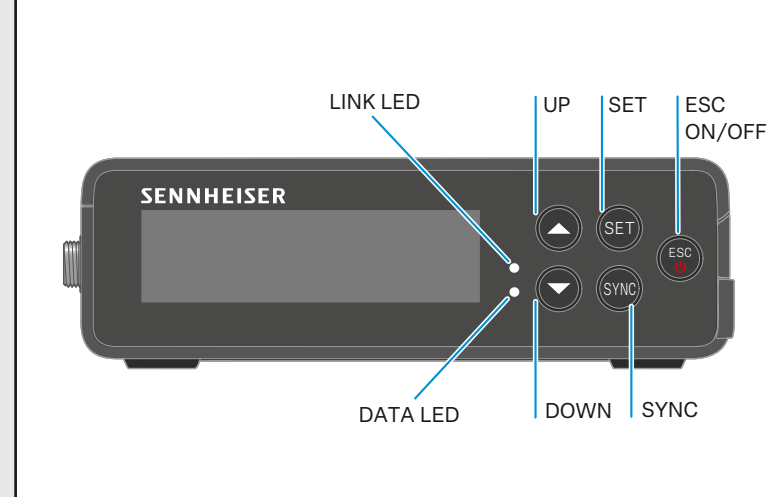  


On/Off

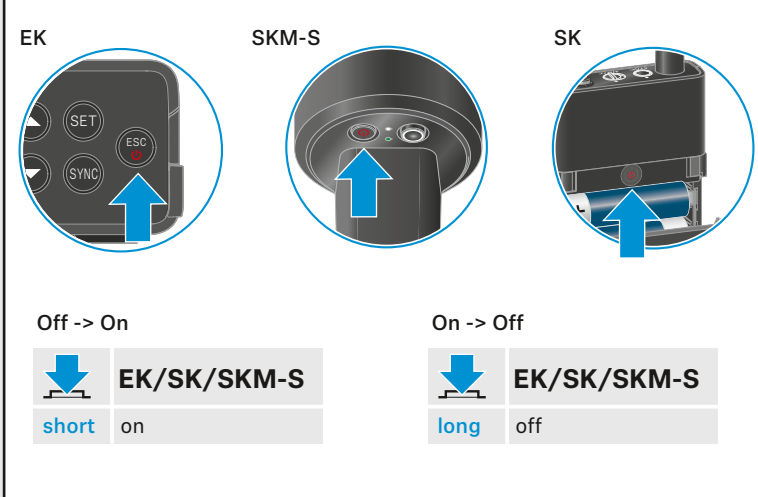 

Identify/Battery check

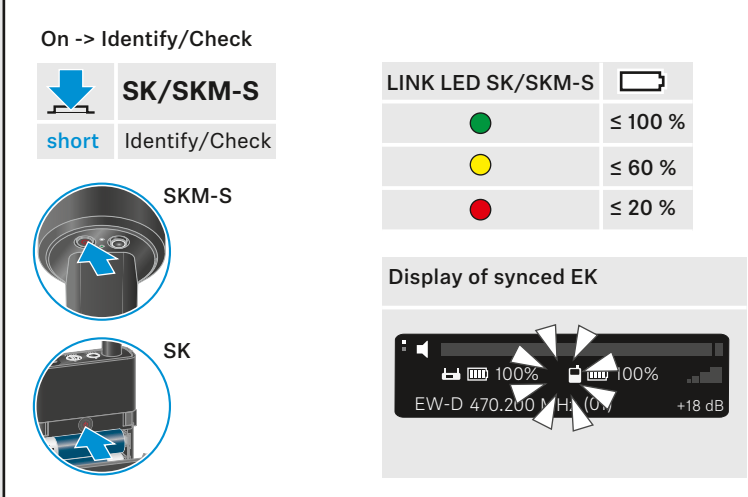 

EW-D SKM-S

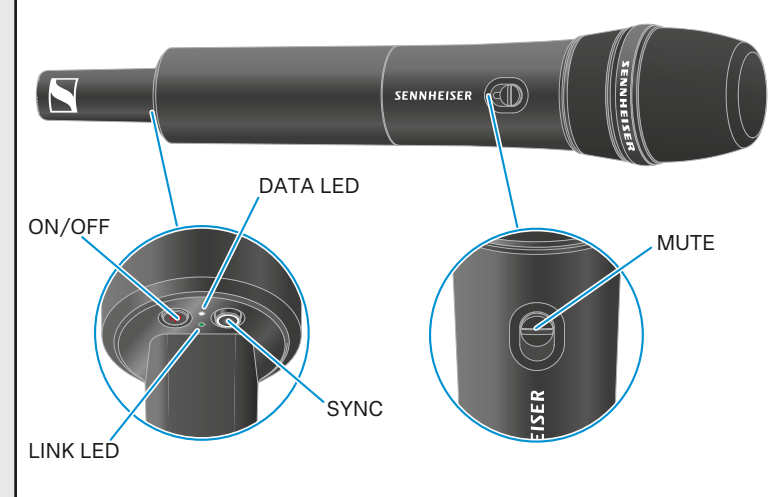 

EW-D SK

