




ew 100 P G4 ew 500 P G4

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Πρώτος οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
快速使用指南
クイックガイド
퀵 가이드

SENNHEISER

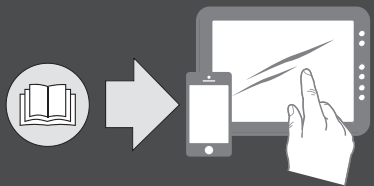

Sennheiser Documentation App



ANDROID APP ON
Google play

Available on the
App Store

or online at
www.sennheiser.com/download

ew 100 P G4_
ew 500 P G4_

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany, Publ. 01/18, 575862/A01

EK 100



SKP 100




SK 100/SKM 100

SK 100



SKM 100

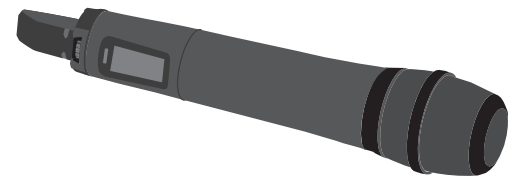

EK 500



SKP 500




SK 500/SKM 500

SK 500



SKM 500

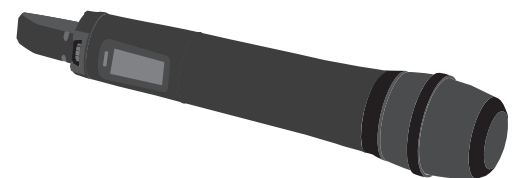


Battery


EK/SK



SKP

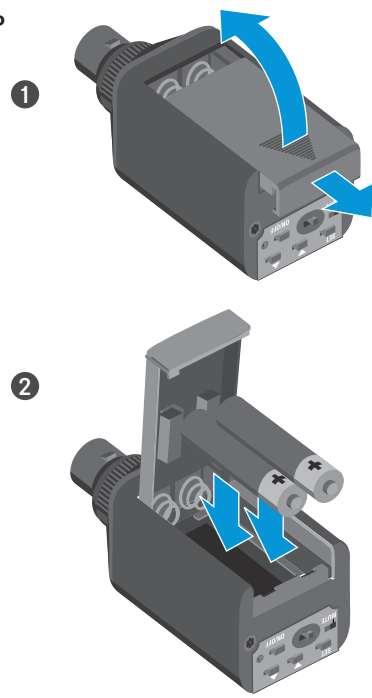

SKM

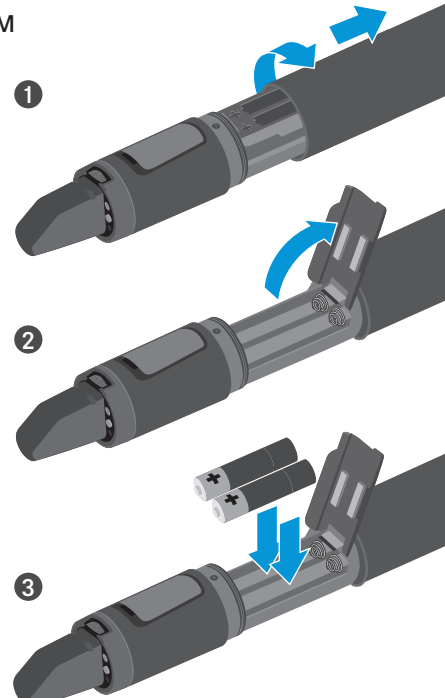

On/Off

	EK	SK/SKM/SKP
short	on	on
long	-	on + RF Mute
long	off	off

Instruction Manual




Battery

	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h
LOW BATT		

Menu



Instruction Manual

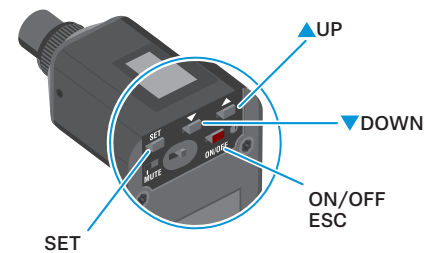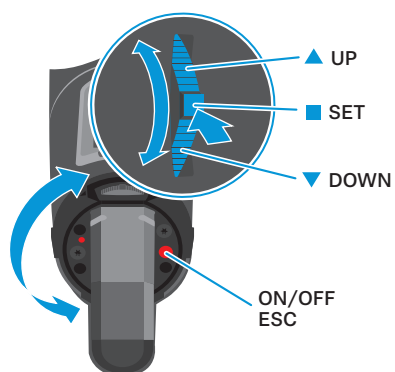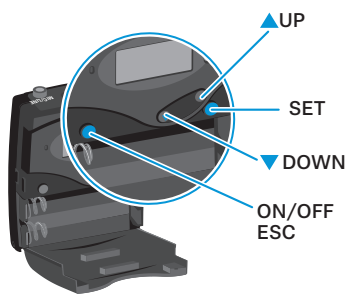

EK 100

Main menu "Menu"	"Easy Setup"	Extended menu "Advanced Menu"
Sync Squelch Easy Setup Frequency Preset Name AF Out Auto Lock Advanced Exit	Reset List Current List Scan New List Exit	Tune Pilot Tone LCD Contrast Reset Software Revision Exit

SK/SKM/SKP 100

Main menu "Menu"	Extended menu "Advanced Menu"
Sensitivity Frequency Preset Name Auto Lock Advanced Exit	Tune Mute Mode (SK/SKP) RF Power Cable Emulation (SK) Pilot Tone LCD Contrast Reset Software Revision Exit

EK 500


Main menu "Menu"	"Easy Setup"	Extended menu "Advanced Menu"
Sync Phones Volume Squelch Easy Setup Frequency Preset Name AF Out Equalizer Auto Lock Advanced Exit	Reset List Current List Scan New List Exit	Tune Sync Settings Pilot Tone LCD Contrast Reset Software Revision Exit

SK/SKM/SKP 500

Main menu "Menu"	Extended menu "Advanced Menu"
Sensitivity Frequency Preset Name Auto Lock Advanced Exit	Tune Mute Mode (SK/SKP) RF Power Cable Emulation (SK) Phantom Power 48 V (SKP) Pilot Tone LCD Contrast Reset Software Revision Exit

Display


EK

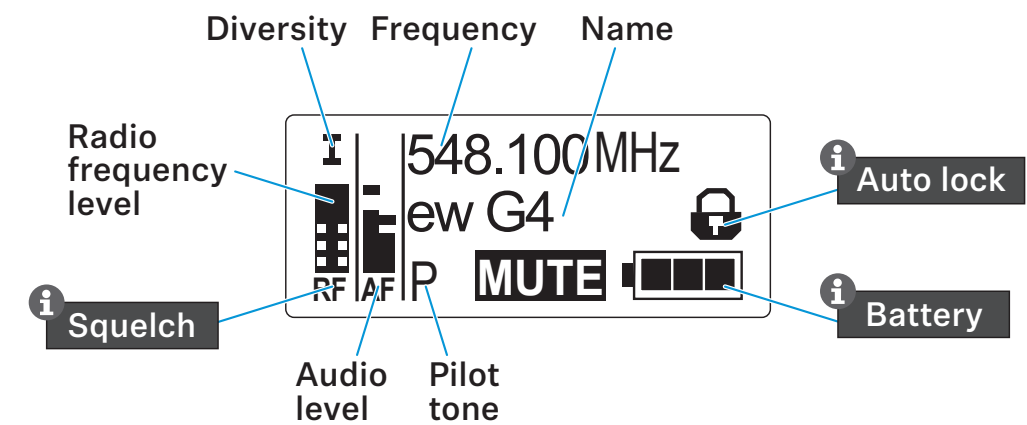

EK 100

A


B

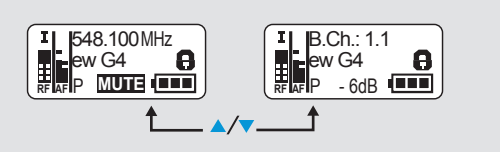


EK 500

A

B

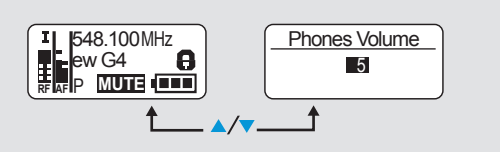


SK/SKP/SKM

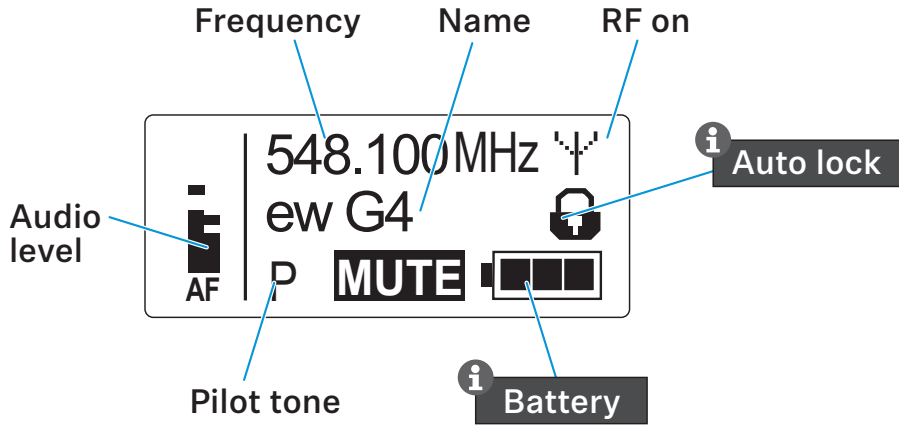

A


B

C

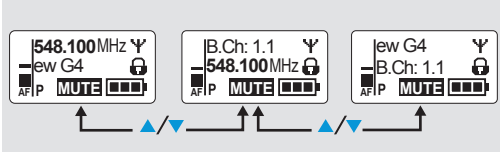


Mute

SK/SKP

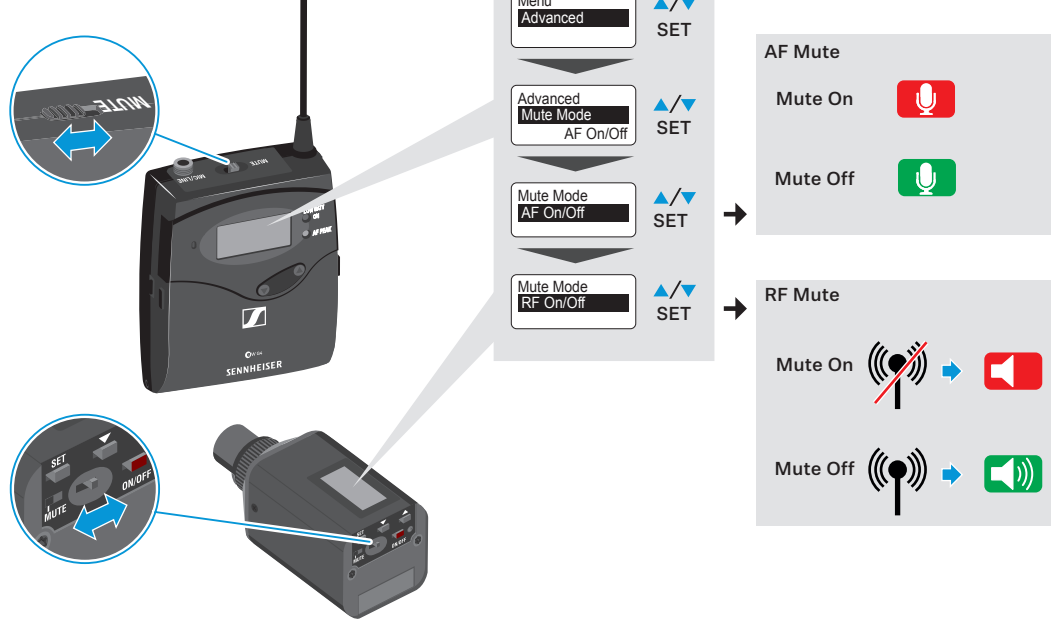


Camera adapter CA 2

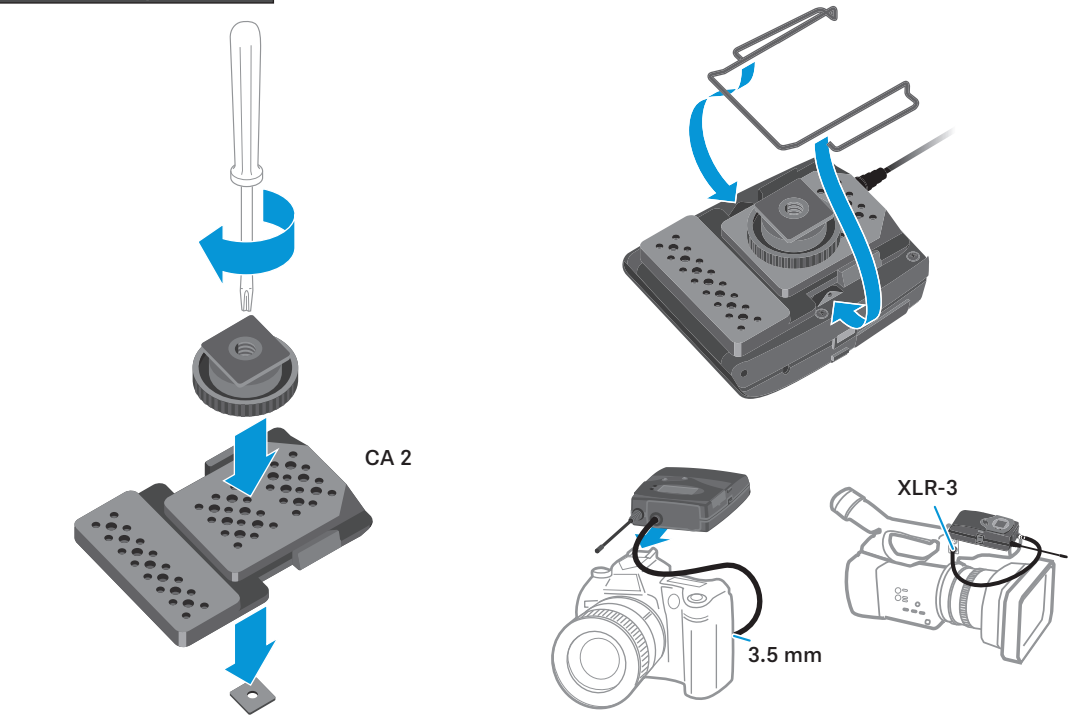


Mute

SKM

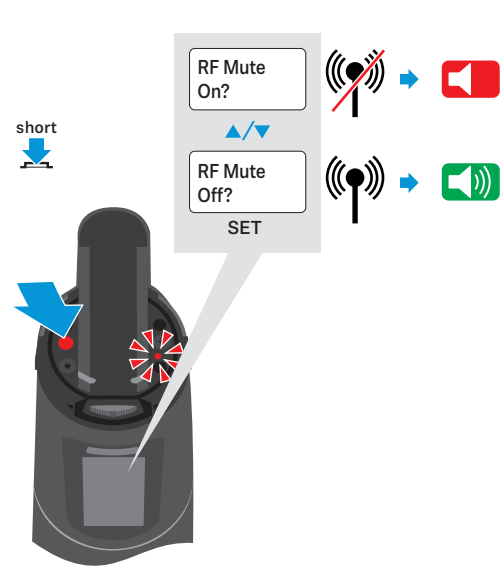


Phones

EK 500

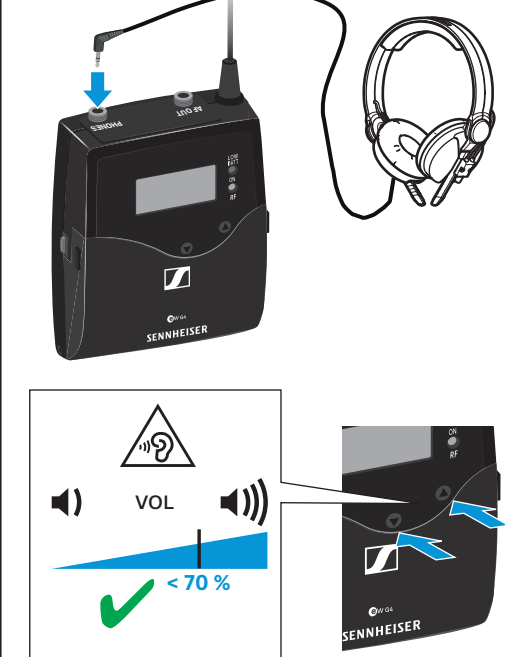


Setup Audio Level


SKP/SKM/SK

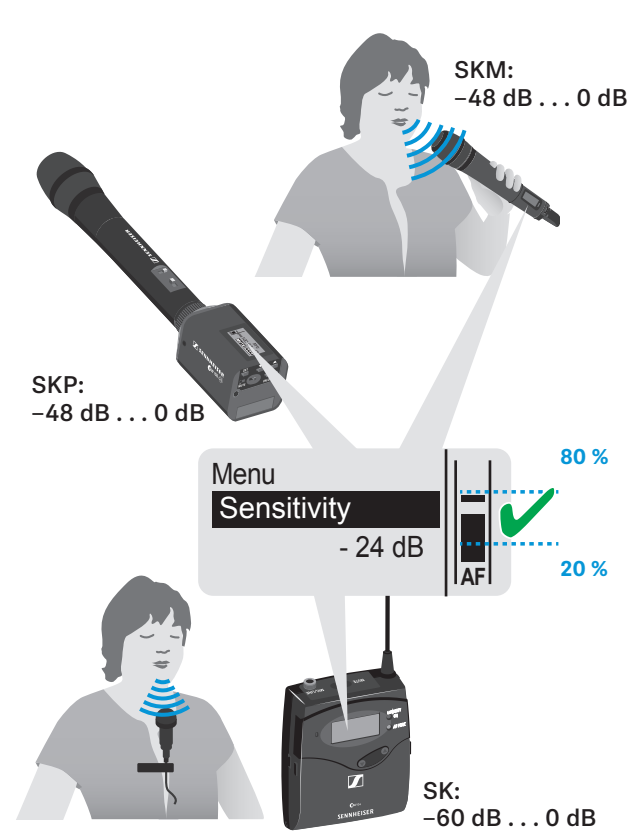

EK

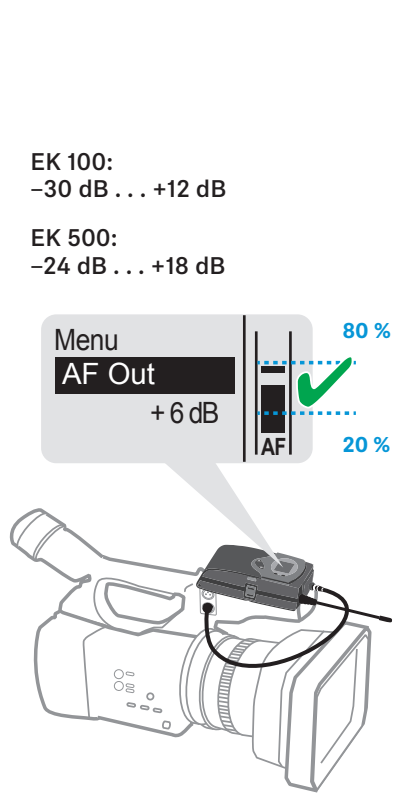

Mic position

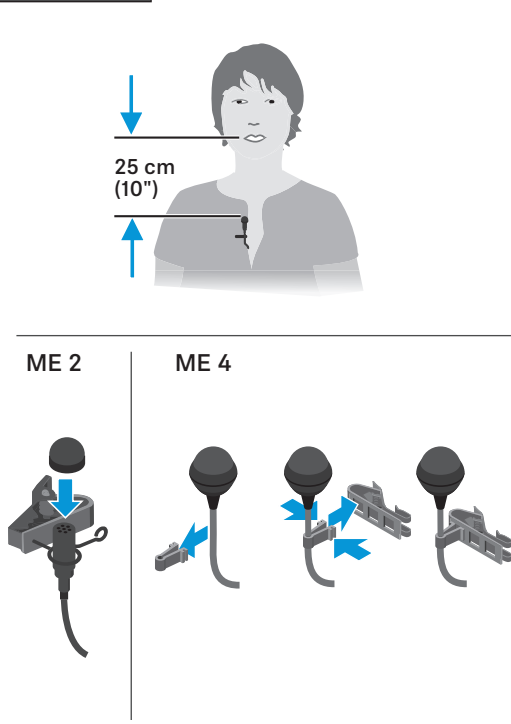

ME 3-II

