


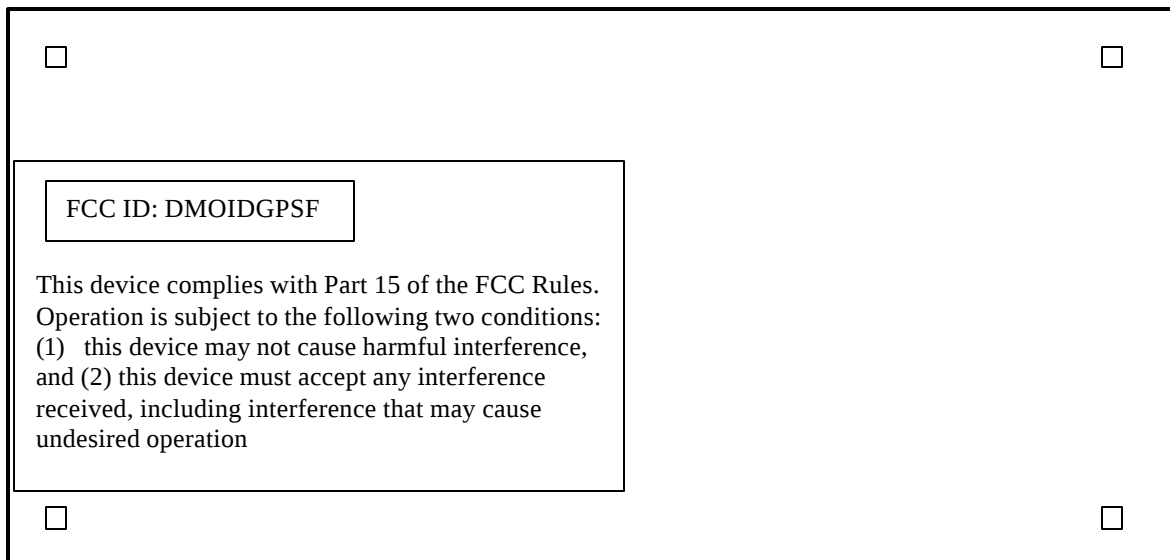

The equipment label will be located on the bottom of the unit as indicated above.

Phillip Inglis
TRP/Cetecom bvba