




EW-DP SKP

Quick Guide



EW-DP SKP

Overview:

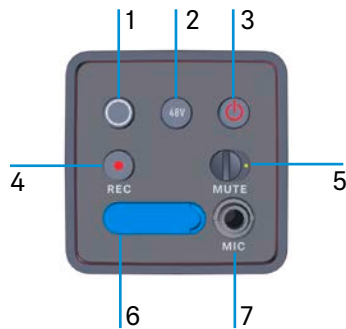


- 1. Sync switch
- 2. Switch phantompower
- 3. Power ON/OFF switch

- 4. Recording switch
- 5. Mute switch
- 6. Micro-SD slot


- 7. 3,5 mm jack socket
- 8. Battery slot
- 9. 3-poles XLR plug

Plug in Handheld Mircophone:

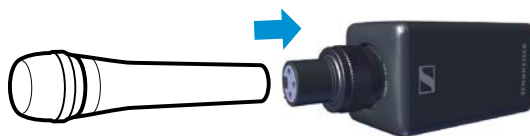


- Plug the handheld transmitter onto the XLR connector
- If a handheld transmitter and a lavalier microphone are connected at the same time, the lavalier microphone has priority

Synchronise with receiver:

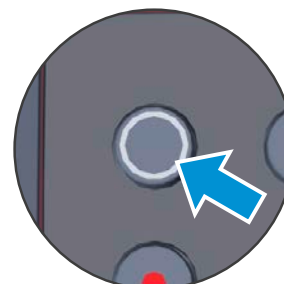

short press

Power supply/battery:

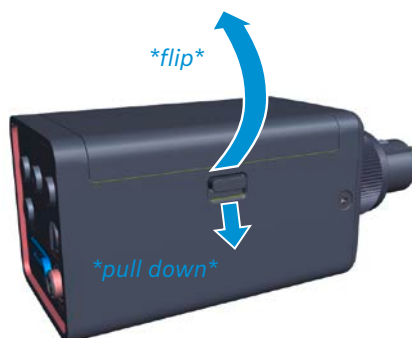

- Open battery compartment
- Insert two AA batteries or a BA 70 rechargeable battery

Record:



short press

- Flashes when no SD card is inserted
- Recording continues even when mute is on
- Hold (approx. 10 sec.) to format SD card