



Setup

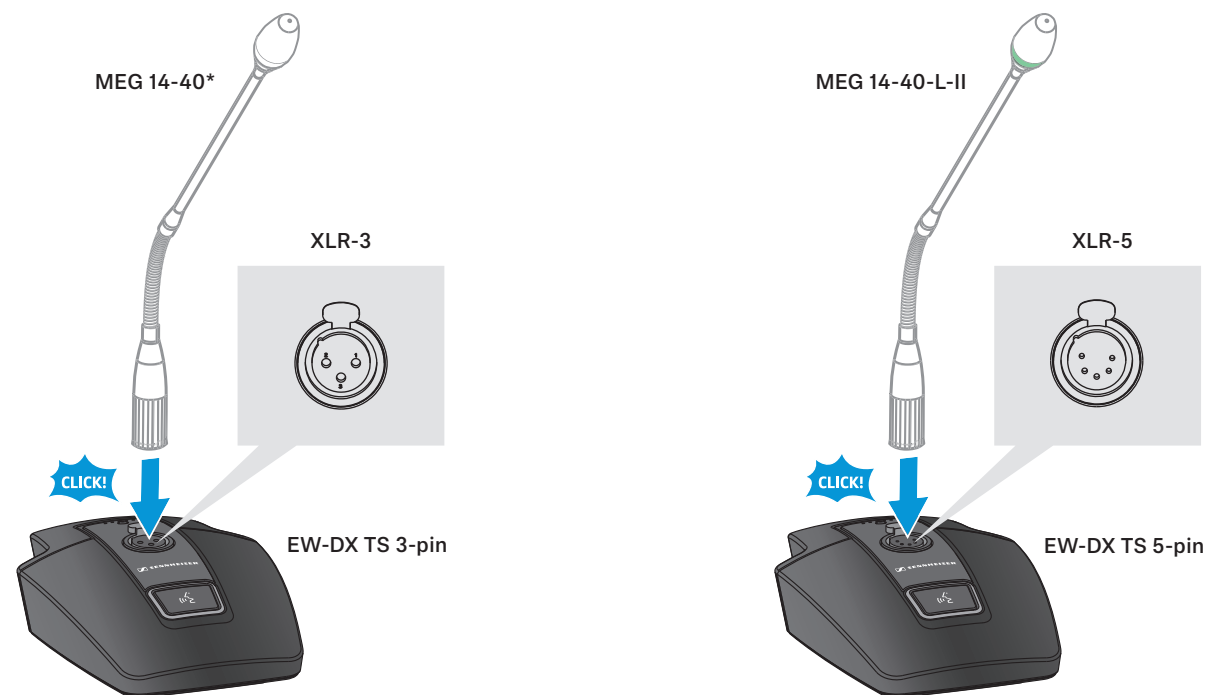

*see product specification sheet for more compatible XLR-3 gooseneck microphones

Battery/Charging

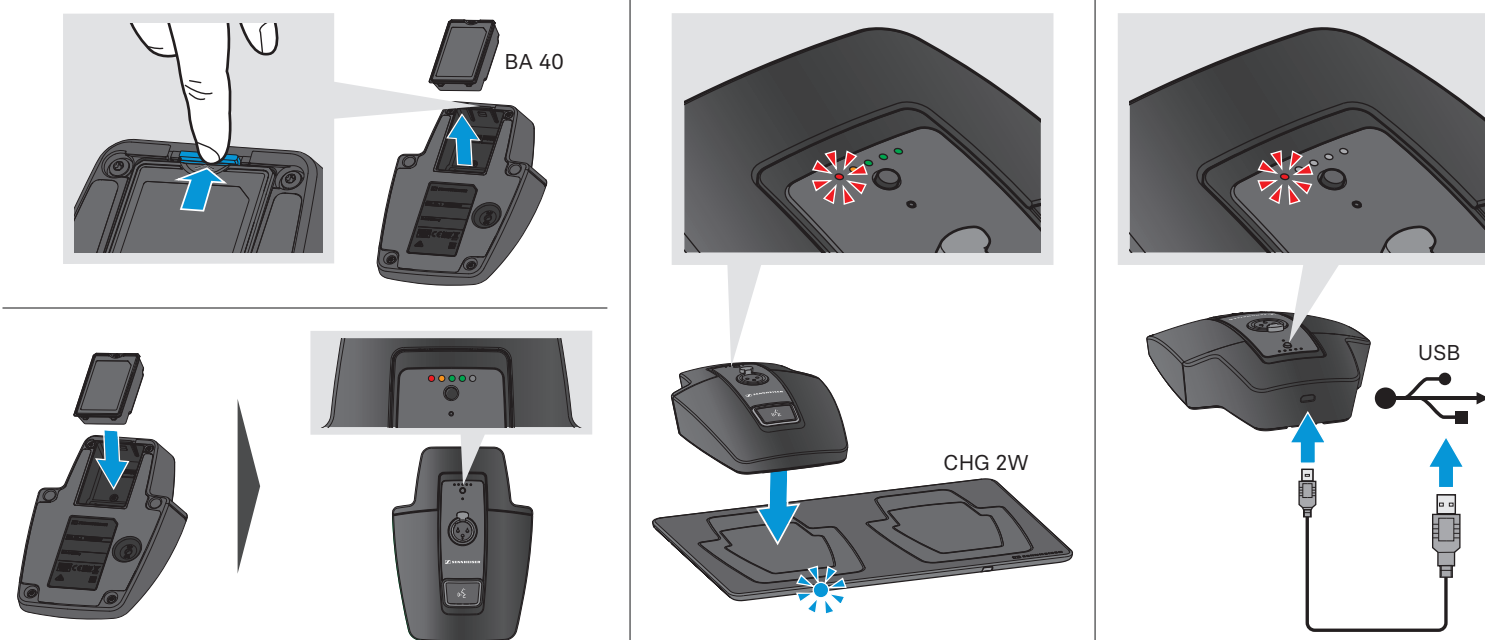

Operating time with BA 40 accupack

● ● ● ● ●	100 %	11:00 h
● ● ● ● ○	80 %	
● ● ● ○ ○	60 %	
● ● ○ ○ ○	40 %	
● ○ ○ ○ ○	20 %	
● ● ● ● ●	Low Batt	

XLR-3
XLR-5

Charging time (until fully charged)

		USB	CHG 2W
XLR-3	On	7:00 h	5:00 h
XLR-3	Off	5:30 h	4:30 h
XLR-5	On	7:30 h	5:30 h
XLR-5	Off	5:30 h	4:30 h



www.sennheiser.com/download

EW-D Smart Assist



Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 04/22, 587469/A01



Evolution Wireless Digital


EW-DX TS

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide


Kort vejledning
Παράρτημα οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

SENNHEISER


On/Off

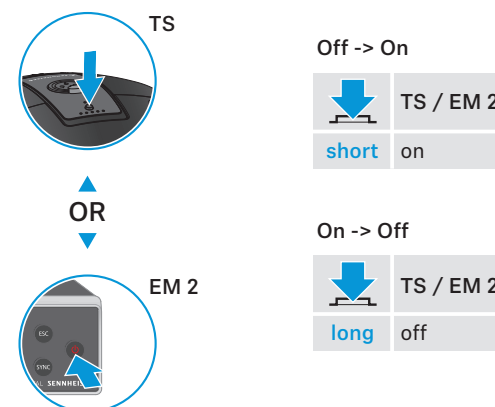


In the box

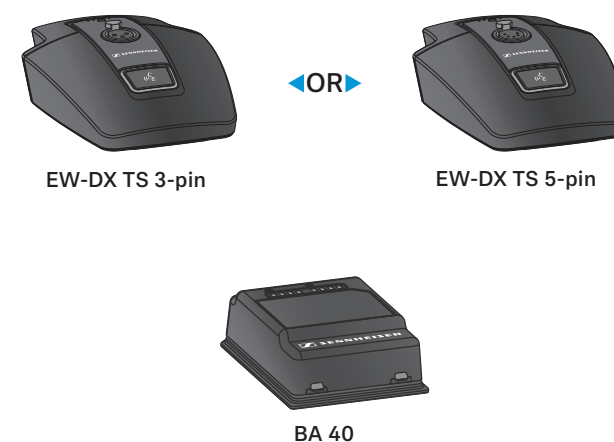


EW-DX TS 3/5-pin

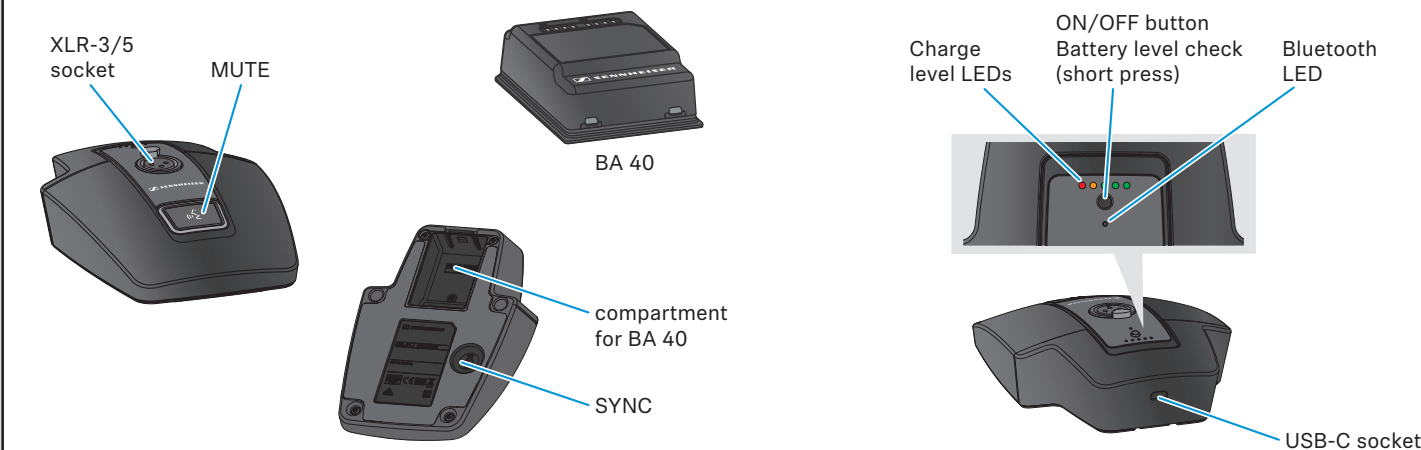




EW-DX EM 2

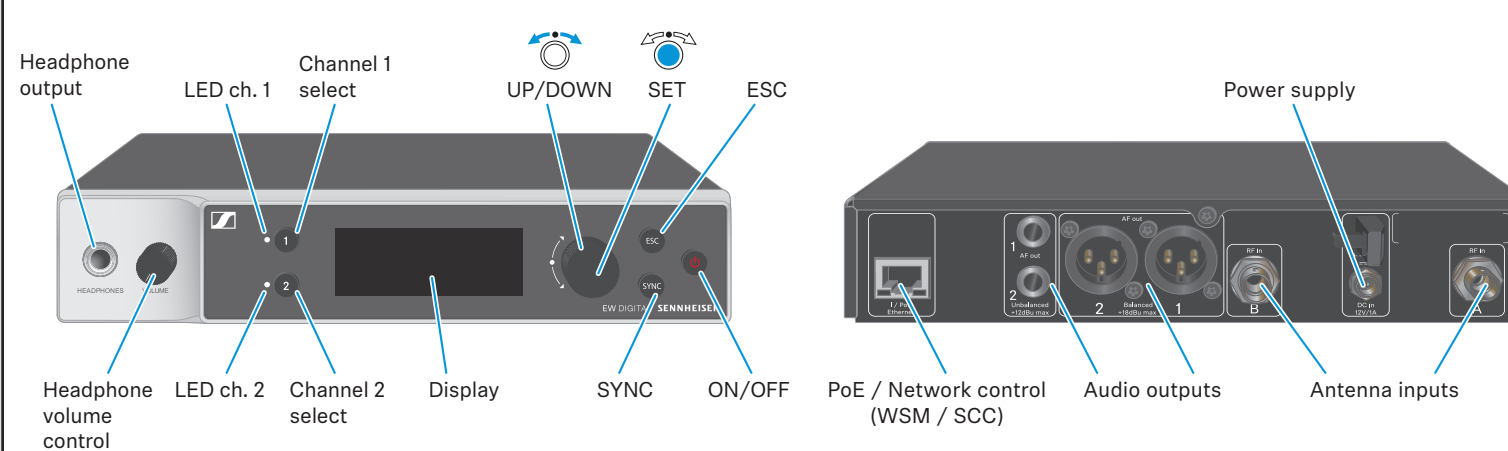

Display

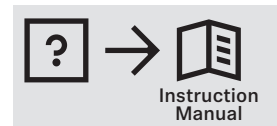



System Home Screen

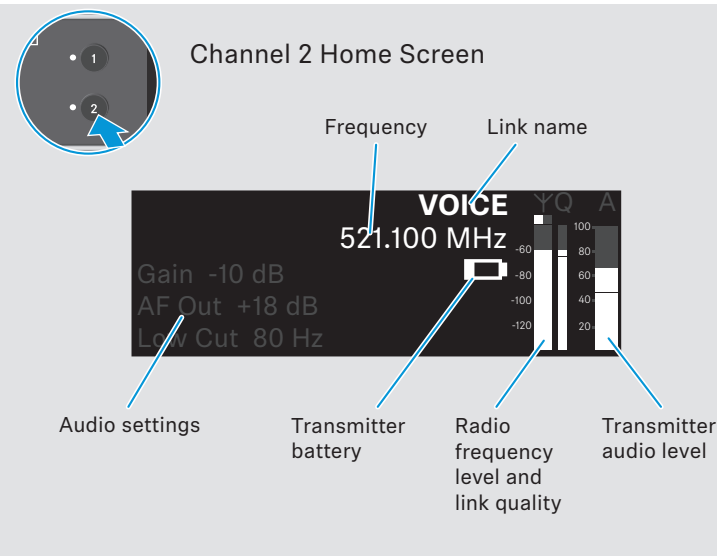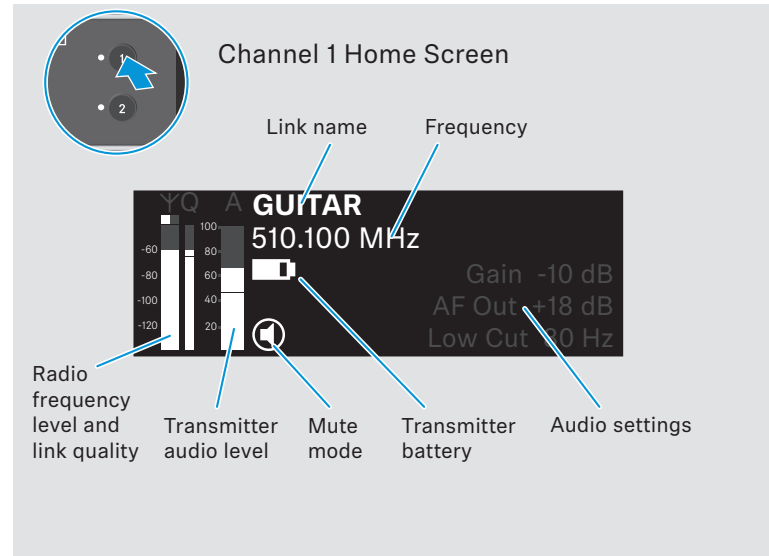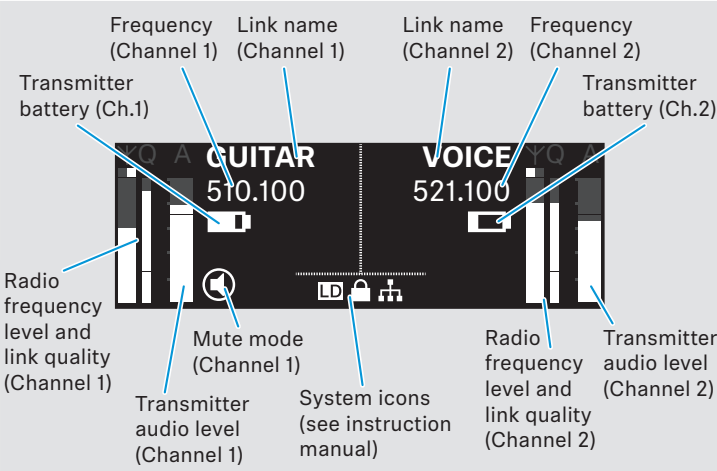


LEDs

LED Ch.1/2	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter - battery
	- No link - Device switched off
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress


EM 2

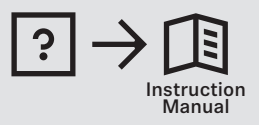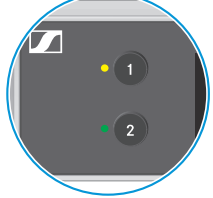

Sync

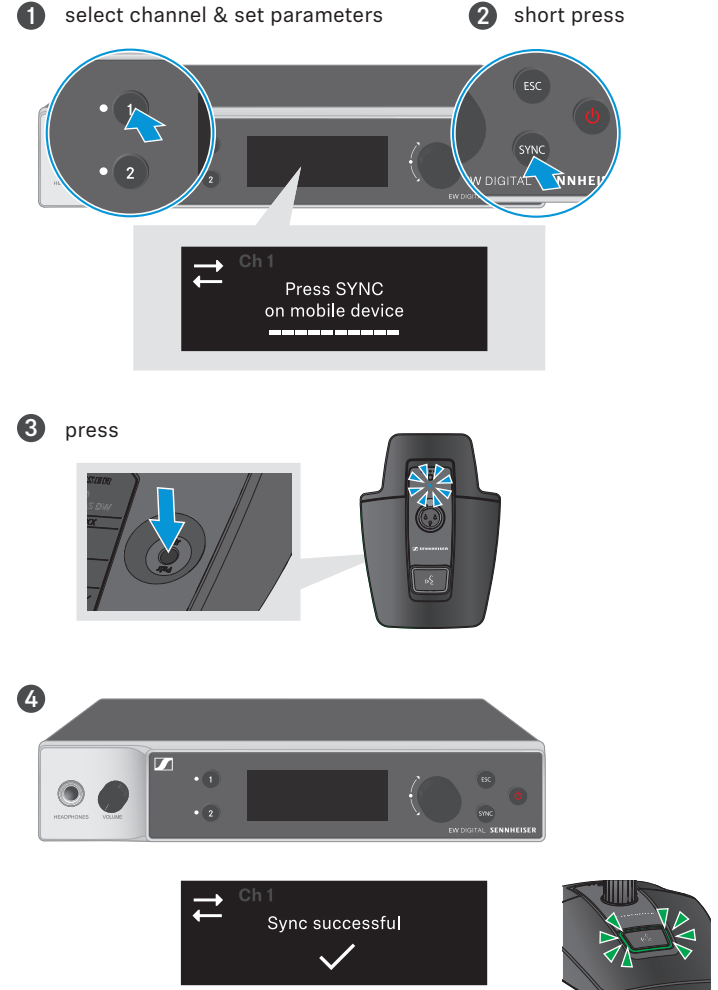

Mute

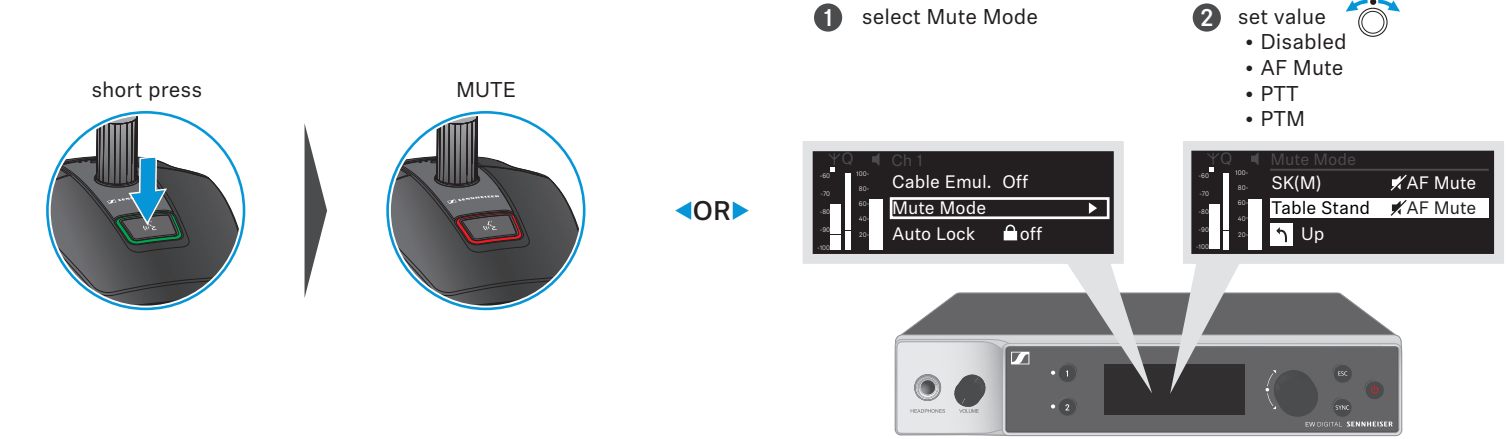

www.sennheiser.com/download

Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso |
Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing |
Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje |
Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 |
取扱説明書 | 사용 설명서 |

EW-D Smart Assist

