

Dell Pro Keyboard and Mouse

KM726

User's Guide

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

- About your keyboard mouse 5
 - Package contents 5
 - Information available on the packaging 6
- Features 7
 - Keyboard 7
 - Launch Copilot in Windows 8
 - Mouse 9
- Dell Display and Peripheral Manager 10
 - Installing Dell Display and Peripheral Manager. 10
- Setting up your wireless keyboard 11
- Setting up your wireless mouse 12
- Pairing with a Dell Secure Link USB receiver 14
- Pairing your wireless keyboard and mouse using Swift Pair. 16
- Pairing your wireless keyboard and mouse using Bluetooth. 17
- Pairing device two using Bluetooth. 18
- Switching between paired devices 19
 - Smart Connect 19
- Keyboard Specifications 20
 - General 20
 - Electrical 20
 - Physical characteristics 20
 - Environmental 20
 - Wireless. 20
- Mouse Specifications 21
 - General 21
 - Electrical 21
 - Physical characteristics 21
 - Environmental 21
 - Wireless. 21
- Troubleshooting 22
- Oman regulatory information 24
- Statutory Information. 25
 - Warranty 25
 - Limited warranty and return policies 25
 - For U.S. customers: 25
 - For European, Middle Eastern and African customers: 25
 - For non-U.S. customers: 25
- European Accessibility Act 26
- Revision History 27






About your keyboard mouse

Package contents

The following table provides the list of components that are shipped with your keyboard and mouse. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

NOTE: Some items may be optional and may not ship with your keyboard and mouse. Some features may not be available in certain countries.

   Table 1. Components and descriptions.

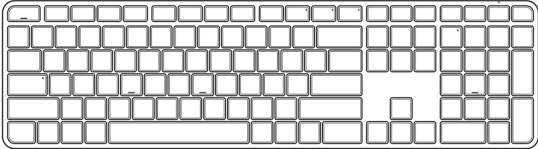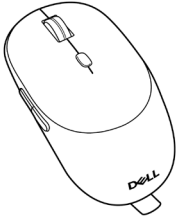Component image	Component description
	Keyboard
	Mouse
	USB Receiver
	Documents
	AA-type Battery (for mouse)
	AAA-type Batteries (for keyboard)

Information available on the packaging

The product is compatible with the following operating systems:

- Windows
- macOS
- iOS
- Red Hat
- Ubuntu
- ChromeOS

The following are the accessories that ship within the box:


- Dell Secure Link USB Receiver
- Battery (AA-type x 1 and AAA-type x2)

For information about recycling, see the [Dell recycling](#) website.


Features

Keyboard


Top view

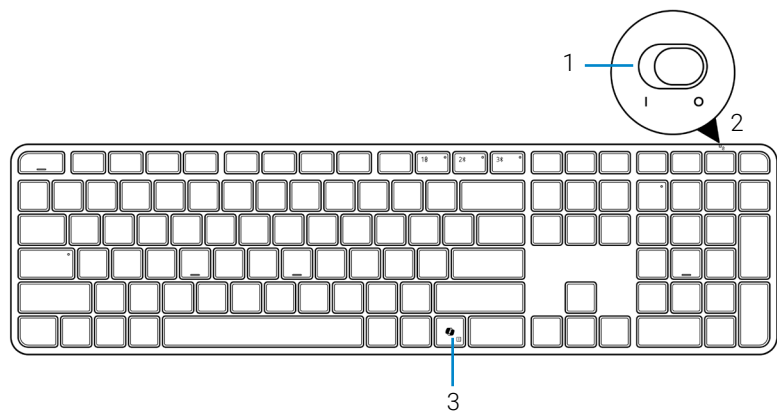

Top view (MAC & Windows)

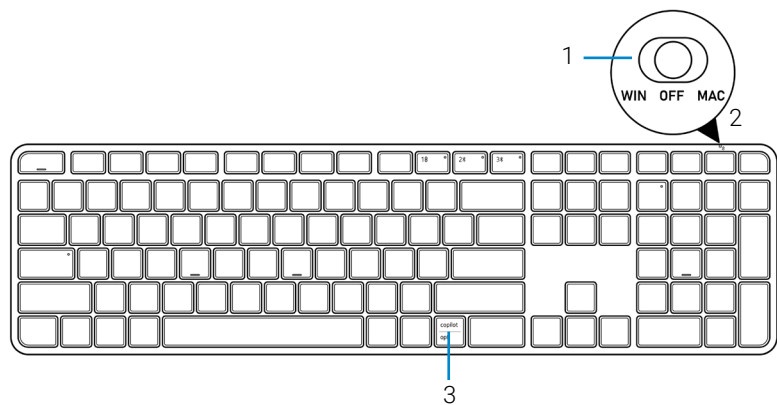


Bottom view

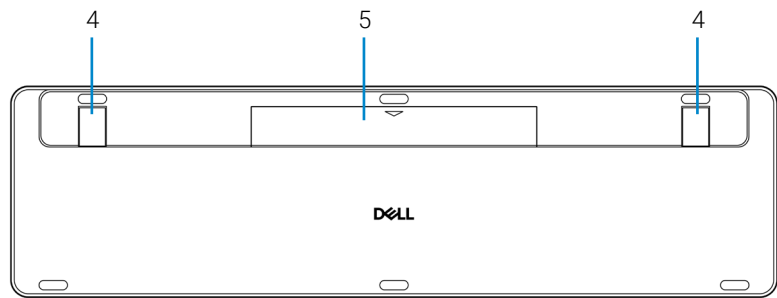


1. Power switch	2. Battery status light
3. Copilot / Option key	4. Keyboard feet
5. Battery cover	

Launch Copilot in Windows

- ① **NOTE:** Use  key with supported Windows 11 devices, feature availability varies by device and market, see aka.ms/KeySupport.
- ① **NOTE:** Copilot in Windows is available only in approved markets.
- ① **NOTE:** Open the battery cover to access the PPID/Regulatory label location.

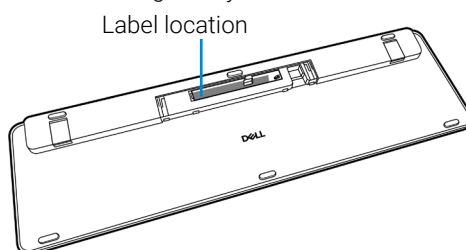


Mouse

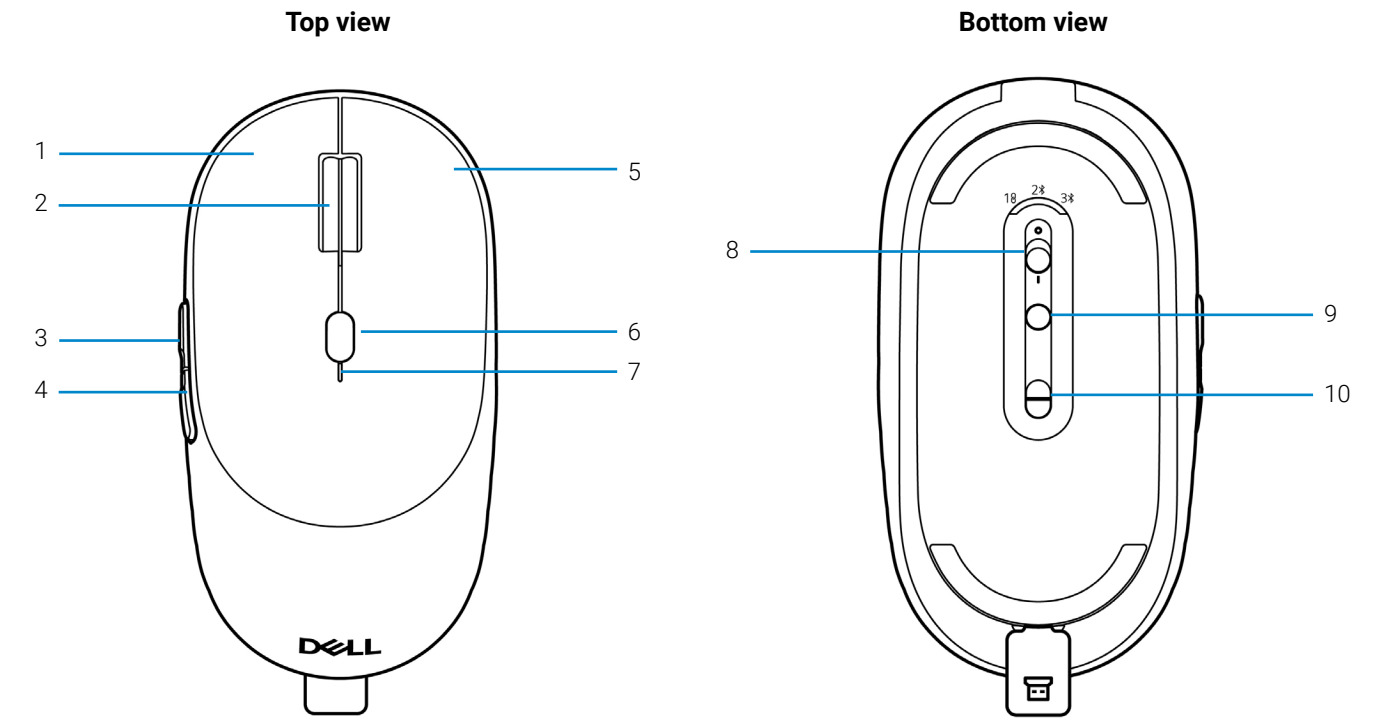

1. Left button	2. Scroll wheel
3. Page up button	4. Page down button
5. Right button	6. Scroll speed button
7. Battery-status light	8. Power switch
9. Connection-mode button	10. Optical sensor

NOTE: Open the mouse cover to access the PPID/Regulatory label location.

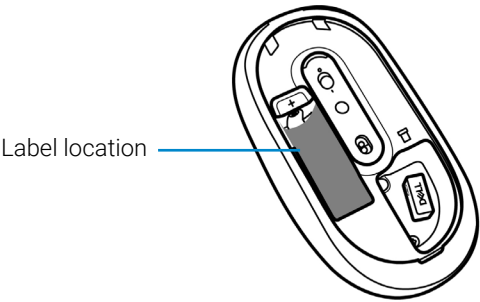

Dell Display and Peripheral Manager

Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can:

- Adjust the monitor On Screen Display (OSD) settings such as brightness, contrast, input source setting and so on with ease. No Customization tab.
- View device information such as firmware version and battery status for wireless devices.
- Upgrade to the latest firmware for your device.
- Configure DPI setting and set primary mouse button.
- Pair or unpair to the RF dongle.


Installing Dell Display and Peripheral Manager

When you connect the device to your computer for the first time, you may be prompted to download and install the app.


i NOTE: If the download prompt does not appear within a few minute, you can manually install the software from the **Drivers and Downloads** tab at Dell.com/support/KM726.
For more information, see *Dell Display and Peripheral Manager User's Guide* in the **Documentation** tab.

Setting up your wireless keyboard


1. Using your fingertip, pry open the battery cover.

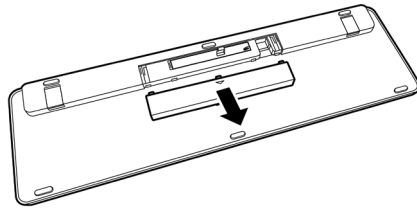

2. Install the AAA batteries into the battery compartment. Then replace the battery cover.

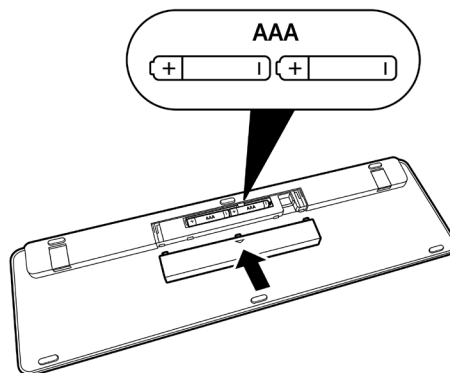


3. Slide the power switch to turn on the keyboard.

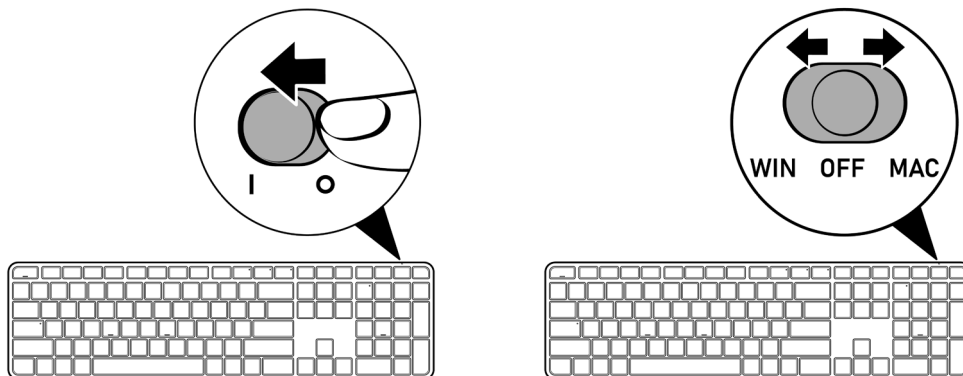


Setting up your wireless mouse


1. Locate the slot on the side of the mouse cover. Using your fingertip, pry open the cover.

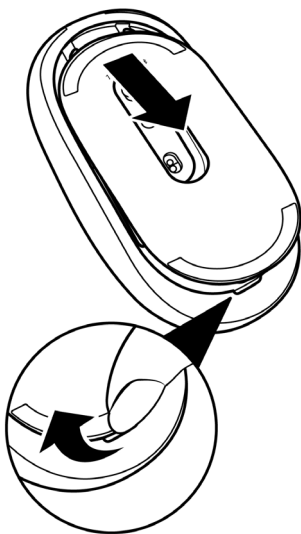


2. Remove the USB receiver from its compartment.

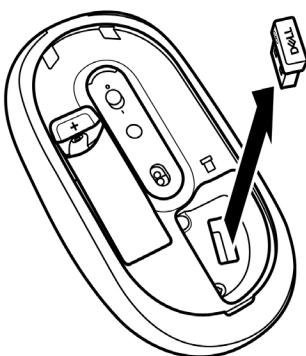


3. Install the AA battery into the battery compartment.

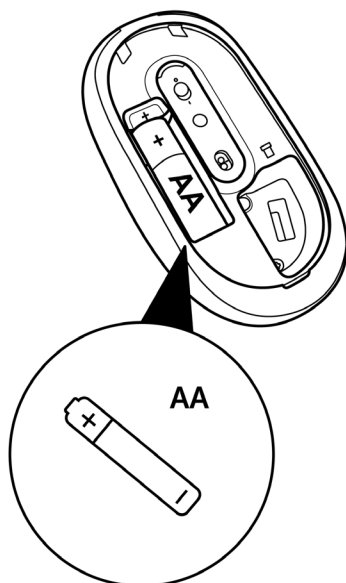

4. Replace the mouse cover.

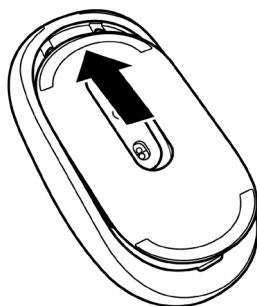

5. Slide the power switch down to turn on the mouse.

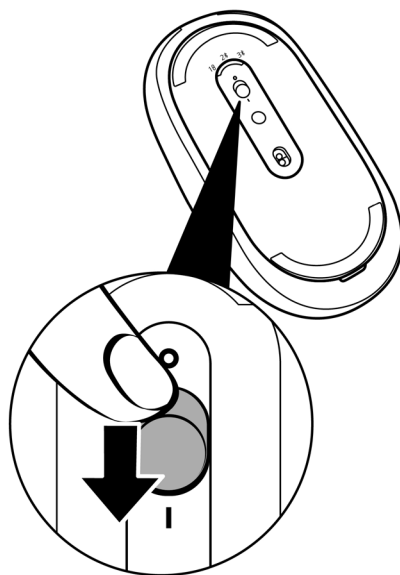


Pairing with a Dell Secure Link USB receiver


Your Dell wireless keyboard and mouse can be paired with devices using USB receiver. You can pair and switch between a laptop, desktop, and a compatible mobile device.

NOTE: You can connect a device to your wireless keyboard and mouse using the Dell Secure Link USB receiver..


1. Connect the Dell Secure Link USB receiver to the USB port on your computer.

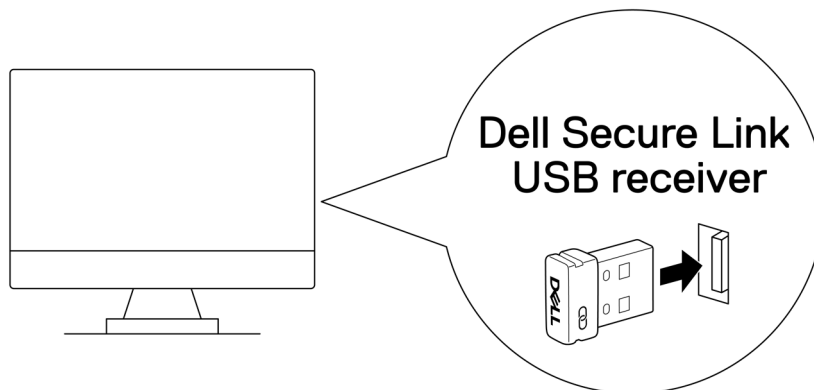


2. Slide the power switch down to turn on the mouse.

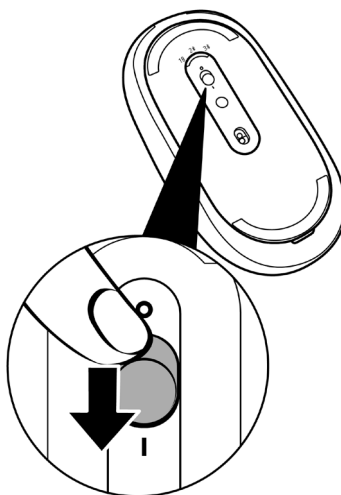


3. Slide the power switch to turn on the keyboard.

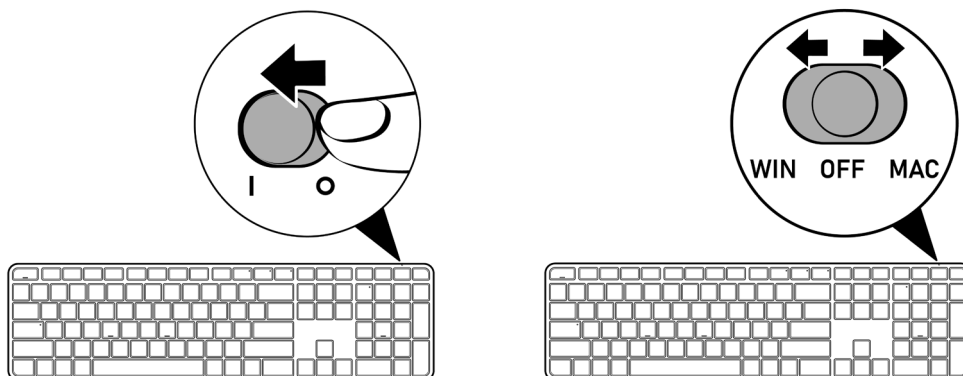

4. Toggle the connection-mode button on your mouse until USB mode is selected (10). And press **Fn** + 10 on the keyboard.

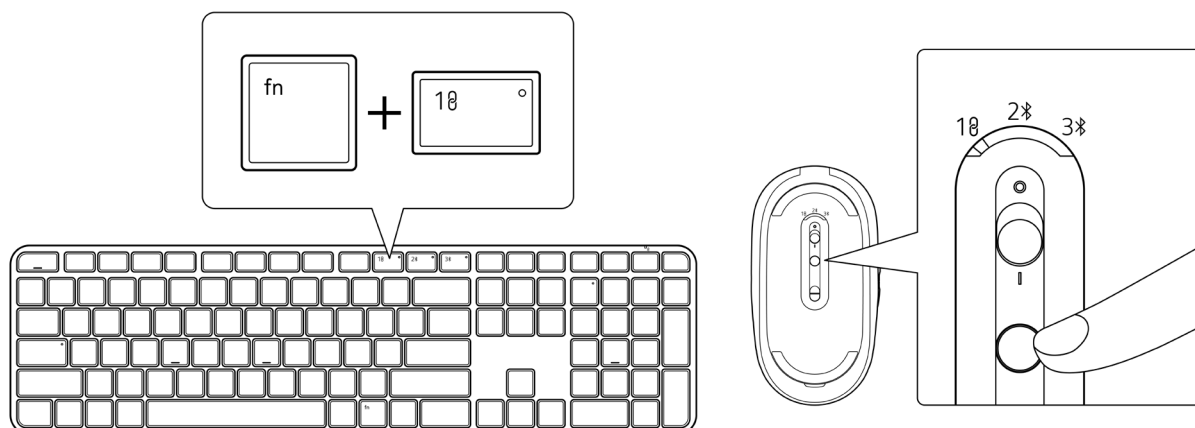

The keyboard and mouse are now connected with your computer.

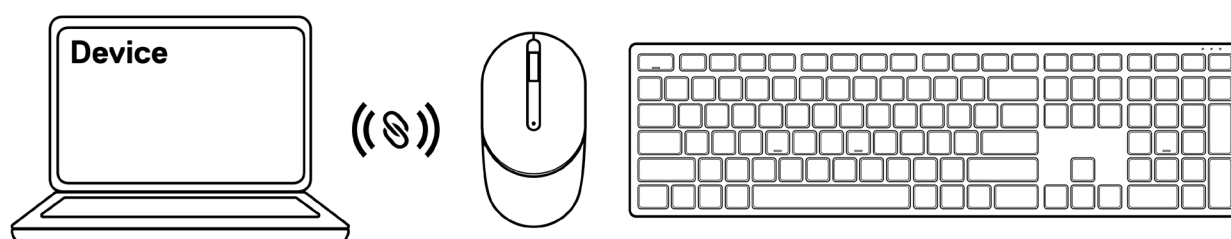


Pairing your wireless keyboard and mouse using Swift Pair

1. In Windows Search, type Bluetooth.
2. Click **Bluetooth and other device settings**. The Settings window appears.
3. Ensure that the Show notifications to connect using Swift Pair check box is selected.


☒ **Show notifications to connect using Swift Pair**

When selected, you can connect to supported Bluetooth devices quickly when they're close by and in pairing mode.

4. Ensure that the Bluetooth is turned on.
5. Place your wireless mouse near your computer. Then press the connection-mode button to switch to the first Bluetooth pairing mode (2⌘).
6. Press the connection-mode button for three seconds. Ensure that the Bluetooth channel LED (2⌘) blinks white, indicating Bluetooth pairing is initiated.
7. The **New Bluetooth mouse found** window appears. Click **Connect** and confirm the pairing process on both the wireless mouse and your computer.

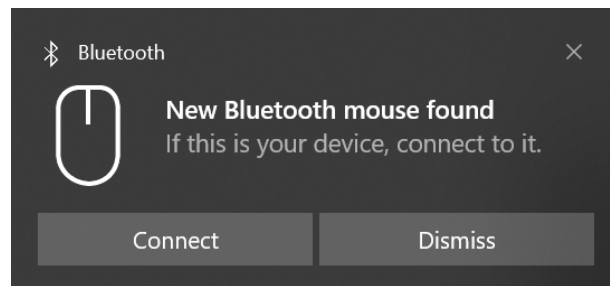


8. On the wireless keyboard, press the Fn + 2⌘ keys to initiate Bluetooth pairing. The **New Bluetooth keyboard found** window appears. Click **Connect** and confirm the pairing process on both the wireless keyboard and your computer.

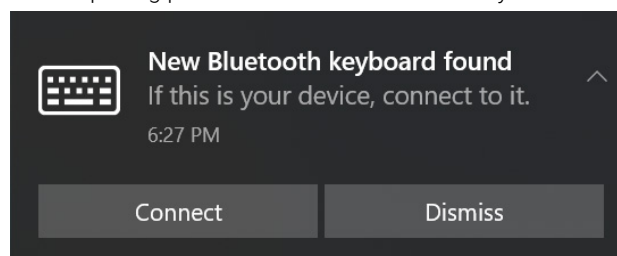


Pairing your wireless keyboard and mouse using Bluetooth

Your Dell wireless keyboard and mouse can be paired with your Bluetooth enabled computer. You can pair and switch between laptop, desktop, and a compatible mobile device.

- ① **NOTE:** You can connect up to two devices with your wireless keyboard and mouse using Bluetooth.
 - ① **NOTE:** Before pairing your wireless keyboard and mouse using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth Driver on your Dell computer to the latest version. For more information, see [Drivers & Downloads at Dell.com/support](https://www.dell.com/support/drivers).
 - ① **NOTE:** Ensure that the distance between your computer and mouse is within the Bluetooth reception range.
1. Toggle the connection-mode button on the wireless mouse to switch to the first Bluetooth pairing mode labeled (2*).
 2. Press the connection-mode button for 3 seconds. Ensure that the Bluetooth channel LED (2*) blinks white, indicating the Bluetooth pairing is initiated.
 3. On the wireless keyboard, press the Fn + 2* keys to initiate pairing.

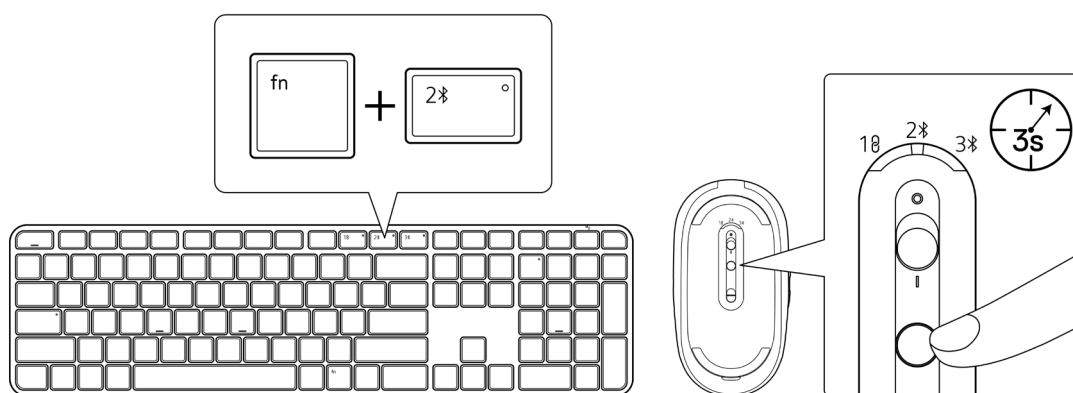

4. Pair your wireless keyboard and mouse with your Bluetooth-enabled computer.
 1. Select **Start > Settings > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth**.
 2. Select **Dell MS726** and then **Done**.
 3. Select **Dell KM726** and type the numbers shown on screen using the wireless keyboard, and then **Done**.
- ① **NOTE:** Ensure that the distance between your computer and keyboard and mouse are within the Bluetooth reception range. Confirm the pairing process on both the wireless keyboard and mouse and your computer. The Bluetooth channel LED (2*) turns solid white for a few seconds to confirm the pairing, and then the light turns off. After your keyboard and mouse and computer pairing is completed, the keyboard and mouse connect to the computer automatically when the Bluetooth is enabled and both devices are within the Bluetooth range.

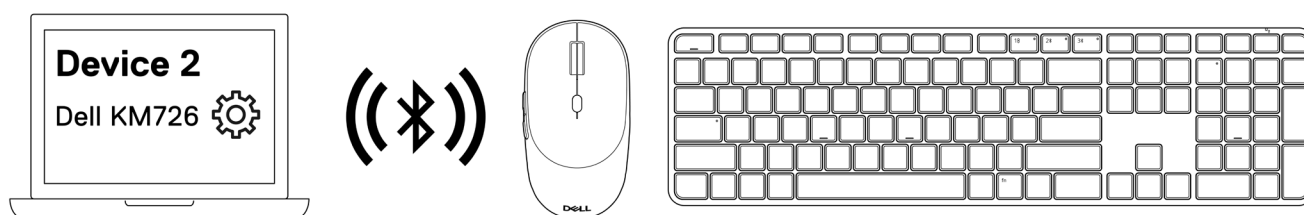

- ① **NOTE:** The above image indicates the first Bluetooth (2*) enabled device pairing.

Pairing device two using Bluetooth


- ① **NOTE:** You can connect up to two devices with your wireless keyboard and mouse using Bluetooth.
- ① **NOTE:** Before pairing your wireless keyboard and mouse using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth Driver on your Dell computer to the latest version. For more information, see [Drivers & Downloads at Dell.com/support](#).
- ① **NOTE:** Ensure that the distance between your computer and mouse is within the Bluetooth reception range.
- ① **NOTE:** For Bluetooth pairing, you can use Swift Pair or manual pair option.

1. In **Windows Search**, type **Bluetooth**.
2. Click **Bluetooth and other device settings**. The **Settings** window appears.
3. Ensure that the **Show notifications to connect using Swift Pair** check box is selected.


☒ **Show notifications to connect using Swift Pair**

When selected, you can connect to supported Bluetooth devices quickly when they're close by and in pairing mode.


4. Ensure that the Bluetooth is turned on.
5. Place your wireless mouse near your computer. Then press the connection-mode button to switch to the second Bluetooth pairing mode (3*).
6. Press the connection-mode button for three seconds. Ensure that the Bluetooth channel LED (3*) blinks white, indicating Bluetooth pairing is initiated.
7. On the wireless keyboard, press the Fn + 3* keys to initiate pairing.

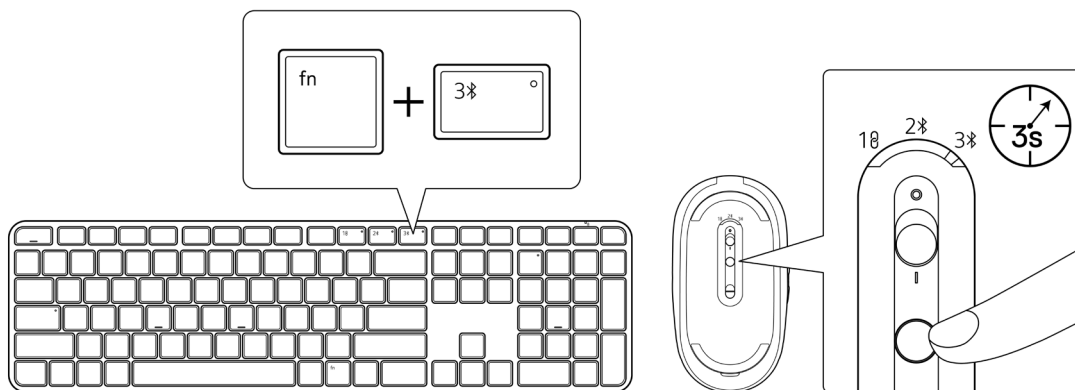

8. The **New Dell MS726 found** window appears. Click **Connect** and confirm the pairing process on both the wireless mouse and your computer.

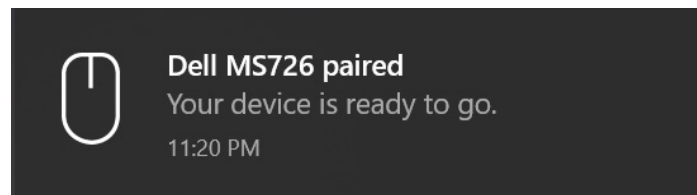

9. The **New Bluetooth Keyboard** window appears. Type the pin numbers shown on the screen using the wireless keyboard. Click **Connect** to confirm the pairing process on both the wireless keyboard and your computer.

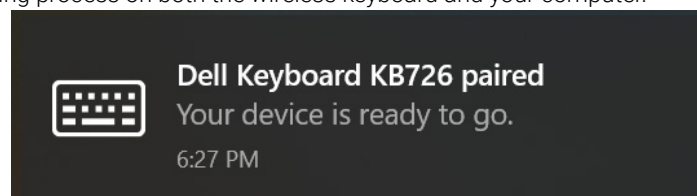


Switching between paired devices

Your wireless keyboard and mouse memorize the last connection mode. Every time you turn on the keyboard and mouse, the last connection-mode light along with the low battery LED indicator on the mouse will turn on for 3 seconds.

If you want to connect to another paired device, toggle the connection-mode button on the mouse until the respective connection-mode light turns on and press the corresponding keys on the keyboard.

For example, if you want to connect the wireless keyboard and mouse to the second Bluetooth device (3*), then press the connection-mode button until the connection-mode light (3*) is selected on the mouse and press Fn + 3* on the keyboard.

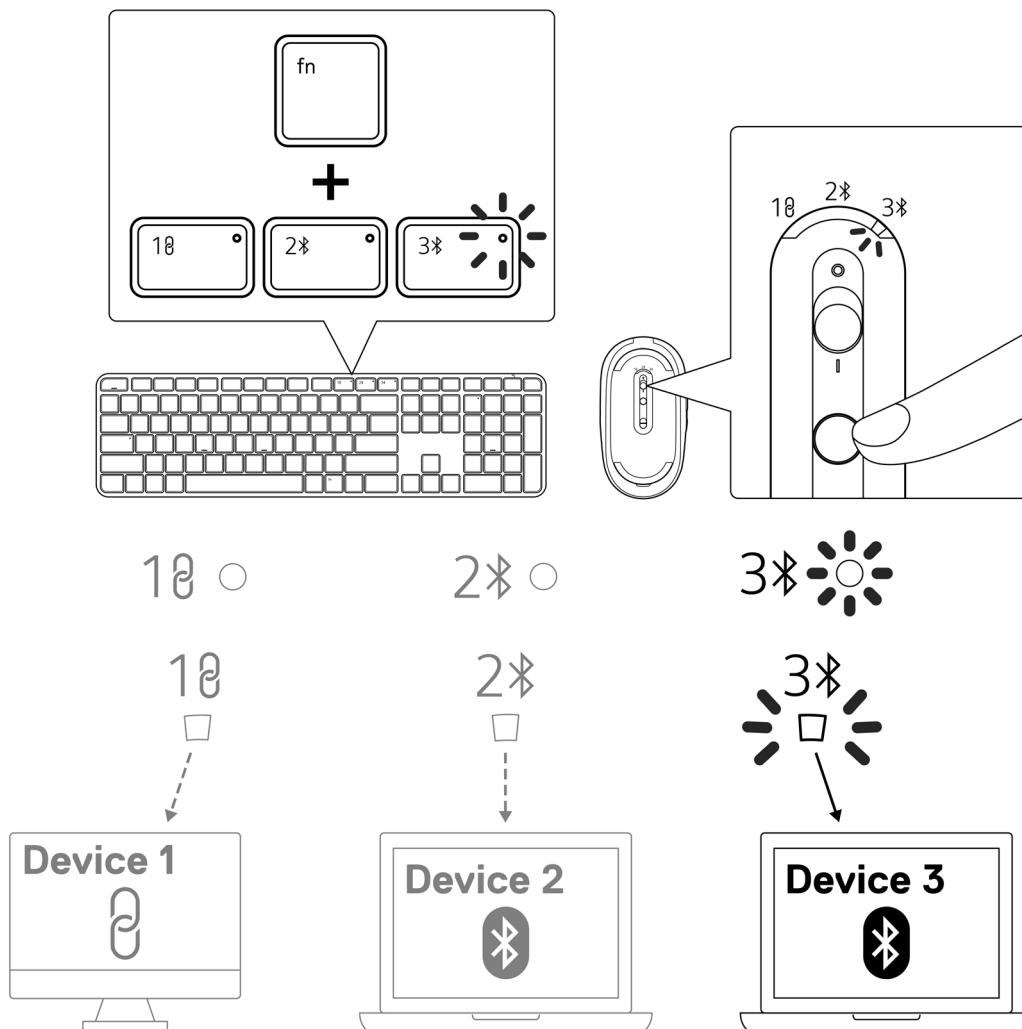

Smart Connect

- Once connectivity is set up on different channels, when the device is disconnected it will search for and jump to another channel if that connection is there.
- When on BT, after idle periods of 10s it will check if RF connectivity is there and then jump over accordingly.
- Manual switching of connectivity to BT Channel will disable this feature until mouse/keyboard is turned off/on again.

Keyboard Specifications

General

Model number	KB726p
Connection type	Wireless (2.4 GHz RF with Dell Secure Link Receiver) Bluetooth 5.1 LE (supports Dell Pair and Microsoft Swift Pair)
System requirement	Windows Server 2012; 2012 R2, 2016 (RF receiver only) Windows 8, 32/64-bit Windows 10, 32/64-bit Windows 11 Android Chrome MAC OS Linux 6.x, Ubuntu 18 and Red Hat 8 Enterprise Free-DOS (RF receiver only)

Electrical

Operating voltage	3 V
Battery type	Two AAA batteries

Physical characteristics

Weight (without batteries)	564 g (1.24 lb)
Dimensions:	
Length	429.67 mm (16.91 in.)
Width	117.87 mm (4.64 in.)
Height	20.87 mm (0.82 in.)

Environmental

Temperature:	
Operating	-10°C to 50°C (14°F to 122°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

Wireless

RF resolution	2.4 GHz RF
Operation distance	> 10 m (outdoor without any interference)

Mouse Specifications

General

Model number	MS726p
Connection type	Wireless (2.4 GHz RF with Dell Secure Link Receiver) Bluetooth 5.1 LE (supports Dell Pair and Microsoft Swift Pair)
System requirement	Windows Server 2012; 2012 R2, 2016 (RF receiver only) Windows 8, 32/64-bit Windows 10, 32/64-bit Windows 11 Android Chrome MAC OS Linux 6.x, Ubuntu 18 and Red Hat 8 Enterprise Free-DOS (RF receiver only)

Electrical

Operating voltage	1.5 V
Battery type	One AA battery

Physical characteristics

Weight (without battery)	73 g (0.16 lb)
Dimensions:	
Length	115.62 mm (4.55 in.)
Width	62.41 mm (2.46 in.)
Height	39.44 mm (1.55 in.)

Environmental

Temperature:	
Operating	-10°C to 50°C (14°F to 122°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

Wireless

RF resolution	2.4 GHz RF
Operation distance	> 10 m (outdoor without any interference)


Troubleshooting

Problems	Possible solutions
Keyboard/mouse is not functioning	Check if the batteries are inserted in the correct orientation. The batteries "+" and "-" ends should be placed as indicated on the battery compartment. Check the battery level. If the device uses the rechargeable batteries, ensure that the batteries are fully charged. If the batteries are exhausted, replace them with new ones. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on. Restart your computer. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on. Change the USB port.
Unable to pair the keyboard/mouse with your computer	Check the battery level. If the device uses the rechargeable batteries, ensure that the batteries are fully charged. If the batteries are exhausted, replace them with new ones. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on. Restart your computer. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on. Change the USB port or insert the USB receiver into another USB port on your computer. Ensure that the distance between your computer and keyboard/mouse is within 10 meters.
Mouse pointer does not move	Check the battery level. If the device uses the rechargeable batteries, ensure that the batteries are fully charged. If the batteries are exhausted, replace them with new ones. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on. Restart your computer. Ensure that the distance between your computer and keyboard/mouse is within 10 meters.
Mouse left/right button does not work	
Keyboard buttons do not work	
Wireless connection is lost	

Problems	Possible solutions
Troubleshooting a slow moving cursor	Ensure that the sensor is not obstructed or dirty. Glass or very smooth glossy surfaces are not suitable for the mouse sensor to capture the mouse movement. Using a dark colored fabric mouse pad can improve the tracking. Change the mouse settings to adjust the pointer speed. Click or tap the tab that matches the Operating System (OS) installed on your laptop/desktop and perform the steps within that section to change the settings. In the Search box, type main.cpl. The Mouse Properties dialog box appears. Click or tap main.cpl in the list of programs. Click or tap the Pointer Options tab. In the Motion section, move the slider to adjust the pointer speed to the desired level. Click or tap OK.
Features on Dell Display and Peripheral Manager software may not be supported	The features supported by Dell Display and Peripheral Manager are dependent on the operating system and the processor of your computer. For more information, see the documentation for Dell Display and Peripheral Manager at Dell Support Site.

Oman regulatory information

 Regulatory Model: KB726p, MS726p & UD2301



Statutory Information

Warranty

Limited warranty and return policies

Dell-branded products carry a three-year limited hardware warranty. If purchased together with Dell system, it will follow the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Dell.com/terms](https://www.dell.com/terms). This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Dell.com/terms](https://www.dell.com/terms), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link for the end user terms or the "support" link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell.com](https://www.dell.com/terms), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link or the "support" link for the warranty terms.

European Accessibility Act

- Power button location: With the keyboard laying down face up, and the space bar closer to the end user, the user can tactilely discern the location of the power button. The end user can feel for the top key in the right-hand corner of the keyboard and count one key to the left. If they reach towards the back of the keyboard from there, they can feel the power switch.
 - For Windows-only keyboards, Off position is towards the center of the keyboard, and On is located towards the edge of the keyboard.
 - For dual-layout keyboards, to determine where the switch to control the dual layout settings: Off is in the middle position, with MAC OS position towards the center of the keyboard, and Windows OS position towards the outside edge of the keyboard.

Revision History

The following table provides the revision history of this document:

Revision	Date	Description
A00	September 2025	Original publish date