

 
KP-460 IB (English)
Size: 165mm x 180mm
Printing color: Black, 1C + 1C
*Front

 Bluetooth®
ULTIMATE PORTABLE KARAOKE
WITH DUAL WIRELESS MICS & USB DISCO BALL

Model: 460

CHARGE BEFORE USE FOR ABOUT 3 HRS.

FUNCTION

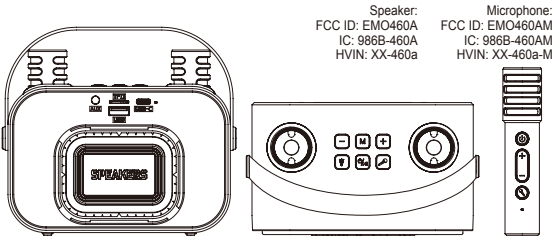


SPEAKER		
	Insert TF card with mp3 audio files automatically switch to TF mode.	
	Use aux cable (not included) to play music from an external source.	
	Insert USB flash drive with mp3 audio files automatically switch to USB mode.	
	DC5V USB-C charging interface.	
	Flashing blue	Not connected
	Solid blue	Connected
	Solid red	Charging
	Red light off	Full charged
	Press and hold for 3 seconds to turn the device on/off.	
	Short press to play/pause	
	Short press to decrease volume.	
	Long press 2 seconds will play previous track.	
	Short press to increase volume.	
	Long press 2 seconds will play next track.	
	Switch mode, Bluetooth®/AUX mode/USB flash drive/TF card.	
	Short press to switch the lighting effect.	
	Long press 2 seconds to turn off or on.	
	Short press to turn on/off sound cancellation.	

MICROPHONE		
	Press and hold for three seconds to turn the microphone on/off.	
	One short press will mute the microphone.	
	Short press to increase microphone volume.	
	Double-click: Increase echo. Long press: Previous song.	
	Short press to decrease microphone volume.	
	Double press: Reduce echo. Long press: Next track.	
	Short press to switch the microphone sound effect.	
	Long press switch to sound effect.	
	Slow flashing blue	Not connected
	Solid blue	Connected
	Red light off	Full charged
	Fast flashing blue	Low battery
	Solid red	Charging

USB DISCO BALL

Insert the Disco Ball into the USB port of unit, it will light up automatically.

 NOTE: The USB port is designed for USB drive and disco ball plug-in. Do not use this USB port for phone and other device charging.

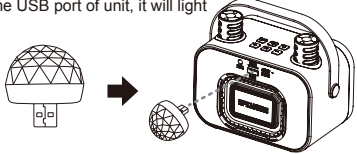


PAIRING YOUR BLUETOOTH® DEVICE

1. Turn on your Bluetooth® device and make it “discoverable” by turning on Bluetooth® mode (check in Options or Settings).
2. Turn on the speaker for the first time, it will enter auto-pairing mode.
3. Select “Karaoke 460” from your Bluetooth® device’s menu to connect.
4. If pairing is successful, a tone will sound and the Bluetooth® indicator light on the back of the unit will glow solid blue, indicating the KP-460 is ready to play music.
5. If you want to connect to different Bluetooth® devices, you must disconnect the currently connected Bluetooth® device. The unit re-enter the pairing mode.

WIRELESS STEREO (REQUIRES 2 SPEAKERS)


1. Power on two Bluetooth® speakers, press either M key for 3 seconds and you will hear a beep indicating that the TWS connection is successful.
2. “Karaoke 460” should appear in your device’s Bluetooth® menu. Select “Karaoke 460” to connect it.
3. Both units will link automatically next time when both units are powered on.
4. If want to remove Wireless Stereo: Press either M key for 3 seconds, you will hear a beeping to indicate that it has been disconnected.

 Charging the Unit (CHARGE UNIT BEFORE USE)

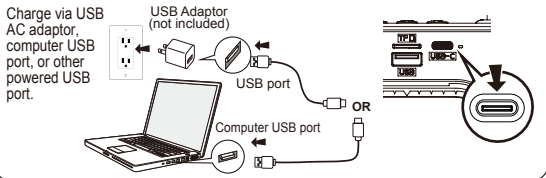

1. Connect the USB-C plug to the USB-C charging port on the **back** of the unit.
2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. For first time use, charge unit for about **3** hours.
3. The Charging Indicator on the **back** of the unit glows red steadily while the unit is charging and turns OFF once the unit is fully charged.
4. A low battery warning tone will sound to indicate it is time to charge the unit.

Charging the Microphone (CHARGE MICROPHONE BEFORE USE)

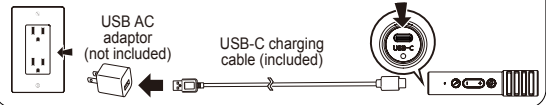

• Connect the included USB charging cable to the USB-C port on the bottom of the unit, and the standard end to a powered USB port or USB adaptor.

NOTE: The charging cable is specially designed for charging this product. Using the cable for other device (e.g. phone) charging could cause issues.

*Back

Troubleshooting

If the unit does not respond:

- Make sure unit is completely charged.
- To re-pair your device, disconnect from the already connected device, then select “Karaoke 460” on your Bluetooth® device. Be sure to remove any previous instance of “Karaoke 460” from “My Devices” setting screen on your Bluetooth® device if present.

Note: The rechargeable battery can be replaced only by eKids Consumer Repair Department.

Warning/Disposal of Unit

Do not attempt to replace the battery yourself. Doing so may damage the unit and will void your warranty.

- Never dispose of used batteries/electronics with ordinary solid wastes, since they may contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations. Many electronics retailers now recycle batteries and other electronic components at no charge.

To find a drop-off location near you, visit www.batterynetwork.org

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If problems persist, do not attempt to replace the battery yourself; see warranty for factory service.

CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Always confirm that the temperature is 5°C – 35° C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.

- Charging the battery should be conducted under adult supervision.
- Never expose the battery to any liquid.
- Never expose the battery to excessive heat such as direct sunlight or fire.
- Never leave the device or microphone in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep the battery out of the reach of infants and small children
- Always charge lithium devices on a non-flammable surface - wooden tables, carpeted floors, and bedding are not recommended charging surfaces.

Maintenance

- It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.
- Battery chargers used with the device are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

⚠ Safety Warnings

To ensure safe handling, charging, and replacement of lithium-ion batteries, follow these guidelines:

General Safety

- Do not attempt to replace the battery yourself. Contact eKids Consumer Repair Department for service.
- Never puncture, crush, or expose the battery to liquids or fire.
- Do not use damaged, swollen, or leaking batteries.
- Keep batteries away from children and pets.

Charging Safety

- Use only the charger provided or approved by the manufacturer.
- Charge on a hard, non-flammable surface away from flammable materials, direct sunlight, and water.
- Do not leave the device charging unattended or overnight.
- Unplug the charger once the battery is fully charged.

Disposal

- Do not dispose of lithium-ion batteries in household trash or recycling bins.
- Recycle batteries at certified collection centers. Visit www.batterynetwork.org to find a location near you.

Fire Risk

- In case of overheating, unusual smell, or deformation, immediately stop using the device and place it in a fire-safe area.
- Keep a Class D fire extinguisher nearby when handling or replacing batteries.

Limited 1 Year Warranty Information

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids, LLC will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please contact Customer Service at <https://ekids.com/pages/contact> to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD’s or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids, LLC or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier’s check, or credit card) for purchase of your eKids, LLC product.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

RF Exposure

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.

CAN ICES-3 (B)/NMB-3(B)

