


*Back

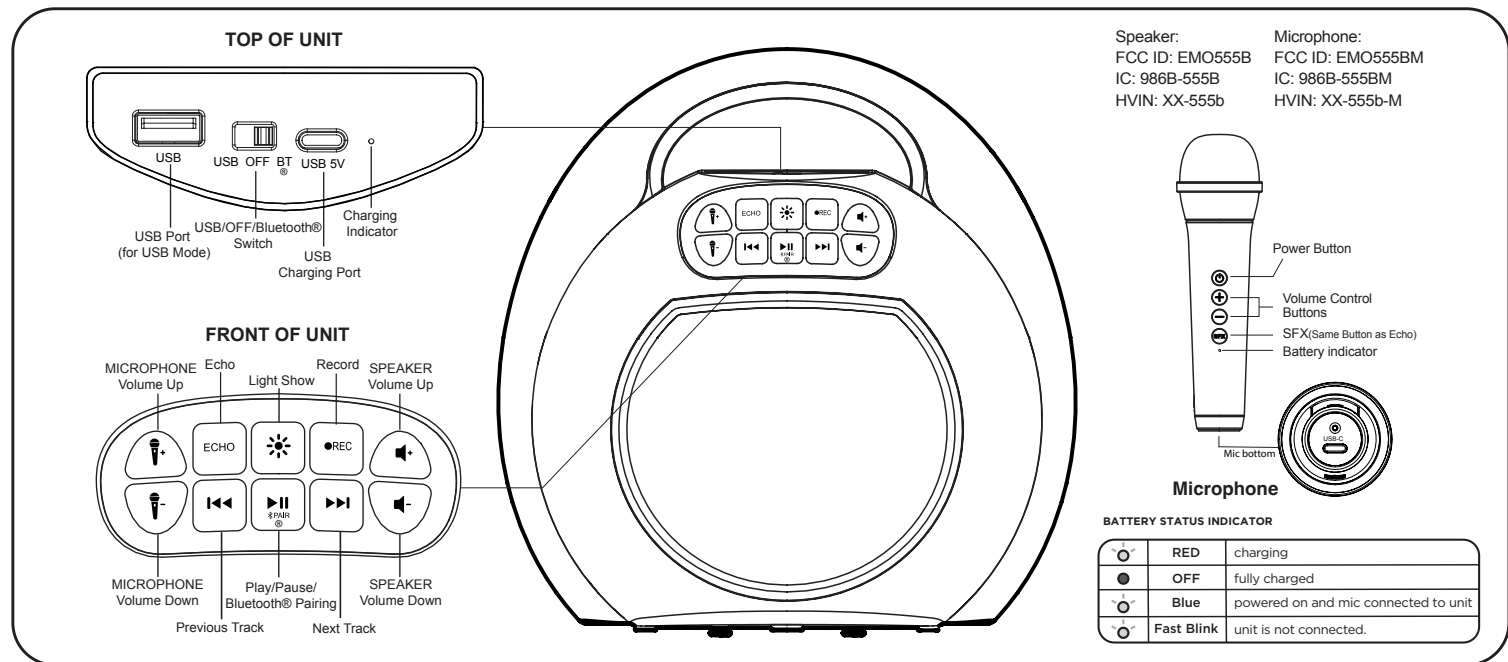

Microphone Volume UP Button on Main Housing

- Short press of the button will increase volume of the Microphone input by 1 level (10 Volume levels. Unit defaults to Level 8)
- Press and hold to increase volume with smooth steps up until max. Release to set current volume.

Microphone Volume DOWN Button on Main Housing

- Short press of the button will Decrease volume of the Microphone input by 1 level (10 Volume levels. Unit defaults to Level 8)
- Press and hold to Decrease volume with smooth steps up until minimum. Release to set current volume.

ECHO

- Default, Item is shipped with echo effect Default to "OFF".
- To adjust Echo effect, press the "Echo" button on the main housing.
- There are three echo modes and OFF.

Light Show Button: Switching Light Show

- Press the Light Mode Button to change the Light Show Pattern.
- One long press of the Light Mode Button will toggle the lights off.

Record Button (IN BLUETOOTH® MODE ONLY)

- In order to record, a USB flash drive must be detected and unit must be in Bluetooth® mode. Recording does not function in USB Mode. The file will save to your USB flash drive.
- When the user is ready to record (ex. Unit is in Bluetooth® mode and a USB flash drive is inserted), press the record button, play the Record Start SFX, and begin recording from Bluetooth® and/or microphone.
- Momentary press the Record Button to stop recording. Play the Record Stop SFX.
- The user may press the Play/Pause Button to pause recording, and press again to continue recording the same file.
- (The unit will also automatically stop recording when USB flash drive is full.)

Speaker Volume UP Button

- Short press of the button will Increase volume 1 level (16 Volume levels. Unit defaults to Level 8)
- Press and hold to increase volume with smooth steps up until max. Release to set current volume.

Speaker Volume DOWN Button

- Short press of the button will Decrease volume by 1 level
- Press and hold to Decrease volume with smooth steps up until minimum. Release to set current volume.

Next Track Button

- Short press of the button will play the next track.

Play/Pause/Bluetooth® pairing Button

- A short press of the Play/Pause Button will start or pause music streaming from Bluetooth® device or USB flash drive.
- If the user is recording, press the Play/Pause Button to PAUSE recording. Press again to continue recording.
- Long press of Play/Pause button (2-3sec) will manually activate Bluetooth® Pairing if unit is in Bluetooth® mode.
- Extra long press of Play/Pause button (10 sec) will reset Bluetooth® Pairing table.

Previous Track Button

- Short press of the button will play the previous track.

Microphone SFX Button

- Same function as speaker ECHO.

Volume Control Buttons(Microphone Volume DOWN Button on Microphone)

- Short press of the button will Decrease volume of the Microphone input by 1 level (16 Volume levels. Unit defaults to Level 8)
- Press and hold to Decrease volume with smooth steps up until minimum. Release to set current volume.

NOTE: This button has the same function as the Microphone Down Volume button on the main housing.

Volume Control Buttons(Microphone Volume UP Button on Microphone)

- Short press of the button will Increase volume of the Microphone input by 1 level (16 Volume levels. Unit defaults to Level 8)
- Press and hold to increase volume with smooth steps up until max. Release to set current volume.

NOTE: This button has the same function as the Microphone UP Volume button on the main housing.

Power Button on Microphone

- Press and hold Microphone power button to toggle power OFF/ON.

Limited 1 Year Warranty Information

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids, LLC will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please contact Customer Service at <https://ekids.com/pages/-contact> to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids, LLC or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids, LLC product.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The transmitter (microphone) must not be co-located or operating in conjunction with any other antenna or transmitter. The microphone can be operated and installed without restriction. The speaker should be operated with minimum distance 20cm between the radiator & your body.

CAN ICES-3 (B)/NMB-3(B)

© 2025 eKids, LLC
Questions? <https://ekids.com/pages/contact>

Printed in China



555 IB (English)

Size: 210mm x 290mm

Printing color: Black, 1C + 1C

*Front



CHARGE BEFORE USE

Getting Started

There are two ways to listen to music with this unit:


- In USB Mode you can connect a flash drive (not included) to the unit and listen to your stored songs.
- In Bluetooth® Mode you can stream music from your smartphone or other Bluetooth® device.

Note: When using USB Mode, this unit is compatible with .mp3 and .wav files only.

THIS PRODUCT SHIPS WITH USB/OFF/BLUETOOTH® SWITCH IN THE "USB" POSITION FOR DEMO. MOVE THE SWITCH TO OFF POSITION TO DISABLE TRY-ME MODE.

Charging the Unit (CHARGE UNIT BEFORE USE)


1. Connect the USB-C plug to the USB-C charging port on the top of the unit.

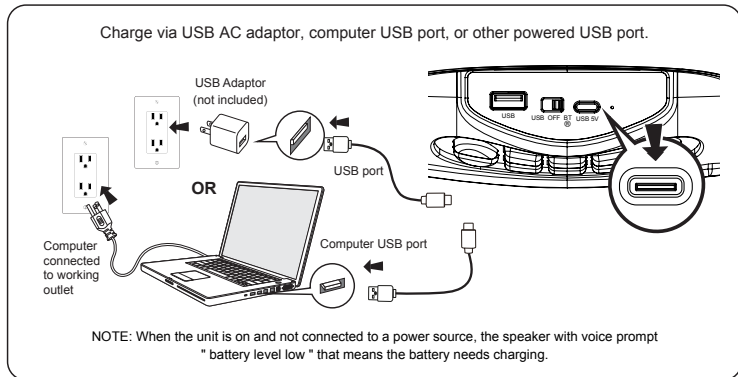

2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. For first time use, charge unit for about 5 hours.
3. The Charging Indicator in the top of the unit glows red steadily while the unit is charging and turns OFF once the unit is fully charged.
4. A low battery voice prompt will sound to indicate it is time to charge the unit.

Charging the Microphone

- Connect the included USB charging cable to the USB-C port on the bottom of the unit, and the standard end to a powered USB port or USB adaptor.

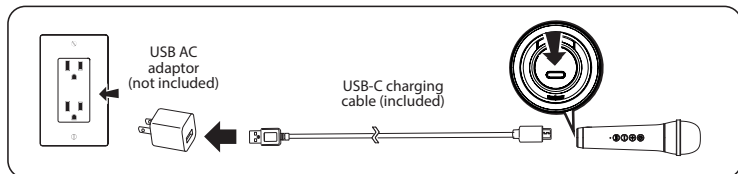

Bluetooth® Function

- Moving the USB/OFF/Bluetooth® Switch to the "Bluetooth®" position, turn on your Bluetooth® device and enable Bluetooth® mode (check in Options or Settings). The unit will automatically enter pairing mode the first time power on.
- Using your Bluetooth® device, select the Bluetooth® pairing name for your product: 'Karaoke 555'
- "Connected" is announced when the device is paired. Put your Bluetooth® device in play mode to play audio.
- Use the "Next Track", "Previous Track" and "Play/Pause" buttons on the unit to navigate tracks.
- To manually pair your device, press and hold the Play/Pause Button on the front of the unit for 2-3 seconds.
- To reset Bluetooth® settings, press and hold the Play/Pause Button for 10 seconds. A tone will sound to confirm Bluetooth® is reset.
- Auto time out 15 mins if no input is detected.

USB Function

- Moving the USB/OFF/Bluetooth® Switch to the "USB" position, will cause the unit to enter USB playback mode.
- In USB Mode, unit will play music files from the inserted USB memory stick.

Model: 555 Series

Bluetooth® MP3 Karaoke with Light Show

Troubleshooting

If the unit does not respond:

- Make sure unit is completely charged.
- To re-pair your device, press and hold the Play/Pause Button for 2-3 seconds, then select 'Karaoke 555' on your Bluetooth® device. Be sure to remove any previous instance of "Karaoke 555" from "My Devices" setting screen on your Bluetooth® device if present.

Note: The rechargeable battery can be replaced only by eKids Consumer Repair Department.

Warning/Disposal of Unit

Do not attempt to replace the battery yourself. Doing so may damage the unit and will void your warranty.

- Never dispose of used batteries/electronics with ordinary solid wastes, since they may contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations. Many electronics retailers now recycle batteries and other electronic components at no charge.

To find a drop-off location near you, visit www.call2recycle.com

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If problems persist, do not attempt to replace the battery yourself; see warranty for factory service.

CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Always confirm that the temperature is 5°C – 35° C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.

- Charging the battery should be conducted under adult supervision.
- Never expose the battery to any liquid.
- Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep the battery out of the reach of infants and small children
- Always charge lithium devices on a non-flammable surface - wooden tables, carpeted floors, and bedding are not recommended charging surfaces.

Maintenance

- It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.
- Battery chargers used with the device are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

Questions or Comments

- For questions or comments regarding this or other eKids products, please visit our website: contact@support.ekids.com

Using a USB Drive

For best performance, use a high speed 3.1 USB drive (not included) when recording audio from this unit.

Note: Using a lower speed USB drive may cause skipping or poor performance of the Bluetooth® audio stream. Sometimes skipping in recorded music may occur, depending on the online streaming speed of your phone.

▲ Safety Warnings

To ensure safe handling, charging, and replacement of lithium-ion batteries, follow these guidelines:

General Safety

- Do not attempt to replace the battery yourself. Contact eKids Consumer Repair Department for service.
- Never puncture, crush, or expose the battery to liquids or fire.
- Do not use damaged, swollen, or leaking batteries.
- Keep batteries away from children and pets.

Charging Safety

- Use only the charger provided or approved by the manufacturer.
- Charge on a hard, non-flammable surface away from flammable materials, direct sunlight, and water.
- Do not leave the device charging unattended or overnight.
- Unplug the charger once the battery is fully charged.

Disposal

- Do not dispose of lithium-ion batteries in household trash or recycling bins.
- Recycle batteries at certified collection centers. Visit www.call2recycle.org to find a location near you.

Fire Risk

- In case of overheating, unusual smell, or deformation, immediately stop using the device and place it in a fire-safe area.
- Keep a Class D fire extinguisher nearby when handling or replacing batteries.