

* Front

[* Back](#)

iHome

Model: iBT700

PLAYPRO

Bluetooth Mono Wireless Speaker

BC

EQ MODE

Press to select the best EQ mode for your environment (indoor or outdoor)

VOLUME DOWN

POWER ON/OFF

- Press to turn ON/OFF
- Press & Hold to check battery status (when unit is ON)

VOLUME UP

PLAY/PAUSE / SPEAKERPHONE

- Press to Play/Pause
- Press to Talk/press & hold for end call / Reject call
- Press & Hold for Google/Siri

BLUETOOTH PAIRING LED

BLUETOOTH PAIRING

- Press & Hold until the LED flashes blue to enter pairing mode
- Select 'iHome iBT700' on your device to connect

USB-C CHARGING PORT

CHARGING LED

RESET BUTTON

Use the extended tip of a paper pin or other thin tool to push in the reset button

CHARGING THE SPEAKER

USB AC adaptor (not included)

USB-C charging cable (included)

LED STATUS INDICATORS

- Blue LED = Bluetooth Status
- Red LED = Battery Status

BATTERY STATUS

○	charging (slow blink)
○	OFF fully charged
○	RED low battery (fast flash)

BLUETOOTH STATUS

○	BLUE pairing (flashing)
○	BLUE connected to Bluetooth

CHARGE UNIT BEFORE USE ABOUT 4 HOURS

SPLASHPROOF COVER

Before using near water, make sure the splashproof cover is completely flush with the unit. Press along the entire edge of the cover until it is securely in place.

TRUE WIRELESS PAIRING (TWS) (REQUIRES 2 SPEAKERS)

- Pair one iBT700 unit to your device via Bluetooth.
- Power on the second iBT700 unit.
- Press and hold the Vol+ and Play Button for 2 seconds on each unit until you hear a voice prompt tone.
- When both units are linked, will announce "Left Channel", "Right Channel" respectively.
- Both units will link TWS automatically next time both units are powered on within 20 sec.
- To remove True Wireless pairing, press & hold Bluetooth Pairing button for 10 seconds.

[illegible]