

Limited 1 Year Warranty

iHome Products, a division of SDI Technologies Inc. [hereafter referred to as SDI], warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

iHome Products, a division of SDI Technologies Inc. [hereafter referred to as SDI], warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2016 SDI Technologies, Inc. All rights reserved
Questions? Visit www.ihome.com
or call 1-800-288-2792 Toll Free

Printed in China

iHome



Model: iBT84

**Color Changing Rechargeable
Bluetooth Speaker
with Speakerphone**

CHARGE
BEFORE
USE


instruction manual



iBT84

What's Included

 - iBT84 speaker
- USB charging cable

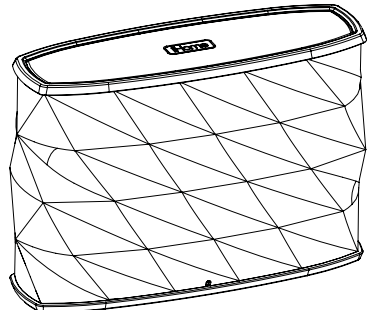

iBT84

 


USB charging cable


1

Meet Your iBT84


Top

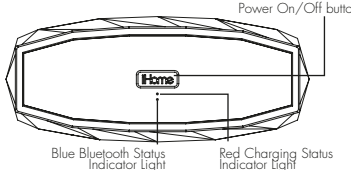

Front

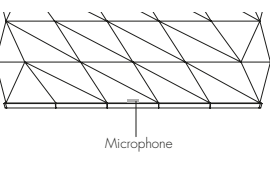 

Back

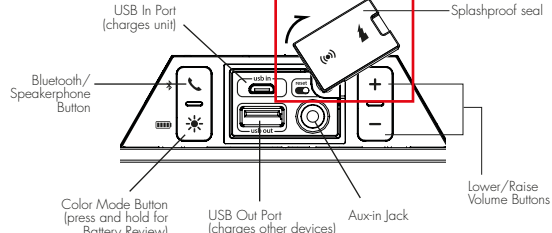 


2

Charging the Unit

CHARGE UNIT BEFORE USE/KEEP UNIT OFF FOR FASTER CHARGING

 1. Connect the micro USB plug on the included USB cable to the micro USB In charging port on the back of the unit.
2. Connect the standard USB plug end of the cable to a powered USB port on a computer, a USB AC adaptor or other USB charging device. For first time use, charge unit for about 4 hours. The red charging status indicator LED on top right of the unit blinks when battery needs charging, turns solid while charging and turns off once unit is fully charged.

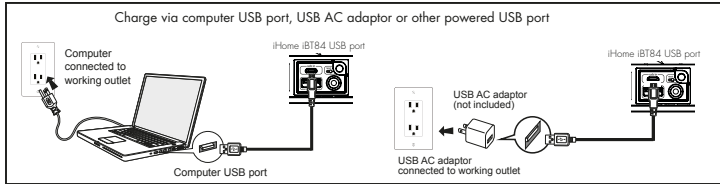

TIP: On some iOS (Apple) devices, you can view the iBT84 battery status on your device's screen. When device is paired and connected, look for a vertical battery icon next to the Bluetooth icon on the upper right corner of the device's screen.

3

3. To review the charging status of the unit while it is charging, *press and hold* the **Color Mode Button**. The cabinet lights will flash green from bottom to top for 5 seconds to show unit is charging.

Reviewing Battery Charge Level (Charger is Disconnected and unit is ON)

1. *Press and hold* the **Color Mode Button** when unit is ON but *not charging* (micro USB cable not connected) to enter Battery Review Mode. The cabinet lights will blink and built-in voice will announce the current battery level.

4

Using the iBT84

Pairing Your Device

Pairing is the setup process to introduce your Bluetooth-capable device to the iBT84. Once your device is paired, the iBT84 can recognize it and you can play your audio through it.

1. Turn on your Bluetooth device and make it "discoverable" by turning on Bluetooth mode (check in Options or Settings).
2. Press and hold the **Power On/Off Button** for 2 seconds to turn on the iBT84. *The first time the unit is powered on, it will enter auto-pairing mode and attempt to connect to a Bluetooth device (see step 4). Otherwise, power on, then follow step 3 to begin pairing.*
3. *Press and hold* the **Bluetooth/Speakerphone Button** for 2 seconds. The iBT84 will beep and the Bluetooth status indicator light on top of the unit will flash quickly. If Color Mode is on, the cabinet lights will flash blue and red.
4. "iHome iBT84" should appear in your device's Bluetooth menu. If "Not Paired", "Not Connected" or similar message appears, select "iHome iBT84" to connect it. If prompted for a passcode, enter "1234" on your device's keypad.



5. If pairing is successful, 1 beep will sound and the Bluetooth status indicator light will appear solid blue (in Color Mode, cabinet will flash blue twice), indicating the iBT84 is ready to play music. There should also be an indication on your device. If no device is successfully paired within 3 minutes the iBT84 will default to previous mode. Once the iBT84 is paired to a device, it will attempt to autolink when the device is within range (about 33 feet).

5

Pairing with a Different Device

When you power ON the speaker, it will automatically link with the previously paired Bluetooth device as long as that device is still within range (about 33 feet). To pair with a different device follow steps 1 -4 under "Pairing Your Device" on previous page.

Playing Audio Via Bluetooth

1. Press and hold the **Power On/Off Button** for 2 seconds to turn on the unit. The Bluetooth status indicator will glow solid blue when a linked device is in range and detected. You can then listen to audio streamed wirelessly from your paired Bluetooth device.
2. Use controls on your Bluetooth device to play, pause and navigate tracks.
3. Press the **+** or **- Button** to adjust the iBT84 volume. You can also adjust volume on your device.
4. When done listening, press the **Power On/Off Button** to turn the unit OFF. Remember to turn off your device, too.

Speakerphone Operation

 
NOTE: The unit must be powered on and linked to a Bluetooth phone to receive a call.

1. When a call is received, playing music is muted to hear the ring tone and the cabinet lights flash green. Press the **Bluetooth/Speakerphone Button** to answer the call. For call waiting function, press the button again to answer the second call, and once more to return to the original call.
2. When a call is completed, press the **Bluetooth/Speakerphone Button** to end the call and resume previous function.

6

Playing Audio via Aux In

1. Connect a standard audio cable (not included) to the Auxin jack on the back of the unit and connect the other plug end to the headphone or lineout jack on your audio device.
2. Press and hold the **Power On/Off Button** for 2 seconds to turn the unit ON.
3. Power on your aux audio device and use the controls on the device to play or pause audio and to navigate tracks.
4. Press the **+** or **- Button** to adjust the system volume. You can also adjust volume on your device.
5. When done listening, press the **Power On/Off Button** to turn the unit OFF. Remember to turn off your device, too.



Using Color Modes

There are six color modes, which you cycle through in this order:

- a. Slow Fade (colors slowly fade from one into the next)
 - b. Fast Change (colors change rapidly)
 - c. One Color (select a favorite color)
 - d. Pulse to Music (lights flash to the beat of the music)
 - e. Preset Pulsing (each light array pulses through its own preset pattern of colors)
 - f. Off (no display)
1. Press and hold the **Power On/Off Button** for 2 seconds to turn the unit ON.
 2. Press the **Color Mode Button** repeatedly to cycle to the desired color mode. For One Color mode, first cycle to Fast Change mode and press the **Color Mode Button** when the desired color appears. For Pulse to Music, make sure the volume on your connected Bluetooth device is above 50%.
 3. When done, press the **Power On/Off Button** to turn the unit OFF.

TIP: Download free iHome Enhance app from the App Store for expanded color adjustment features.

7

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact Customer Service at 1-800-288-2792.

WARNING/DISPOSAL OF UNIT

Please do NOT attempt to charge the battery yourself. Doing so may damage the unit and will void the warranty. When disposing of unit, follow the disposal instructions below:

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning batteries/electronics disposal, please dispose of the device in a waste bin for electronic devices.
- Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated

- Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
- Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substance.
- Always confirm that the temperature is 5°C - 35° C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.
- Never expose the battery to any liquid.
- Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep the battery out of the reach of infants and small children.

Introduction

Thank you for purchasing the iHome iBT84. This product is designed to provide high quality wireless sound for your iPad, iPhone, iPod, computer, PDA or other Bluetooth audio device.

This instruction booklet explains the basic operation and care of the unit. Please read it carefully and keep for future reference.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened with water. Stronger cleaning agents, such as thinner or similar materials can damage the surface of the unit.

Troubleshooting

Unit doesn't respond (no power)

- Make sure unit is completely charged.
- Check that all connections are correct and properly plugged in.
- Make sure your device is properly paired with the iBT84.
- Make sure the unit is on

Unit doesn't respond (locked up/ "frozen")

If the unit does not respond, try resetting the end of a paperclip or similar into the Reset Port located under the splashproof seal on the back of the unit. To clear Bluetooth settings, press and hold both the **+** and **-** buttons at the same time for about 10 seconds. Note that doing so will clear settings, and any Bluetooth devices will need to be re-paired.

Trouble pairing device with iBT84

Bluetooth implementation varies depending on your device's hardware and operating system. Please see our website for updates on pairing.

- When you power ON the speaker, it will automatically link with the last previously paired Bluetooth device if the device is still within range (about 33 feet). To pair with a different device you must turn off Bluetooth capability on the already paired device, or take it out of range.
- If your device does not auto-link when within range, repair the device. To do so, first delete the iBT84 from your Bluetooth devices menu.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

For further information and to see the latest instructions, visit www.ihome.com/support

8