

TOP PANEL

The diagram shows a horizontal rectangular panel with rounded ends. From left to right, it features:

- A volume slider button labeled "Volume Button".
- A play/pause button labeled "Play/Pause Button".
- A mode button with a circular arrow icon, labeled "MODE" below it and "Sound Effects Mode Button" above it.
- A light button with a starburst icon, labeled "Light Button" above it.
- A power button with a power symbol icon, labeled "Power On/Off" above it.
- A volume increase button with a plus sign icon, labeled "Volume Button" above it.

Volume Button

Play/Pause Button

Sound Effects Mode Button

MODE

Light Button

Power On/Off

Volume Button

VOLUME BUTTON

- Short press volume - button to decrease volume. When playing music, long press to play the previous song. When in FM mode, long press to select the previous radio station.
- Short press volume + button to increase volume. When playing music, long press to play the next song. When in FM mode, long press to select the next radio station.

LIGHT BUTTON

- Short press to change light modes, long press to turn off the light.

MODE BUTTON

- Long press to switch mode, short press for EQ effects select.

POWER ON/OFF

- Long press for 2 seconds to power on/off.

PLAY/PAUSE BUTTON

- Short press to play/pause.
- In Bluetooth mode, long press for 2 seconds to manually pair. Long press for 5 seconds to reset Bluetooth.
- When in FM mode, long press to automatically search for channels.

REAR JACK PANEL

The diagram shows a horizontal rectangular panel with rounded ends. It contains three main components from left to right:

- A TF card slot labeled "Insert TF card to play MP3 music. Max workable capacity: 32 GB". Below it, a note states: "Note: TF cards and USB drives with capacity larger than 32GB may not work."
- A charging port labeled "TYPE-C Charging Port". Above it is a small indicator light labeled "Charging/Bluetooth Indicator".
- An AUX audio input jack labeled "AUX audio input".

**Insert TF card to play MP3 music.
Max workable capacity:
32 GB**

**Note: TF cards and USB
drives with capacity larger
than 32GB may not work.**

Charging/Bluetooth Indicator

AUX audio input

**Insert the USB drive to
play MP3 music.
Max workable capacity:
32 GB**

**TYPE-C
Charging Port**

CHARGE UNIT
BEFORE USE
ABOUT 5 HOURS

LED STATUS INDICATORS:

Battery charging status

	RED	Charging
	OFF	Fully charged

*Charging indicator located on rear of unit above the USB-C port.

BLUETOOTH

	BLUE	Pairing (fast flashing)
	BLUE	BT Connected (slow flashing)

*Bluetooth indicator located on rear of unit above the USB-C port.

BLUETOOTH CONNECTION OPERATION

The first time the iBT920 is powered on it will enter BT pairing mode.

- Select 'iHome iBT920' on your device to pair.
- To manually pair BT change to BT mode and press and hold the Play button for 2 seconds.
- Long press the play/pause button for 5 seconds to reset BT.

WIRELESS STEREO

(REQUIRES 2 iBT920 SPEAKERS)

1. Pair one iBT920 unit to your device via Bluetooth.
2. Power on the second iBT920 unit.
3. Double press the power button on each unit.
4. When both units are linked, will announce "Left Channel"; "Right Channel" respectively.
5. The units will link automatically the next time they are powered on together.
6. To remove wireless stereo and reset BT pairing, press and hold the Play button for 5 seconds on each unit.

JACK PANEL COVER

Before using near water, please be sure the jack panel cover is closed securely.

TF USB TYPE-C AUX

TF USB TYPE-C AUX

LOW BATTERY VOICE PROMPT

When "Low Battery" voice prompt is announced, please recharge the battery accordingly.

Printed in China