

IMRC-INT (IMR2.1) - label location:



view of the back.

IMRC-EXT (IMR-FT 2.1) - label location:



view of the back.