

Game Boy Advance Wireless Adapter Instruction Manual

1. Features

The Wireless Adapter is a peripheral device for the Game Boy Advance series. Network play for a maximum of five players is possible by connecting the Wireless Adapter to a Game Boy Advance.

2. Connection

After confirming that the Power Switch is OFF on the Game Boy Advance, plug in the Wireless Adapter 6 PIN plug into the Game Boy Advance External Extension Connector.

3. Use

The Wireless Adapter will automatically begin to operate after being connected to the Game Boy Advance and turning the Power Switch ON.

4. Specifications

Model name: AGB-015

Dimensions: 62.0 mm (width) x 37.7 mm (height) x 14.7 mm (depth)

Weight: approx. 16 g

Radio Frequency: 2.4 GHz bandwidth, ISM band

Maximum power consumption: 115 mW (power supplied by Game Boy Advance during use)

5. FCC Certification, Instructions to the User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Change the direction the Wireless Adapter is facing.
- Consult the dealer or an experienced radio/TV technician for help

IMPORTANT!

In order to comply with the FCC RF exposure requirements, the antenna provided with this unit must be used. Do not use a different antenna or cable. Doing so may result in the installed system exceeding the RF exposure requirement.

NEED HELP WITH INSTALLATION, MAINTENANCE OR SERVICE?

Customer Service

Visit www.nintendo.com

or call 1-800-255-3700

Mon – Sat: 6:00 a.m. to 9:00 p.m. (Pacific Time)

or Sun: 6:00 a.m. to 7:00 p.m. (Pacific Time)

(Times subject to change)

Nintendo of America Inc.

P.O. Box 957

Redmond, WA 98073-0957

U.S.A.

www.nintendo.com