

Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

DECT 6.0 cordless telephone with
BLUETOOTH® wireless technology



vtech

Abridged user's manual

DS6722-3

Congratulations

on purchasing your new VTech product. Before using this product, please read **important safety instructions**.


This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form. The TA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.




The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

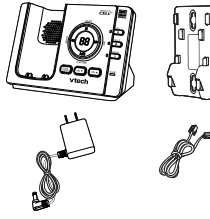


3 sets for DS6722-3:

 

2 sets for DS6722-3:



Handset overview

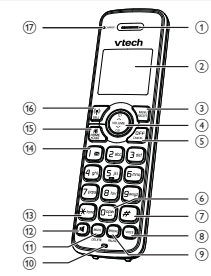

- 1 - Handset earpiece
- 2 - LCD display
- 3 - MENU/SELECT
- 4 - VOLUME / / S
- 5 - MUTE/DELETE
- 6 - CHARGE light
- 7 - #
- 8 - VOICE
- 9 - REDIAL/PAUSE
- 10 - MICROPHONE
- 11 - MUTE/DELETE
- 12 - MUTE/DELETE
- 13 - MUTE/DELETE
- 14 - MUTE/DELETE
- 15 - OFF/CANCEL
- 16 - MUTE/DELETE
- 17 - CHARGE light

15 - OFF/CANCEL

- Hang up a call.
- Silence the ringer temporarily while the handset is ringing.
- Press and hold to erase the missed call indicator while the phone is not in use.
- Press to return to the previous menu; or press and hold to return to idle mode, without making changes.


16 - MUTE/DELETE

- Make or answer a cell call.
- Answer an incoming cell call when you hear a call waiting alert.

17 - CHARGE light

- On when the handset is charging.

Telephone base overview

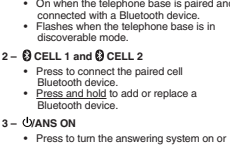

- 1 - CELL 1 and CELL 2 lights
- 2 - CELL 1 and CELL 2
- 3 - MUTE/DELETE
- 4 - MUTE/DELETE
- 5 - IN USE light
- 6 - VOL. / VOL. /

7 - Charging cradle

- Press to page all system handsets.

8 - FIND HANDSET

- Shows the number of messages, and other information of the answering system or telephone base.

9 - Message window

- Press to repeat a message.
- Press twice to play the previous message.

10 - PLAY/STOP

- Press to play messages.
- Press to stop message playback.
- Press to skip to the next message.
- Press to repeat a message.
- Press twice to play the previous message.

X/DELETE

- Press to delete the playing message.
- When the phone is not in use, press twice to delete all old messages.

11 - Speaker

- Press to adjust the volume during message playback.
- Press to adjust the telephone base ringer volume when the phone is not in use.


Display icons overview

	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.
	There are new voicemail received from your telephone service provider.
	On when the home line is in use or there is an incoming home call. Flashes when there is an incoming home waiting call.
	There are Bluetooth devices connected on the cell devices list.
	On when the cell line is in use or there is an incoming cell call. Flashes when there is an incoming cell waiting call.
	There are new caller ID log entries.
	The answering system is turned on.
	The handset ringer is off.
	The message number currently playing and total number of new/old messages recorded.

Connect

You can choose to connect the telephone base for desktop usage or wall mounting.

 
- Use only the adapters provided.
- Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see Bluetooth), and use the cell line alone without plugging in a telephone line cord.






Connect the telephone base



 Connect the charger







Mount the telephone base

   

Install the battery

Install the battery as shown below.

    - Use only supplied battery.
- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.




Check the battery level

After you have installed the battery, check the battery level on the handset screen.

- If the battery icon is or , then go to **Before use** section to set the date and time, and set the answering system through voice guide.
- If the screen is blank, or it flashes, then the battery needs to be charged. Go to **Charge the battery** section before you do any setting or operation.

Charge the battery

 Place the handset in the telephone base or the charger to charge.



Once you have installed the battery, the handset LCD display indicates the battery status (see the table below).

- Press **CANCEL** or place the handset in the telephone base or charger will bypass the set date and time, and voice guide.
- For best performance, keep the handset in the telephone base or charger when not in use.
- The handset battery is fully charged after 12 hours of continuous charging.
- If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays **No battery**.

The handset battery is fully charged after 12 hours of continuous charging.

If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays **No battery**.

Battery indicators	Battery status	Action
The screen is blank, or shows Put in charger and it flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
The screen shows Low battery and it flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
The screen shows HANDSETX .	The battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

To manually set the date and time and the answering system, refer to **Configure your telephone** and **Set your built-in answering system** sections.

To manually initiate the voice guide, refer to **Voice guide** under **Set your built-in answering system** section.

Before use

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time, and the answering system through voice guide.

Set date and time

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.
- 1. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
- 2. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **Y** or **A** to choose **AM** or **PM**.
- 3. Press **SELECT** to save.

After the setting for the date and time, the handset will display **Voice guide 10...** and **set up Ans sys** alternately.

Set answering system through voice guide

This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

1. Press **SELECT** to start the voice guide for the answering system setup. You hear the voice prompt "Hello! This voice guide will assist you with the basic setup of your answering system."
2. Setup your answering system by inputting the designated numbers as instructed in the voice guide.

Check for dial tone:

Press **#HOME**. If you hear a dial tone, the installation is successful.

If you do not hear a dial tone:

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays **Out of range** or **no pwr at base** alternately. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **#HOME** or **#CELL**. Move closer to the telephone base, and then press **#HOME** or **#CELL** to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Bluetooth

- Make sure your cell phone has a good cell reception near the telephone base.

To use a Bluetooth enabled cell phone or headset with your DS6722, you must first pair and connect your Bluetooth cell phone or headset with the telephone base.



Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength.

- For optimal performance, place your cell phone next to the telephone base while using the cell line.
- To avoid interference from other electronic devices, place your telephone base far away from devices such as baby monitors, wireless routers, microwaves and computers.

Pair and connect your Bluetooth enabled cell phone

1. Choose a slot to pair the cell phone. Press and hold **CELL 1** or **CELL 2** on the telephone base until you hear a confirmation tone, and the **CELL 1** or **CELL 2** light flashes.
2. Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your VTech phone (VTech DS6722), press appropriate key on your cell phone to continue the pairing process.
 - Your cell phone may prompt you to enter the PIN of the telephone base. The default PIN of the telephone base is 0000.

When the cell phone is connected to the telephone base, the corresponding status icon or displays. The corresponding device light **CELL 1** or **CELL 2** turns on. If the pairing fails, turn off the Bluetooth feature on your cell phone and on the DS6722 by pressing **CELL 1** or **CELL 2**. Then repeat the steps above to pair and connect again. In some cases, it may take you a few attempts to complete the pairing process.

Pair and connect your Bluetooth enabled headset

1. Press **MENU** when the handset is not in use.
2. Press **V** or **A** to scroll to **Bluetooth**, and then press **SELECT**.
3. Press **V** or **A** to scroll to **Add BT headset**, and then press **SELECT**. The screen displays **Search headset...**
4. Set your headset to discoverable mode. Once your handset finds your headset, press **SELECT**.

Enter the PIN of your headset if required. The PIN for most Bluetooth devices is 0000 (refer to the user's manual of your headset), and then press **SELECT**.

When the headset is successfully paired and connected to the telephone base, the **BT** icon displays on handsets. The **CELL 2** light turns on.

VTech Connect to Cell™ application

This application helps you integrate your Android phones with your DS6722. For more information and application download, scan the QR code on the right, or go to www.vtechphones.com/app_connect_to_cell.

Download contacts from your Bluetooth cell phone

1. Press **MENU** when the handset is not in use.
2. Scroll to **Bluetooth**, and then press **SELECT**.
3. Scroll to **Download PB**, and then press **SELECT**.
4. Scroll to select the desired cell phone, and then press **SELECT**.

- For certain cell phones, you may need to press a key on your cell phone to confirm the phonebook download.
- The performance of phonebook download feature depends on the compatibility of your Bluetooth cell phone. Refer to the user's manual of your cell phone for more information about how that device uses Bluetooth connectivity.
- Certain cell phones do not support SIM card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first. Then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.

For Android cell phones, you may also download your cell phone contacts to your DS6722 via the VTech Contact Share application. Scan the QR code on the right, or go to www.vtechphones.com/app/contact_share for application download.

Remote voice control

If you have connected a cell phone to your DS6722 telephone system, you can activate the voice-controlled application (voice app) of the cell phone, such as Siri®, Google Now™ or S-Voice®, via your handset.

Voice-controlled application	Siri	Google Now	S Voice
Operation System (Versions supported)	iOS 8 (or above)	Android 4 (or above)	Android 4 (or above)

Before using the remote voice control feature, make sure you checked the following:

- Your cell phone is paired and connected to your telephone system via Bluetooth.
- No Bluetooth applications are running in the background of your cell phone.
- Keep your cell phone next to the telephone base.
- Do not lock up your cell phone's screen or set passcode for activating the voice app.
- Make sure you have turned on or logged in to the applications on your cell phone that you will be sending your voice commands, such as GPS, email and social networking accounts.
- Your cell phone's data or Wi-Fi signal is in full strength and your cell phone can connect to the Internet.
- Try to activate the voice app on your cell phone to ensure it is in place.

Once you have activated the remote voice control feature, you are using your cell phone's voice app to operate your cell phone. Please check the cell phone user's manual and the voice app's help topics to find out what commands you can use and any limitations of the voice app. Some cell phone manufacturers or network carriers may customize the phone's operating system and implement their own voice app. If you want to use Google Now, you need to manually set it as your default voice app. For detailed instructions, refer to the cell phone user's manual, or contact your cell phone's manufacturer or network carrier. You may also go to "Google Product Forums" on the Internet and check the corresponding help topics.

Due to the settings of certain cell phones and voice apps, your cell phone may not support the remote voice control feature. Contact your cell phone's manufacturer or network carrier, or check the voice app's help topics if you encounter any problems.

During the remote voice control activation, if your Android cell phone comes with both a dedicated voice app and Google Now, it may prompt you to select which voice app to use, and whether use it for just once or always. Select the desired options. If you do not respond to your cell phone's prompt in time, the handset screen will return to idle, and the **V** icon will disappear. You can restart by following Steps 1-3 mentioned above.

If you receive a landline or cell line incoming call

To activate remote voice control:

1. Press **VOICE** on the handset.
- If you have connected one cell phone to the telephone, the handset shows the device name of the connected cell phone directly.
- If you have connected two cell phones to the telephone, the handset shows **Select a device**, followed by the device name list of the connected cell phones. Select to connect the desired cell phone, and then press **SELECT**.
2. The handset then shows the remote voice control icon **V**.
- If the activation fails, the handset displays **Not available**. When the screen returns to idle, try Step 1 again.
3. When the handset plays the confirmation tone as forwarded by the cell phone's voice app, start speaking toward the handset, and then wait for feedback. Make reply to the voice app's feedback, if necessary.
- You can press **M** on the handset to turn off the speakerphone and listen to the feedback through the handset earpiece.
4. To end the current remote voice control session, press **CANCEL** on the handset. You can restart by following Steps 1-3 mentioned above.

- Once you have activated the remote voice control feature, you are using your cell phone's voice app to operate your cell phone.
- Please check the cell phone user's manual and the voice app's help topics to find out what commands you can use and any limitations of the voice app.
- Some cell phone manufacturers or network carriers may customize the phone's operating system and implement their own voice app. If you want to use Google Now, you need to manually set it as your default voice app. For detailed instructions, refer to the cell phone user's manual, or contact your cell phone's manufacturer or network carrier. You may also go to "Google Product Forums" on the Internet and check the corresponding help topics.

Due to the settings of certain cell phones and voice apps, your cell phone may not support the remote voice control feature. Contact your cell phone's manufacturer or network carrier, or check the voice app's help topics if you encounter any problems.

During the remote voice control activation, if your Android cell phone comes with both a dedicated voice app and Google Now, it may prompt you to select which voice app to use, and whether use it for just once or always. Select the desired options. If you do not respond to your cell phone's prompt in time, the handset screen will return to idle, and the **V** icon will disappear. You can restart by following Steps 1-3 mentioned above.

If you receive a landline or cell line incoming call

when you have activated remote voice control on a connected cell phone, the remote voice control operation will be ended.

- The feature may be ended automatically by your cell phone. For example, a cell call has been established via the remote voice control feature and the call has just ended.
- If you need to press dialing keys (0-9, *, #) during a cell call, please make the call using the cell lines of your telephone system instead of using the voice app via the remote voice control feature.

Using the handset menu

1. Press **MENU** when the handset is not in use.
2. Press **V** or **A** until the screen displays the desired feature menu.
3. Press **SELECT** to enter that menu.
- To return to the previous menu, press **CANCEL**.
- To return to idle mode, press and hold **CANCEL**.

Configure your telephone

Set language
The LCD language is preset to English. You can select English, French or Spanish to be used in all screen displays.

1. Press **MENU** when the handset is not in use.
2. Scroll to **Settings**, and then press **SELECT** twice.
3. Scroll to choose **English**, **Français** or **Español**.
4. Press **SELECT** to save.

Set date and time

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.


1. Press **MENU** when the handset is not in use.
2. Scroll to **Set date/time**, and then press **SELECT**.
3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **V** or **A** to choose **AM** or **PM**.
5. Press **SELECT** to save.

Temporary tone dialing
If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call.

1. During a call, press ***xxx**.
2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

Telephone operation

Handset control key panel:

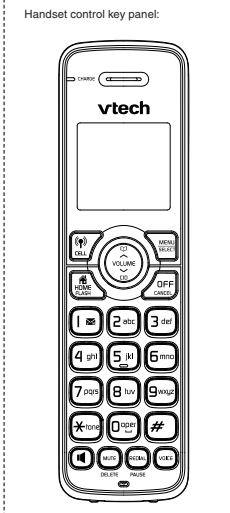

Make a home call

- Press **#HOME** or **#**, and then dial the telephone number.

- Enter the telephone number on the handset, and then press **#HOME** or **#** to dial.

Make a cell call

- Press **#CELL** on the handset. Enter the telephone number, and then press **SELECT**.

- Enter the telephone number on the handset, and then press **#CELL** to dial.

- After first pressing **#CELL**, you may need to choose a cell device. Scroll to select the desired cell device when necessary, and then press **SELECT**.

While using the cell line, place your cell phone closer to the base, and make sure that there are no physical obstacles between the base and the cell phone, such as large furniture or thick walls.

Answer a home/cell call

- Press **#HOME**, **#CELL**, **#**, or any dialing key.

End a home/cell call

- Press **OFF** on the handset, or put the handset in the telephone base or charger.

Speakerphone

- During a call, press **M** on the handset to switch between speakerphone and normal handset use.

Volume

- During a call, press **VOLUME** or **VOLUME** on the handset to adjust the listening volume.

- The handset earpiece volume setting and speakerphone volume setting are independent.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

1. During a call, press **MUTE** on the handset. The screen displays **Muted**.
2. Press **MUTE** again to resume the conversation. The screen displays **Microphone on**.

Join a call in progress

You can use up to two system handsets at a time on a home line call. You can buy additional expansion handsets (DS6700) for this telephone base. You can register up to five handsets to the telephone base.

- When a handset is on a home call, press **#HOME** or **#** on another handset to join the call.
- Press **OFF** to exit the call. The call continues until all handsets hang up.

Call waiting

When you subscribe to call waiting service through your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

Call waiting on the home line:

- Press **FLASH** to put the current call on hold and take the new call.
- Press **FLASH** to switch back and forth between calls.

Call waiting on the cell line:

- Press **#CELL** to put the current call on hold and take the new call.
- Press **#CELL** to switch back and forth between calls

