 
 


TECHNICAL SPECIFICATIONS	
Frequency	Library: 342.1 - 342.15 MHz
Channels	12
ECN	9 (FSK/127) (FSK)
Maximum power allowed by FCC and IC, and operating range may vary according to environmental conditions at the time of sale.	
Nominal effective range	
Power requirement	1. Rechargeable NiMH battery 2. 3.0V DC/ICLA 3. Rechargeable NiMH battery 4. 3.0V DC/ICLA

[illegible]

CONNECT, CHARGE AND POWER ON THE BABY MONITOR



Connect the baby monitor

- 1. Use only the power adapter supplied with this product.
- 2. Connect the power adapter to the baby monitor and connect it to the switch controlled main AC outlet.
- 3. Connect the power adapter in a vertical or front mount position to avoid the power cord and the baby unit to fold the weight of the parent unit and the baby unit. This may damage the power cord, the baby unit, or the parent unit. Otherwise, the adapter may fold.
- 4. Make sure the power cord, the baby unit and the parent unit are out of the reach of children.
- 5. When the power adapter is connected to the power outlet, please place the baby unit at least 20cm from the power adapter.

Connect and power on the baby unit

1. Connect the power adapter to the baby unit and a power outlet.
2. Slide the **ON/OFF** switch leftward to **power on** your baby unit.

NOTE

- When powering up, the baby unit's status LED turns on, it indicates the baby unit is powered on.
- The status LED is set to off by default. If you want to keep the LED on, press **MENU**, then go to **STATUS** **▶** **STATUS LED** and turn on.

NOTE

Overheating of the lens and surface may get warm during normal operation.

Install and charge the parent unit

Install the parent unit battery

The parent unit runs on rechargeable battery and the battery unit must be fully charged before use. The parent unit will automatically run for a short time only.

NOTE

- Use only the battery supplied with this product.
- Do not use the battery for other than charging, using, storing, disassembling and remove the battery to prevent possible leakage.

INITOR



1



2



3

Remove the battery

To replace the battery, press down on the battery compartment cover and pull it out. Then, lift the battery cover to install the battery.





Place the patient unit antenna for better reception

Charge the battery before use

The patient unit must be fully charged before using the battery. For AC power, connect the patient unit to the power source. For the battery power, connect the patient unit to the AC power. With the battery power, the patient unit can be used for a short time only.

Notes

- Before using the battery receiver for the first time, charge the battery fully. When the battery is fully charged, the battery icon becomes solid.
- Make longer to charge when the patient unit is turned on. When the patient unit is in sleep mode, it will charge faster.
- Charging time, turn on patient unit while charging.

After the patient unit is fully charged, press **POWER until the welcoming screen appears.**

BATTERY INDICATOR	BATTERY STATUS	ACTION
The screen displays and .	The battery has very little power left.	Charge without interruption (about 30 minutes).
The screen displays or .	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

PARENT UNIT ICONS	
Main menu	Options
	Monitoring mode: (for VM002 3 only) • Turn on/off baby unit 1 or 2 in Single mode. • View baby unit's location in Parent mode. • Turn on/off baby unit's location in Split mode. • Turn on/off screen.
	Menu and setting sounds • Select play all melodies, or play any of the five melodies and the melody of the baby unit. • You can also set the timer to stop playing after 15, 30 or 60 minutes, or playing when sleep.
	Alerts - Sound, motion and temperature • Select sound and motion detection alerts. • Turn on/off sound and motion detection alerts. • Select temperature, maximum temperature for alert range. • Turn on/off temperature alert. • Turn on/off Auto Wake Up function.
	Parent unit settings • Adjust parent unit screen brightness. • Turn on/off dim mode.
	Baby units settings • Turn on/off Night Vision. • Adjust baby unit's speaker volume. • Update baby unit's security key.
Main menu	Options
	General settings • Turn on/off Wi-Fi network. • Turn on/off Wi-Fi network. • Connect. • Connect mobile phone. • Turn on/off Day/Night Tone. • Turn on/off No Link Alert Tone.
	Status icons Direct mode: When baby unit 1 and baby unit 2 are connected to the home Wi-Fi network. Router mode: When baby unit 1 and baby unit 2 are connected to the home Wi-Fi network. Baby unit 1 and 2 are baby units (same as baby unit 1 and 2). Parent mode (for VM002 3 only): Baby unit 1 and 2 are baby units connected to the home Wi-Fi network. Split mode (for VM002 3 only): Baby unit 1 and 2 are baby units connected to the home Wi-Fi network. Mobile internet is turned on. Mobile internet is turned on. Sound detector alerts is turned on. Sound detector and positioning sound are turned on. 6-level sound icon • 1: default low level sound • 2: default low level sound • 3: default low level sound • 4: default low level sound • 5: default high level sound • 6: default high level sound Parent unit speaker is muted. Temperature alert is on.


BASIC OPERATION

After powering up your video monitor, the parent unit streams live video in local mode. You can also stream live video to your smartphone or tablet. For more information on how to use your monitor for functionality enhancements and mobile access, see **Auto software and firmware update** and **Download app for mobile access** in this quick start guide.

Use the menu
Press **MENU/SELECT** to enter the menu. Choose a menu item, or save the menu item. Press **ENTER** to save the menu item. Press **ENTER** to return to the live video detection setting.

While in the menu:
• Press **▲**, **▼**, **←**, **→** to scroll among the menu options.
• Press **MENU/SELECT** to select an option.
• Press **TALK** to return to the live video detection setting.
• Press **⓪** to go to **Help & Info** page.

Adjust speaker volume
Press **▲VOL**, **▼VOL** to adjust your parent unit speaker volume. It determines the volume of sound transmitted from your baby unit.

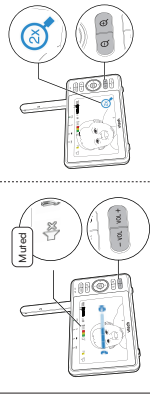

TEST THE LOCATION FOR THE BABY UNIT

If you plan to install your baby unit in a designated location, and use your home Wi-Fi network to connect your video monitor, you need to test the location for the baby unit. To do this, you need to have good Wi-Fi signal strength. After you have powered on your parent unit, you can use the **TEST LOCATION** menu item to test the location to assist in checking. Once you have identified the suitable location, you can install your baby unit. The location test will help you identify your baby unit and the Wi-Fi router frequency.

Tip
Depending on surrounding conditions, the Wi-Fi signal strength may be weak. If you experience weak Wi-Fi signal, to improve the Wi-Fi signal strength, you can move the Wi-Fi router closer to your parent unit. Check with your parent unit again.

NEED HELP?

Driven by system updates, the software, online help topics, and online FAQs will be updated periodically.

For operations and guides to help you using your HD video monitor, and for assistance FAQs, go to <https://help.vtechphones.com/vm901> or use your smartphone or mobile device to access our online help.

• Go to <https://help.vtechphones.com/vm901> or scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the camera over the QR code to scan the code. The online help notification will be displayed on the screen of the online help.

• If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

If you would like to contact us, visit <https://help.vtechphones.com/c1> or call 1-888-838-8383 or 1-844-444-VTECH (US) or 1-888-221-2025 (in Canada) for help.



VM901 online help



 
VM902 online help



TEST THE SOUND LEVEL AND POSITION THE HD VIDEO MONITOR


NOTE
• The video monitor is intended for use as a video monitor for proper adult supervision, and should not be used as such.

Testing the sound level of the HD video monitor
• For hearing protection, make sure the parent unit is more than 3 meters away from the baby unit when testing the sound level. The parent unit should be in the same room as the baby unit. You can also press **VOL** on the parent unit to lower or raise the volume.
• Increase the parent unit speaker volume if you cannot hear the sound transmitted from the baby unit.



Positioning the HD video monitor

CAUTION
• Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.
1. Place the baby unit more than 1 meter away from your baby.

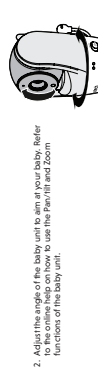

DOWNLOAD APP FOR MOBILE ACCESS

- You can download the free **MyVtech Baby 1080p** mobile app and install it to a mobile device, then use your mobile device and the mobile app to monitor your areas remotely.
- Press **MENU** when the parent unit is idle.
- Go to **Connect Mobile Phone**.
- Scan the QR code in the parent unit to download the app into your mobile device.
- Follow the instructions in the mobile app to set up and pair your baby unit to the mobile app.

Alternatively, you can download the mobile app from the App Store or Google Play store.

Install MyVtech Baby 1080p mobile app
1. Browse the App Store or the Google Play store.
2. Search for the mobile app with the keyword "myvtech baby 1080p".
3. Download and install the **MyVtech Baby 1080p** mobile app to your mobile device.

NOTE
• Scan the QR codes on the right to get the app.

• Make sure your mobile device meets the minimum requirement for the mobile app.

Minimum requirement
• The mobile device is compatible with:
• iOS 8.0 or later; and
• Android 4.0 or later.

• After installing the mobile app, follow the instructions in the mobile app and parent unit to set up and pair your baby unit.

In your mobile device:
1. Tap **Get** on the mobile app to get the app.
2. We recommend that you use a common wireless service, such as Google Gmail for the parent unit, and a common email address, such as Gmail, for the parent unit. Create your new camera account via the email link, then sign in to your account.
3. Follow the instructions in the mobile app to pair the camera. Tap **+** in the mobile app to get the app.



MOUNT THE BABY UNIT (OPTIONAL)

NOTES
• Check for warpage strength and baby unit's angle before drilling the holes.
• The type of screws and anchors you need depends on the composition of the wall. You may need to purchase the screws and anchors separately to mount your baby unit.

1. Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes at the same distance from the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

3. Align the wall mount bracket and screws with the middle hole first, so that the wall mount bracket is level. Tighten the screw in the middle hole. You can tighten the other screw in the top hole.

4. Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.

5. You can maximize your baby unit's viewing angles by tilting the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.



GENERAL PRODUCT CARE

To keep this product working well and looking good, follow these guidelines:
• Avoid putting in heat healing appliances and devices that generate electrical noise (for example, DO NOT expose it to direct sunlight or moisture).
• Avoid dropping the product or treating it roughly.
• Do not use the product with a soft cloth.
• Do not use cleaning spray or liquid cleaners.
• Make sure the parent unit and the baby unit are dry before you connect them to the mains again.

STORAGE

When you are not going to use the HD video monitor for some time, store the parent unit, the baby unit and the adapters in a cool and dry place.

FREQUENTLY ASKED QUESTIONS

Below are the questions most frequently asked about the HD video monitor.
Can I turn off the parent unit screen but still use the baby unit? The parent unit LCD display will turn the LCD display back on from the baby unit.

Why does the baby unit not respond normally? Try the following in the order listed for common cure:
1. Disconnect the power to the baby unit.
2. Reconnect the power to the baby unit.
3. Reboot the parent unit.

Why does the baby unit not work? The baby unit has a light sensor that measures the ambient light. When the ambient light is dim, such as during nighttime or in a dark room, the baby unit activates its infrared LEDs, and displays the camera view in black and white.

Why does my baby unit not work? The baby unit may not be in the correct connection. Check your network and the connection setting.
Why does my baby unit not work? The baby unit may not be in the correct connection. Check your network and the connection setting.

Why does my baby unit not work? The baby unit may not be in the correct connection. Check your network and the connection setting.

Why does my baby unit not work? The baby unit may not be in the correct connection. Check your network and the connection setting.

LIMITED WARRANTY

What does the limited warranty mean?
The warranty of this product means that the holder of a valid proof of purchase ("Consumer", or "you") has the right to claim compensation from the manufacturer or the distributor of the product in the event of a defect in the product. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes.

What is not covered by the limited warranty?
1. Product that has been subjected to misuse, accident, dropping or other physical damage, improper installation, abnormal use, or other causes.
2. Product that has been damaged due to repair, alteration, modification by anyone other than an authorized service center.
3. Product that has been damaged due to fire, flood, theft, or other causes.
4. Product that has been damaged due to fire, flood, theft, or other causes.

How to claim the limited warranty?
1. Please send the product to the manufacturer or the distributor of the product in the event of a defect in the product. The product must be accompanied by a valid proof of purchase and a completed warranty claim form. The product must be accompanied by a valid proof of purchase and a completed warranty claim form. The product must be accompanied by a valid proof of purchase and a completed warranty claim form.

What does the limited warranty mean?
The warranty of this product means that the holder of a valid proof of purchase ("Consumer", or "you") has the right to claim compensation from the manufacturer or the distributor of the product in the event of a defect in the product. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes.

What is not covered by the limited warranty?
1. Product that has been subjected to misuse, accident, dropping or other physical damage, improper installation, abnormal use, or other causes.
2. Product that has been damaged due to repair, alteration, modification by anyone other than an authorized service center.
3. Product that has been damaged due to fire, flood, theft, or other causes.
4. Product that has been damaged due to fire, flood, theft, or other causes.

How to claim the limited warranty?
1. Please send the product to the manufacturer or the distributor of the product in the event of a defect in the product. The product must be accompanied by a valid proof of purchase and a completed warranty claim form. The product must be accompanied by a valid proof of purchase and a completed warranty claim form. The product must be accompanied by a valid proof of purchase and a completed warranty claim form.

What does the limited warranty mean?
The warranty of this product means that the holder of a valid proof of purchase ("Consumer", or "you") has the right to claim compensation from the manufacturer or the distributor of the product in the event of a defect in the product. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes. The warranty is limited to the product and its accessories. It does not cover the product or its accessories if the product or its accessories are damaged or destroyed by fire, flood, theft, or other causes.

What is not covered by the limited warranty?
1. Product that has been subjected to misuse, accident, dropping or other physical damage, improper installation, abnormal use, or other causes.
2. Product that has been damaged due to repair, alteration, modification by anyone other than an authorized service center.
3. Product that has been damaged due to fire, flood, theft, or other causes.
4. Product that has been damaged due to fire, flood, theft, or other causes.

How to claim the limited warranty?
1. Please send the product to the manufacturer or the distributor of the product in the event of a defect in the product. The product must be accompanied by a valid proof of purchase and a completed warranty claim form. The product must be accompanied by a valid proof of purchase and a completed warranty claim form. The product must be accompanied by a valid proof of purchase and a completed warranty claim form.