 
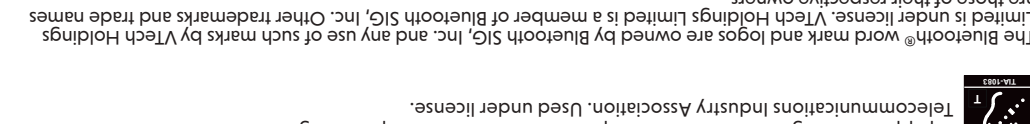 


Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

DECT 6.0 cordless telephone with BLUETOOTH® wireless technology



When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth or a dry, soft cloth.
4. **CAUTION:** Do not install the telephone base at a height above 2 meters.
5. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub, or a swimming pool, or in a wet basement or shower.
6. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
7. Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
8. Holes and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or under a radiator or heat register. This restriction also applies to the handset.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
10. Do not allow anything to rest on the power cord. Do not install this product where the cord can be walked or tripped over. If the cord is run into this product through the slots in the telephone base or handset because there may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Do not attempt to repair or modify the product. Do not attempt to change the product in any way.
12. To avoid dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
13. Do not overload wall outlets and extension cords.
14. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls which are indicated by the manufacturer.
 - If the power cord has been damaged in any way.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
15. Do not attempt to make any repairs. Do not change in any way.
16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
17. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment where there is a risk of fire or explosion. A risk of fire or explosion is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents, gas solenoids vapors, etc.); a leak of natural gas; or other flammable or explosive gases.
18. The power adapter is intended to be correctly oriented in a vertical or floor-mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under the table top or cabinet outlet.
19. Only use the type of telephone or telephone equipment that the manufacturer has indicated is easily accessible.
20. **⚠ CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries of type 2344 (3.6V) or 2345 (3.0V). Do not dispose of batteries that they may explode.
21. Use only the adapter included in this product. Incorrect adapter polarity or voltage can seriously damage the product.
22. Base unit power adapter: Output: 6V DC @ 600mA.
23. Charger power adapter: Output: 6V DC @ 400mA.

SAVE THESE INSTRUCTIONS

Battery

• Only use the batteries provided for replacement. To order a replacement, visit our website at www.vietchphones.com or call 1 (800) 995-9511.

• In Canada, visit our website at www.vietchcanada.com or call 1 (800) 267-7377.

• Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.

• Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin.

• Exercise care in handling the batteries in order not to create a short circuit with conductive materials.

WHAT'S IN THE BOX



ets for IS8251-4
ets for IS8251-5

1 Connect the telephone base
If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.

2 Install the battery
THIS SIDE UP
BATTERY
INSTALL HERE

3 Connect the charger

4 Charge the battery
12 hrs

TIPS
Wall Mount Installation (Optional)

 
 
 
 
 
- If you want to mount your telephone on a wall, you have to purchase a wall mount bracket, which is sold separately from IS8251. With a wall mount bracket, you can attach your telephone to a standard dual-stud telephone wall mounting plate.
- The wall mount bracket is an accessory of IS8251 and it is available at <https://www.vtechphones.com/W2001>. Scan the QR code for more details before your purchase.

After you install your telephone or power returns following a power outage and battery depletion, the handset and telephone base will prompt you to set the date and time, and to configure the Smart call blocker* and answering system through voice guide.

Date and time

Follow the steps below to set the date and time. For example, if the date is 25 July, 2019, and the time is 12:05 PM:

When the handset and telephone base prompt you to set the date and time:

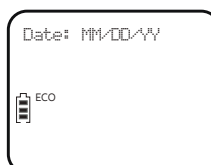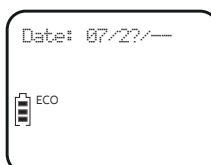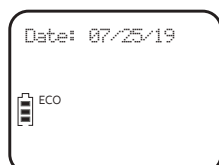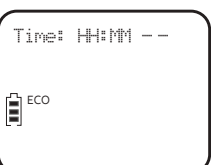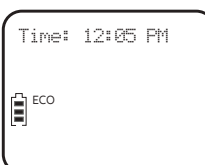① Enter the date.

 
 
② Press **SELECT**.

③ Enter the time.

④ Press **SELECT**.

Follow the following steps to set the date and time if you skipped the prompt.

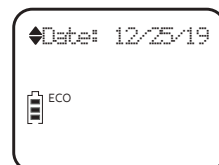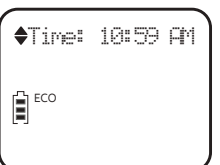

① Press **MENU**.

② Press **▼/▲** to scroll to **Set date/time**, then press **SELECT**.

 
 
③ Enter the date, then press **SELECT**.

④ Enter the time, then press **SELECT**.

Voice guide for Smart call blocker / Answering system

After setting the date and time, the telephone base will prompt if you want to set Smart call blocker, and the answering system. For more details, see **Use voice guide to set Smart call blocker** in the **Introducing Smart call blocker** leaflet and **Use voice guide to set Answering system** in the online help topics.



When the telephone base prompts you to set up the Smart call blocker via voice guide:

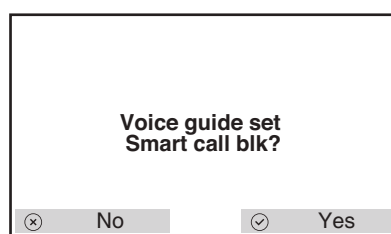Setup your Smart call blocker by inputting the designated numbers as instructed in the voice guide.

① Press **YES** on the telephone base to start voice guide setup.

  When the telephone base prompts you to set up the answering system via voice guide:

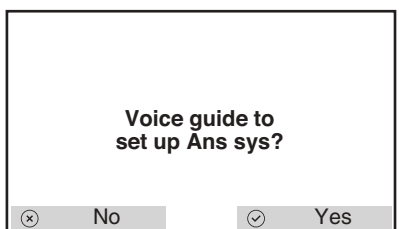



Setup your answering system by inputting the designated numbers as instructed in the voice guide.


② Press **YES** on the telephone base to start voice guide setup.

*Includes licenced GaiTel™ technology. GaiTel™ is a trademark of Truecall Group Ltd

 Add a speed dial number

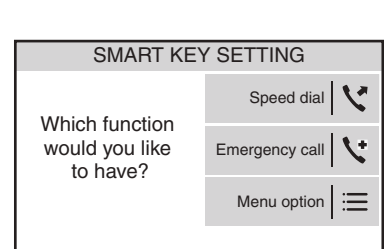

 - 1 Press **Add** to add a Smart key function.
- 2 Press **Speed dial**.

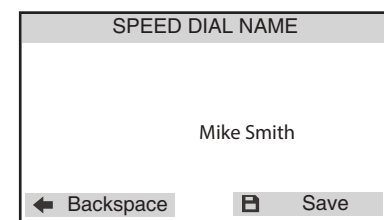

③ Enter the speed dial number, then press **SAVE**.

① Press **Add** to add a corresponding function.

② Press **Emergency call**.

③ Enter the emergency number, then press **SAVE**.

① Press **Add** to add a corresponding function.

② Press **Menu option**.

③ Press to choose your desired menu option, then press **SAVE**.

- ① Press **MENU** on the telephone base.
- ② Press **▼/▲** to scroll to the next page, then select **Smart key**.
- ③ Press the desired Smart key you want to reset.
- ④ Press **YES** to reset.

Make a home call

- 
Handset:
 Press  - OR -  - OR - 
- Enter the phone number.

Answer a home call

- 
Handset:
 Press  - OR - 
- 

Make a cell call

- 
Handset:
 Press  - OR - 
- Enter the phone number.

Answer a cell call

- 
Handset:
 Press  - OR - 
- 

End a home call

- 
Handset:
 Press  CANCEL
- 

Volume

- 
Handset:
 Press 
- 

End a cell call

- 
Handset:
 Press  CANCEL
- 

For operations and guides to help you using your telephone system, and for latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help.

- Go to <https://help.vtechphones.com/is18251>. OR
- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.
- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.

The diagram illustrates the process of connecting a Bluetooth device to a telephone base. It consists of three numbered steps:

- Step 1:** Press the **MENU** button on the telephone base. The image shows a telephone base with a screen displaying "12:20 pm JAN.2020" and several icons. The "MENU" button is highlighted at the bottom right of the screen.
- Step 2:** Press **▼/▲** to scroll to the next page, then select **Bluetooth**. The image shows a "MENU" screen with two pages. The first page lists "Bluetooth", "Smart key", "Timer", and "Ringers". The second page lists "Set date / time", "Settings", and "Add device". The "Bluetooth" option is highlighted on the first page.
- Step 3:** Press **ADD DEVICE**. The image shows a "BLUETOOTH DEVICE" screen with two entries, "C1" and "C2", both showing "<Empty>". The "Add device" button is highlighted at the bottom right of the screen.

The image contains three screenshots of a device's Bluetooth pairing interface. The first screenshot shows the 'Add device' screen with a list of nearby devices. The second screenshot shows the 'Add cellular' screen with a message to disconnect the BT device. The third screenshot shows the 'Add cellular' screen with a message to place the phone next to the base.

ADD DEVICE

Select which type of Bluetooth device you would like to add

- Add cellular
- Add headset

ADD CELLULAR

STEP 1: If cell is connected to BT device, please disconnect it.

Next

ADD CELLULAR

STEP 2: Place cell phone next to base.

Next

④ Press **Add Cellular**.

⑤ Press **NEXT**.

⑥ Turn on the bluetooth feature of your cell phone, then press **NEXT**.

7 Once your cell phone finds your telephone

① Press **MENU** on the telephone base.


② Press **▼/▲** to scroll to the next page, then select **Bluetooth**.

③ Press **ADD DEVICE**.


The image contains three screenshots of a phone's settings menu, specifically the 'Bluetooth' section. The first screenshot shows the 'Add cellular' and 'Add headset' options. The second screenshot shows the instruction: 'STEP 1: If headset is connected to cellphone, please disconnect it.' The third screenshot shows the instruction: 'STEP 2: Set headset to discoverable mode.' Below each screenshot is a numbered instruction: ④ Press **Add Headset**, ⑤ Press **NEXT**, and ⑥ Set your headset to discoverable mode, then press **NEXT**.

- 7 Place your headset next to the base to continue the pairing process.

 Before downloading a directory, make sure the cell phone is paired, active, and connected to your IS8251.

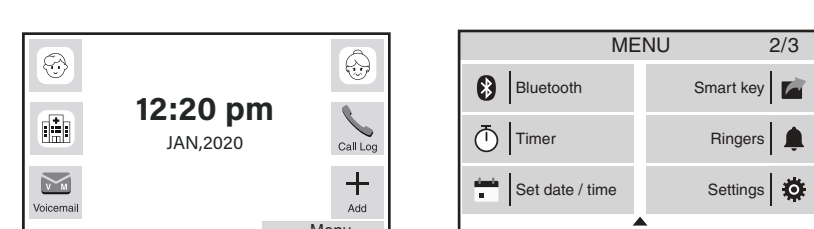


 - ① Press **MENU** on the telephone base.
- ② Press **▼/▲** to scroll to the next page, then select **Bluetooth**.

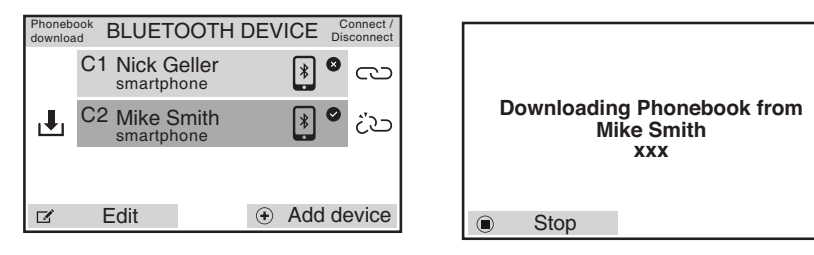


- Press **Phonebook download** using the corresponding Smart key.

 Make sure your cell phone is paired and connected to your telephone system via Bluetooth.

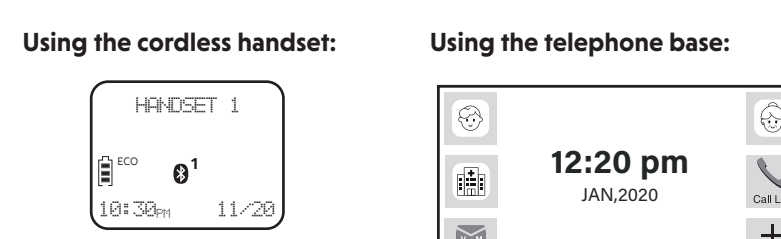

1 Press **VOICE** on the handset.

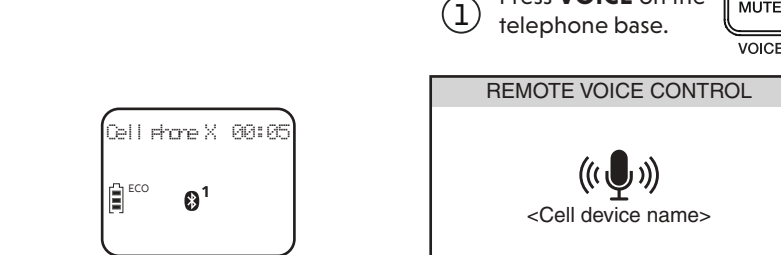 

2 When the handset or telephone base plays the confirmation tone as forward by the cell phone's voice app, start speaking toward the handset or telephone base, and then wait for feedback. Make reply to the voice app's feedback, if necessary.

If you accidentally set the LCD language to Spanish or French, you can change LCD language back to English while the telephone is not in use:

- On the telephone base, press **MENU** and then enter **364#**.
- On the handset, press **MENU** and then enter ~~**364#**~~.


CALLER ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.





Save a caller ID log entry to the phonebook

Handset:

 When your desired caller ID entry displays on the handset or telephone base screen:

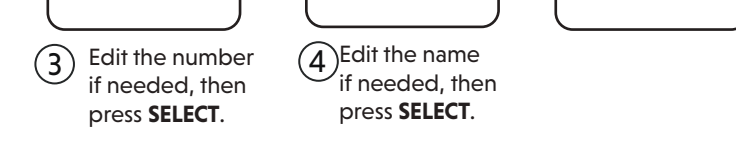

Telephone base:

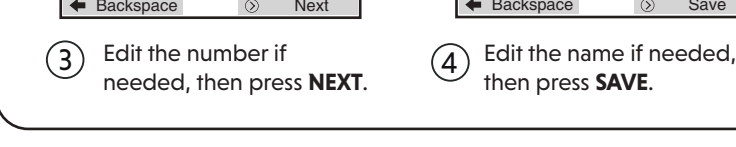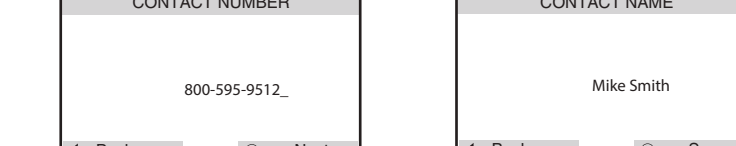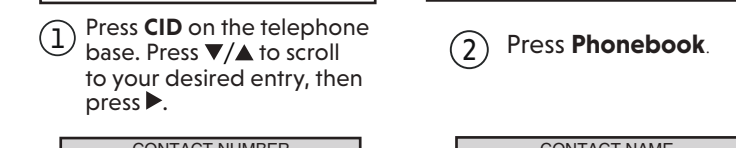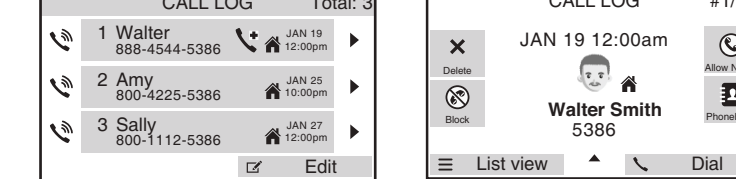    

ANSWERING SYSTEM


About the built-in answering system and voicemail service

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply).

Built-in answering system VS Voicemail service



	BUILT-IN ANSWERING SYSTEM	VOICEMAIL SERVICE
SUPPORTED BY	Telephone system	Telephone service provider
SUBSCRIPTION	No	Yes
FEES	No	May apply
ANSWER INCOMING CALLS	- After 4 rings by default. - It can be changed in the handset or the telephone base menu.	- Usually after 2 rings. - It can be changed by contacting your telephone service provider.
STORAGE	Telephone base	Server or System
DISPLAY NEW MESSAGES	- Handset - XX New Msg - Telephone base - 2	- Handset - 4 - Telephone base - 2
RETRIEVE MESSAGES	- Press 6 on the telephone base; OR - Press MENU, and then select Play messages on the handset; OR - Access remotely with an access code.	Press 6 on the dialpad, and enter an access number from your telephone service provider.

 Options while message playback

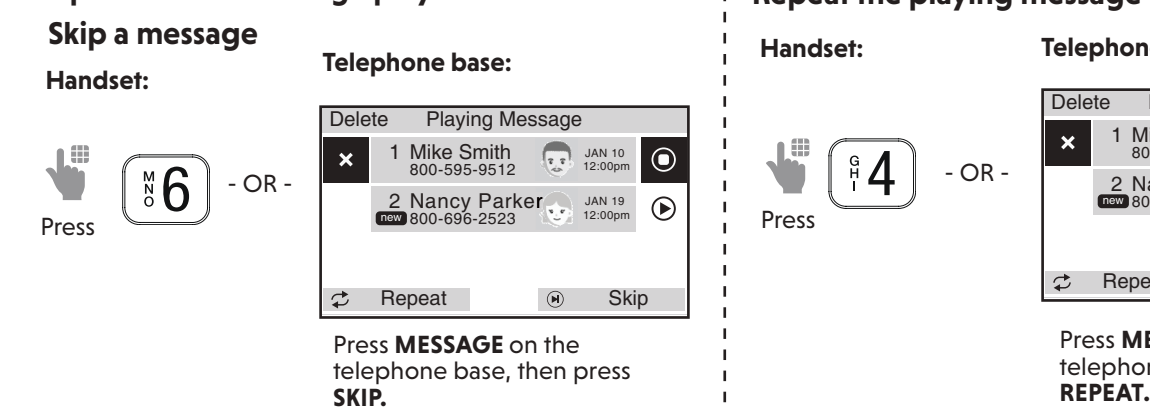


Set number of rings

  
You can set your answering system to answer calls at least two rings earlier than your voicemail service. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Thus, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second call can leave a voicemail message.

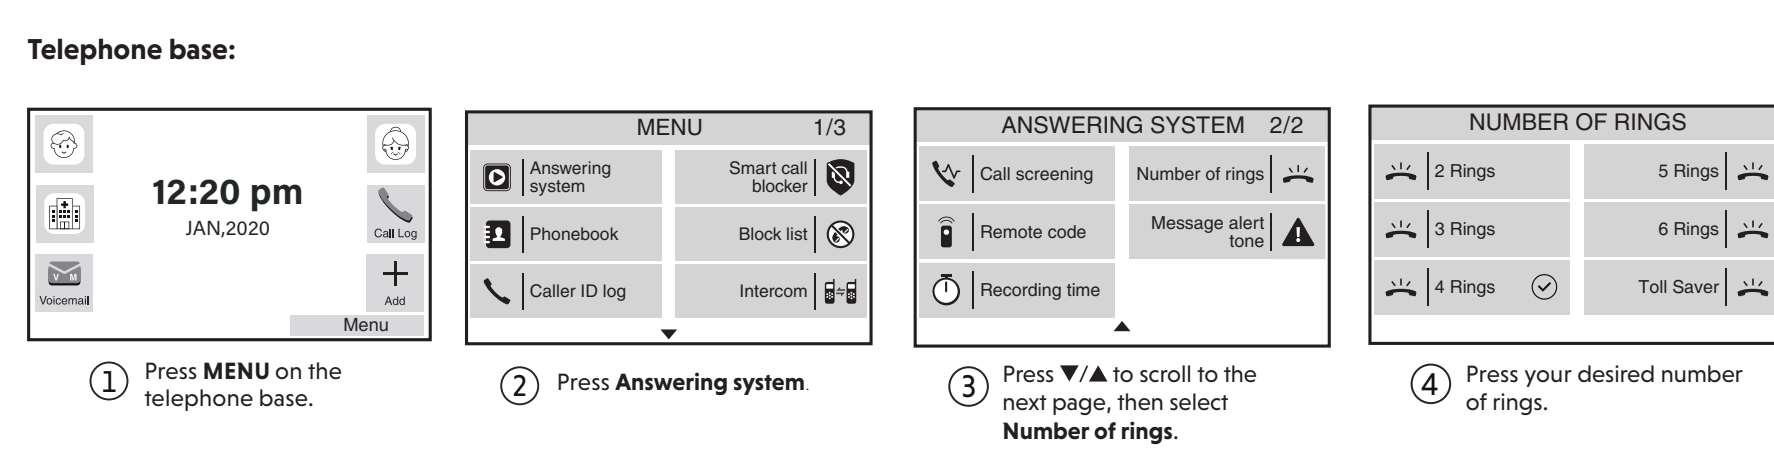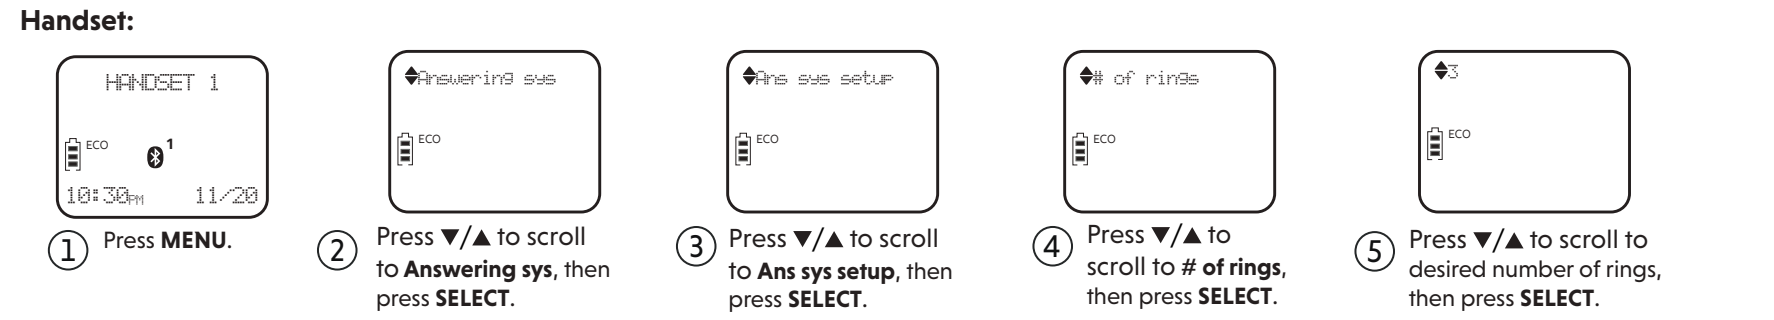

Repeat the playing message

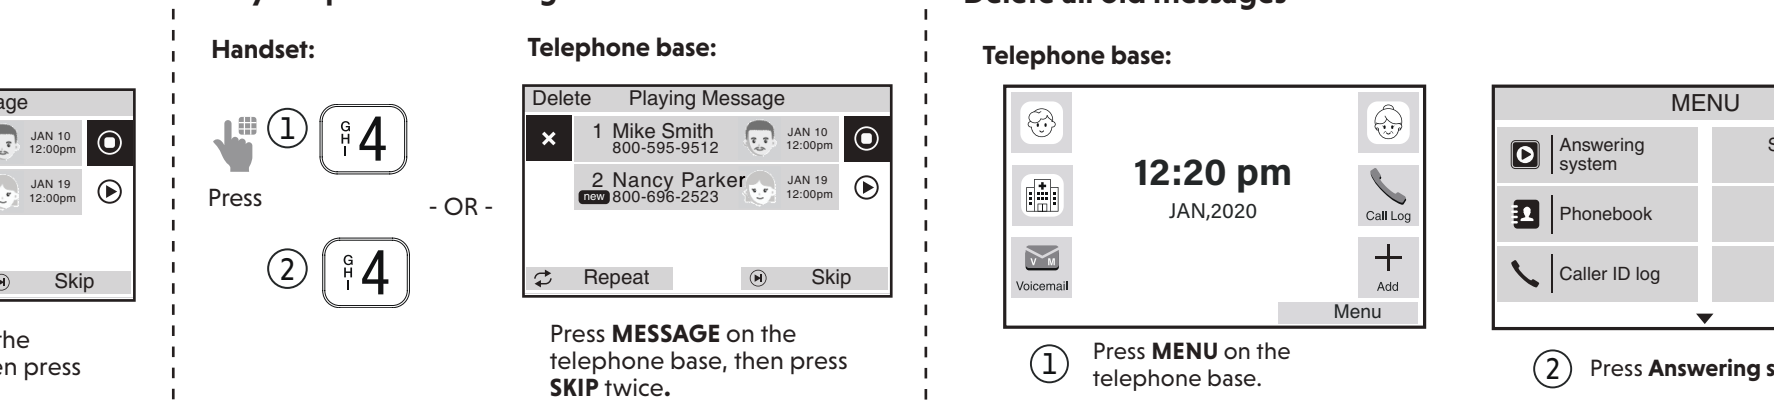 

Play the previous message

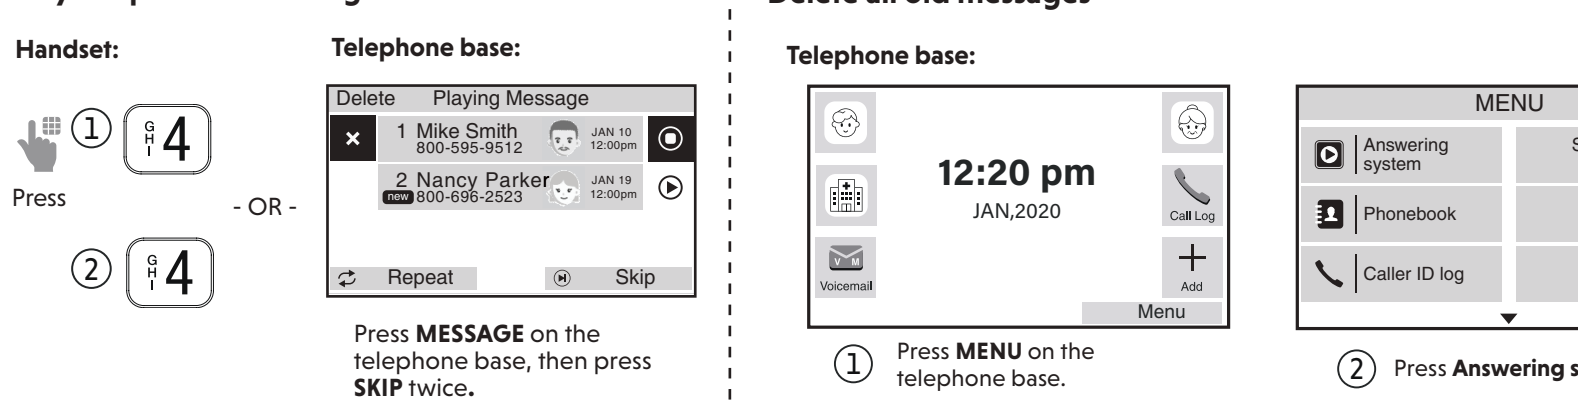 

PHONEBOOK

 
Phonebook

The phonebook can store up to 1,000 entries, which are shared by all handsets and the telephone base. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.


Add a phonebook entry

Handset:

Telephone base:


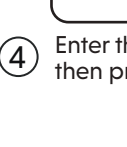


Telephone base:

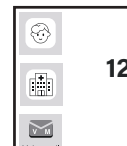 





Review phonebook entries

  When your desired phonebook entry displays:

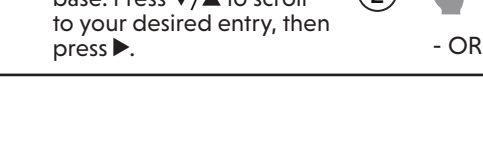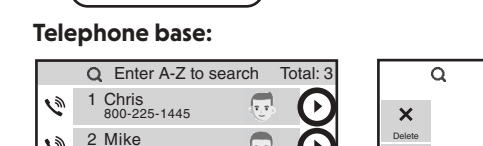

Delete a phonebook entry

    When your desired phonebook entry displays:

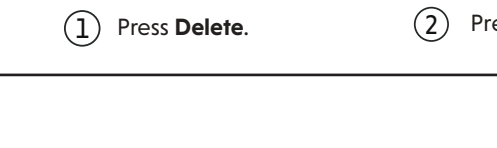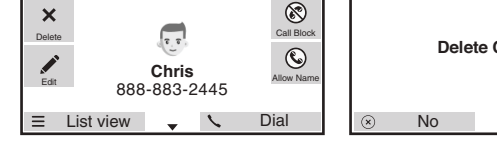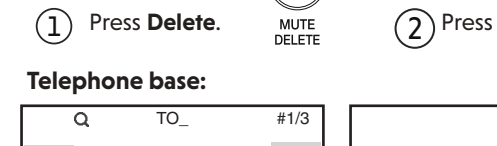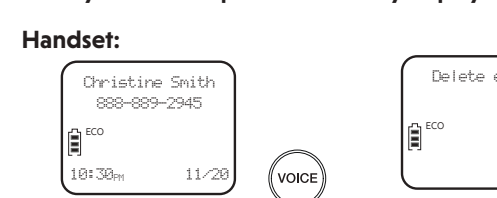

FOR C-UL COMPLIANCE ONLY

Measures de sécurité importantes

- Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :
1. Lisez et comprenez bien toutes les instructions.
2. Observez toutes les instructions et mises en garde inscrites sur l'appareil.
3. Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol.
4. N'utilisez qu'un chiffon doux et légèrement humecté.
5. N'utilisez pas de produits près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
6. Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
7. Évitez d'installer le système téléphonique dans des endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électroniques ou électrochimiques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.
8. Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément d'éclairage à incandescence. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
9. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiquée sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
10. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire.
11. N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de liquides dans l'appareil.
12. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant la couverture, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
13. Ne surchargez pas les prises de courant et les rallonges.
14. Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de Vtech dans les cas suivants :
 - Lorsque le cordon d'alimentation est endommagé ou écorché.
 - Si le liquide a été échapé dans l'appareil.
 - Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
 - Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.
 - Si le produit a été échapé et que le socle et/ou le combiné a été endommagé.
 - Si le produit affiche une nette diminution de sa performance.
15. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
16. N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuge. En certaines circonstances, une flamme cachée pourrait provoquer lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est débranché du socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flamme dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre des endroits où on utilise de l'oxygène médical sans ventilation adéquate, des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.), une fuite de gaz naturel, etc.
17. Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'on mode de conversation.
18. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est branché dans une prise au plafond ou sous une table/ armoire.
19. Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.
20. **MISE EN GARDE:** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeables incluses ou les piles de recharge (BT12342/BT262342). N'incérnez pas les piles d'elles-ci risquent d'explosion, de brûlures, de dommages à l'environnement et de blessures. N'incérnez pas les piles d'elles-ci risquent d'explosion, de brûlures, de dommages à l'environnement et de blessures. N'incérnez pas les piles d'elles-ci risquent d'explosion, de brûlures, de dommages à l'environnement et de blessures.
21. N'utilisez que les adaptateurs inclus avec le produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.

CONSERVEZ CES INSTRUCTIONS

Pile

- N'utilisez que la pile incluse ou l'équivalent.
 - Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebuts auprès des autorités locales.
 - N'ouvrez pas et ne moulez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique s'il avale.
 - Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.
 - Réchargez la pile incluse avec cet appareil, selon les instructions et limites spécifiées dans ce guide d'utilisation.
- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may cause undesired operation. Privacy of communications may not be ensured when using this telephone. To ensure safety of users, the FCC/ISED has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander operating the intended use of the product. This product has been tested and found to comply with the FCC/ISED criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.
- This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B).

Stimulateurs cardiaques implantés dans l'organisme

Les stimulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil) : L'organisme Wireless Technology Research, LLC (WTR), une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins :

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
 - Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
 - Ils doivent utiliser le téléphone sans fil en appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.
- L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de stimulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

À propos des téléphones sans fil

Confidentialité : Les mêmes caractéristiques qui constituent des avantages pour les téléphones sans fil affichent également des restrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées par des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que celles des téléphones à cordons.

Possibilité d'interférence aux téléviseurs : Certains téléviseurs ont des fréquences pouvant causer des interférences aux téléviseurs et aux magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.

Piles rechargeables : Manipulez les piles avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le chargeur.

Les bloc-piles rechargeables à l'hydruure métallique de nickel : Jetez ces bloc-piles de manière écologique et sécuritaire. Ne les incérnez pas et ne les perdez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.

THE RBRC® SEAL

The RBRC seal on the nickel-metal hydride battery indicates that Vtech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. The RBRC program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

Vtech's participation in RBRC makes it easy for you to drop off the spent battery at local retailers participating in the RBRC program or at authorized Vtech product service centers. Please call 1 (800) 8 BATTERY® for information on NI-MH battery recycling and disposal bans/restrictions in your area. Vtech's involvement in this program is a commitment to protecting our environment and conserving natural resources. The RBRC Seal and 1 (800) 8 BATTERY® are registered trademarks of Call2recycle, Inc.

FCC, ACTA and IC REGULATIONS
NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if it is not used and properly shielded, it may cause interference to other equipment. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may cause undesired operation. Privacy of communications may not be ensured when using this telephone. To ensure safety of users, the FCC/ISED has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander operating the intended use of the product. This product has been tested and found to comply with the FCC/ISED criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The manufacturer of this Vtech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will Vtech do if the Product is not free from defects in materials and workmanship during the limited warranty period "Materially Defective Product"?
During the limited warranty period, Vtech's authorized service representative will repair or replace a Vtech's product, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at Vtech's option, is your exclusive remedy. Vtech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?
The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If Vtech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty, whichever is longer.

What is not covered by this limited warranty?
This limited warranty does not cover:

- 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion.
- 2. Product that has been subjected to contact with liquid, wet rain, extreme humidity or heavy precipitation, sand, dirt or the like; but then only to the extent the damage was not caused by incorrectly securing the waterproof handset's protective elements, for example, failing to properly close a seal, or such protective elements are damaged or missing (e.g., a cracked battery door), or subjecting a Product to conditions beyond its stated specifications or limits (e.g. 30 minutes in 1 meter of fresh water).
- 3. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of Vtech.
- 4. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems.
- 5. Product to the extent that the problem is caused by use with non-Vtech accessories;
- 6. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible;
- 7. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes);
- 8. Product returned without a valid proof of purchase (see Item 2 below); or
- 9. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?
To obtain warranty service in the United States of America, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or dial 1 (800) 267-7377.

COUNTDOWN TIMER

You can use the timer, which is only available on the telephone base, to count down from a specified time. There are several ways to set the duration of time. When time is up, the alert sounds and a text message pops up.

