

Main menu icons

Main menu


Sub-menu


Lullaby



Lullaby volume

- Adjust the baby unit's speaker volume when playing the lullaby.

Play



1 2 3 4

- Select one of the four melodies to play, or stop a lullaby.

Warning icons and messages



Battery low at Parent Unit

The battery is empty and needs to be recharged.

Operation is in progress.



Temperature too high

The temperature detected by the baby unit is higher than the desired temperature alert range.



Temperature too low

The temperature detected by the baby unit is lower than the desired temperature alert range.



No Link to Camera

The parent unit is searching for baby units on the link between the baby unit and the parent unit is lost.

The parent unit is connected to AC power.

Parent Unit Indication Lights

LINK

- On when the parent unit is linked to the baby unit.
- Flashes when the link to the baby unit being viewed is lost.



- On when the parent unit is connected to AC power, or the battery is charging.
- Flashes when the parent unit battery is low and needs charging.
- Off when the parent unit is disconnected from AC power.

Adjust the sound sensitivity of the baby unit

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds that transmit to the parent unit. The VOX sensitivity level is preset to the highest level.

VOX SENSITIVITY LEVEL	Highest	High	Medium	Low	Lowest
DESCRIPTION	The parent unit speaker is constantly on, and you will hear all sounds (including babbling and louder sounds from your baby's room).	The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for loud crying or screaming sounds from your baby. It remains quiet when your baby makes soft sounds.

Sound activated screen

When sound activation is on, the parent unit screen stays off to save power when the baby unit detects no sound. Once the baby unit detects sounds that are louder than the chosen sound sensitivity level, the parent unit screen turns on automatically. It will then turn off again after 50 seconds of no sound detection.

The dim mode is to help you save the parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

NOTE

- While the screen is dimmed, any keypad or alert message will trigger the screen to return to the parent brightness level. After 10 minutes of inactivity, it will resume to dim mode.

NIGHT VISION

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and appears on the screen.

NOTES

- It is normal to see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.
- When the infrared LEDs are on, the images are in black and white. This is normal.

Tip

- Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

Status check - Two baby units

If you are viewing baby unit **1**, the **POWER** LED light of baby unit **1** turns on. As baby unit **2** is not being viewed, its **POWER** LED light flashes.

1

2

NOTE

- If you power on only one baby unit, your parent unit may display and the **LINK** LED light will flash.

Change different views - Patrol

- Press **MENU** when the parent unit is idle.
- Press **◀** or **▶** to choose .
- Press **▼** or **▲** to choose , then press **SELECT** to confirm your selection.

Change different views - Single-cam

- Press **MENU** when the parent unit is idle.
- Press **◀** or **▶** to choose .
- Press **▼** or **▲** to choose between and , then press **SELECT** to confirm the baby unit you would like to view.

Items to purchase

 
You will need to purchase the following items separately to mount your baby unit:

- 2 screws
- 2 anchors

NOTE

- The types of screws and anchors you need depend on the composition of the wall.

1



Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount holes on the baby unit.

2



 
Drill two holes in the wall (7/32 inch drill bit). If you drill the holes into a stud, go to step 3.

3



Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

4



Align the wall mount holes on the baby unit with the screws on the wall. Slide the baby unit down until it locks into place.

5



Adjust the camera angle.

If you power on only one baby unit, your parent unit may display , and the LINK LED light will flash.

[illegible][illegible][illegible]

Vitech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. Vitech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

Company: Vitech Communications, Inc.
Address: 9020 SW Washington Square Road - Ste 353 Tigard, OR 97223, United States
Phone: 1 (800) 595-9533 in the U.S. or 1 (800) 242-7377 in Canada