


INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: VT05EUS05100

(Front View)

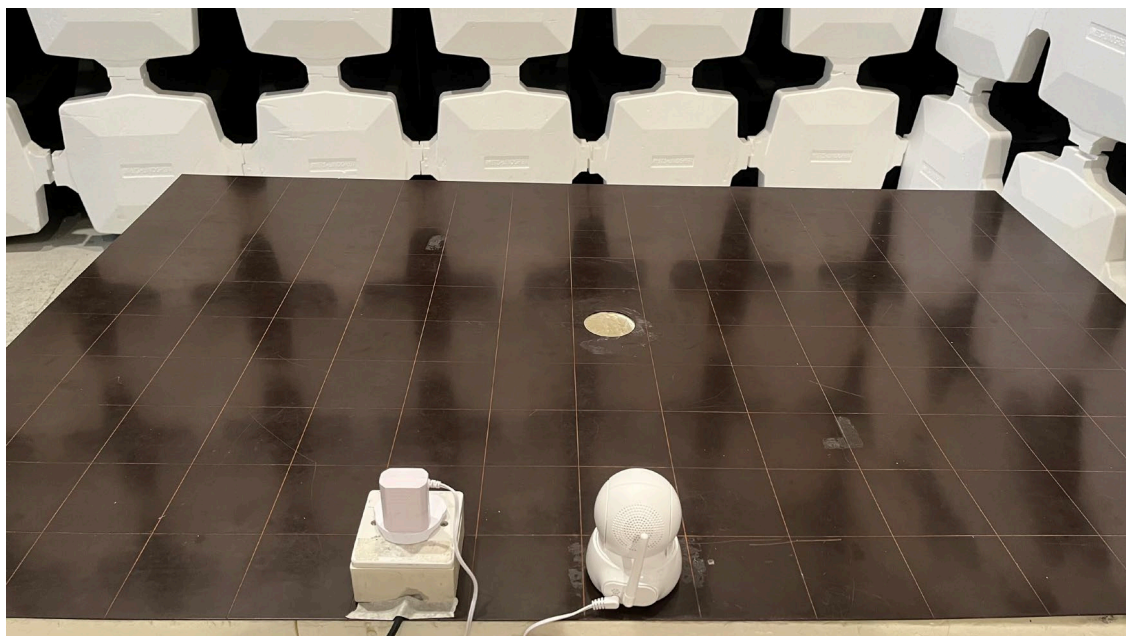

INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: VT05EUS05100

(Back View)



INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: A318-050100W-US2

(Front View)



INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: A318-050100W-US2

(Back View)




INTERTEK TESTING SERVICE

Configuration Photographs

Worst Case Radiated Emissions (Above 1GHz)

(Front View)

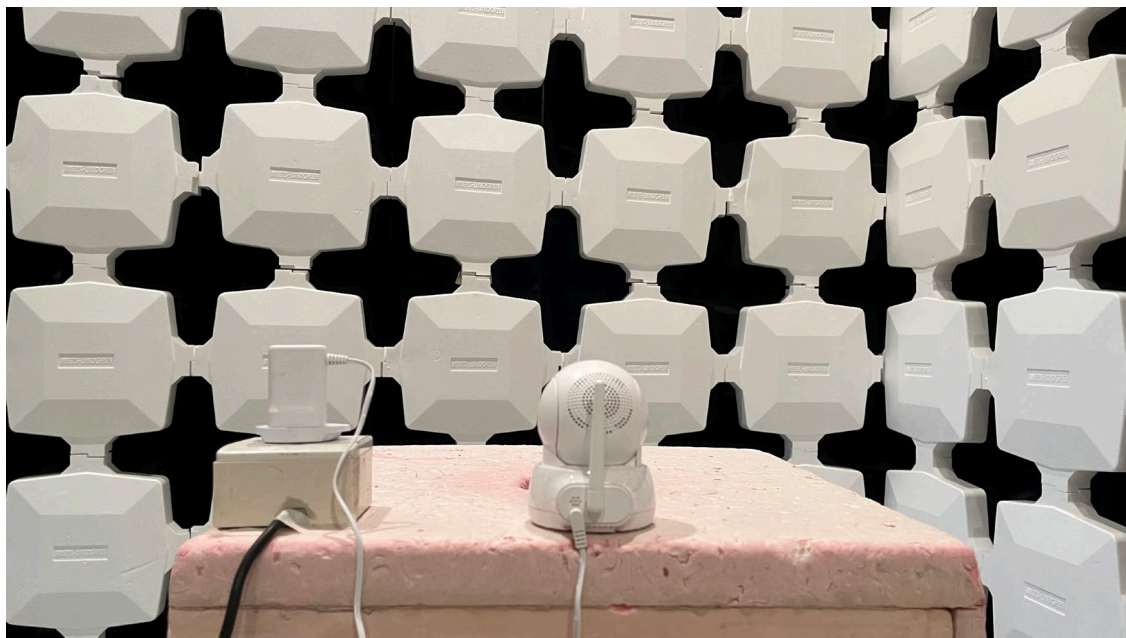

INTERTEK TESTING SERVICE

Configuration Photographs

Worst Case Radiated Emissions (Above 1GHz)

(Back View)




INTERTEK TESTING SERVICE

Configuration Photographs

Conducted Emissions

Adaptor: VT05EUS05100

(Front View)

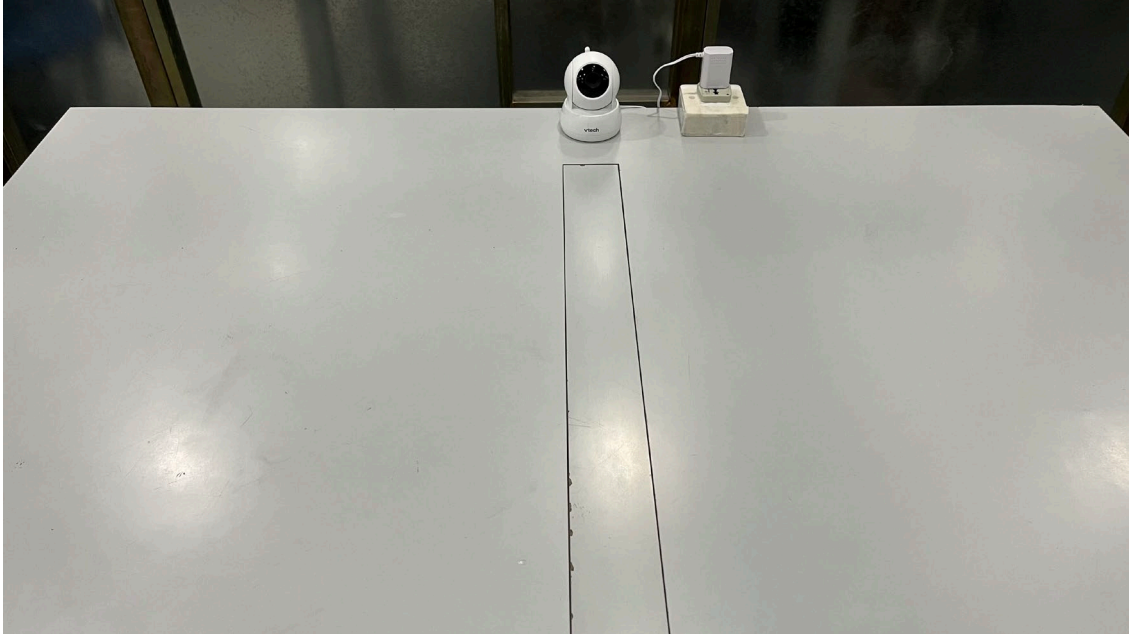


INTERTEK TESTING SERVICE

Configuration Photographs

Conducted Emissions

Adaptor: VT05EUS05100

(Left View)

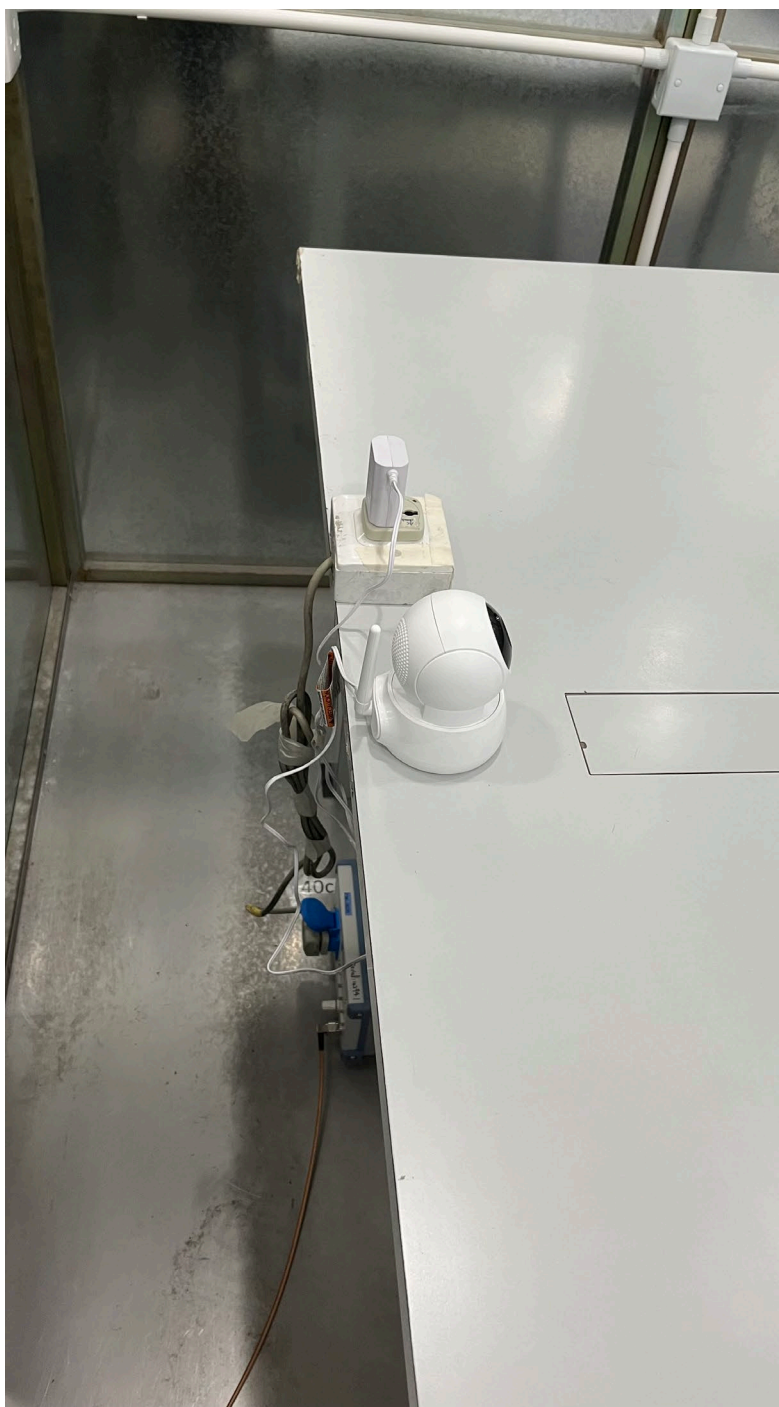

INTERTEK TESTING SERVICE

Configuration Photographs

Conducted Emissions

Adaptor: VT05EUS05100

(Right View)




INTERTEK TESTING SERVICE

Configuration Photographs

Conducted Emissions

Adaptor: A318-050100W-US2

(Front View)

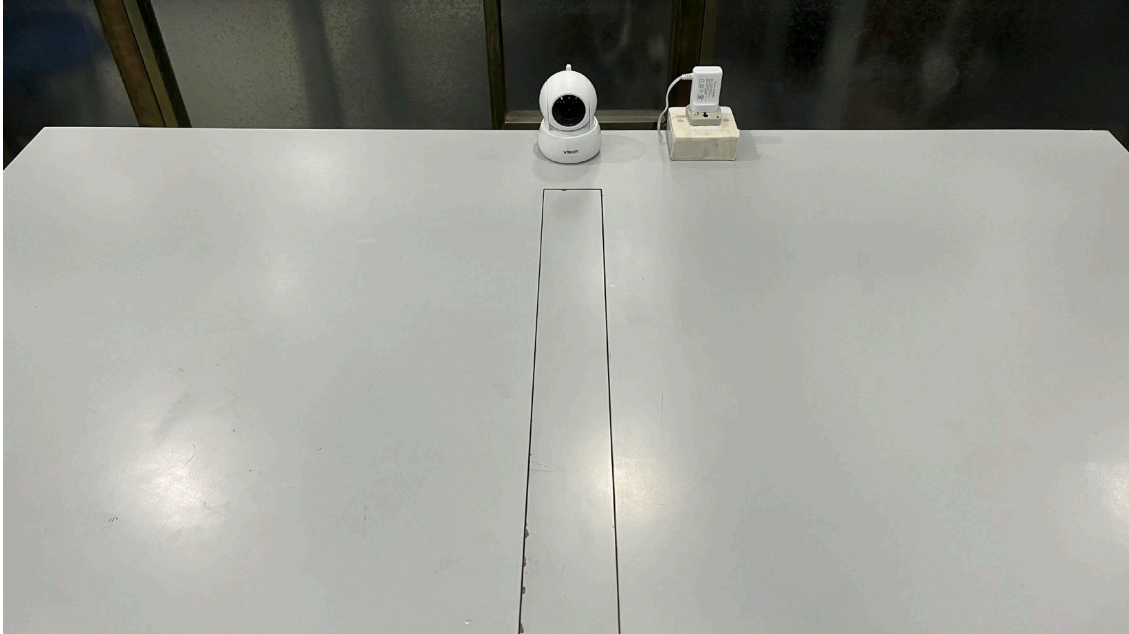

INTERTEK TESTING SERVICE

Configuration Photographs

Conducted Emissions

Adaptor: A318-050100W-US2

(Left View)



INTERTEK TESTING SERVICE

Configuration Photographs

Conducted Emissions

Adaptor: A318-050100W-US2

(Right View)

