


INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: VT05EUS05100

(Front View)

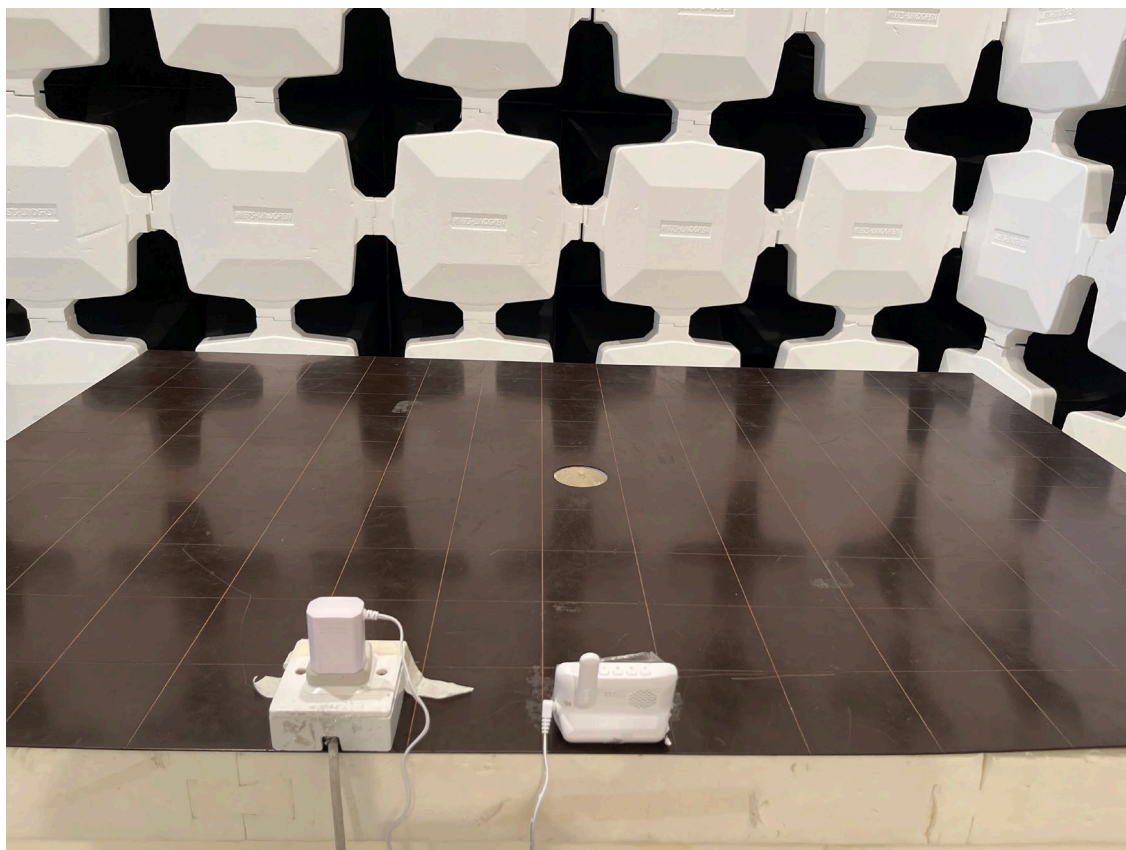


INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: VT05EUS05100

(Back View)

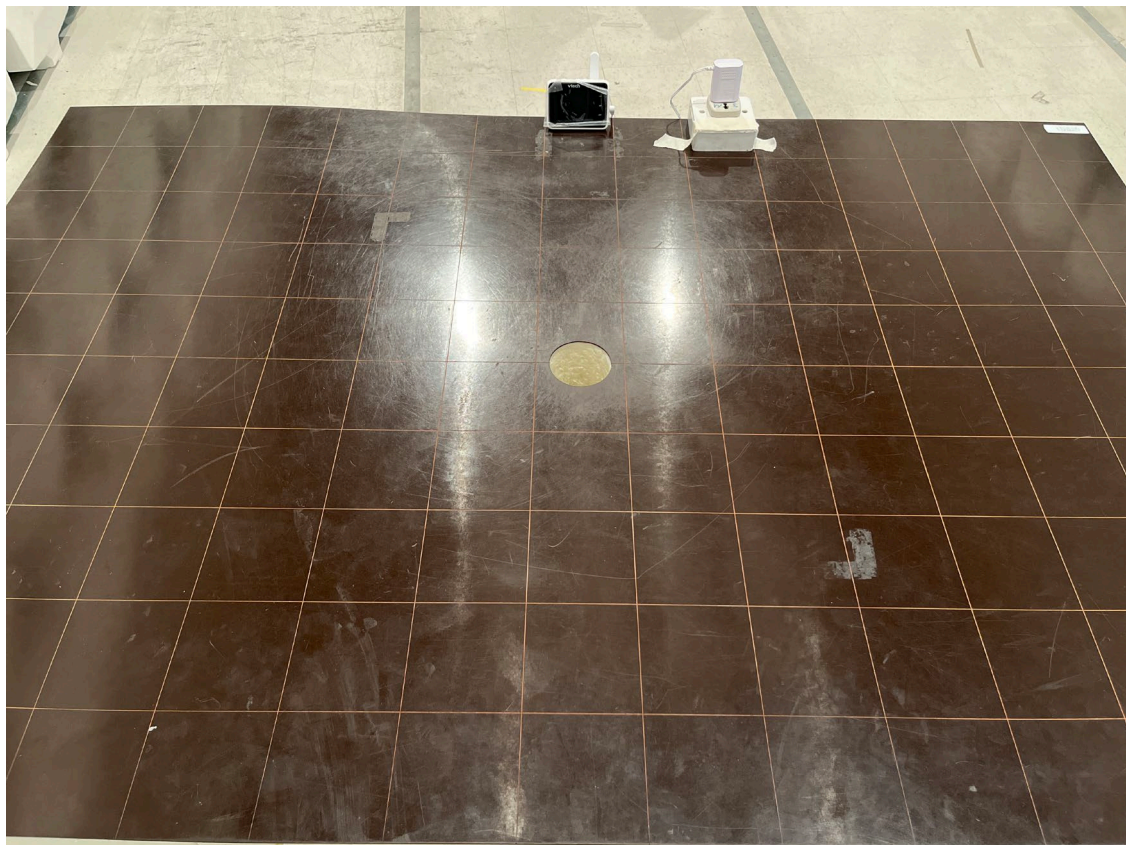


INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (Above 1GHz)

Adaptor: VT05EUS05100

(Front View)

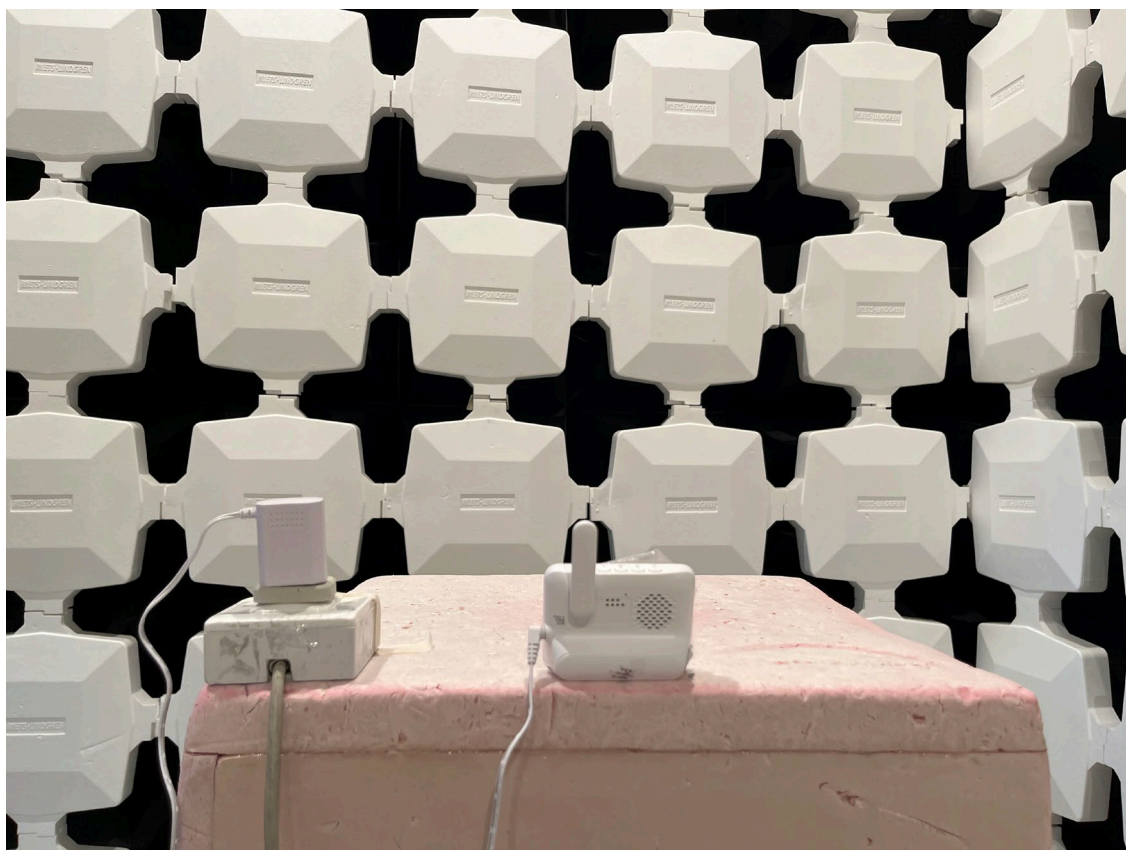

INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (Above 1GHz)

Adaptor: VT05EUS05100

(Back View)



INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: A318-050100W-US2

(Front View)




INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (30MHz - 1GHz)

Adaptor: A318-050100W-US2

(Back View)

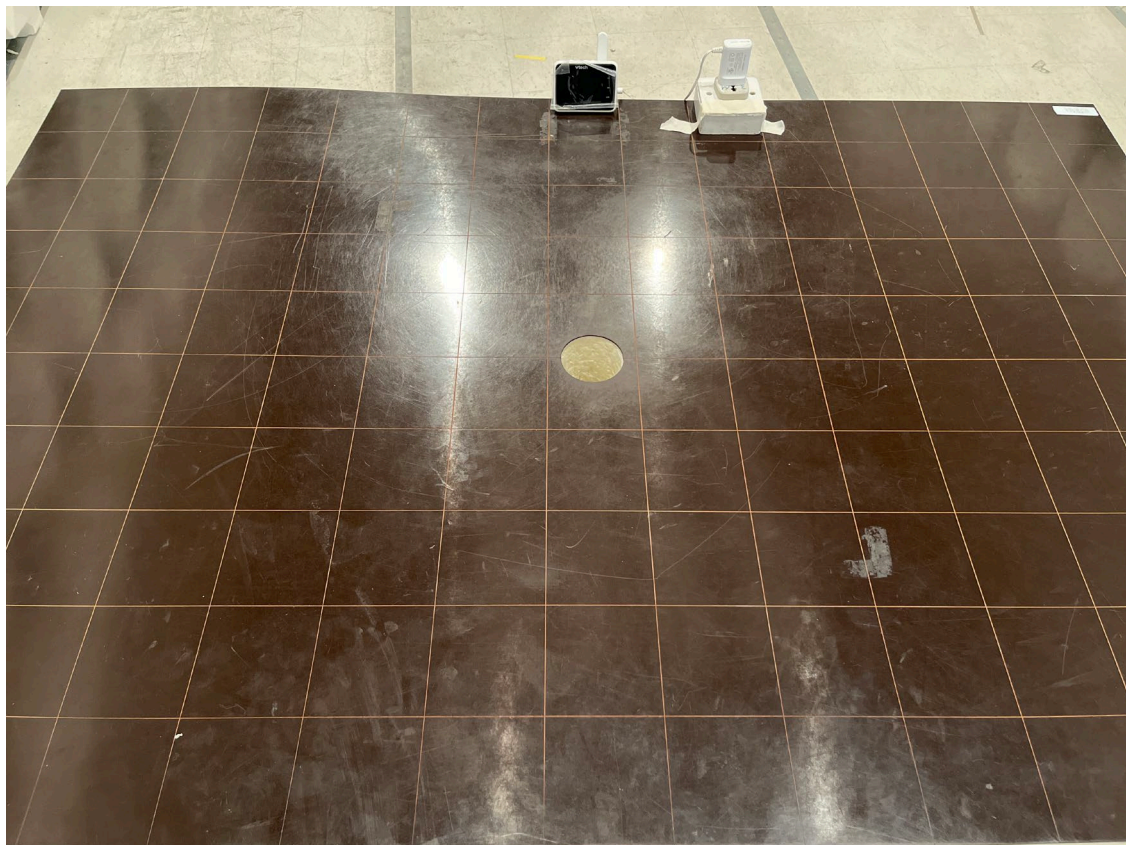


INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (Above 1GHz)

Adaptor: A318-050100W-US2

(Front View)

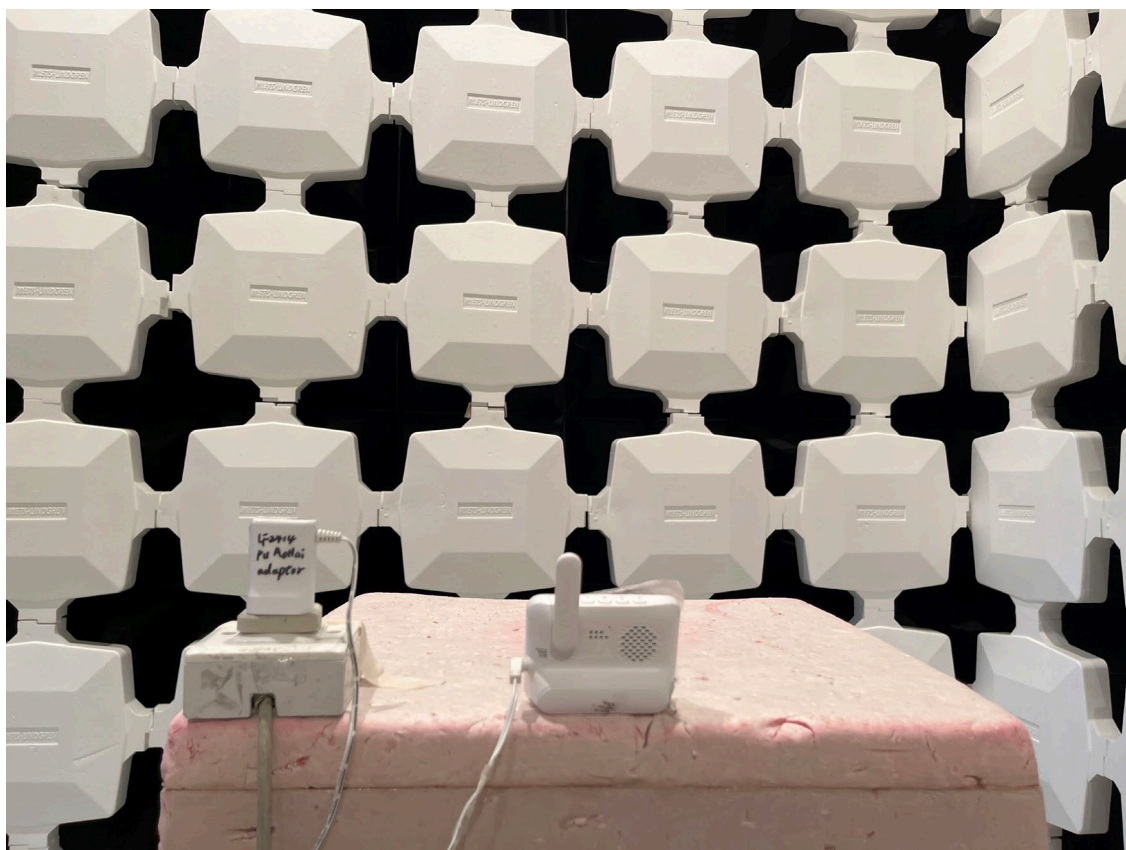

INTERTEK TESTING SERVICE

Configuration Photographs

Radiated Emissions (Above 1GHz)

Adaptor: A318-050100W-US2

(Back View)



INTERTEK TESTING SERVICE

Configuration Photographs

Worst-Case Conducted Emissions

Adaptor: VT05EUS05100

(Front View)




INTERTEK TESTING SERVICE

Configuration Photographs

Worst-Case Conducted Emissions

Adaptor: VT05EUS05100

(Left View)

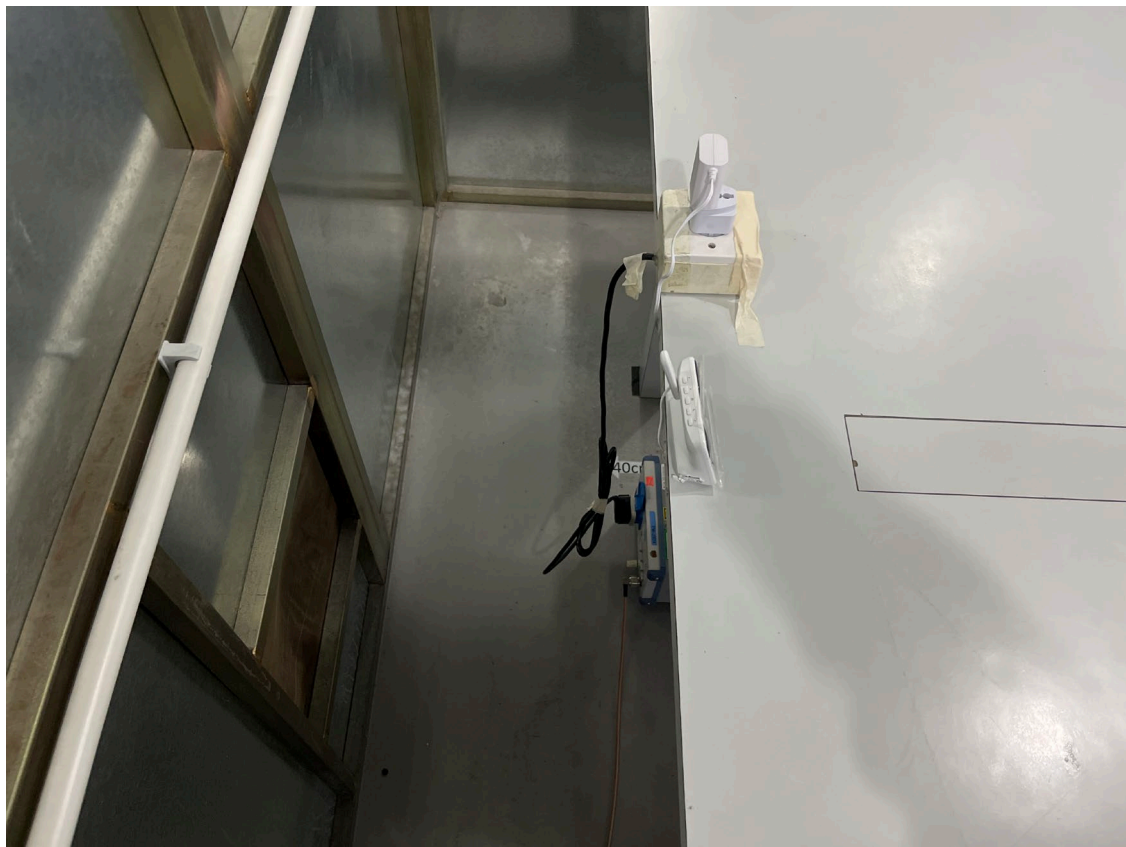

INTERTEK TESTING SERVICE

Configuration Photographs

Worst-Case Conducted Emissions

Adaptor: VT05EUS05100

(Right View)



INTERTEK TESTING SERVICE

Configuration Photographs

Worst-Case Conducted Emissions

Adaptor: A318-050100W-US2

(Front View)



INTERTEK TESTING SERVICE

Configuration Photographs

Worst-Case Conducted Emissions

Adaptor: A318-050100W-US2

(Left View)



INTERTEK TESTING SERVICE

Configuration Photographs

Worst-Case Conducted Emissions

Adaptor: A318-050100W-US2

(Right View)

