

CS6719
CS6719-15
CS6719-16
CS6719-17

CS6719-2
CS6719-26
CS6719-27



(US)



(CA)

 
Scan the QR code for support information




vtech
Abridged user's manual

WHAT'S IN THE BOX

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

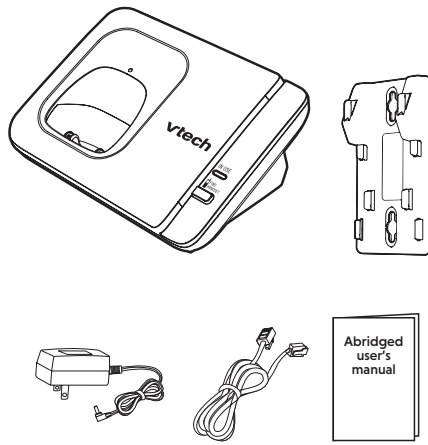

 1 set for CS6719/
CS6719-15/CS6719-16/
CS6719-17
2 sets for CS6919-2/
CS6919-26/CS6919-27

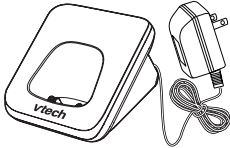


1 set for CS6919-2/
CS6919-26/CS6919-27



Abridged user's manual


INSTALL AND CONNECT | MOUNT (OPTIONAL)

 Install the battery

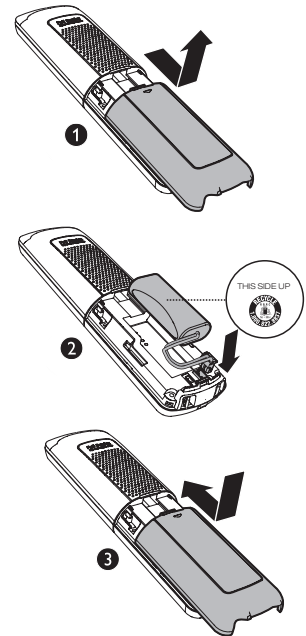


Connect and charge

 Connect the telephone base. If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.

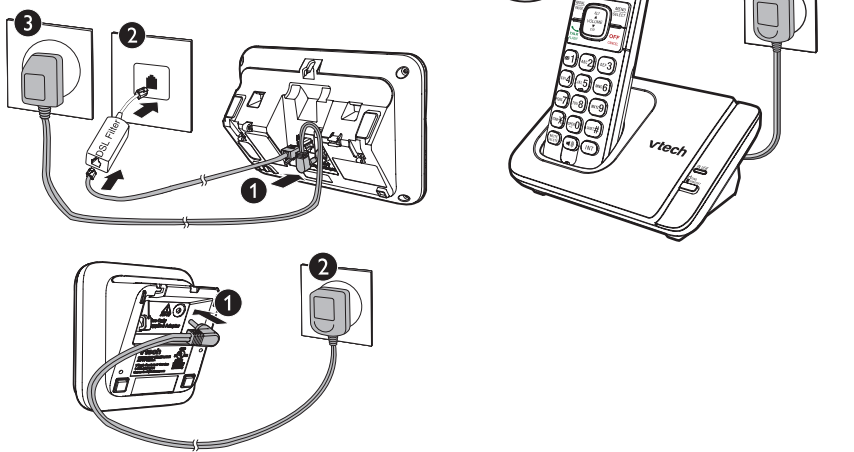

Mount (optional)

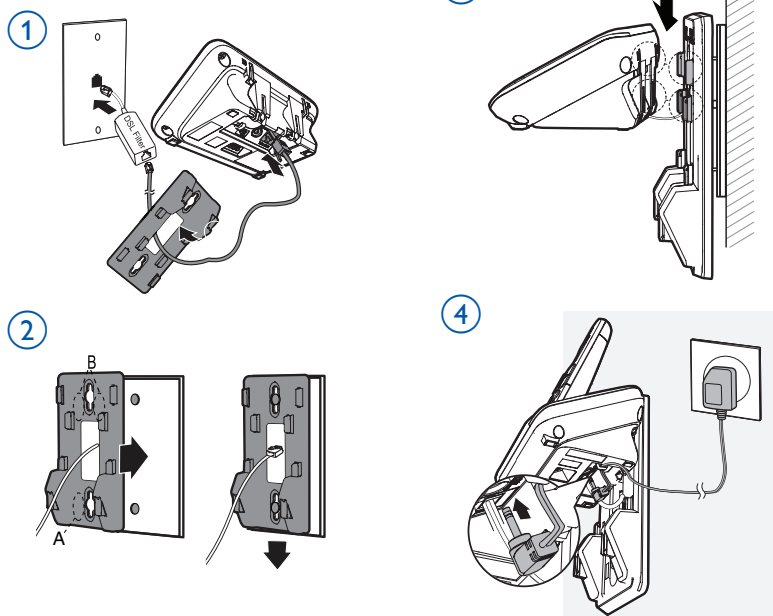 

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Use only with UL listed Bluetooth devices.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- CAUTION:** Do not install the telephone base at a height above 2 meters.
- Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
- Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords.
- Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.

- Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Only put the handset of your telephone next to your ear when it is in normal talk mode.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT162342/BT62342) for the handset. Do not dispose of batteries in a fire. They may explode. Dispose of used batteries according to the instruction.
 - Do not use the battery in following conditions:
 - High or low extreme temperature during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
- Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

Battery

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released

- electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
 - Exercise care in handling batteries in order not to create a short circuit with conductive materials.
 - Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.
- Precautions for users of implanted cardiac pacemakers**
- Cardiac pacemakers (applies only to digital cordless telephones):
- Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:
- Pacemaker patients**
- Should keep wireless telephones at least six inches from the pacemaker.
 - Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
 - Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

 
- Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

SETUP

After the telephone is installed or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time.

Date and time


Follow the steps below to set the date and time. For example, if the date is 25 July, 2024, and the time is 11:07 AM:

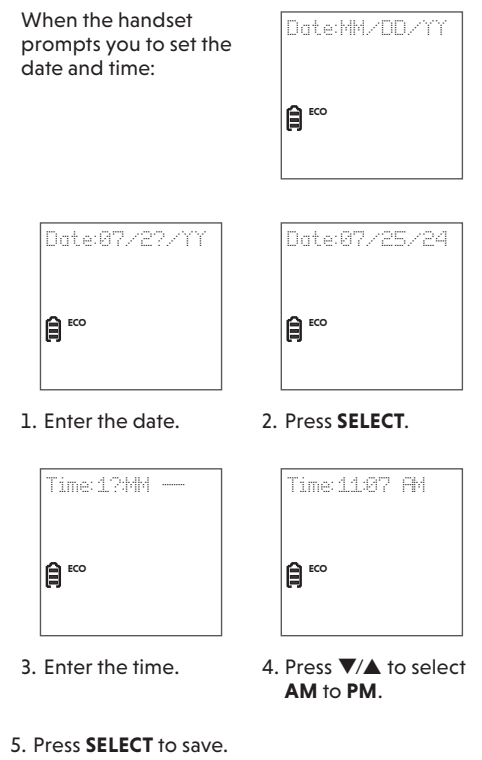

NOTE: If you have skipped the prompt, you can set up again by pressing **MENU**. Scroll to choose **Set date/time** and press **SELECT**. Then, follow the steps above.

Change LCD language settings

 
You can select English, French, or Spanish to be used in all screen displays:

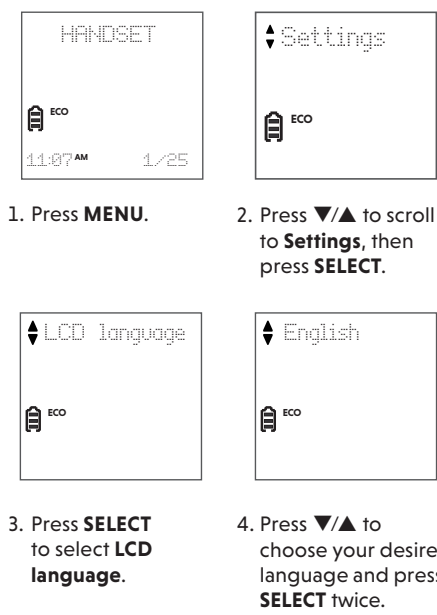

NOTE: If you accidentally set the LCD language to Spanish or French, press **MENU** and then enter ***364#** to change the handset LCD language back to English while the handset is not in use.

OVERVIEW

 Telephone base

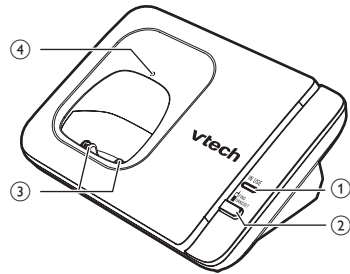

1 - IN USE light

- Flashes when there is an incoming call, or another telephone sharing the same line is in use.
- On when the telephone is in use.

 
2 - FIND HANDSET

- Page all system handsets.

3 - Charging pole


4 - Charge light

Charger

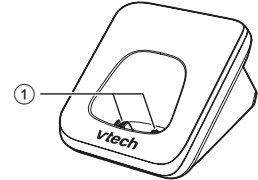

1 - Charging pole

 Handset

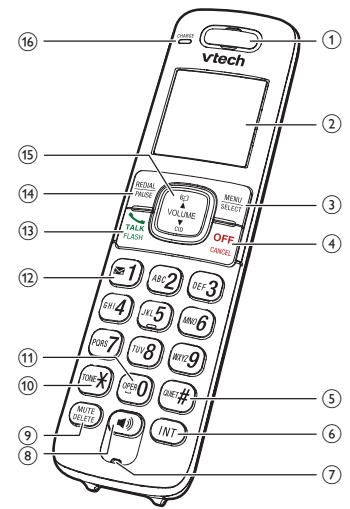

1 - Handset earpiece

2 - LCD display

3 - MENU/SELECT

- Show the menu.
- While in a menu, press to select an item, or save an entry or setting.

4 - OFF/CANCEL

- Hang up a call.
- Return to the previous menu.
- Press and hold to exit menu display without making changes.
- Delete digits while predialing.
- Silence the handset ringer temporarily while the phone is ringing.
- Press and hold to erase the missed call indicator while the handset is not in use.

5 - QUIET

- Press and hold to turn on or off the quiet mode.
- Press repeatedly to show other dialing options when reviewing a caller ID log entry.

6 - INT

- Press to start an intercom conversation or transfer a call (for multi-handset models only).

7 - Microphone

8 - MUTE

- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset earpiece.

9 - MUTE/DELETE

- Mute the microphone during a call.
- Silence the handset ringer temporarily while the phone is ringing.
- Delete the displayed entry while reviewing the directory, caller ID log, or redial list.
- Delete digits or characters when entering numbers or names.

10 - TONE

- Switch to tone dialing temporarily during a call.

11 - OPER

- Press to add a space when entering names.

12 - 1

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.
- Press and hold to set or dial your voicemail number.

13 - TALK/FLASH

- Make or answer a call.
- Answer an incoming call when you receive a call waiting alert.

14 - REDIAL/PAUSE

- Review the redial list.
- Press and hold to insert a dialing pause while dialing or entering numbers into the directory.

15 - VOLUME

- Review the directory when the phone is not in use.
- Scroll up while in a menu, or in the directory, caller ID log or redial list.
- Move the cursor to the right when entering numbers or names.
- Increase the listening volume during a call.

VOLUME/V CID

- Review the caller ID log when the telephone is not in use.
- Scroll down while in a menu, or in the directory, caller ID log or redial list.
- Move the cursor to the left when entering numbers or names.
- Decrease the listening volume during a call.

16 - CHARGE light

- On when the handset is charging.

Display icons

	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
	The handset ringer is turned off.
	There are new voicemail received from your telephone service provider.
	New caller ID log entry.
	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.

- Press **OFF** on the handset or place the handset in the telephone base or charger after pairing.

Auto connection

- When your Bluetooth headset moves within Bluetooth range of the telephone base, or is turned on within range, the telephone base automatically tries to connect to the headset.

NOTES:

To check if the Bluetooth headset is connected, use another telephone or a cell phone to make a call to your CS6719/CS6719-15/CS6719-16/CS6719-17/CS6719-2/CS6719-26/CS6719-27 telephone, and answer the call with your Bluetooth headset.

You can use your Bluetooth headset to answer calls or end the calls.

If you fail to answer the call with your Bluetooth headset, re-try the pairing steps above.

While on a call using your Bluetooth headset, keep your headset closer to the telephone base (within 15 feet) and make sure that there are no physical obstacles such as large furniture or thick wall in between.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, Vtech Holdings Limited, is under license. Vtech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

TELEPHONE OPERATIONS



Use the handset menu

- Press **MENU** when the phone is not in use.
- Press **▼** or **▲** until the screen displays the desired feature menu.
- Press **SELECT** to enter that menu.
- To return to the previous menu, press **CANCEL**.
- To exit menu display, press and hold **CANCEL**.

Make a call

- Press **TALK** or **MUTE**, and then dial the telephone number.

Answer a call

- Press **TALK** or **MUTE** or any dialing keys.

End a call

- Press **OFF** or put the handset back in the telephone base or charger.

Speakerphone

- During a call, press **MUTE** on the handset to switch between speakerphone and handset earpiece.

Volume

- During a call, press **▲**/VOLUME/▼ to adjust the listening volume.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

- During a call, press **MUTE**. The handset displays **Muted**.
- Press **MUTE** again to resume the conversation. The handset displays **Microphone on** briefly.

Join a call in progress

You can use up to two system handsets at a time on an outside call.

- When a handset is already on a call, press **TALK** or **MUTE** on another handset to join the call.
- Press **OFF** or place the handset in the telephone base or charger to exit the call. The call continues until all handsets hang up.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call.

- Press **FLASH** to put the current call on hold and take the new call.
- Press **FLASH** at any time to switch back and forth between calls.

Find handset

Use this feature to find the system handset.

To start paging:

- Press **FIND HANDSET** on the telephone base when not in use. All idle handsets ring and display **** Paging ****.

To end paging:

- Press **FIND HANDSET** at the telephone base.
- OR- Press **TALK**, **MUTE**, **OFF** or any dialing keys on the handset.
- OR- Place the handset in the telephone base or charger.

NOTE:

Do not press and hold **FIND HANDSET** for more than 4 seconds. It may lead to handset deregistration.

PAIR AND CONNECT A BLUETOOTH® HEADSET

Your telephone system is enhanced with Bluetooth feature. You can pair a Bluetooth headset to your telephone system and answer calls with your Bluetooth headset.

NOTES:

Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device.

Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet) from the telephone base. Keep connected headset within this range.

If you have trouble pairing your Bluetooth headset to the telephone base, try turning off the Bluetooth feature of the nearby devices that your headset has previously paired.

For more details about the Bluetooth feature, read the online Complete user's manual.

Pair and connect a Bluetooth headset

- Set your Bluetooth headset to pairing mode. Refer to your Bluetooth headset user's manual to learn how.
- Press **TALK** or **MUTE** on the handset.
- Press and hold **FIND HANDSET** on the telephone base for 4 seconds.
 - The telephone then enters pairing mode. The pairing process takes up to 90 seconds.
 - To cancel pairing, press **FIND HANDSET** on the telephone base.

REDIAL LIST

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

Review and dial a redial list entry

- Press **REDIAL** when the handset is not in use.
- Press **▼**, **▲** or **REDIAL** repeatedly until the desired entry displays.
- Press **TALK** or **📞** to dial.

Delete a redial list entry

- When the desired redial entry displays, press **DELETE**.

INTERCOM

Use the intercom features for conversations between two handsets.

- Press **INT** on your handset when not in use. Use the dialing keys to enter a destination handset number if necessary.
- To answer the intercom call, press **TALK**, **📞**, **INT** or any dialing key on the destination handset.
- To end the intercom call, press **OFF** or place the handset back in the telephone base or charger.

Answer an incoming call during an intercom call

If you receive an incoming call during an intercom call, there is an alert tone.

- To answer the outside call, press **TALK**. The intercom call ends automatically.
- To end the intercom call without answering the outside call, press **OFF**. The telephone continues to ring.

Call transfer using intercom

While on an outside call, you can use the intercom feature to transfer the call from one handset to another.

- Press **INT** on your handset during a call. The current call is put on hold. Use the dialing keys to enter a destination handset number if necessary.
- To answer the intercom call on the destination handset, press **TALK**, **📞**, **INT** or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
- From this intercom call, you have the following options:
 - You can let the destination handset join you on the outside call in a three-way conversation. **Press and hold INT** on the originating handset.

- You can transfer the call. Press **OFF**, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.
- You can press **INT** to switch between the outside call (**Outside call** displays) and the intercom call (**Intercom** displays).
- The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

DIRECTORY

The directory can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a directory entry

- Enter the number when the phone is not in use. Press **MENU**, then go to Step 3.
 - OR-** Press **MENU** when the phone is not in use, then press **SELECT** to choose **Directory**. Press **SELECT** again to choose **Add contact**.
- Use the dialing keys to enter the number.
 - OR-** Copy a number from the redial list by pressing **REDIAL** and then press **▼**, **▲** or **REDIAL** repeatedly to select a number. Press **SELECT** to copy the number.
- Press **SELECT** to move on to enter the name.
- Use the dialing keys to enter the name. Additional key presses show other characters of that particular key.
- Press **SELECT** to save.

While entering names and numbers, you can:

- Press **DELETE** to backspace and erase a digit or character.
- Press and hold DELETE** to erase the entire entry.
- Press **▼** or **▲** to move the cursor to the left or right.
- Press and hold PAUSE** to insert a dialing pause (for entering numbers only).
- Press **0** to add a space (for entering names only).
- Press **TONE X** to add **X** (X appears) or **0000#** to add **#** (X appears) (for entering phone numbers only).

Review directory entries

Entries are sorted alphabetically.

- Press **🔍** when the phone is not in use.
- Scroll to browse through the directory, or use the dialing keys to start a name search.

-OR-

- Press **MENU** when the phone is not in use.
- Press **SELECT** to choose **Directory**.
- Scroll to **Review**, and then press **SELECT**.
- Scroll to browse through the directory.

Delete a directory entry

- When the desired entry displays, press **DELETE**.
- When the handset displays **Delete contact?**, press **SELECT**.

Edit a directory entry

- Search for or review the directory entries (see **Review directory entries**).
- When the desired entry displays, press **SELECT**.
- Use the dialing keys to edit the number, then press **SELECT**.
- Use the dialing keys to edit the name, then press **SELECT** to save.

Dial a directory entry

- Search for or review the directory entries (see **Review directory entries**).
- When the desired entry appears, press **TALK** or **📞** to dial.

SPEED DIAL

You can copy up to 9 directory entries into the speed dial locations (**0** and **2-9**) so that you can dial these numbers using fewer keys than usual.

Assign a speed dial entry

- Press **MENU** when the handset is not in use.
- Press **SELECT** to choose **Directory**.
- Scroll to **Speed dial**, then press **SELECT**.
- Scroll to a desired speed dial location and then press **SELECT**.
- Scroll to a desired directory entry, then press **SELECT** to save.

Reassign a speed dial entry

- Press **MENU** when the handset is not in use.
- Press **SELECT** to choose **Directory**.
- Scroll to **Speed dial**, then press **SELECT**.
- Scroll to a desired speed dial location and then press **SELECT** twice.
 - Reassign SD** displays.
- Press **SELECT** again.
 - Copy from DIR...** and the first directory entry display.
- Scroll to a desired directory entry, then press **SELECT** to save.

Dial a speed dial entry

- Press and hold a dialing key (0 and 2-9)** to dial the number stored in the corresponding location.

Delete a speed dial entry

- Press **MENU** when the handset is not in use.
- Press **SELECT** to choose **Directory**.
- Scroll to **Speed dial**, then press **SELECT**.
- Scroll to a desired speed dial location and then press **DELETE**.
 - The screen displays **Clear SD #X?**
- Press **SELECT** to confirm.

CALLER ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

- Press **CID** when the phone is not in use.
- Scroll to browse through the caller ID log.

-OR-

- Press **MENU** when the phone is not in use.
- Scroll to **Caller ID log**, and then press **SELECT**.
- Press **SELECT** again to choose **Review**.
- Scroll to browse through the caller ID log.
 - Press **#** or **1** repeatedly to show different dialing options.

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the handset displays **XX missed calls**.

Each time you review a caller ID log entry marked **NEW**, the number of missed calls decreases by one.

When you have reviewed all the missed calls, the missed call indicator no longer displays.

If you do not want to review the missed calls one by one, **press and hold CANCEL** on the idle handset to erase the missed call indicator. All the entries are then considered old.

Dial a caller ID log entry

- Search for or review the caller ID log entries (see **Review a caller ID log entry**).
- When the desired entry appears, press **TALK** or **📞** to dial.

Save a caller ID log entry to the directory

- Search for or review the caller ID log entries (see **Review a caller ID log entry**).
- When the desired caller ID log entry displays, press **SELECT**.

- Use the dialing keys to edit the number, if necessary. Then press **SELECT**.
- Use the dialing keys to edit the name, if necessary. Then press **SELECT** to save.

Delete the caller ID log entries

- Search for or review the caller ID log entries (see **Review a caller ID log entry**).
- When the desired caller ID log entry displays, press **DELETE**.

To delete all caller ID log entries:

- Press **MENU** when the phone is not in use.
- Scroll to **Caller ID log** and then press **SELECT**.
- Scroll to **Del all calls** and then press **SELECT**.
- When the screen shows **Delete all?**, press **SELECT** to confirm.

SOUND SETTINGS

Key tone

You can turn the key tone on or off.

- Press **MENU** when the handset is not in use.
- Scroll to **Settings** and then press **SELECT**.
- Scroll to choose **Key tone**, then press **SELECT**.
- Scroll to choose**Key tone:On** or **Key tone:Off**, then press **SELECT** to save.

Ringer tone

You can choose from different ringer tones for each handset.

- Press **MENU** when the handset is not in use.
- Scroll to **Ringers** and then press **SELECT**.
- Scroll to choose **Ringer tone**, then press **SELECT**.
- Scroll to sample each ringer tone, then press **SELECT** to save.

- NOTE:** If you turn off the ringer volume, you will not hear ringer tone samples.

Ringer volume

You can adjust the handset ringer volume level, or turn the ringer off.

- Press **MENU** when the handset is not in use.
- Scroll to **Ringers** and then press **SELECT**.
- Press **SELECT** again to choose **Ringer volume**.
- Press **▼** or **▲** to sample each volume level, then press **SELECT** to save.

📄

NOTE: When the ringer volume is set to **OFF**, the handset still rings when you press

🔍 FIND HANDSET at the telephone base.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **OFF** or **MUTE** on the handset. The handset displays **🔇** and **Ringer muted** briefly.

Quiet mode

You can turn on the quiet mode for a period of time. During this period, all tones (except paging tone) and call screening are muted.

- Press and hold QUIET #** on the handset when it is not in use.
- Use the dialing keys (**0-9**) to enter the duration, and then press **SELECT** to save.
- To turn off the quiet mode, **press and hold QUIET #** on the handset when it is not in use.

RETRIEVE VOICEMAIL FROM TELEPHONE SERVICE

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply.

Retrieve voicemail

When you received a voicemail, the handset displays **📞** and **New voicemail**. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

- NOTE:** After you have listened to all new voicemail messages, the indicators on the handset turn off automatically.

Set your voicemail number

You can save your access number on each handset for easy access to your voicemail. After you saved the voicemail number, you can **press and hold 📞 1** to retrieve voicemail.

- Press **MENU** when the phone is not in use.
- Scroll to **Settings** and then press **SELECT**.
- Scroll to **Voicemail #** and then press **SELECT**.
- Use the dialing keys to enter the voicemail number (up to 30 digits).
- Press **SELECT** to save.

CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING INSTRUCTIONS

This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be disabled.

To activate the CEC battery charging testing mode:

- Unplug the telephone base power adapter from the power outlet, and then plug it back in. When the telephone base is powered up as normal.
- While you **press and hold 📞 1 FIND HANDSET**, plug the telephone base power adapter back to the power outlet.
- After about 20 seconds, when the **IN USE** light starts flashing, release **📞 1 FIND HANDSET** and then press it again within 2 seconds. When the phone successfully enters the CEC battery charging testing mode, all handsets display **To register HS and See manual** alternately.

When the phone fails to enter this mode, repeat Step 1 through Step 3 above.

To deactivate the CEC battery charging testing mode:

- Unplug the telephone base power adapter from the power outlet, and then plug it back in. Then the telephone base is powered up as normal.
- Place the handset in the telephone base to register it back. The handset displays **Registering...**

The handset show **Registered** and you hear a beep when the registration process completes. The registration process takes about 60 seconds to complete.

LIMITED WARRANTY

What does this limited warranty cover?

The manufacturer of this VTech product, VTech Communications, Inc. ("VTech"), warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided by VTech in sales package ("Product") are free from material defects in material and workmanship under the original one-year limited warranty, when installed and used normally and in accordance with operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What VTech Communications materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. VTech will return replacement products to you in working condition. VTech will retain defective parts, modules, or equipment. Replacement of the Product, at VTech's option, is your exclusive remedy. You should expect the replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the product extends for ONE (1) YEAR from date of purchase (90 days on products purchased as Refurbished"). This limited warranty also applies to replacement Products for a period of either (a) 90 days from the date the replacement Product is shipped to you or (b) the time remaining on the original one-year limited warranty (90-day limited warranty on products that are purchased as Refurbished"), whichever is longer.

*Refurbished products purchased from our online store carry a 90-day replacement warranty.

Clear the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset still displays the new voicemail indicators, use this feature to clear the indicators.

- NOTE:** This feature clears the indicators only, it does not delete your voicemail messages.

- Press **MENU** when the phone is not in use.
- Scroll to **Settings** and then press **SELECT**.
- Scroll to **Clr voicemail** and then press **SELECT**.
- Press **SELECT** again to confirm. You hear a confirmation tone.

ECO MODE

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

GENERAL PRODUCT CARE

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

NEED HELP?

For operations and guides to help you using your telephone, and for the latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help.

- Go to <https://help.vtechphones.com/CS6719> (US); OR <https://phones.vtechcanada.com/en/support/general/manuals?model=CS6719> (Canada)

- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.



Recycle this product when you are done with it

Scan the QR code on the right or visit www.vtechphones.com/recycle.

(For the US only)



(US)



(CA)



FOR C-UL COMPLIANCE ONLY

Mesures de sécurité importantes

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :

- Lisez et comprenez bien toutes les instructions.
- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- N'utilisez qu'avec des dispositifs Bluetooth homologués par UL.
- Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et légèrement humecté.
- ATTENTION:** Ne pas installer le socle téléphonique à une hauteur supérieure à 2 mètres.
- N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
- Évitez d'installer le système téléphonique dans des endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.
- Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
- Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
- Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sûr afin que personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire.
- N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de contact dangereux ou court-circuiter des pièces, ce pendant l'utilisation, le stockage ou le transport. N'échappez pas de liquides dans l'appareil.
- Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
- Ne surchargez pas les prises de courant et les rallonges.
- Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants :
 - Lorsque le cordon d'alimentation est endommagé ou écorché.
 - Si du liquide a été échappé dans l'appareil.
 - Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
 - Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans les

- instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.
- Si le produit a été échappé et que le socle et/ou le combiné a été endommagé.
- Si le produit affiche une nette diminution de sa performance.
- Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
- N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines circonstances, une flammeç pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flammeç dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz naturel, etc.
- Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en mode de conversation.
- Les adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçus pour maintenir l'adaptateur en place si celui-ci est barchné dans une prise au plafond ou sous une table/ armoire.
- Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.
- ⚠ MISE EN GARDE:** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeables inclus ou les piles de rechange (BT16242/BT6242). N'insérez pas les piles. Celles-ci risqueraient d'exploser. Mettre au rebut les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le remplacement des piles.
- Évite d'utiliser la batterie dans les conditions suivantes:
 - des températures extrêmes faibles ou élevées auxquelles une batterie peut être soumise pendant l'utilisation, le stockage ou le transport.
 - remplacement d'une batterie par un type incorrect pouvant supprimer une protection.
 - mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explosion.
 - maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.
 - batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.
- N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.
- La plaque signalétique appliquée est située au bas où à proximité du produit.

CONSERVEZ CES INSTRUCTIONS

Pile

- N'utilisez que la pile incluse ou l'équivalent.</