

Go to **www.vtechphones.com** to register your product for enhanced warranty support and latest VTech product news

SN6307

Photo Speed Dial Handset
for use with
VTech Careline series



vtech®

User's manual

Congratulations

on purchasing your new VTech product. Before using this product, please read **Important safety instructions**.

This user's manual provides you with installation and use instructions. Please read this manual thoroughly to ensure proper installation and operation of this VTech product.

For support, shopping, and everything new at VTech, visit our website at **www.vtechphones.com**.

Compatible with
Hearing Aid T-Coil



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.



The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry non-abrasive cloth for cleaning.
4. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
5. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
6. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
9. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
11. Do not overload wall outlets and extension cords.
12. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized

- technician to restore the product to normal operation.
- If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
 14. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
 15. Only put the handset of your telephone next to your ear when it is in normal talk mode.
 16. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

SAVE THESE INSTRUCTIONS

Battery

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary

evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.



WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

About cordless telephones

- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- **Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- **Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Parts checklist




Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

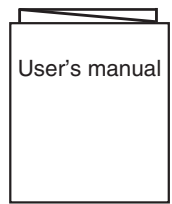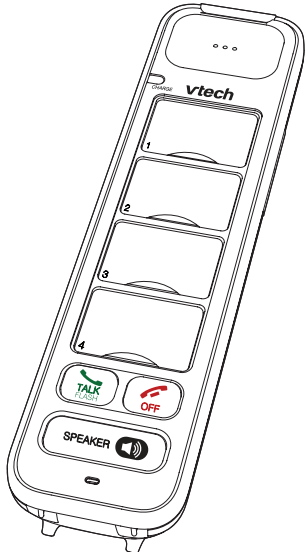

Install the battery

Install the battery as shown below.


- note**
- Use only the battery provided or equivalent.
 - If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.
 - To purchase a replacement battery, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

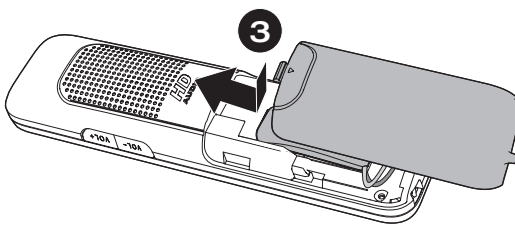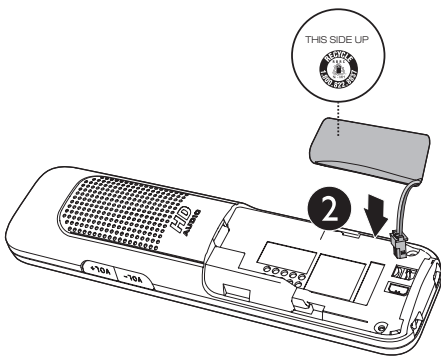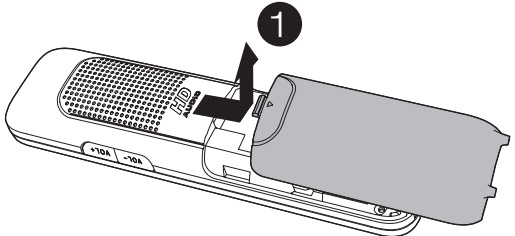


Connect and charge the battery

- note**
- Use only the adaptor provided.
 - Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
 - The adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Connect the charger

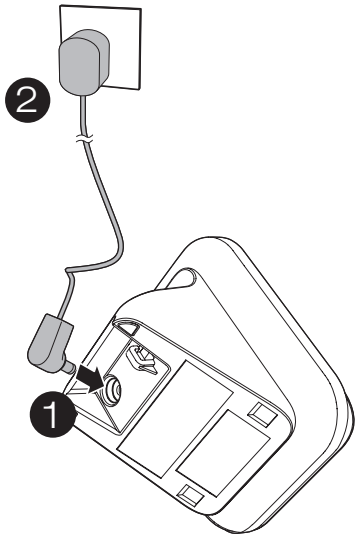

Charge the battery

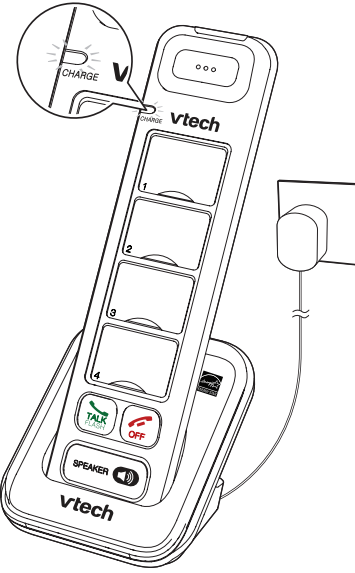


Once you have installed the battery, the CHARGE light indicates the battery status (see the table below).

- note**
- For best performance, keep the handset in the charger when not in use.
 - The battery is fully charged after 12 hours of continuous charging.

The following table summarizes the battery charge indicators and actions to take.

CHARGE light	Battery status	Action
Flashes red	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
Red	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
Green	The battery is fully charged.	To keep the battery charged, place it in the charger when not in use.

Handset overview

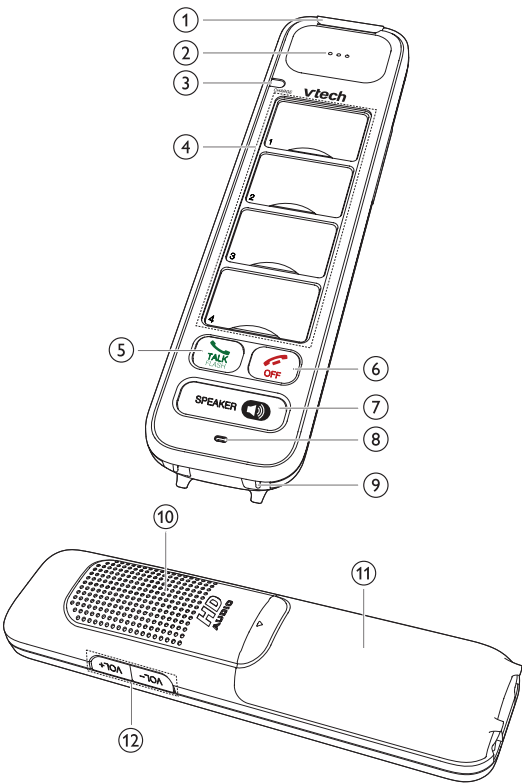

1 – Incoming LED

2 – Earpiece

3 – CHARGE light

4 – Photo speed dial keys

- Press to dial a preset number.

5 – TALK

- Make or answer a call.

6 – OFF

- Hang up a call.
- Silence the ringer temporarily while the phone is ringing.

7 – SPEAKER

- Make or answer a call using the speakerphone.
- Switch between the speakerphone and the earpiece.

8 – Microphone

9 – Charging pole

10 – Speakerphone

11 – Battery compartment cover

12 – VOL-/VOL+

- Adjust the ringer volume and the listening volume.

Charger overview



1 – Charging pole

Before use

Check the model number of your Careline series telephone base before you continue for the settings and operations.

There are two types of Careline series telephone base:

- **Type A:** SN6127, SN6187;
- **Type B:** SN1157, SN1197, SN6147, SN6196, SN6197.

note You can find the model number at the bottom of the telephone base.

Add and register a handset

Register each new SN6307 handset to your Careline series telephone base before use. Your telephone system supports a maximum of 12 handsets.

note Charge the new handset without interruption for at least 30 minutes before registering it to the telephone base.

To register your handset to a Type A base:

1. Press and hold **W/FIND HANDSET** at the telephone base until the **IN USE** light turns solid red.

2. Put the handset in the charger. The handset **CHARGE** light flashes red and green to indicate the registration is in progress.

You hear a confirmation tone when the registration process completes. It takes up to 60 seconds to complete the registration.

If registration fails, you hear an error tone. Start again from Step 1 above.

note

- You cannot register a handset if any other system device is in use.
- When you already have 12 registered devices and you try to register another handset to the telephone base, you hear four beeps from the telephone base.

To register your handset to a Type B base:

1. Press **MENU** on the telephone base when it is not in use.
2. Press **▼** or **▲** to scroll to **Settings**.
3. Press **▼** or **▲** to scroll to **Registration**, then press **SELECT**. The telephone base shows **Registering... Please wait**.
4. Put the handset in the charger. The handset **CHARGE** light flashes red and green to indicate the registration is in progress.

You hear a confirmation tone when the registration process completes. It takes up to 60 seconds to complete the registration.

If registration fails, you hear an error tone. Start again from Step 1 above.

- note**
- You cannot register a handset if any other system devices is in use.
 - The telephone base shows **Registration slots are full** when you try to register more than 12 devices to it.

Deregister handsets

To replace a handset or reassign the designated handset number of a registered handset, you must deregister all devices in the telephone system, and then register each device individually.

To deregister all devices from a Type A base:

- Press and hold **W/FIND HANDSET** at the telephone base until the **IN USE** light flashes red.
- Immediately press **W/FIND HANDSET** again.

You hear a confirmation tone when the registration process completes. It takes about 10 seconds to complete the deregistration.

If deregistration fails, you need to reset the system and try again. To reset, unplug the power and the telephone line cord from the telephone base. Then plug the cords back in again.

- note**
- You cannot deregister all devices if any other system device is in use.
 - Even if the battery is depleted, you can still deregister all devices by following the steps above.

To deregister all devices from a Type B base:

- Press and hold **FIND HS** at the telephone base until the **IN USE** light flashes and the telephone base shows **Registering... Please wait** followed by **Deregister all devices?**.
- Immediately press **YES** or **FIND HS**.

You hear a confirmation tone when the registration process completes. It takes about 10 seconds to complete the deregistration.

If deregistration fails, you need to reset the system and try again. To reset, unplug the power and the telephone line cord from the telephone base. Then plug the cords back in again.

- note**
- You cannot deregister all devices if any other system device is in use.
 - Even if the battery is depleted, you can still deregister all devices by following the steps above.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset beeps every 10 seconds. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **ANS**. Move closer to the telephone base, then press **ANS** to answer the call.

If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Photo speed dial

Set photo speed dial entries

There are four photo speed dial keys on the handset. You must set the speed dial numbers to the corresponding locations before using them. Use the telephone base, to which your handset is registered, to set a photo speed dial number.

To store, edit or delete a photo speed dial entry on a Type A base:

Your handset retrieves the photo speed dial entries from phonebook entries stored in the telephone base.

In order for the handset to retrieve the correct phone number in the phonebook, you must store the photo speed dial entries in the phonebook naming **Photo 1**, **Photo 2**, **Photo 3** and **Photo 4** respectively.

Refer to the **Phonebook** section in the user's manual of the telephone base for the setup.

- note**
- Names for the photo speed dial entries are case-sensitive.
 - You need to store different phone numbers in the photo speed dial slots.
 - Deleting an entry in phonebook will remove the associated photo speed dial entry.

To store, edit or delete a photo speed dial entry on a Type B base:

Your handset retrieves the same set of photo speed dial entries stored in the telephone base.


Refer to the **Photo speed dial** section in the user's manual of the telephone base for the setup.

- note**
- You can store the same phone number in more than one photo speed dial slots.
 - Editing or deleting an entry in phonebook does not affect the photo speed dial entries.

Insert photos for speed dial entries

You can add desired photos into the photo speed dial compartments, or write the contact name on the photo speed dial cards.

To add a photo, use the photo speed dial card as a tool to crop your desired photo, and then insert it as shown below.

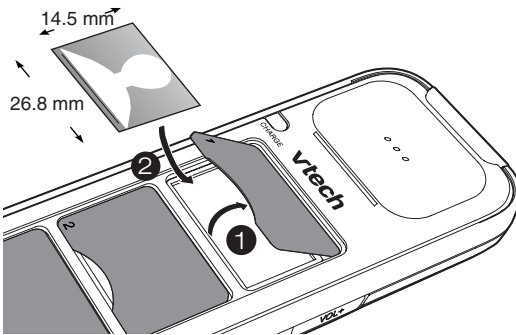

Settings

Adjust ringer volume

You can adjust the ringer volume level, or turn the ringer off.

- When the handset is not in use, press **VOL-** or **VOL+**.

- note**
- When the ringer volume is set to off, the handset still rings when you press **W/FIND HANDSET** at a Type A telephone base or **FIND HS** at a Type B telephone base.

Quiet mode

You can turn on the quiet mode for a period of time (1-12 hours). During this period, all tones (except paging tone) are muted.

Your handset follows the quiet mode setting in the telephone base. Refer to the **Quiet mode** section in the user's manual of the telephone base for the setting.

Voice Announce® caller ID

The voice announce caller ID feature lets you know who's calling without having to look at the display. When you have an incoming call, the handset speaks *“Call from...”* and the name of the caller based on the phonebook or caller ID information. If the caller's name is private or unknown, the phone number up to the last 11 digits will be announced. If the caller's phone number is also private or unknown, no information will be announced.

To turn on or off this feature, refer to the **Voice Announce® caller ID** section in the user's manual of the telephone base.

- note**
- To use the caller ID announce feature, you must subscribe to caller ID service from your telephone service provider.
 - When there are up to five handsets registered, the telephone system supports caller ID announce for all handsets. If six or more handsets are registered, the system supports caller ID announce for the first four registered handsets only.

Voice Announce® is a registered trademark of ClassCo Inc.

Using the photo speed dial handset

Make a call

- Press a photo speed dial key to dial.

-OR-

- Press **ANS** or **SPEAKER** , and then a photo speed dial key to dial.

Answer a call

- Press **ANS** or **SPEAKER** .

End a call

- Press **OFF**  or place the handset back in the charger.

Speakerphone

- During a call, press **SPEAKER**  to switch between the speakerphone and the earpiece.

Adjust listening Volume

- During a call, press **VOL-** or **VOL+**.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an

alert tone if there is an incoming call while you are already on a call.

- Press **ANS** to put the current call on hold and take the new call.
- Press **ANS** at any time to switch back and forth between calls.

Temporary ringer silence

When the telephone is ringing, you can temporarily silence the handset ringer without disconnecting the call. The next call rings normally at the preset volume.

- Press **VOL-**.

Join a call in progress

You can use a maximum of four devices at a time on a call.

- Press **ANS** or **SPEAKER**  to join the call.
- To exit the call, press **OFF**  or place the handset back in the charger. The call continues until all devices hang up.

Find handset

You can use the **Find handset** feature on the telephone base to find misplaced handsets.

- Press **ANS** or **SPEAKER**  to answer the paging.
- Press **VOL-** to mute the paging tone.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

Energy-saving charging mode

When first purchased and properly installed for charging (see Install the battery), put the handset on the handset charger to charge. The energy-saving charging mode is activated while charging.

When this mode is activated, all telephone functions, except handset battery charging, will be disabled.

If you have registered the handset to a Careline series telephone base, follow the instructions below to activate and deactivate the energy-saving charging mode.

To activate the energy-saving charging mode:

- Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding.

- While you press and hold **W/FIND HANDSET** (or **FIND HS** for some telephone base), plug the telephone base power adapter back to the power outlet.
- After about 20 seconds, when the **IN USE** light starts flashing, release **W/FIND HANDSET** (or **FIND HS**) and then press it again within 2 seconds.

When the phone successfully enters the energy-saving charging mode, the **IN USE** light turns off.

- note**
- When the phone fails to enter this mode, repeat Step 1 through Step 3 above.
 - The telephone base will be powered up as normal if you fail to press **W/FIND HANDSET** (or **FIND HS**) within 2 seconds in Step 3.

To deactivate the energy-saving charging mode:

- Unplug the telephone base power adapter from the power outlet, then plug it back in. Then the telephone base is powered up as normal.
- Register your handsets back to the telephone base. Refer to **Add and register a handset**.

General product care

- note**
- Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORD FROM THE WALL. Then remove the telephone by the unplugged cords.

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Technical specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Battery: 2.4V 400mAh, Ni-MH battery pack Power adapter: 6V AC @ 300mA

V Designed to fit your home. And your life.

VTECH Telecommunications Ltd.
A member of THE VTECH GROUP OF COMPANIES.
VTech is the registered trademark of VTech Holdings Limited.
Specifications are subject to change without notice.
© 2014 VTECH TELECOMMUNICATIONS LTD.
All rights reserved. Version 1 03/14
Document order number: 91-007352-010-100
SN6307_CIB_V.1.0

Storage

When you are not going to use the handset for some time, remove the rechargeable battery from the handset. Store the handset, the charger and the adapters in a cool and dry place.

Frequently asked questions

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, contact customer service by visiting our website at **www.vtechphones.com** or calling **1 (800) 595-9511**.

I forget the model number of my telephone base. Where can I find it?	You can find the model number at the bottom of the telephone base. It is a code starts with SN followed by four digits.
My handset does not work at all.	Make sure the handset charger is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use. Make sure the handset has registered to a Careline series telephone base.
I cannot dial out.	For different type of Careline series telephone base, the photo speed dial setup procedure is different. Make sure you have set the photo speed dial entries in the telephone base as instructed.
I experience poor sound quality when using the handset speakerphone.	For increased sound quality while using the handset speakerphone, place the handset on a flat surface with the keys facing up.
The handset does not ring when there is an incoming call.	Press VOL+ to increase the ringer volume when the handset is not in use. Make sure the quiet mode is off. Check the setting on your telephone base.

The RBRC® seal

The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call **1 (800) 8 BATTERY™** for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.

FCC and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established

criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ#TXXXX. This identifier must be provided to your telephone service provider upon request. The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned. If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is NAN. The REN is an indication of the maximum number of devices allowed to be connected to the telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

Remark: The word "NAN" means "Not Applicable". This product meets the applicable Industry Canada technical specifications.

RF radiation exposure statement

The handset complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for