

Go to  
**www.vtechcanada.com**  
to register your product for  
enhanced warranty support  
and latest VTech product news.

CS5158-3

DECT 6.0  
cordless telephone

## Congratulations

on purchasing your new VTech product. Before  
using this product, please read **important  
safety instructions**.

This Abridged user's manual provides you with  
basic installation and use instructions. A limited  
set of features are described in abbreviated form.

Please refer to the User's manual for a full set of  
installation and operation instructions at  
**www.vtechcanada.com**.



Telephones identified with this  
logo have reduced noise and  
interference when used with  
most T-coil equipped hearing  
aids and cochlear implants.  
The TIA-1083 Compliant  
Logo is a trademark of the  
Telecommunications Industry  
Association. Used under license.

The ENERGY STAR®  
program (www.energystar.gov)  
recognizes and encourages  
the use of products that save  
energy and help protect our  
environment. We are proud  
to mark this product with the  
ENERGY STAR® label  
indicating it meets the latest  
energy efficiency guidelines.

 


**vtech**


Abridged user's manual  
(Canada version)

### What's in the box

Your product package contains the following  
items. Save your sales receipt and original  
packaging in the event warranty service is  
necessary.



### Handset overview

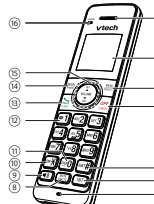 

- Handset earpiece**
- LCD display**
- MENU/SELECT**
  - Show a menu.
  - While in a menu, press to select an item, or save an entry or setting.
- OFF/CANCEL**
  - Hang up a call.
  - Silence the ringer temporarily while the handset is ringing.
  - Press and hold to erase the missed call indicator while the phone is not in use.
  - Press repeatedly to show other dialing options when reviewing a caller ID log entry, without making changes.
- QUIET#**
  - Press and hold to set and turn on the quiet mode, or turn it off.
  - Press repeatedly to show other dialing options when reviewing a caller ID log entry, without making changes.
- INT**
  - Press to start an intercom conversation or transfer a call.
- Microphone**
- MUTE/DELETE**
  - Mute the microphone during a call.
  - Delete digits or characters while using the dialing keys.
  - Silence the ringer temporarily while the handset is ringing.

### 9 -

- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset earpiece.

### 10 -

- While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

### 11 -

- Press to add a space when entering names.

### 12 -

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the phonebook.

### 13 -

- FLASH**
  - Make or answer a call.
  - Answer an incoming call when you hear a call waiting alert.

### 14 -

- REDIAL/PAUSE**
  - Press repeatedly to review the redial list.
  - Press and hold to insert a dialing pause while entering a number.

### 15 -

- VOLUME/**
  - Review the phonebook when the phone is not in use.
  - Increase the listening volume during a call.
  - Scroll up while in a menu, phonebook, caller ID log, or redial list.
  - Move the cursor to the right when entering numbers or names.

 
### VOLUME/

- Review the phonebook when the phone is not in use.
- Decrease the listening volume during a call.
- Scroll down while in a menu, phonebook, caller ID log, or redial list.
- Move the cursor to the right when entering numbers or names.

### 16 -

- CHARGE light**
  - On when the handset is charging.

### Telephone base overview

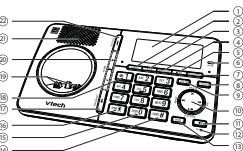

### 1 -

- LCD display**

### 2 -

- CANCEL**
  - Press to return to the previous menu or idle mode without making changes.
  - Press and hold to erase the missed call indicator when the phone is not in use.
  - While the phone is ringing, press to silence the base ringer temporarily.

### 3 -

- CID**
  - Review the caller ID log when the telephone is not in use.
  - Scroll down while in a menu, or in the phonebook, caller ID log or redial list.
  - Move the cursor to the left when entering numbers or names.

### 4 -

- MENU/SELECT**
  - Show a menu.
  - While in a menu, press to select an item, or save an entry or setting.

### 5 -

- IS**
  - Review the phonebook when the phone is not in use.
  - Scroll up while in a menu, or in the phonebook, caller ID log or redial list.
  - Move the cursor to the right when entering numbers or names.

### 6 -

- USE light**
  - On when the phone is in use, or when the answering system is answering a call.
  - On when a handset is being registered.
  - Flashes when there is an incoming call.
  - Flashes when handsets are being deregistered.
  - Flashes when another telephone on the same line is in use.

### 7 -

- REDIAL/PAUSE**
  - Review the redial list.
  - Press repeatedly to view the last 10 numbers dialed.
  - Press and hold to insert a dialing pause while dialing or entering numbers.

### 8 -

- FLASH**
  - Answer an incoming call when you receive a call waiting alert.

### 9 -

- ANS ON/OFF**
  - Press to turn the built-in answering system on or off.

### 10 -

- PLAY/STOP**
  - Press to start or stop message playback.
  - Flashes when there are new messages or memos in the answering system.

### X/DELETE

- Press to delete the playing message or playing announcement.
- While reviewing the redial list, phonebook or caller ID log, press to delete an individual entry.
- While entering names or numbers, press to delete a character or digit.

### REPEAT

- Press once to repeat the playing message.

### SKIP

- Press to skip to the next message.

### 11 -

- SPEAKER**
  - Press to make, answer or end a call.

### 12 -

- Microphone**

### 13 -

- MUTE**
  - Mute the microphone during a call.
  - Silence the base ringer temporarily while the phone is ringing.

### 14 -

- #**
  - Press and hold to set and turn on the quiet mode, or turn it off.
  - Press repeatedly to show other dialing options when reviewing a caller ID log entry.

### 15 -

- 0**
  - Press to enter space during text editing.

### 16 -

- X**
  - Switch to tone dialing temporarily during a call.

### 17 -

- FIND HANDESET**
  - Press to page all handsets when the phone is not in use.

### 18 -

- 1**
  - While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook.
  - Press and hold to set or dial your voicemail number.

### 19 -

- Charging cradle**
  - Adjust the listening volume.

### 20 -

- VOLUME**
  - Adjust the telephone base ringer volume.

 
### 21 -

- Speakerphone**

### 22 -

- INTERCOM**
  - Press to initiate or answer an intercom call, or to transfer a call.

### Charger overview



### 1 -

- Charging pole**

### Display icons overview

|  |                                                                                                                            |
|--|----------------------------------------------------------------------------------------------------------------------------|
|  | The battery icon flashes when the battery is low and needs charging.                                                       |
|  | The battery icon animates when the battery is charging.                                                                    |
|  | The battery icon becomes solid when the battery is fully charged.                                                          |
|  | The handset ringer is turned off.                                                                                          |
|  | There are new voicemail received from your telephone service provider.                                                     |
|  | The message number currently playing and total number of new/old messages recorded.                                        |
|  | The answering system is turned on.                                                                                         |
|  | The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base. |
|  | There are new caller ID log entries.                                                                                       |

### Telephone base display icons

|  |                                                                                                                                                                         |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The telephone base ringer is off.                                                                                                                                       |
|  | There are new voicemail received from your telephone service provider.                                                                                                  |
|  | The entry you are reviewing is new in the caller ID log.                                                                                                                |
|  | <ul style="list-style-type: none"><li>The total number of messages recorded when the telephone base is not in use.</li><li>The number of the playing message.</li></ul> |

### Connect

 
You can choose to connect the telephone base for  
desktop usage or wall mounting.

- Use only the adapters provided.
- Make sure the electrical outlets are not controlled by wall switches.
- The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.


- If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more information.




### Connect the telephone base

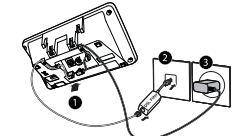

### Connect the charger

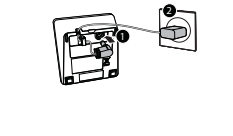 

### Mount the telephone base



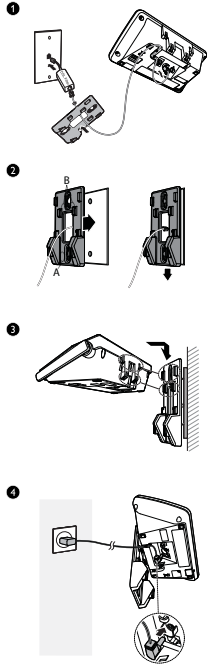 


### Install the battery

Install the battery as shown below.

### NOTES

   - Use only the battery provided.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.
- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

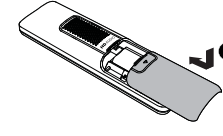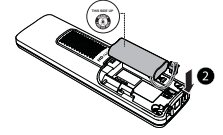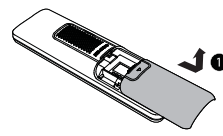


### Check the battery level

After you have installed the battery, check the  
battery level on the handset screen.

- If the battery icon is or , then go to **Before use** section to set the date and time, and set the answering system through voice guide.
- If the screen is blank, or it flashes, then the battery needs to be charged. Go to **Charge the battery** section before you do any setting or operation.

### Charge the battery

 Place the handset in the telephone base or  
charger to charge.

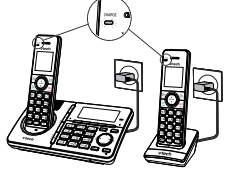

Once you have installed the battery, the  
handset LCD display indicates the battery  
status (see the following table).

| Battery indicators                                                  | Battery status                                                               | Action                                                                                  |
|---------------------------------------------------------------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| The screen is blank, or shows <b>Put in charger</b> and it flashes. | The battery has no charge or very little charge. The handset cannot be used. | Charge without interruption (at least 30 minutes).                                      |
| The screen shows <b>Low battery</b> and it flashes.                 | The battery has enough charge to be used for a short time.                   | Charge without interruption (at least 30 minutes).                                      |
| The screen shows <b>HANDESET X</b> .                                | The battery is charged.                                                      | To keep the battery charged, place it in the telephone base or charger when not in use. |

### NOTES

- Place the handset in the charger will bypass the set date and time, and voice guide.
- For best performance, keep the handset in the charger when not in use.
- The battery is fully charged after 11 hours of continuous charging.
- If you place the handset in the charger without plugging in the battery, the screen displays **NO BATTERY**.

To manually set the date and time and the  
answering system, refer to **Configure your  
telephone and Set your built-in answering  
system** sections.

To manually initiate the voice guide, refer to  
**Voice guide** under **Set your built-in  
answering system** section.

### Before use

After you install your telephone or power returns  
following a power outage and battery depletion, the  
handset will prompt you to set the date and time,  
and the answering system through voice guide.

### Set date and time

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

- Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
- Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **V** or **▲** to choose **AM** or **PM**.
- Press **SELECT** to save.

After the setting for the date and time, the  
handset will display **Voice guide to...** and set  
up **Ans sys?** alternately.

This feature assists you to do the basic setup of  
the answering system. You can follow the voice  
guide to record your own announcement, set the  
number of rings and the message alert tone.

- Press **SELECT** to start the voice guide. You hear the voice prompt: "Hello! This voice guide will assist you with the basic setup of your answering system."
- Setup your answering system by inputting the designated numbers as instructed in the voice guide.

### Check for dial tone

Press **X**. If you hear a dial tone, the installation  
is successful.

### If you do not hear a dial tone:

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

### Operating range

This cordless telephone operates with the  
maximum power allowed by the Federal  
Communications Commission (FCC). Even so,  
this handset and telephone base can  
communicate over only a certain distance  
- which can vary with the locations of the  
telephone base and handset, the weather, and  
the layout of your home or office.

When the handset is out of range, the handset  
displays **Out of range** or **no pwr at base**.  
If there is a call while the handset is out of  
range, it may not ring, or if it does ring, the call  
may not connect well when you press **X**. Move  
closer to the telephone base, and then press  
**X** to answer the call. If the handset moves out  
of range during a telephone conversation, there  
may be interference. To improve reception,  
move closer to the telephone base.

### Using the phone menu

You can use the telephone base or a cordless  
handset to change your telephone settings.

- Press **MENU** when the phone is not in use.
- Press **V** or **▲** until the screen displays the desired feature menu.
- Press **SELECT** to enter that menu.
- To return to the previous menu, press **CANCEL**.
- To return to idle mode, press and hold **CANCEL**.

### Configure your telephone

#### Set language

The LCD language is preset to English. You can  
select English, French or Spanish to be used in  
all screen displays.

- Press **MENU** when the phone is not in use.
- Scroll to **Settings**, and then press **SELECT** twice.
- Scroll to choose **English, Français** or **Español**, and then press **SELECT** to save.

#### Set date and time

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.
- Press **MENU** when the phone is not in use.
  - Scroll to **Set date/time**, and then press **SELECT**.
  - Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
  - Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **V** or **▲** to choose **AM** or **PM**.
  - Press **SELECT** to save.

 
#### Temporary tone dialing

If you have pulse (rotary) service only, you can  
switch from pulse to tone dialing temporarily  
during a call.


- During a call, press **X**.
- Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

### Telephone operation

#### Telephone base control key panel:

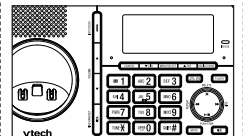

#### Handset control key panel:

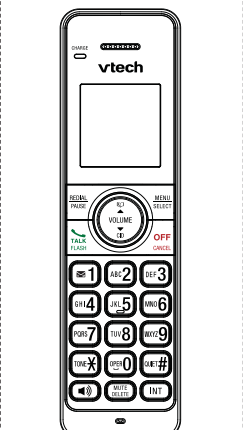 

#### Make a call

- Press **X** or **▲**, and then dial the telephone number.

#### -OR-

- Press **0** on the telephone base, then dial the number.

#### Answer a call

- Press **X**, **▲**, or any dialing key.

#### -OR-

- Press **0** or any of the dialing keys on the telephone base.

#### End a call

- Press **OFF** on the handset, or place the handset in the handset charger.

#### -OR-

- Press **0** on the telephone base

#### Speakerphone

- When the cordless handset is on a call, press **0** to switch between the handset speakerphone and the handset earpiece.

#### Volume

- During a call, press **V/VOLUME/▲** on the handset or on the telephone base to adjust the listening volume.

#### NOTE

- The volume settings of handset earpiece and speakerphone are independent.

#### Mute

The mute function allows you to hear the other  
party but the other party cannot hear you.

- During a call, press **MUTE** on the handset. The handset displays **Muted**.
- Press **MUTE** again to resume the conversation. The handset displays **Microphone on**.

#### -OR-

- During a call, press **MUTE** on the telephone base. The telephone base displays **Muted** and the **MUTE** light turns on until the mute function is turned off.

- Press **MUTE** on the telephone base again to resume the conversation. The telephone base displays **Microphone on**.

#### Join a call in progress

You can use up to two system handsets at a  
time on an outside call.

- When a handset or the telephone base is already on a call, press **X** or **▲** on another handset to join the call.

- Press **OFF** or place the handset in the handset charger to exit the call. The call continues until all handsets hang up.

#### -OR-

- Press **0** on the telephone base.

- Press **FLASH** to switch back and forth between calls.

- Press **FLASH** to put the current call on hold and take the new call.

- Press **FLASH** to switch back and forth between calls.

- Press **FLASH** to put the current call on hold and take the new call.

- Press **FLASH** to switch back and forth between calls.

- Press **FLASH** to put the current call on hold and take the new call.

- Press **FLASH** to switch back and forth between calls.

- Press **FLASH** to put the current call on hold and take the new call.

- Press **FLASH** to switch back and forth between calls.

