

2 The Parts of the System

 
THE RECEIVER

THE RECEIVER FRONT PANEL



CONTROL BUTTONS


The front panel buttons give you some control over the receiver. These buttons work the same way as the matching remote control buttons, described in *Chapter 3 - Using the Satellite System* and *Chapter 4 - Using the DVD Player*.



MODE INDICATORS

A green light over the SAT label lights up when the receiver is turned

 
- ON and is in satellite receiver mode, and goes out when the receiver is turned OFF. A red light over the DISC label lights up when the receiver is in DVD mode and changes to orange when in audio CD mode.



FRONT CARD SLOT

The card slot behind the left access door requires a special e-commerce card. *Do not* insert the DISH Network smart card in to this slot. You *do not* need a card inserted in this card slot.

 THE RECEIVER BACK PANEL



The back panel of the receiver provides the connections that you use to wire the receiver to all the other electronic devices that you use. It also provides the receiver power cord and telephone jack. Depending on the wiring setup that you use, you may not use some of these connections, but they are provided to support any desired setup. The DVD Player does *not* require any special wiring. See *Chapter 3 - Reference*, or the *Installation Instructions* for more information.

SMART CARD SLOT



The DISH Network Smart Card should already be inserted in the receiver back panel slot.

THE REMOTE CONTROL

For information on using the remote control, see *Chapter 3 - Using the Satellite System* and *Chapter 4 - Using the DVD Player*.

Note: If you lose or damage the remote control you will *not* be fully able to control the receiver. If this happens, call the Service Center at 1-800-333-DISH (3474) to order a replacement. You will be charged the sale price of the remote control, plus shipping and handling.

UHF remote controls (with the UHF symbol on the front side) can operate the receiver through the walls of your building. To use such a remote,

Satellite System User Guide

you must attach a UHF antenna to the receiver back panel UHF Remote Antenna connection.

IR remote controls (with "INFRARED REMOTE" on the back side) must be pointed directly at the receiver, with no objects blocking the line of sight. You can use such a remote only within 40 feet of the receiver.

INSTALLING BATTERIES IN THE REMOTE

The remote control is shipped with AAA batteries, packaged separately. When you replace old batteries, you should replace all of the batteries. Use batteries of the same grade, for example, alkaline or carbon zinc, and do not mix batteries of different grades. Alkaline batteries provide longer battery life.



1. Press down on the slot in the battery cover (on the back of the remote control) and slide the cover off.
2. Insert the new batteries, making sure to match the plus ("+") ends with the plus markings on the battery case.
3. Replace the battery cover by sliding the cover back up into place.

THE REMOTE CONTROL BUTTONS



MODE BUTTONS

The SAT (satellite receiver), TV, VCR, and AUX (auxiliary) mode buttons indicate which device the remote will control. To change modes, press the appropriate button. The corresponding button background light turns on. For DVD

operation, make sure the remote is in the SAT mode.

TV/VIDEO TV/VIDEO



If you connect the receiver using only the RF or VHF connections, use this button, in SAT mode, to switch between the receiver and an alternate video source such as cable or broadcast TV antenna input. It will switch to the device routed into the TV Antenna Cable In connection.

In TV mode, this button will switch between video inputs on some TVs (check your television owner's manual for more details).

MENU MENU



In SAT mode, press the Menu button to open the Main Menu. When using the DVD Player, this button will bring up the DVD disc menu.

POWER POWER



In SAT mode, press the Power button to turn the receiver ON or OFF. The green Power light over the SAT label on the receiver front panel lights up to indicate the receiver is ON. For each mode, the Power button will turn that device ON and OFF, if the remote has been programmed for that device. See *Programming the Digital Remote to Control Other Devices* on page 3-7. Note: If you program the TV mode to control a television and do not program the AUX mode, the AUX mode button will turn the television ON and OFF. This allows you to turn the television ON or OFF without leaving SAT mode.



PAGE UP AND PAGE DOWN

In SAT mode, press the Page Up or Page Down arrow button to scan, by page, through the listing of channels when you have open the Program Guide or, if the receiver supports Themes, the Theme Categories menu.

The Parts of the System The Remote Control

(2)

In VCR mode, these buttons scan up or down through the television channels.



MUTE

In any mode, press the **Mute** button to temporarily turn off the sound. Press it again to restore the sound. The **Mute** button works only if you have programmed the remote. See *Programming the Digital Remote to Control Other Devices* on page 3-7.



VOLUME

In any mode, press the plus (+) side of the **Volume** button to increase the sound volume. Press the minus (-) side of the **Volume** button to reduce the sound volume. This button works only if you have programmed the remote. See *Programming the Digital Remote to Control Other Devices* on page 3-7.



GUIDE

In **SAT** mode, press the **Guide** button to open the **Program Guide**. When the **Program Guide** is open, press the **Guide** button to switch among **Favorites Lists**.



SELECT

In **SAT** mode, press the **Select** button to switch to **DVD** mode or press the **Select** button to select the highlighted option in a menu and perform the function.

In **VCR** mode, this button functions as the **Play** button. Press this button to play the video tape.

In **TV** or **AUX** mode, this button functions as an **Enter** button.

Press the **Select** button to go to **DVD** mode

or to select an option from a **DVD** disc menu



UP/DOWN/LEFT/RIGHT

In **SAT** mode:

- When using a menu, press these buttons to move the highlight to the desired option.
- When watching a program, press the **Right** button to open the **Browse Banner** or the **Up** or **Down** button to change channels.
- When the **Browse Banner** is open, press the **Up** or **Down** button to view the **Browse Banner** for the next channel.
- When a menu offers a list of choices, press the **Up** or **Down** button to bring more choices into view.
- When the **Program Guide** is open, press the **Up** or **Down** button to move the highlight through the channels.
- When a number must be entered in a menu, press the **Up** or **Down** button to increase or decrease the highlighted number.
- When the **Browse Banner** or **Program Guide** is open, press the **Left** or **Right** button to display programs in different time periods (but not a time period earlier than the present).
- If the receiver supports **Theme Categories**, when watching a program press the **Left** button to open the **Theme Categories** menu.

In **VCR** mode:

- The **Up** button functions as the **Stop** button. Press this button to stop the video tape.
- The **Down** button functions as the **Pause** button. Press this button to temporarily stop the video tape during recording or play. Press this button or the **Select** button (**Play**) to restart the tape.
- The **Left** button functions as the **Rewind** button. Press this button to rewind the video tape. During tape play, press this button to rapidly view the video tape as a reverse

Satellite System User Guide

visual search.

- The Right button functions as the Fast Forward button. Press this button to rapidly advance the video tape. During tape play, press this button to rapidly view the video as a forward visual search.

In TV or AUX mode:

Use the Up or Down button to change channels up or down.

In DVD mode:

- When using a menu, press these buttons to move the highlight to the desired option.



RECALL

In SAT, TV, or AUX mode (for cable TV boxes only), press the Recall button to go back to the last channel you were watching. Press repeatedly to alternate between the last two channels that you viewed.

Note: You must first program the remote to control the device. See *Programming the Digital Remote to Control Other Devices* on page 3-7.



INFORMATION

In SAT mode:

- Press this button for more information when the Program Guide, Browse Banner, or Theme Categories menu is open, or you are watching a program.
- When a menu is open that includes a Help option, press this button to see help information for that menu.
- If the receiver supports Theme Categories, highlight a program in a Theme Categories list and then press this button for more information on that program.
- When the receiver is OFF, press this button to display the Important System Information menu.



VIEW

In SAT mode:

- Press this button to return to watching a program.
- If already watching a program, press this button to briefly display the Program Banner.
- From any menu, press this button to cancel the procedure and immediately go back to watching the program.

In DVD mode:

Press this button to return to Satellite TV viewing.



CANCEL

In Sat mode:

Press the Cancel button to cancel the current procedure and to return to the previous menu or to watching a program.

In DVD mode:

If the View banner is on, press the Cancel button to return to watching a program.



SYSTEM INFORMATION

In SAT mode, press this button to display the Important System Information menu.




RECORD

In VCR mode, press this button to start recording on the VCR.

The Parts of the System The Remote Control

(2)

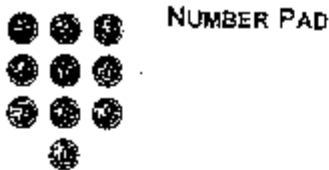


NUMBER PAD

In any mode:

- When watching a program or with the Program Guide open, enter the 3-digit channel number to change immediately to that channel.
- Use the number pad buttons to enter menu option numbers.
- Use these buttons to enter a number such as a ZIP code or password in a menu.
- When the Program Guide is open, enter a number of hours using the number pad buttons, and then press the Left or Right arrow to display programs in the time period offset by that number of hours. The receiver cannot display a time period earlier than the present.

In DVD mode:

 - The 2 button functions as the Title button. Press this button to cycle through the available DVD disc titles.
- The 4 button functions as the Audio button. Press this button to cycle through the available DVD audio options.
- The 5 button functions as the Angle button. Press this button to cycle through the available angles on a DVD disc.
- The 6 button functions as the Subtitle button. Press this button to cycle through the available DVD subtitles.
- The 8 button functions as the Chapter button. Press this button to skip ahead one chapter on the DVD disc.



STAR (*) / SKIP BACK

Note: When you are in the Disc menu, these buttons function as standard number buttons.

In AUX mode:

Use this button to program the remote control.

In DVD mode:

Press this button when midway through a chapter/track, and play will return to the start of that chapter/track. Press it again to skip back to a previous chapter/track.



POUND (#) / SKIP AHEAD

In SAT mode:

Use this button to set and to check the remote control address.

In DVD mode:

Press this button to skip ahead to the next chapter/track.



PLAY

In DVD mode:

Press this button to begin playback of a disc.



STOP

In DVD mode:

Press this button to stop playback of a disc.



PAUSE

In DVD mode:

- Press this button to freeze/still a picture or pause a chapter/track.
- Press this button repeatedly to advance still pictures frame by frame.
- Press Forward or Reverse when in Pause.

Satellite System User Guide

mode for Slow Forward or Slow Reverse.



FAST FORWARD

In DVD mode:

- Press this button to fast forward search through a disc.

The Parts of the System The Remote Control

(2)

- Press the button repeatedly and the Re Step 4.



REWIND

In DVD mode:

- Press this button to rewind search through a disc.
- Press the button repeatedly and the rewind speed will increase to Step 4, the maximum.

CHANGING THE DIGITAL REMOTE ADDRESS

Do not change the address of the remote unless absolutely necessary.

Note: If you start this procedure and at any time do not press a button within 20 seconds, the remote will end the procedure automatically. Simply start over again.

1. Press the **Menu** button.
2. Select the **System Setup** option.
3. Select the **Installation** option.
4. Select the **System Info** option. This displays the **Important System Information** menu.
Note: the **Remote Address** shown on this menu.
5. Press and hold the **SAT** mode button about three seconds, until all the mode button backlights come on, then release the **SAT** button.
6. Use the number pad buttons to enter a number from 1 to 15. The **SAT** mode button backlight will blink off after you enter each digit, and then come on again.
7. Press the **Pound (#)** button. If the address you entered is valid for the remote control, the **SAT** mode button backlight flashes three times.
8. Press the **Record** button. The number in the **Remote Address** field on the **Important System Information** menu should match the one you entered.
9. To verify the code, press and hold the **SAT** mode button for three seconds. Then, press the **Pound**

MENU



(#) button twice. The **SAT** mode button backlight flashes the same number of times as the address.

10. Select the **Cancel** option repeatedly to exit the menus.

INSTALLING AN ATTENUATOR (UHF REMOTE ONLY)

Other UHF signals may block signals sent from a UHF remote control to the receiver. To prevent such interference, you can install a 10 dB attenuator. This will reduce the sensitivity of the receiver to other UHF signals but also substantially reduce the operating range of the remote control.

1. Remove the UHF antenna from the UHF Remote Antenna connection on the receiver back panel.
2. Attach a 10 dB attenuator to the UHF Remote Antenna connection.
3. Attach the UHF antenna to the attenuator.

PROGRAMMING THE DIGITAL REMOTE TO CONTROL OTHER DEVICES

Note: If you want to program the **AUX** mode, program it *before* you program the **TV** mode. If you already have programmed the **TV** mode, do the following: (a) write down the **TV** code, (b) reprogram the **TV** mode using code 222, (c) program the **AUX** mode, and (d) reprogram the **TV** mode using the code that you wrote down.

1. Turn **ON** the device you want the remote to control. You must turn **ON** the device using its buttons or the remote control that came with it.
2. Find the brand name of the device in the device code tables starting on page 5-13. If the brand is not listed, see the *Doing the Remote Control Device Code Scan* procedure on page 3-8.
3. Press and hold the mode button for the device that you want the remote to control, for about three seconds. When all the other mode button backlights come on, release the mode button.
4. Use the number pad buttons to enter the code for the device. If you are programming in the **AUX** mode, you must enter a 4-digit code. The first digit is the code for the device, as follows: 0 is for a second TV, 1 is for a second VCR, and 2 is for an amplifier or cable TV box.

Satellite System User Guide

5. Press and release the Pound (#) button. If the code is valid, the mode button backlight blinks three times.
6. Test if the code works for the device by pressing the Power button. If the code works, the device should turn OFF.
7. Turn the device back ON and try some other functions to make sure they work. Occasionally, the Power button may work when other buttons do not. If the code works for other functions, stop here.
8. If the code you entered does not work, repeat steps 3 through 7 using another code from the tables.
9. If you have tried all of the codes listed for the device without success, or if you can not find the device brand name in the tables, use the *Device Code Scan* procedure as follows.

DOING THE REMOTE CONTROL

DEVICE CODE SCAN

If a device brand is not listed in the code tables or if the listed codes do not work, you can scan through all the codes, testing each one. The remote may not control some brands or models of devices.

1. Press and hold the mode button for the device that you want the remote to control, for about three seconds. When all the other mode button backlights come on, release the button. It will flash to indicate it is in the address programming format.

For AUX mode only, use the number pad buttons to enter the number of the device. Then, press the Star (*) button. This defines the device for which you are scanning: 0 is for a second TV, 1 is for a second VCR, and 2 is for an amplifier or cable TV box.

2. Press the Power button.
3. Press the Up or Down arrow button to set the remote to the next code. The Down arrow button scans backward, and the Up arrow button scans forward. Press the arrow button repeatedly to continue scanning.

When the correct code is reached, the device turns OFF. If this happens, press the Pound (#) button to store the code in the remote. If the code is valid, the appropriate mode light blinks three times.
4. Press the Power button to turn the device back ON.
5. Try some other remote control buttons to make sure that you have the correct code.

DETERMINING THE REMOTE CONTROL

DEVICE CODES

You can find out what device code is currently set for each remote control mode. Do the following:

1. Press and hold the mode button for the device that you want the remote to control, for about three seconds. When all the other mode button backlights come on, release the mode button.
2. Press the Pound (#) button twice. The mode light flashes the number of times to indicate each digit of the current mode, with a pause between the flash sequences. *For example*, for an AUX code of 0136, the mode light flashes once quickly (for zero), then once, three times, and six times.

Reference Device Codes for Programming the Digital Remote Control

5

DEVICE CODES FOR PROGRAMMING THE DIGITAL REMOTE CONTROL

These tables contain the device codes for programming the remote to control other devices. Every attempt has been made to include all device codes. If a device is not listed or the codes do not work, the remote may not control the device. **Note:** For some receivers, use code 222 in the *Programming the Remote to Control Other Devices* procedure in SAT, TV, or VCR mode to program the remote to control the receiver sound volume.

TELEVISIONS

A&A	525, 526, 548, 549, 550, 551, 552, 553, 554, 555, 585, 597, 626, 703, 713, 718
Alba	613
A-Mark	620
Amstrad	533
Anam	509, 521, 541, 620, 631, 691, 698
AOC	503, 506, 519, 530, 626, 695, 712
Audio	620
Audiovox	620
Bauer	611
Baycraft	526
Becksonic	562, 691
Candle	506, 522, 535, 537, 538, 691, 695, 708
Capelan	519, 695
Circuit City	592
Citizen	506, 516, 522, 527, 528, 531, 535, 691, 708
Colonyline	523, 695
Concerto	523
Cantor	527, 535, 541, 591, 691
Craig	521, 536, 537, 691, 695
Crown	526, 536
Curis Mathes	506, 516, 525, 535, 707, 708
CXC	541, 691
Dawson	503, 524, 526, 538, 550, 551, 532, 698, 712, 719
Dayton	526, 695
Dizi	532, 588, 620
Dumont	695
Electrohome	526, 527, 691, 709, 713
Eko	532
Emerson	526, 527, 528, 533, 534, 535, 536, 537, 538, 539, 540, 541, 573, 622, 691, 692, 695, 696, 699, 720
Evansco	506, 515, 712
Etron	522
Fisher	542, 590
Formosa	613
Formica	573, 503
Fujitsu	534, 694
Funai	534, 543, 691, 694
Futaba	541, 691, 694
General Electric (GE)	503, 506, 509, 512, 540, 543, 544, 630, 691, 693, 698, 701, 714, 715, 716
Genesee	515
Goldstar	503, 523, 526, 543, 546, 575, 588, 693, 695, 712
Grainada	695, 711
Grady	695
Grandy	547
Hartmark	695
Hinay	534

Hiopath	523, 526, 548, 549, 550, 551, 552, 553, 554, 555, 585, 597, 626, 703, 713, 718
Infinity	566
JBL	566
JC Penney	503, 505, 506, 514, 535, 526, 531, 542, 596, 701, 712, 714
Jensen	528, 573
JVC	527, 528, 559, 560
Kanashic	543, 551, 712
Kelwood	506, 512, 712
Koss	523, 563, 510, 698
KTV	526, 529, 540, 541, 691, 696, 712
Lloyds	695
Lloydtron	526
Lohr	588
Logik	518
Luxman	523
EXI	503, 563, 566, 590, 591, 511, 612, 701
Magnatone	523
Magnavox	506, 520, 525, 536, 564, 565, 566, 567, 568, 569, 575, 576, 610, 713, 718
Magnat	506, 566, 573, 585, 712
Mexico	522, 605
Megatron	695
Memorex	518, 532, 590, 695, 720
MGA	504, 505, 506, 591, 575, 695
Mitsubishi	504, 505, 520, 571, 572, 597, 625, 695, 705, 707, 712
MTC	505, 506, 516, 525, 531, 695, 715
NAD	503, 617, 695
National	509, 521, 697, 598
National Quenches	697
NEC	503, 506, 507, 517, 523, 575, 627, 712
Nisoku	613, 612, 518
Nisoco	695
Norman	531, 712
Novabeam	698
Nyon	701
Onyx	541, 691
Olympia	605, 607
Orion	694
Oshih	612
Ozono	541
Panasonic	508, 509, 510, 511, 512, 566, 574, 575, 697, 698, 700, 706, 714, 716
Phileo	503, 506, 525, 536, 564, 565, 568, 573, 610, 712
Philips	566, 588
Pioneer	502, 548, 551, 576, 698, 708
Portland	505, 526, 712
Proscan	503

Proson	512, 519, 525, 536, 573, 583, 624, 695
Pulse	50
Quasar	508, 509, 577, 700
Radio Shack	514, 526, 547, 607, 612, 691, 698
RCA	505, 507, 513, 548, 579, 580, 581, 582, 583, 584, 585, 586, 587, 625, 626, 629, 691, 698, 701, 708, 714, 715, 716
Realistic	590
Saba	531
Saito	535, 535, 600
Saito	506, 519, 698, 712
Samsung	505, 506, 516, 523, 526, 532, 583, 612, 693, 704, 712, 717
Sanyo	542, 589, 590, 591, 592, 604
SBR	588
Schneider	588
Secon	526, 531, 537, 541, 593, 600, 691, 696, 701
Seers	503, 522, 534, 540, 583, 589, 590, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 617, 695, 703
Seimens	697
Sharp	526, 585, 591, 605, 606, 607, 608, 628, 629
Simmons	591
Signature	518
Silver	573
Sinclair	573
Solavox	512
Sony	500, 509, 619, 622
Sonospigo	525, 536, 541, 691, 695
Spearmoon	520, 620
Spearsview	694
SSS	505, 541, 573, 691, 712
Supra	523
Supra-Max	522
Sylvania	500, 529, 536, 564, 565, 566, 568, 573, 575, 600, 610, 611, 632, 712
Synphonix	632, 692, 694
Tandy	603, 513
Tecumseh	505, 598
Teknics	508
Tedwood	523, 573
Teknika	504, 505, 516, 518, 527, 523, 524, 525, 526, 534, 536, 541, 614, 615, 691, 712
Telaviva	531
Telefunken	531
Teletron	532
Tera	513
Thomas	693
Thompson	709
Toshiba	551, 516
TMR	523, 573, 695

Satellite System User Guide

ashibe	314, 380, 596, 617, 618, 631
sonac	328
servisone	328
pramante	693
universal	345
Star Research	306
Star	337
Neo Concepts	370, 691
zhesh	305, 697, 712
ring	523
ands	304, 306, 515, 518, 534, 536, 543, 564, 565, 567, 568, 603, 619, 712, 714, 715
maama	503, 506, 710
tes	693
smith	301, 318, 691
inda	620

CRs

ra	348, 594, 623, 625, 626
dr	515, 514, 515, 520, 517, 518, 519, 520, 543
ra	346
strided	328
LA	363
Neo Dynamics	384, 600
octoarc	309, 536
sh	349
scie	380, 592, 593
Don	342, 593, 534
petan	343, 346
izen	391, 592, 593
ing	391, 608
rich	333
his Marbus	334, 591, 605
swgo	354, 346, 347, 593, 626, 627
virin	346
IN	394, 600
mobi	349
malch	388
microhume	609
erica	305, 306, 307, 308, 529, 510, 511, 512, 559, 568, 588, 590, 609, 618
rande	349
ica	349, 563, 588
ter	348, 349, 354, 608, 610
ar	388
eral Electric	350, 351, 352, 354, 372, 391, 603
umar	330, 333, 392, 612, 613
amada	383, 389
Video	550, 620
inda	349, 381
edig	365
mas Kanton	530, 569
am	389
clay	336, 337, 338, 339, 340, 341, 353, 388, 396, 397
am Replay	355
	318
amsey	330, 334, 380, 391, 394, 600, 601
an	360
	361, 362, 363, 364, 392, 394, 600, 601
wood	362, 381, 392, 394, 600, 601
3	338
4	339
5	313
navox	327, 333, 354, 356, 368, 611

Marine	330, 354, 363, 385, 392, 394, 600, 601, 603
MEI	334
Memorex	333, 349, 354, 366, 381, 383, 388, 608
MCA	367, 368, 609
Mitsubishi	362, 367, 368, 369, 370, 371, 609
MTC	344, 380, 388
Walbach	386, 389, 391
NAD	373
NEC	370, 371, 372, 362, 391, 394, 399, 600, 603, 602, 603, 604
Olympic	313
Optima	383
Dion	306, 307, 635
Panasonic	321, 322, 323, 324, 326, 350, 334, 398, 614, 628
Pentax	337, 392
Pandio	385
Phideo	333, 334, 611
Philips	333, 354, 363, 383
Pioneer	333, 362, 373, 374, 375, 376, 600
Portland	346, 593
Proscan	337, 303
Pulsar	333
Quartz	381
Quasar	339, 354, 377, 378
Radio Shack	607, 608, 609, 610
RCA	325, 328, 329, 328, 329, 331, 331, 333, 334, 391, 603, 606, 615, 620, 621
Realistic	339, 344, 380, 381, 382, 383, 385, 388
Rioch	302
Sapho	306, 307
Sastra	367, 381
Satchury	317, 324, 350, 379, 380, 391
Samsui	333, 344, 362, 600, 601
Sanyo	345, 381, 382, 383, 399, 608
SBR	363
Schneider	385
Scott	308, 339, 390
Seart	343, 349, 381, 382, 608, 610
Serena	346
Sharp	383, 607, 609, 625
Shipson	389
Sony	300, 301, 302, 303, 304
Sylvania	333, 333, 354, 356, 367, 388, 611
Symphonic	338, 388, 390
Tandy	383
Tephaz	383
Taiung	386, 394, 601
Tiag	388, 394, 601
Tecanics	333, 334
Tecanics	354, 367, 383
TRK	306
Teoniba	334, 335, 367, 390
Teovision	380, 391
Unitech	380
Vector Research	330, 600
Victor	361, 362, 600
Video Concepts	368, 600
Videocent	391
Wants	327, 334, 380, 385, 388, 389, 390, 391, 607, 608, 609
Yamaha	330, 392, 394, 600, 601
Zenith	301, 302, 353

TUNERS/AMPLIFIERS

Alwa	2636, 2668, 2680, 2684
Akai	2667
Carver	2633, 2672
Denon	2674
Fisher	2653, 2672
GE	2665
Goldstar	2677
IYC	2637, 2683
Kenwood	2676
Luxman	2681
LXI	2663
Martini	2631
Medtron	2673
NAD	2669
Nakamichi	2671
Onkyo	2660, 2667, 2678
Optima	2684
Panasonic	2632
Pioneer	2658, 2675, 2679
Proton	2654
Quasar	2652
RCA	2653
Realistic	2683, 2680
Scot	2659
Sherwood	2670
Sony	2673, 2680
Symphonic	2668
Technics	2658, 2672
Victor	2667
Yamaha	2663, 2682

CABLE TV BOXES

Cascom	2649
GLI-ecom	2630
Jenoid	2635, 2638
Medtron	2637
Oak	2646
Panasonic	2637, 2644, 2645
Paragon	2637
Pioneer	2642, 2643
Regency	2640
Selenite Allans	2638, 2639, 2647, 2648, 0130
Zetith	2641