

 **FUJIFILM**

DIGITAL CAMERA

***FinePix*** A203, A303

3.0  
MEGA  
PIXELS

2.0  
MEGA  
PIXELS



**digital**  
Tools for the imagination.

**Exif Print**

**xD**  
xD-Picture Card

**Temporary**

Getting Ready **1**

Basic Photography **2**

Advanced Features  
Photography **3**

Advanced Features  
Playback **4**

Settings **5**

Software Installation **6**


**OWNER'S MANUAL**

This manual will show you how to use your FUJIFILM DIGITAL CAMERA FinePix A203, A303 correctly. Please follow the instructions carefully.

BL00147-200 (1) **E**

## Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

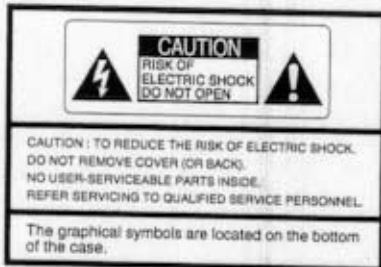

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### For customers in the U.S.A.

#### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an authorized service technician for help. You are cautioned that modifications not expressed in this manual could void the user's warranty on the equipment.

#### Notes on the Grant:

To comply with Part 15 of the FCC Rules, this product must be used with a shielded ferrite-core USB cable and D-sub connector.

### For customers in Canada

#### CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Instructions and make sure you understand them before using the camera.

# Contents

|                                 |   |
|---------------------------------|---|
| Warning                         | 2 |
| Preface                         | 6 |
| Camera Features and Accessories | 7 |
| Nomenclature                    | 8 |

## 1 Getting Ready

|                                           |    |
|-------------------------------------------|----|
| LOADING THE BATTERIES AND xD-Picture Card | 11 |
| Compatible batteries                      | 11 |
| xD-Picture Card (sold separately)         | 11 |
| SWITCHING ON AND OFF                      | 14 |
| SETTING THE DATE AND TIME                 | 15 |
| Changing the date and time                | 16 |
| SELECTING THE LANGUAGE                    | 18 |

## 2 Basic Photography

|                                     |    |
|-------------------------------------|----|
| BASIC OPERATION GUIDE (PHOTOGRAPHY) | 19 |
| BASIC OPERATION GUIDE (PLAYBACK)    | 20 |
| BASIC OPERATION GUIDE (MENU)        | 21 |

### STILL IMAGE

|                             |    |
|-----------------------------|----|
| TAKING PICTURES (AUTO MODE) | 22 |
| Viewfinder Lamp Display     | 27 |
| Number of Available Frames  | 28 |
| USING AF/AE LOCK            | 30 |
| FRAMING GUIDELINE FUNCTION  | 32 |
| DIGITAL ZOOM                | 33 |
| FLASH                       | 34 |
| Auto Flash Mode (Blank)     | 34 |
| Red-Eye Reduction           | 35 |

|                  |    |
|------------------|----|
| Forced Flash     | 35 |
| Suppressed Flash | 36 |
| Slow Synchro     | 36 |

### PLAYBACK MODE

|                                |    |
|--------------------------------|----|
| VIEWING YOUR IMAGES (PLAYBACK) | 37 |
| MULTI-FRAME PLAYBACK           | 38 |
| PLAYBACK ZOOM                  | 39 |
| ERASING SINGLE FRAME           | 40 |

## 3 Advanced Features Photography

|                              |    |
|------------------------------|----|
| MACRO (CLOSE-UP) PHOTOGRAPHY | 42 |
| SELF-TIMER PHOTOGRAPHY       | 43 |

### MOVIE PHOTOGRAPHY

|                            |    |
|----------------------------|----|
| MOVIE (VIDEO)              | 45 |
| PHOTOGRAPHY MENU OPERATION | 48 |
| SELECTING AUTO OR MANUAL   | 49 |
| PHOTOGRAPHY MENU OPTIONS   | 50 |

### PHOTOGRAPHY MENU

|                                                                    |    |
|--------------------------------------------------------------------|----|
| SETTING THE FILE SIZE<br>(NO. OF RECORDED PIXELS FOR STILL IMAGES) | 52 |
| EV (EXPOSURE COMPENSATION)                                         | 54 |
| WHITE BALANCE (SELECTING THE LIGHT SOURCE)                         | 55 |

## 4 Advanced Features Playback

|                             |    |
|-----------------------------|----|
| PLAYBACK MODE               |    |
| PLAYING BACK MOVIES (VIDEO) | 56 |
| Playing back movies         | 57 |

### PLAYBACK MENU

|                                     |    |
|-------------------------------------|----|
| ERASING SINGLE                      |    |
| ALL FRAMES/FORMATTING               | 58 |
| PROTECTING IMAGES FRAME/ALL         | 62 |
| HOW TO SPECIFY PRINT OPTIONS (DPOF) | 66 |
| DPOF SET FRAME                      | 67 |

### 5 Settings

|                                               |    |
|-----------------------------------------------|----|
| ADJUSTING THE MONITOR BRIGHTNESS              | 71 |
| USING SET-UP                                  | 72 |
| SET-UP Menu Options (Date/time setting, etc.) | 73 |

### SET-UP

|            |    |
|------------|----|
| POWER SAVE | 74 |
|------------|----|

### 6 Software Installation

|                                            |    |
|--------------------------------------------|----|
| IN CONNECTION                              | 75 |
| Using the optional AC Power adapter        | 75 |
| The Software Components                    | 77 |
| Installation on a Windows PC               | 78 |
| Load the CD-ROM into your PC               | 78 |
| From FinePixViewer installation to restart | 80 |
| Acrobat Reader installation                | 82 |
| Installation on a Mac OS 9.0 to 9.2        | 83 |
| Check the system software settings         | 83 |
| From FinePixViewer installation to restart | 83 |
| Acrobat Reader installation                | 85 |
| Installation on a Mac OS X                 | 88 |
| From FinePixViewer installation to restart | 88 |

|                                     |  |
|-------------------------------------|--|
| PC Connection                       |  |
| Use this procedure the first time   |  |
| Use this procedure the first time   |  |
| Using FinePixViewer                 |  |
| Saving Images on Your Computer      |  |
| Disconnecting the Camera (PC)       |  |
| Using the FinePix Internet Software |  |
| User Registration (Mac OS 9.0)      |  |
| User Registration (Mac OS X)        |  |
| Mastering FinePixViewer             |  |
| Uninstalling the Software           |  |

|                              |  |
|------------------------------|--|
| System Expansion Options     |  |
| Accessories Guide            |  |
| Notes on Using Your Camera   |  |
| Notes on the Power Supply    |  |
| Applicable Batteries         |  |
| Notes on the Batteries       |  |
| AC Power Adapter             |  |
| Notes on the xD-Picture Card |  |
| Warning Displays             |  |
| Troubleshooting              |  |
| Specifications               |  |
| Explanation of Terms         |  |
| Safety Notes                 |  |
| EC Declaration of Conformity |  |

## Preface

### ■ Test Shots Prior to Photography

For particularly important photographs (such as weddings and overseas trips), always take a test photograph and view the image to make sure that the camera is functioning normally.

- Fuji Photo Film Co., Ltd. cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

### ■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

### ■ Liquid Crystal

If the LCD monitor or display panel is damaged, take particular care with the liquid crystal in the monitor or panel. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin  
Wipe the area with a cloth and then wash thoroughly with running water and soap.
- If liquid crystal gets into your eye  
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.

- If liquid crystal is swallowed

Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

### ■ Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

### ■ Handling Your Digital Camera

This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

### ■ Trademark Information

- IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
- iMac and Macintosh are registered trademarks of Apple Computer, Inc.
- Windows is a registered trademark of the Microsoft Corporation of the U.S. registered in the U.S.A. and other countries. Windows is an abbreviated term referring to the Microsoft Windows Operating System.
- xD-Picture Card and other company or product names are trademarks or registered trademarks of the respective companies.

## Camera Features and Accessories

### Camera Features



- CCD with 2 million effective pixels and high-resolution 3x Fujinon zoom lens give superb high-quality images (FinePix A203)
- CCD with 3.24 million effective pixels and high-resolution 3x Fujinon zoom lens give superb high-quality images (FinePix A303)
- Records images at resolutions up to 1600 × 1200 pixels (1.92 megapixels) (FinePix A203)  
Records images at resolutions up to 2048 × 1536 pixels (3.15 megapixels) (FinePix A303)
- Compact, lightweight body
- Wide-angle field of view (built-in Macro function)
- Auto white balance with automatic scene recognition and AE functions
- Automatic flash with high-precision wide-range flash control sensor
- Up to 2.5x digital zoom photography function with up to 10x zoom during playback (FinePix A203)  
Up to 3.2x digital zoom photography function with up to 13x zoom during playback (FinePix A303)
- Electrically powered lens cover
- Movie shooting function (320 × 240 or 160 × 120 pixels, without sound)
- USB connection for easy image downloading (using the interface set provided)
- Built-in PC Camera function
- Conforms to the new standard for digital camera file system\*
- \*Design for Camera File system\* standard and Exif format are formulated by the Japanese Electronic and Information Association (JEITA)

### Accessories

- 16 MB, xD-Picture Card (1)  
Supplied with:
  - Anti-static case (1)
- LR6 AA-size alkaline Batteries (2)
- Hand strap (1)
- Interface Set (1)
  - CD-ROM: Software for FinePix
  - Special USB cable with Noise
- Owner's Manual (this manual)


## Nomenclature

• Refer to the pages in parentheses for information on using the camera features.

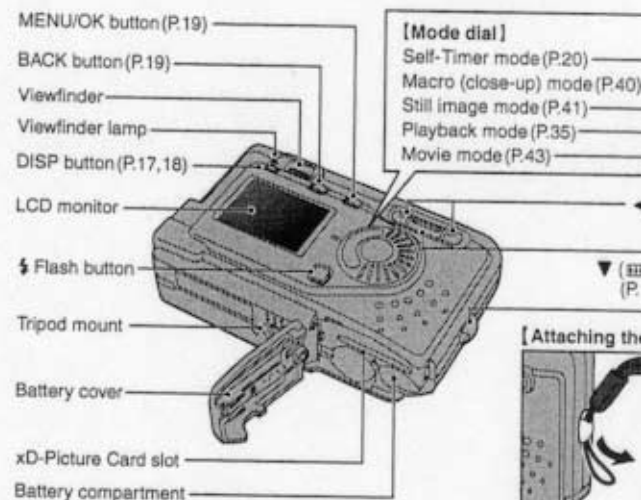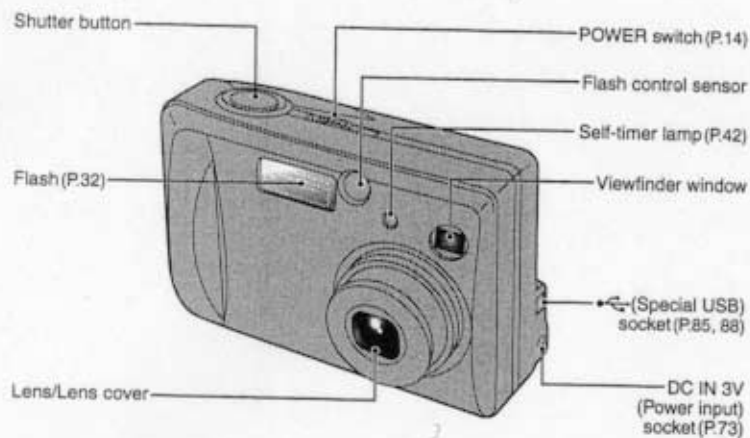


## Nomenclature

### Example of LCD Monitor Text Display: Still image

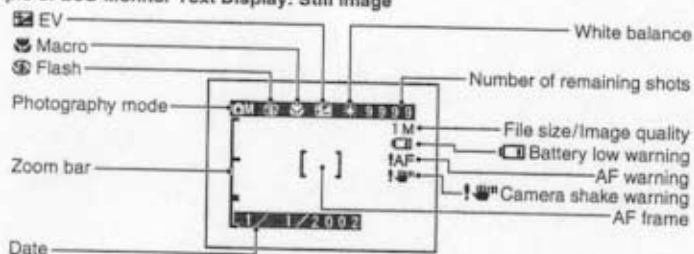

### Example of LCD Monitor Text Display: Playback

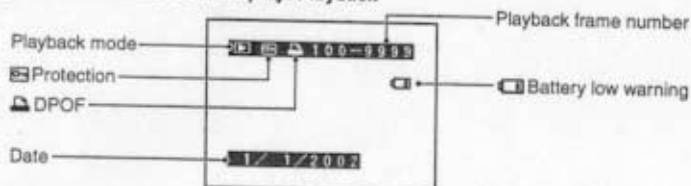

## 1 Getting Ready

 
## LOADING THE BATTERIES AND xD-P

### Compatible batteries

Use two AA-size alkaline batteries or two AA-size nickel-metal hydride (Ni-MH) batteries.

#### Notes on Handling Batteries

- It is recommended that you use same brand of alkaline batteries as those supplied with the camera.
- Never use a battery when the outer casing is split or peeling as this could result in a short-circuit and cause major problems due to battery fluid leakage or overheating.
- Do not use different types of batteries or old and new batteries together.
- You cannot use lithium, manganese or nickel-cadmium (Ni-Cd) batteries.
- The operating lives of alkaline batteries vary between brands and the life of batteries you purchase may be shorter than the alkaline batteries provided with the camera. Note also that due to the nature of alkaline batteries, the time for which they can be used is shorter in cold locations (at temperatures of +10°C (+50°F) or below). Consequently, Ni-MH batteries are recommended.
- Soiling (fingerprints, etc) on the terminals of batteries can greatly reduce the time for which the batteries provide power.
- You will need the optional charger (P.106) to recharge Ni-MH batteries.
- See P.109 for notes on using batteries.



Front

### xD-Picture Card (sol


DPC-16 (16MB)  
DPC-32 (32MB)




Front

Operation of this camera is on is used with FUJIFILM xD-Picture Card.  
See P.112-113 for more information.

## LOADING THE BATTERIES AND xD-Picture Card

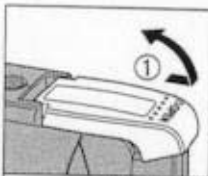


- ① Slide the battery cover out to open it.
- ② Load the batteries correctly as shown.

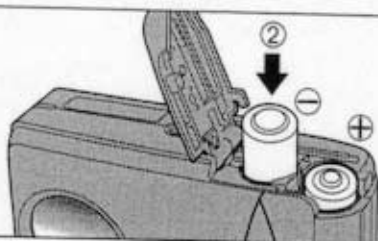

### ◆ When you want to replace the battery ◆


Check that the camera is switched off, open the battery cover and then remove the batteries.

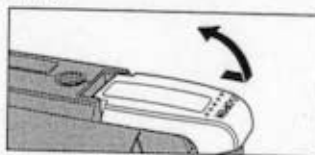

- ③ Take care not to drop the battery when opening and closing the battery cover.

⚠ Do not apply excessive force to the battery cover.

Never open the battery cover while the camera is still switched on. This could damage the xD-Picture Card or corrupt the image files on the xD-Picture Card.

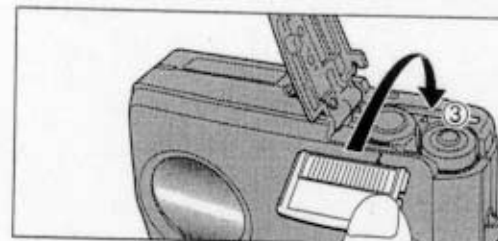

- ③ Push the xD-Picture Card firmly into the xD-Picture Card slot as far as it will go.
- ④ Close the battery cover.


- ⚠ If you open the battery cover while the camera is switched on, the camera automatically switches off to protect the data on the xD-Picture Card.
- ⚠ The xD-Picture Card will not slide fully into the slot if it is inserted facing the wrong way. Be careful not to apply undue force to the xD-Picture Card.
- ⚠ To protect the xD-Picture Card, always store it in the special anti-static case.

◆ When you want to remove the xD-Picture Card ◆  
When you push the xD-Picture Card into the slot, it will slide in until it is released and the xD-Picture Card is released. You can then pull the xD-Picture Card the way out.



- ⚠ Take care not to remove your finger from the slot as the card may spring out.

## SWITCHING ON AND OFF

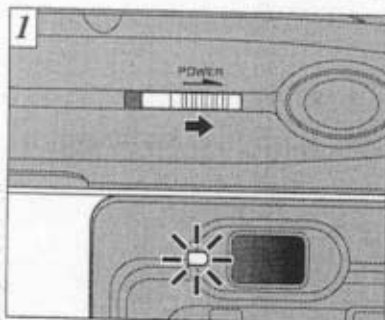

Slide the "POWER" switch sideways to turn the camera on and off. When you switch the camera on, the viewfinder lamp lights (green).

In "x" mode, the lens cover opens and the lens extends. Take care not to press on these precision components as this could result in a fault or a "LENS ERROR" message being displayed on the LCD monitor. Take care also not to leave fingermarks on the lens as this will degrade the picture quality.



When you first switch the camera on, the date is cleared. Press the "MENU/OK" button to set the date and time.

- ① To set the date and time later, press the "BACK" button.
- ② If you do not set the date and time, this confirmation screen will appear each time you switch the camera on.

## SETTING THE DATE AND TIME



- ① Use "◀" or "▶" to select Year, Month, Day, Hour or Minute.
- ② Press "▲" or "▼" to set the number.

- ③ If you hold down "▲" or "▼", the numbers change continuously.
- ④ When the time displayed passes "12:00", the AM/PM setting automatically switches.



Once you have set the date, press the "MENU/OK" button. Pressing this button switches the camera to Playback mode.

- ⑤ To set the time more precisely, press "▲" or "▼" when the time on your reference clock is displayed.
- ⑥ At the time of purchase and after a long period with the batteries removed, the date and time are cleared. Unless the battery has been left in the camera for several minutes, the camera settings may be replaced by the xD-Picture Card or battery settings.

## SETTING THE DATE AND TIME

### Changing the date and time



- ① Press the "MENU/OK" button.
  - ② Use "◀" or "▶" to select "OPTION" and then use "▲" or "▼" to select "SET-UP".
  - ③ Press the "MENU/OK" button.
  - ④ Select "DATE/TIME" and press "▶".
- See P.15 for information on setting the date and time.

### To change the date display format

You can select your preferred date format.



- ① Press "◀" or "▶" to select the date format.
- ② Press "▲" or "▼" to set the format. Refer to the table below for details of the settings.

|            |      |
|------------|------|
| aaaa       | aaaa |
| YYY.MM.DD  | aaa  |
| MM/DD/YYYY | aaa  |

### ◆ Checking the remaining battery charge ◆

Switch the camera on and check that no battery level warning (◻ or ◻) is displayed on the LCD monitor. If no icon is displayed, there is ample charge left in the battery.


- **◻ Lit red:**  
The battery is low on charge. Have a new battery ready.
- **◻ Blinking red:**  
The battery is exhausted. The display will shortly go blank and the camera will stop working. Replace or recharge the battery.

• The above estimates are for the Still image modes. In Playback mode, the transition from "◻" to "◻" may take less time.

### ◆ Power Save Function ◆

If the camera is not used for 2 minutes, this function automatically switches the camera off. When this function is active, it also switches off the LCD monitor to reduce power consumption if the camera is not used for 30 seconds. (See P.72 for details.)

## SELECTING THE LANGUAGE

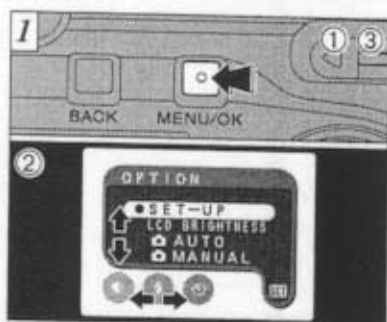

- ① Press the "MENU/OK" button to display the menu screen.
- ② Use "▲▼◀▶" to select "SET-UP" from the "OPTION" menu.
- ③ Press the "MENU/OK" button.



- ① The "SET-UP" screen appears. Use "▲▼" to select "LANGUAGE".
- ② Use "▶" to select "ENGLISH", "FRANCAIS" or "DEUTSCH". You can cycle through the language settings by pressing "▶".

Ⓜ The screens in this manual are shown in English.  
 Ⓜ See P.72, 73 for more information on the "OPTION" menu.

## 2 Basic Photography

## BASIC OPERATION GUIDE (PHOTOGRAPHY)

**●Switching the LCD monitor on and off**

Select one of the following modes:

**LCD monitor ON**  
Normally, set the LCD monitor to ON.

**LCD monitor OFF**  
Switch the LCD monitor OFF to reduce power consumption.

**Framing Guidelines**  
Display these as a guide to composing your shots.

★ You can further reduce power consumption by switching preview image checking OFF.

**●Power ON/OFF**  
Slide this button sideways to switch the camera on and off.

**●Focus and Zoom selector**  
Pressed halfway: Macro  
Pressed fully: Zoom

**●Photo selector**  
Select one of the following 5 flash modes:  
AUTO, , , ,

The diagram shows the back of the camera with callouts to the 'Power ON/OFF' button, 'Focus and Zoom selector', 'Photo selector', and 'Flash mode selector'.

## BASIC OPERATION GUIDE (PLAYBACK)

### ●LCD monitor display selector

Select one of the following 3 modes:

**Text displayed:**

Normally, use this setting.

**Text not displayed:**

No text is displayed.

**Multi-frame playback:**

Displays 9 image frames.

### ●Power ON/OFF

Slide this button sideways to switch the camera on and off.

### ●Playback frame selector

▶ : Selects the next frame.

◀ : Selects the previous frame.

### ●Playback zoom

▲ ( [ ] ) : Increases the display scale (zooms in).

▼ ( [ ] ) : Decreases the display scale (zooms out).

### ●Playback mode selector

Set the mode dial to "P".

### ◆Displaying help◆



This feature displays help on moving to the next step at the bottom of the screen. Press the corresponding button.

## BASIC OPERATION GUIDE (MENU)

### ●Using the Menus

① Display the menu.  
Press the "MENU/OK" button.

② Select a menu item.  
Press the "LEFT" button.

③ Select a menu item.  
Press the "RIGHT" button.


④ Confirm the selection.  
Press the "MENU/OK" button.

●To cancel a procedure mid-way.  
Press the BACK button.

Up, down, left and right are indicated by black triangles in the Owner's Manual. Up or down is shown as "▲▼", and left or right is shown as "◀▶".

## STILL IMAGE TAKING PICTURES (A AUTO MODE)

You have read the section called "Getting Ready" and now your camera is ready to take pictures. The "Basic Photography" section takes you through the basic procedures of "Shooting", "Viewing" and "Erasing" pictures. Master these basic operations by trying them out as you read through the manual.

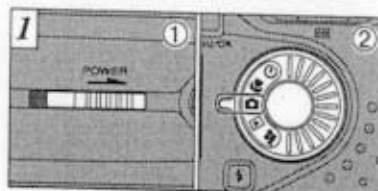


- 1 Slide the "POWER" switch sideways to switch the camera on.
- 2 Set the Mode dial to "A".
- **Photography range:** Approx. 60 cm (2 ft.) to infinity

For subjects closer than 60 cm (2 ft.), use Macro photography (P.42).

### To increase your shooting time

 - Press the "DISP" button to switch the LCD monitor off and use the viewfinder to take pictures. (Note that you cannot switch the LCD monitor off in Macro mode.)
- Set "POSTVIEW" in the SET-UP menu to "OFF" (P.71).
- Set "POWER SAVE" in the SET-UP menu to "ON" (P.71, 74).



Brace your elbows against your sides and hold the camera with both hands. Hold the camera so that your right thumb is conveniently positioned for operating the zoom.

If the "LCD OFF", "WHITE FLASH", "LCD OFF" or "LCD NOT INITIALIZED" message appears, see pages P.114 and P.115.


If you use the flash in very dusty environments or when it is snowing, the flash may reflect off the dust particles or snowflakes and appear as white dots in your images.



Be careful to ensure that flash control sensor are not covered by hands or the camera strap. The camera may not be able to take pictures if your fingers or the strap are in the way.

Check that the lens is clean. Clean the lens as described on P.108.

STILL IMAGE **TAKING PICTURES (A AUTO MODE)**

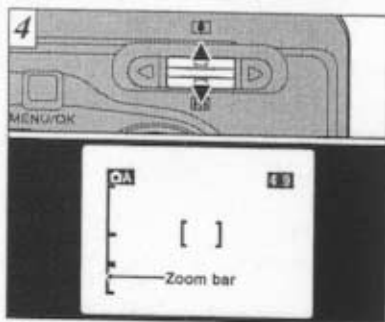


To zoom in on the subject, press "▲" (TELE). To zoom out, press "▼" (WIDE). A "zoom bar" appears on the LCD monitor when you zoom in or out.

• **Optical zoom focal length (35mm camera equivalent)**


Approx. 38 mm-114 mm (1.4 in. to 4.3 in.)  
Maximum zoom scale: 3x

④ Zooming stops briefly when the camera switches between optical zoom and digital zoom (→P.33).

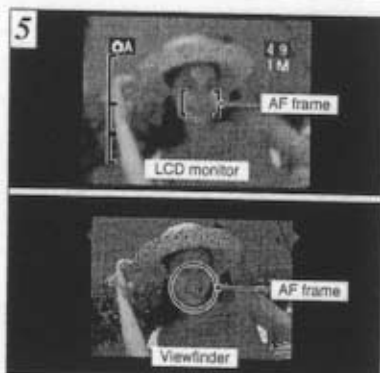


Using the viewfinder or LCD monitor, frame your shot so that the subject fills the entire AF (Auto Focus) frame.

④ If your subject is not in the center of the picture, use AF/AE lock to take the picture (→P.30).

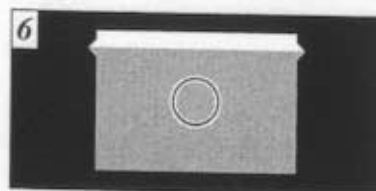

When you are using the viewfinder to take a picture at a distance of 0.8 m to 1.5 m (2.6 ft. to 4.8 ft.), only the shaded area in the figure is photographed.

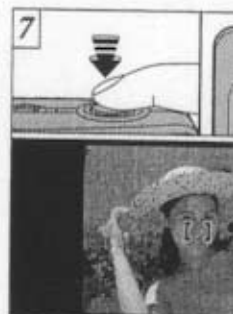

④ To frame your shot precisely, you should take the picture using the LCD monitor.

④ In some conditions it may be difficult to see your subject clearly on the LCD monitor (Such as in sunny weather outdoors or when you are shooting dimly lit scenes). In such situations, use the viewfinder to take the shot.

④ The image shown on the LCD monitor before you take the shot may differ in its brightness, color, etc. from the image actually recorded. If necessary, play back the recorded image to check it (→P.37).


Press the shutter button down until the image on the screen is complete when the AF monitor shrinks and the view stops flashing and remains lit.

④ If "IAF" appears on the screen, focus.

④ When you press the shutter button, the image on the screen flashes.

④ However, this image is not the image actually recorded. If necessary, play back the recorded image to check it (→P.37).

## STILL IMAGE TAKING PICTURES (A AUTO MODE)

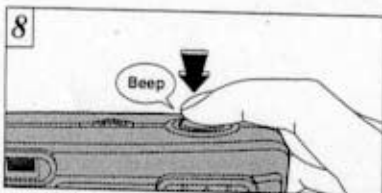

To take the picture, press the shutter button down fully without lifting your finger off it. The camera beeps and takes the picture, and the data is then recorded.

- ⑧ If you press the shutter button down fully in one motion, the shot is taken without the AF frame changing.
- ⑨ When you take a picture, the viewfinder lamp lights orange (camera not ready) before switching back to green to indicate that the camera is again ready for shooting.
- ⑩ The viewfinder lamp flashes orange while the flash is charging. If the LCD monitor is switched on, the screen may go dark for a moment. This is normal and does not indicate a fault.
- ⑪ See P.114-116 for information on the warning displays.

### Warnings Displayed When the Shutter is Pressed Halfway

**!AF**

The camera cannot focus.

#### Solution

- Ensure that you are at least 2 m (6.6 ft.) from the subject when you take the shot.
- Use AF/AE lock to take the shot (→P.30).



There is a high risk of camera shake due to the slow shutter speed.

#### Solution

- Use the flash.
- Use a tripod.

**!AE**

You can take the shot, but it will not be correctly exposed.

### Viewfinder Lamp Display

\* When the LCD monitor is switched on, more data are displayed (→P.114-116).

| Display                               | Status                                                                                                                                                                                                          |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lit green                             | Ready to shoot.                                                                                                                                                                                                 |
| Blinking green                        | AF/AE in progress, camera shake warning or AF warning (Ready to shoot).                                                                                                                                         |
| Blinking green and orange alternately | Recording to xD-Picture Card (Ready to shoot).                                                                                                                                                                  |
| Lit orange                            | Recording to xD-Picture Card (Not ready).                                                                                                                                                                       |
| Blinking orange                       | Flash charging. PC communication in progress (Flash will not fire).                                                                                                                                             |
| Blinking red                          | <ul style="list-style-type: none"> <li>• xD-Picture Card Warnings</li> <li>• No card loaded, card not formatted, incorrect format, card full, xD-Picture Card error</li> <li>• Lens operation error.</li> </ul> |

### Subjects Not Suitable for Autofocus

Though the FinePix A203/FinePix A303 uses an accurate autofocus mechanism, it may have not been able to focus at all for the types of subject and situation listed below. In such cases, the camera will not focus.

- Very shiny subjects such as a mirror or car body.
- Subjects photographed through glass.
- Subjects that do not reflect well, such as hair or fur.
- Subjects with no substance, such as smoke or flames.
- When the subject is dark.
- When there is very little contrast between the subject and the background (such as white walls or subjects dressed in the same color as the background).
- Subjects moving at high speed.
- When something other than your AF frame, has contrasting areas is either closer or further away when you photograph someone with strongly contrasting elements.

For subjects of this type, use AF/AE lock.

## STILL IMAGE TAKING PICTURES (A AUTO MODE)

### Number of Available Frames



The number of available shots is displayed on the LCD monitor.

### Standard number of shots per xD-Picture Card

The number of available shots when the xD-Picture Card is formatted in the camera.

#### FinePix A203

| File Size        | 2M • F         | 2M • N         | 1M             | 0.3M           |
|------------------|----------------|----------------|----------------|----------------|
| Quality Mode     | 1600 × 1200    |                | 1280 × 960     | 640 × 480      |
| Image Data Size  | Approx. 820 KB | Approx. 390 KB | Approx. 320 KB | Approx. 130 KB |
| DPC-16 (16 MB)   | 25             | 39             | 49             | 122            |
| DPC-32 (32 MB)   | 50             | 79             | 99             | 247            |
| DPC-64 (64 MB)   | 101            | 159            | 199            | 497            |
| DPC-128 (128 MB) | 204            | 319            | 399            | 997            |

#### FinePix A303

| File Size        | 3M • F          | 3M • N         | 2M             | 1M             |
|------------------|-----------------|----------------|----------------|----------------|
| Quality Mode     | 2048 × 1536     |                | 1600 × 1200    | 1280 × 960     |
| Image Data Size  | Approx. 1300 KB | Approx. 590 KB | Approx. 390 KB | Approx. 320 KB |
| DPC-16 (16 MB)   | 12              | 26             | 39             | 49             |
| DPC-32 (32 MB)   | 25              | 53             | 79             | 99             |
| DPC-64 (64 MB)   | 50              | 107            | 159            | 199            |
| DPC-128 (128 MB) | 102             | 215            | 319            | 399            |

② See P.52 for information on changing the resolution (number of recorded pixels).

③ Because the amount of data recorded varies depending on the subject, the number of available shots may not decrease when recording ends, or in some cases may decrease by 2 frames.

④ Also, the discrepancy between the actual number of available shots and the standard number of shots tends to be larger when the capacity of the xD-Picture Card is larger.


## USING AF/AE LOCK



In a shot with this type of composition, the subjects (two people in this case) are not in the AF frame. If the shot is taken at this point, the subjects will not be in focus.



Move the camera slightly so that one of the subjects is in the AF frame.

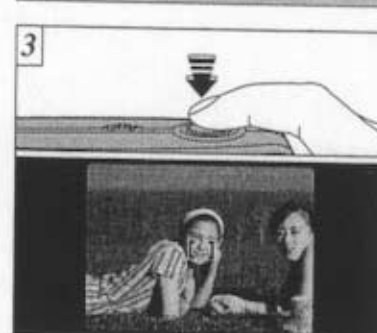

Keep the shutter button held down halfway (AF/AE lock) and check that the AF frame on the LCD monitor shrinks.




Continue to hold the shutter button (AF/AE lock). Move the camera to the original image and then fully release the shutter button.

### ◆ AF/AE Lock ◆

On the FinePix A203/FinePix A303, when you press the shutter button down half way, the focus and exposure settings are fixed (AF/AE lock). If you want to focus on a subject that is off to one side of the image or if you want to set the exposure before you compose the final shot, lock the AF and AE settings and then compose and shoot your picture to get the best results.

① You can reapply the AF/AE lock after you like before releasing the shutter button.  
② The AF/AE lock operates in a half-press mode and can be used to ensure exposure.

## FRAMING GUIDELINE FUNCTION

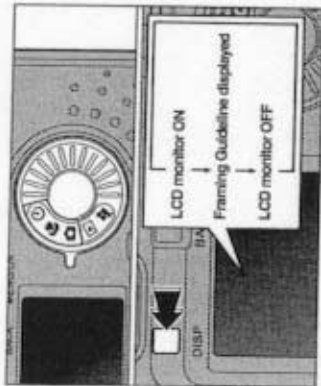

This function can be specified in the "C" and "S" modes. The mode shown on the LCD monitor switches each time you press the "DISP" button. Press the "DISP" button to display the framing guideline.

- ① The framing guideline is not recorded on the image.
- ② The lines in the scene frame roughly divide the recorded pixels into three equal parts horizontally and vertically. When the image is printed, the resulting print may be shifted slightly from the scene frame.

## DIGITAL ZOOM

Press "A" to zoom in and make your subject larger. Press "V" when you want to zoom out and shoot a wider area. If you use the LCD monitor to take pictures, you can continue zooming with the digital zoom after the optical zoom finishes.


### FinePix A203

| Digital zoom focal distance (35 mm camera equivalent) | Maximum zoom scale |
|-------------------------------------------------------|--------------------|
| 2M Cannot be used                                     |                    |
| 1M Equivalent to approx. 114 mm-148 mm                | 1.3x               |
| 0.3M Equivalent to approx. 114 mm-385 mm              | 2.5x               |

### FinePix A303

| Digital zoom focal distance (35 mm camera equivalent) | Maximum zoom scale |
|-------------------------------------------------------|--------------------|
| 3M Cannot be used                                     |                    |
| 2M Equivalent to approx. 114 mm-148 mm                | 1.3x               |
| 1M Equivalent to approx. 114 mm-182 mm                | 1.6x               |
| 0.3M Equivalent to approx. 114 mm-385 mm              | 3.2x               |

④ See P.52 for information on changing the file size setting.

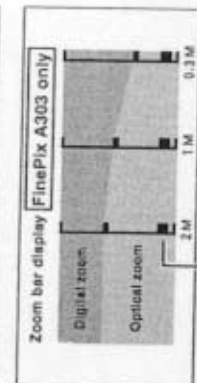


The position of the "M" on the zoom bar indicates the current zoom setting.

- ① If the "M" is above the dividing line, the digital zoom is being used. If it is below the line, the optical zoom is being used.
- ② Press "A" or "V" to move the "M" up or down.
- ③ When you switch between digital zoom and optical zoom, the "M" stops moving briefly. Press the button for the same direction again to start the "M" moving and switch the zoom setting.

- ④ If the image goes out of focus when you use the zoom, press the shutter button down halfway to refocus.
- ⑤ The optical zoom is equivalent to approximately 38 mm-114 mm on a 35 mm camera.

↔ FLASH

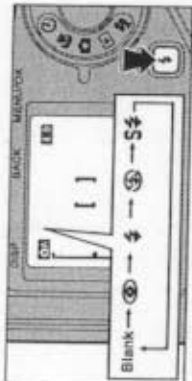

Press the "4" button to select the flash setting. Use the flash mode that best suits your shot.

- 5 flash modes: "AUTO" (no icon), "☉", "☉", "☉", and "☉".
- Effective flash range (in AUTO mode):  
Wide-angle: Approx. 0.3 m to 3.5 m (1.0 ft-11.5 ft).  
Telephoto: Approx. 0.3 m to 3 m (1.0 ft-9.8 ft).
- If you use the flash in very dusty environments or when it is snowing, the flash may reflect off the dust particles or snowflakes and appear as white dots in your images.
- The flash charging time may increase if the charge remaining in the batteries is low.
- When you take a shot using the flash, you may see the video image disappear and the screen go dark as the flash charges. The viewfinder lamp flashes orange while the flash is charging.



## Auto Flash Mode (Blank)

Use this mode for ordinary photography. The flash fires automatically as required by the shooting conditions.



**Red-Eye Reduction**

Use this mode to ensure that the subject's eyes appear natural when photographing people in low-light conditions. The flash fires automatically as required by the photography conditions. The flash fires a pre-flash just before the picture is taken and then fires again to take the actual picture.



### 4 Forced Flash


Use this mode to photograph backlit scenes, such as a subject against a window or in the shade of a tree, or to obtain the correct colors when you are shooting under lighting such as fluorescent tubes. In this mode, the flash fires in bright as well as dark conditions.

◆ Red-Eye Effect ◆

When you use the flash to photograph people in low-light conditions, their eyes sometimes appear red in the picture. This is caused by the light of the flash reflecting off the inside of the eye. Use Red-Eye Reduction flash to effectively minimize the likelihood of the red-eye effect.

- Get the subjects to look at the camera.
- Get as close as possible to the subjects.

## FLASH

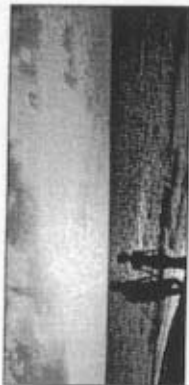

### ③ Suppressed Flash

Use this mode for photography using indoor lighting, for shots taken through glass, and for photography in venues such as theaters or at indoor sporting events where the distance is too great for the flash to be effective. When you use Suppressed Flash, the Automatic White Balance function (P.124) operates so that natural colors are captured along with the ambience of the available light.

④ If you are shooting in Suppressed Flash mode in dark conditions, use a tripod to prevent camera shake.

⑤ See P.27, 115 for information on the camera shake warning.



### S& Slow Synchro


This is a flash mode that uses a slow shutter speed. This allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop.

④ The image may be overexposed when you shoot bright scenes.

⑤ Because a slow shutter speed is used, a tripod should be used to prevent camera shake.


## PLAYBACK MODE

## VIEWING YOUR IMAGES (PLAYBACK)

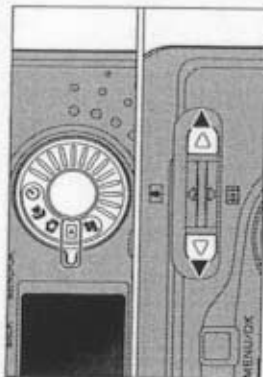

Set the Mode dial to "P". You can "P" and "P" button to move forward and backward respectively through your images.

### Fast Forwarding Images

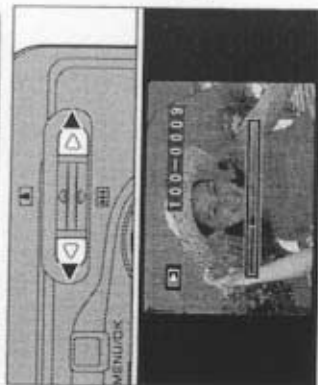


You can fast forward through the frames by holding down "P" or "P" button for about 1 second during playback.

④ When you set the Mode dial to "P", the last image shot is displayed.


④ A progress bar is displayed to show the approximate playback position on the xD-Picture Card.

# PLAYBACK MODE MULTI-FRAME PLAYBACK

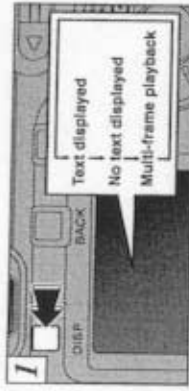

In playback mode, the display shown on the LCD monitor switches each time you press the "DISP" button. Press the "DISP" button until the multi-frame playback screen (9 frames) appears.


- ② The LCD monitor text display disappears after approximately 3 seconds.
- ③ Playback zoom cannot be used with multi-frame playback.

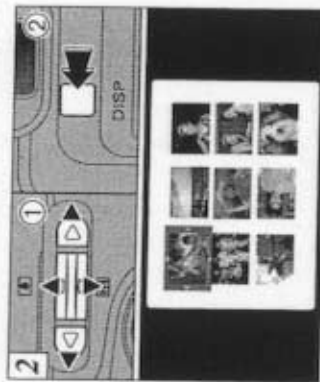

- ① Select a frame by using the left and right arrow buttons to move the cursor (the orange box) to the desired frame. Press the "A" or "V" button several times to switch to the previous page or the next page.
- ② You can enlarge the selected image by pressing the "DISP" button again.

# PLAYBACK MODE PLAYBACK ZOOM

This function is useful for things such as checking the focus of shots you have taken. To switch to the zoom screen, press "A" during single-frame playback.

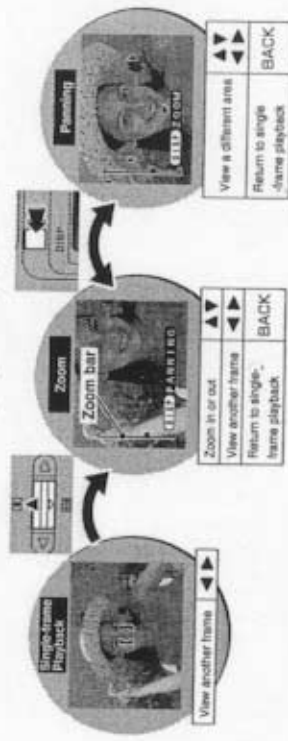


## Maximum zoom scale

| Model        | Pixel | 3M (2048 x 1536) | 2M (1600 x 1200) | 1M (1280 x 960) | 0.3M (640 x 480) |
|--------------|-------|------------------|------------------|-----------------|------------------|
| FinePix A303 |       | ---              | x10              | x6              | x4               |
| FinePix A303 |       | x13              |                  |                 |                  |

- ① It may not be possible to play back images shot on other camera models.
- ② Playback zoom cannot be used during multi-frame playback.

## PLAYBACK MODE ERASING SINGLE FRAME

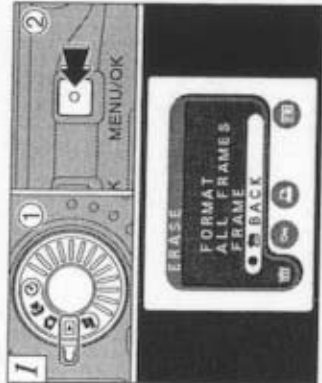


- 1 Set the Mode dial to "E".
- 2 Press the "MENU/OK" button to display the Menu screen on the LCD monitor.

To revert to image playback without erasing the frame, select "BACK" and press the "MENU/OK" button.




- 2 Select "FRAME" in the "ERASE" menu and press the "MENU/OK" button. See P.59 for more information on "ALL FRAMES" and "FORMAT".

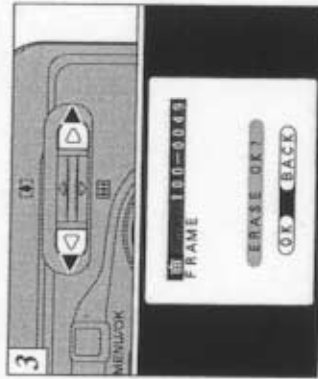

- 3 Press the "BACK" button to cancel frame erasing.

Note that mistakenly erased images cannot be recovered. You should copy important files that you want to keep to your computer.


To erase another frame, repeat steps 3 and 4.

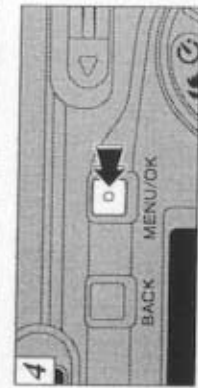

- 4 Pressing the "MENU/OK" button erases the frame (individual file) displayed. When the frame has been erased, the next frame is played back and "ERASE OK" is displayed.

To erase another frame, repeat steps 3 and 4.

## MACRO (CLOSE-UP) PHOTOGRAPHY

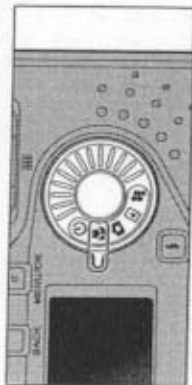

Setting the Mode dial to "M" allows you to take close-up shots.

### • Effective Photography Range

Approx. 10 cm to 80 cm (0.7 ft.-2.6 ft.).  
(Approx. 30 cm to 80 cm (1.0 ft.-2.6 ft.) when the flash is used)


When shooting in dark conditions, use a tripod to prevent camera shake.

If you use the viewfinder to take a picture in Macro mode, the field visible through the viewfinder does not match the field actually photographed because the viewfinder and lens are in different positions. Accordingly, you should use the LCD monitor to take pictures in Macro mode.


During macro photography, the following camera settings are applied:

- The lens is fixed at the wide-angle zoom setting and only the digital zoom can be used.
- The LCD monitor is automatically switched ON and cannot be switched OFF.

## SELF-TIMER PHOTOGRAPHY

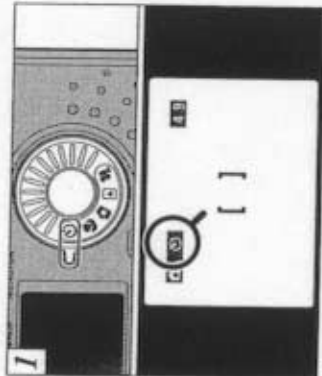


When you set the mode dial to "S", "S" appears on the LCD monitor. In this mode, a timer runs for roughly 10 seconds before the shutter is released. Use this mode for shots such as photographs of yourself.

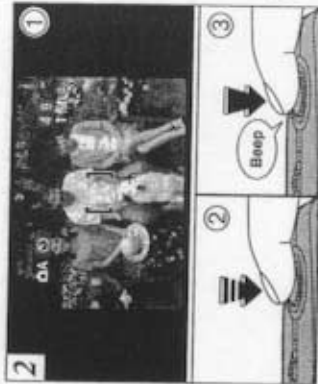


1 Position the AF frame over your subject.  
2 Press the shutter button down half way to set the focus.  
3 Without releasing the shutter button, press it down fully. The self-timer then starts running.

You can also use the AF/AE lock (P.30).  
Be careful not to stand in front of the camera when you press the shutter button as this can cause focusing or exposure metering errors.

## SELF-TIMER PHOTOGRAPHY

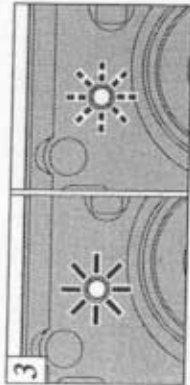

3 The self-timer lamp lights steadily for roughly 5 seconds and then blinks for another 5 seconds, after which the shot is taken.

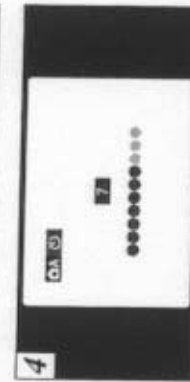

4 A counter on the LCD monitor counts down the time until the shot is taken.

## MOVIE PHOTOGRAPHY

### MOVIE (VIDEO)



1 Set the Mode dial to "MOVIE".

- Movie format: Motion JPEG (see P.124)
- Resolution: 320 x 240 pixels (30 fps) (160 x 120 pixels) selectable
- 10 frames per second
- Without sound

#### Number of seconds of recording per movie

| Model       | Pixel | 15i     | 125i     |
|-------------|-------|---------|----------|
| FinPix A203 |       | 20 sec. | 80 sec.  |
| FinPix A303 |       | 60 sec. | 240 sec. |

• Depending on the available space on the xD-Picture Card, the available shooting time per movie may be shorter.

• You cannot switch the LCD monitor off in this mode.

• It may not be possible to play back your movie on other cameras.

• See P.52 for information on changing the file size setting.




2 The available shooting time and the "STANDBY" message are shown on the LCD monitor.

#### xD-Picture Card standard shooting time

| xD-Picture Card Capacity | 15i               | File Size         | 125i |
|--------------------------|-------------------|-------------------|------|
| DPC-16 (16MB)            | Approx. 94 sec.   | Approx. 5 min.    |      |
| DPC-32 (32MB)            | Approx. 191 sec.  | Approx. 10.1 min. |      |
| DPC-64 (64MB)            | Approx. 6.4 min.  | Approx. 20.2 min. |      |
| DPC-128 (128MB)          | Approx. 12.9 min. | Approx. 40.6 min. |      |


\* Number of available shots displayed on the camera for a new xD-Picture Card formatted in the camera.

44 To stop the self-timer once it has started running, press the "BACK" button.

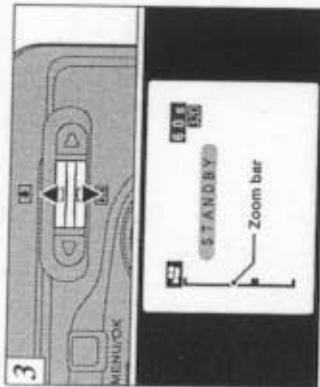

During movie shooting, the lens is fixed at the wide-angle zoom setting and only the digital zoom can be used. Use "▲" or "▼" to zoom in and out. A zooming bar is displayed on the LCD monitor. The focal distances and maximum zoom ratios for the digital zoom are shown below.

| Model       | Digital zoom focal distance (35 mm camera equivalent) | Maximum zoom ratio |
|-------------|-------------------------------------------------------|--------------------|
| FinPix A203 | Approx. 38 mm-95 mm                                   | 2.5x               |
| FinPix A303 | Approx. 38 mm-122 mm                                  | 3.2x               |

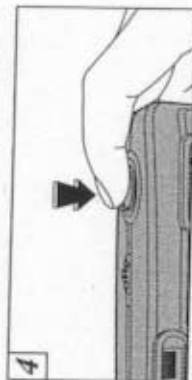


Shooting starts when you press the shutter button down fully.

- ① You do not need to hold down the shutter button.
- ② The focus is fixed at approximately 80 cm (2.6 ft.) to infinity.
- ③ The white balance is fixed during shooting, but the exposure varies automatically to suit the scene being shot.
- ④ The image shown on the LCD monitor before you take the shot may differ in its brightness, color, etc. from the image shown on the monitor during movie recording.

The white balance is set automatically when you press the shutter button.




During shooting, "REC" appears on the LCD monitor with a counter showing the remaining time displayed in the top-right corner.

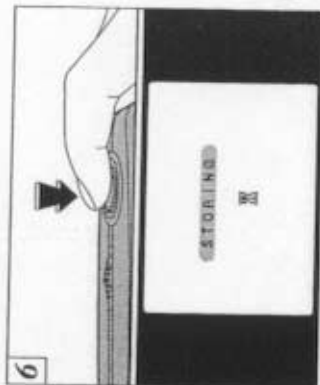

If you press the shutter button during shooting, shooting ends and the movie is stored on the xD-Picture Card.


- ⑤ Once the remaining time runs out, movie recording automatically stops and the movie is stored on the xD-Picture Card.
- ⑥ If you end shooting immediately after you start shooting, only 1 seconds of movie is shot.

## PHOTOGRAPHY MENU OPERATION

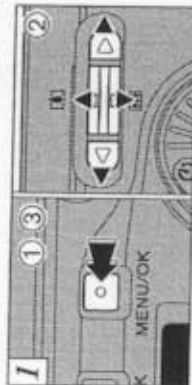

Set the Mode dial to "A", "S", "M", "P", "N", "L", "B", "M", "A", "S", "M", "P", "N", "L", "B", "M".


- 1 Press the "MENU/OK" button to display the menu.
- 2 Use "←" or "→" to select the menu item and "▲" or "▼" to change the setting.
- 3 Press the "MENU/OK" button to confirm the selection.

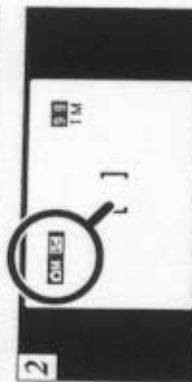

When you validate the settings, the respective icons appear at the top of the screen.  
(Example when the brightness (exposure compensation) is set in Manual mode)

ⓘ The settings available in the menu screen differ depending on the still image mode.

## SELECTING AUTO OR MANUAL

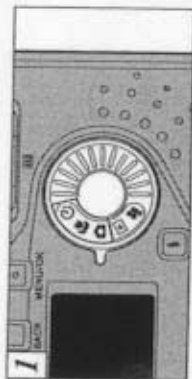


Set the Mode dial to "A", "S", "M", "P", "N", "L", "B", "M", "A", "S", "M", "P", "N", "L", "B", "M".

### AUTO

This is the easiest mode for taking pictures and can be used in a wide range of conditions.

### MANUAL

This mode allows you to specify your own "Brightness and White Balance" settings.

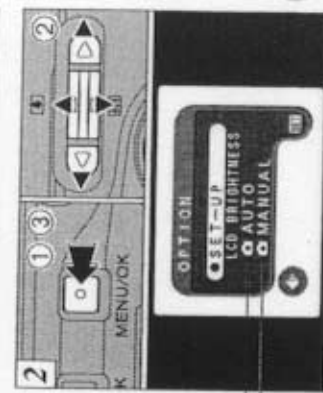

- 1 Press the "MENU/OK" button to display the menu.
- 2 Use "←" or "→" to select "OPTION" and then use "▲" or "▼" to select "AUTO" or "MANUAL".
- 3 Press the "MENU/OK" button to confirm the selection.

## PHOTOGRAPHY MENU OPTIONS

### Still/Macro/Self Timer Mode

When you press the "MENU/OK" button in the "M", "S", or "T" mode, one of the menu screens shown below appears, allowing you to specify the respective settings. Selecting the "M Manual" setting allows you to specify the "BRIGHTNESS" and "WHITE BALANCE" settings.



**M AUTO**



You can switch between Auto and Manual in each of the settings.

**M MANUAL**



### Movie Mode



If you press the "MENU/OK" button in "M" mode, the menu screens shown below appear, allowing you to specify the respective settings.



# ◀ SETTING THE FILE SIZE (NO. OF RECORDED PIXELS FOR STILL IMAGES)

\* Disabling the menu (P.100)

Use the \* RESOLUTION\* setting to specify the number of recorded pixels.

## ■ FinePix A203: Still Image (Q, W, S, C)

| Pixel              | Usage            |
|--------------------|------------------|
| 2M • F (1600×1200) | For printing     |
| 2M • N (1600×1200) |                  |
| 1M (1280×960)      | For the Internet |
| 0.3M (640×480)     |                  |

## ■ FinePix A303: Still Image (Q, W, S, C)

| Pixel              | Usage            |
|--------------------|------------------|
| 3M • F (2048×1536) | For printing     |
| 3M • N (2048×1536) |                  |
| 2M (1600×1200)     | For the Internet |
| 1M (1280×960)      |                  |
| 0.3M (640×480)     |                  |

## ■ FinePix A203/FinePix A303: Movie (A)

|               |  |
|---------------|--|
| 320 (320×240) |  |
| 180 (160×120) |  |

## FinePix A203: Still Image (Q, W, S, C)



Any of 4 settings can be selected.

Select the setting that best suits your needs.

<Examples>

- To print at A5 (postcard) to A5 size

→ 2M • F or 2M • N

\* Select 2M • F for better quality and 2M • N for more shots.

Normally the 2M • N setting provides sufficiently high quality for printing.

- To print at A7 (half postcard) to A6 (postcard) size

→ 1M

- For an image attached to E-mail or used on a website

→ 0.3M

## FinePix A303: Still Image (Q, W, S, C)



Any of 5 settings can be selected.

Select the setting that best suits your needs.

<Examples>

- To print at A4 size

→ 3M • F or 3M • N

\* Select 3M • F for better quality and 3M • N for more shots.

Normally the 3M • N setting provides sufficiently high quality for printing.

- To print at A6 (postcard) to A5 size

→ 2M

- To print at A7 (half postcard) to A6 (postcard) size

→ 1M


- For an image attached to E-mail or used on a website

→ 0.3M

## FinePix A203/FinePix A303: Movie (A)



You can choose from 2 image sizes for movies. Select "EX" for better quality or "150" for longer shooting times.

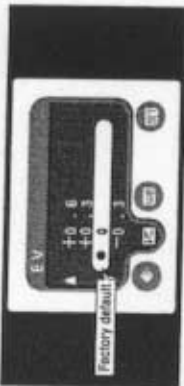

This mode can be selected in the "OM" photography mode.  
 Use the Brightness setting to obtain the optimum image brightness (exposure) when the subject is much brighter or darker than the background.

- **Correction range:** 13 steps (-2.1 EV to +1.5 EV in 0.3 EV increments)  
 See P.124 for more information on EV.

⚠ The Brightness setting is disabled in the following situations:

- When the flash is used in Auto or Red-Eye Reduction mode.
- When dark scenes are shot in Forced Flash mode.



This mode can be selected in the "OM" photography mode.

Change the white balance setting when you want to take a picture with the white balance fixed for the surroundings and lighting when the picture is taken.

In Auto mode, the correct white balance may not be obtained for subjects such as close-ups of people's faces and shots taken under a special light source. In such situations, select the correct white balance for the light source. See P.124 for information on the white balance.


**AUTO:** Automatic adjustment

(Shooting to show the ambience of the light source)

- ☀ : Shooting outdoors in fine weather
- ☁ : Shooting in shade
- 💡 : Shooting under "Daylight" fluorescent lamps
- 💡 : Shooting under "Warm White" fluorescent lamps
- 💡 : Shooting under "Cool White" fluorescent lamps
- 💡 : Shooting in incandescent light

3


\* The white balance setting (unless it is a Custom White Balance setting) is ignored when you use the flash. To achieve the desired effect in your shot, press the flash back down to suppress flash operation (P.36).

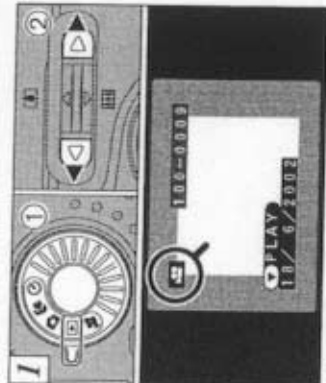

- ① Set the Mode dial to "P".
- ② Use "◀" or "▶" to select the movie file.

⚠ Movies cannot be played back using multi-frame playback. Use the "DISP" button to revert to normal playback.

Indicated by the "AF" icon.

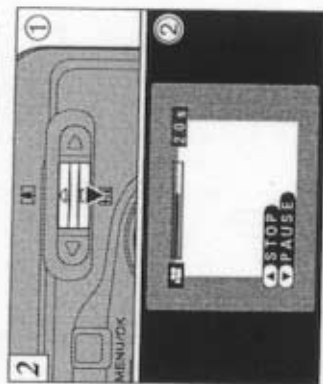

- ① Press "STOP/PAUSE" to play the movie.
- ② The LCD monitor shows the playback time and a playback progress bar.

⚠ If the subject of the movie is very bright, white streaks may appear on the image during playback. This is normal and is not a fault.


Movies are displayed somewhat smaller than still images.

#### ▶ Playing back movies


|                     | Control | Description                                                                                                                                                       |
|---------------------|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Playback            |         | The movie automatically stops when playback ends.                                                                                                                 |
| Pause/Resume        |         | Pauses the movie during playback. Press this button again to resume playback.                                                                                     |
| Stop                |         | Stops playback.<br>• Press "◀" or "▶" while movie playback is stopped to go back to the previous file or advance to the next file respectively.                   |
| Fast forward/Rewind |         | Press these during playback to skip forwards or backwards through the movie.                                                                                      |
| Skip playback       |         | Each time you press "◀" or "▶" when the movie is paused, the movie advances or goes back one frame.<br>• Hold down the button to move through the frames quickly. |

#### ▶ Playing back movie files

- It may not be possible to play back movies shot on other camera models.
- To play back movie files on a computer, save the movie file on the xD-Picture Card to the computer's hard disk and then play back the saved file.
- Video files contain large amounts of data. Depending on the performance of the computer, movies may not run smoothly if the computer cannot process the images quickly enough.
- If you play back your movies on a computer or a different camera model, they may run slightly faster than normal.

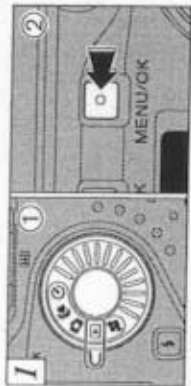


- ① Set the Mode dial to "E".
- ② Press the "MENU/OK" button to view the menu screen.

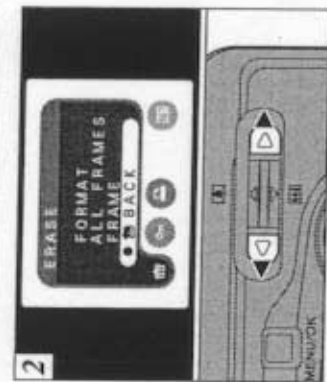

Use "←" or "→" to select "ERASE".

Note that mistakenly erased images cannot be recovered.  
\*You should copy important files that you want to keep to your computer.

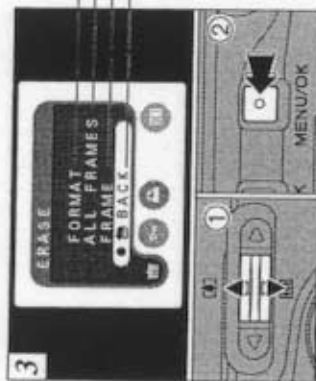

- ① Use "▲" or "▼" to select "FRAME", "ALL FRAMES" or "FORMAT".
- ② Press "MENU/OK" button to confirm your selection.


**FORMAT**  
Erases all the images.  
The xD-Picture Card is initialized for use in the camera.  
You should copy important files that you do not want to be erased to your computer or another media.

**ALL FRAMES**  
Erases all unprotected images.  
You should copy important files that you do not want to be erased to your computer or another media.

**FRAME**  
Erases only the selected image.

**BACK**  
Returns to playback without erasing any files.

## FRAME

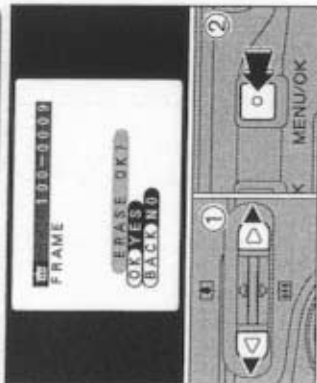


- ① Press "◀" or "▶" to select the image to be erased.
- ② Press the "MENU/OK" button to erase the displayed image.

To erase another image, repeat steps ① and ②. When you have finished erasing images, press the "BACK" button.

- Images with "PROTECTED IMAGE" displayed cannot be erased. Unprotect the image before erasing it.

## ALL FRAMES

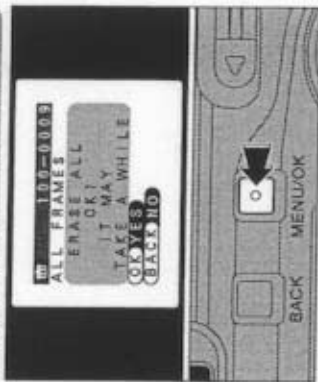

Press the "MENU/OK" button to erase all the unprotected images.

## H "CORRUPTED IMAGE"?


If "CORRUPTED IMAGE" or "CORRUPTED IMAGE" appears, press the "MENU/OK" button again to erase this image.

## FORMAT




Press the "MENU/OK" button to erase all the images and initialize the xD-Picture Card. Protected images are also erased.


- If the "UNRECOVERABLE", "UNRECOVERABLE", "UNRECOVERABLE" or "UNRECOVERABLE" message appears, refer to P.114, 115 before formatting the xD-Picture Card and take the appropriate measures.

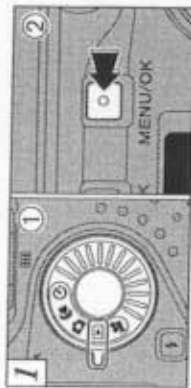

- ① Set the Mode dial to "P".  
 ② Press the "MENU/OK" button to view the menu screen.

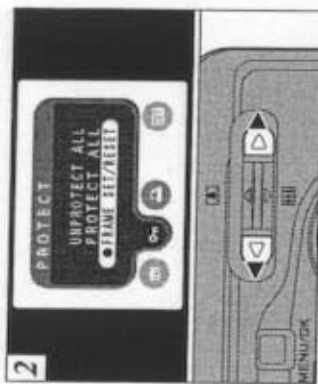

Use "←" or "→" to select "Om" PROTECT.

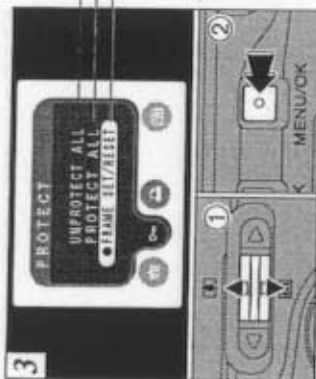

- ① Use "▲" or "▼" to select "FRAME SET/RESET", "PROTECT ALL" or "UNPROTECT ALL".  
 ② Press "MENU/OK" button to confirm your selection.

**UNPROTECT ALL**

Unprotects all the images.

**PROTECT ALL**

Protects all the images.

**FRAME SET/RESET**

Protects or unprotects only the selected image.

## FRAME SET/RESET



- ① Press "◀" or "▶" to select the image to be protected.
- ② Press the "MENU/OK" button to protect the displayed image.

To protect another file, repeat steps ① and ②.  
To finish protecting files, press the "BACK" button.

## PROTECT ALL



Pressing the "MENU/OK" button protects all the images.

## UNPROTECT ALL



Pressing the "MENU/OK" button unprotects all the images.



DPOF stands for Digital Print Order Format and refers to a format that is used for recording printing specifications for images shot using a digital camera on media such as xD-Picture Card. The recorded specifications include information on which frames are to be printed.

This section gives a detailed description of how to order your prints with the FinePix A203/ FinePix A303.

On the FinePix A203/FinePix A303, you can specify only one print per image in the DPOF settings.

\* Note that some printers do not support date and time imprinting or specification of the number of prints.

\* Note that the warnings shown below may be displayed while you are specifying the prints.

**DPOF SPECIFIED, ERASE OK ?**

**DPOF SPECIFIED, ERASE ALL OK ?** (P.60)


When you erase the image, the DPOF setting for that image is deleted at the same time.

**RESET DPOF OK ?** (P.70)


If you load a xD-Picture Card that contains frames specified for printing on another camera, those print specifications are all reset and replaced by the new print specifications.

**LDPOF FILE ERROR** (P.116)


Up to 999 frames can be specified on the same xD-Picture Card.

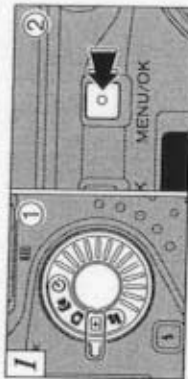


- ① Set the Mode dial to "P".
- ② Press the "MENU/OK" button to display the menu screen.

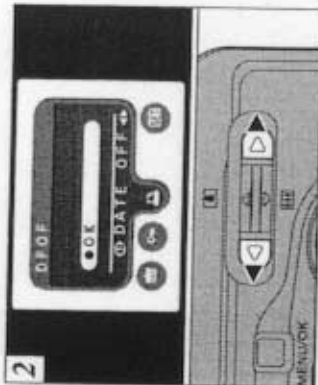


Use "←" or "→" to select "DPOF".

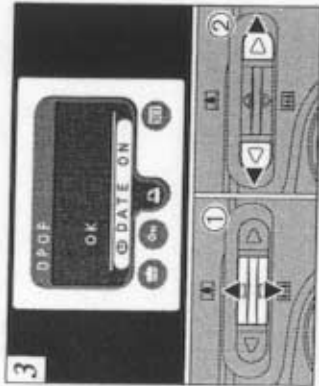

- ① Use "V" to select "DATE".
  - ② Use "A" and "P" to select "DATE ON" or "DATE OFF".
- The selected setting is then valid for all frames with DPOF settings.

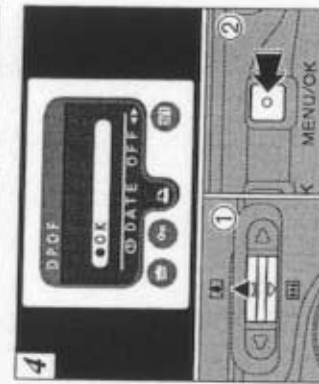


- ① Press "A" to select "OK".
- ② Press the "MENU/OK" button.

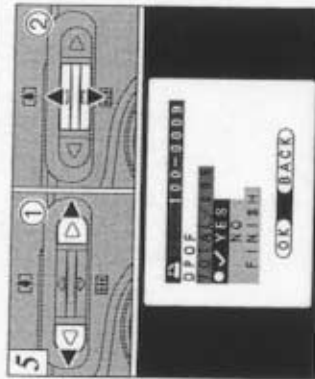

- ① Use "A" or "P" to display the frame for which you want to specify DPOF settings.
- ② Press "A" or "P" to set "YES" for the frame to be printed and then press the "MENU/OK" button or "P".

To specify more DPOF settings, repeat steps ① and ②.


- ③ DPOF settings cannot be specified for movies.
- ④ "TOTAL" shows the total number of frames for which prints have been ordered.

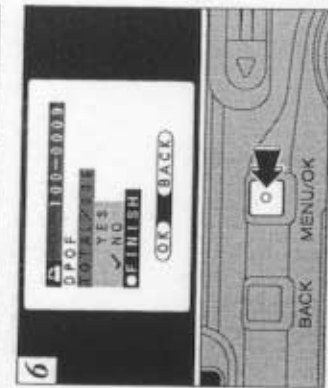

When you have finished the settings, always select "FINISH" and press the "MENU/OK" button.

If you press the "BACK" button, no DPOF settings are specified.

- ⑤ You can only specify one print per frame in the DPOF settings. Note also that you can specify prints for up to 999 frames on the same XD-Picture Card.

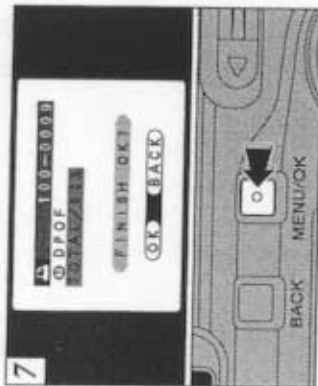

Pressing the "MENU/OK" button confirms the DPOF settings.  
Pressing the "BACK" button returns you to the settings screen **5**.

Pressing the "MENU/OK" button confirms all the settings.

◆ DPOF settings cannot be added to or changed.




If you select a frame for which DPOF settings have already been specified, the "RESET DPOF OK?" message appears.  
Pressing the "MENU/OK" button erases all the DPOF settings already specified. You must then specify the DPOF settings again.


Press the "BACK" button to leave the previous settings unchanged.  
During playback, check that the "D" icon is displayed for the previous settings.

## 5 Settings

## SET ADJUSTING THE MONITOR BRIGHTNESS

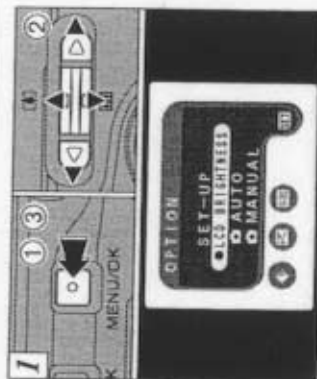

① Press the "MENU/OK" button to display the menu screen.  
② Press "▲" or "▶" to select "LCD BRIGHTNESS" and then press "▲" or "▶" to select "LCD BRIGHTNESS".  
③ Press the "MENU/OK" button.

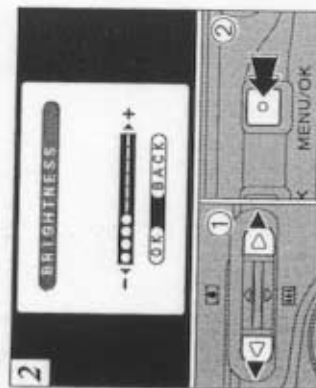


① Use "◀" or "▶" to adjust the LCD monitor brightness.  
② Press the "MENU/OK" button.


## 5

◆ To exit this procedure without changing the settings, press the "BACK" button.

## SET USING SET-UP

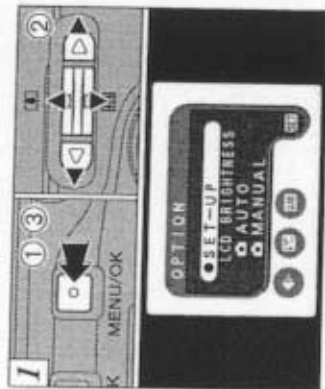

- ① Press the "MENU/OK" button to display the menu screen.
- ② Press "←" or "→" to select "OPTION" and then press "▲" or "▼" to select "SET-UP".
- ③ Press the "MENU/OK" button.

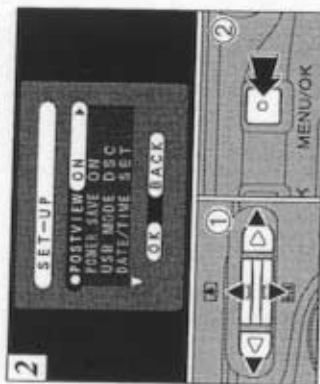

- ① Press "▲" or "▼" to select a menu option and then press "←" or "→" to change the setting.
- ② Press the "MENU/OK" button.

④ Press "→" for "DATE/TIME" or "RESET ALL".

**List of Settings** The options available in the settings menu vary depending on the mode, as shown in the table below.


| Still image mode                                                                             | Movie mode                                                                | Playback mode                                                             |
|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>○ AUTO</li> <li>○ MANUAL</li> <li>○ SET-UP</li> </ul> | <ul style="list-style-type: none"> <li>—</li> <li>—</li> <li>—</li> </ul> | <ul style="list-style-type: none"> <li>—</li> <li>—</li> <li>—</li> </ul> |

**SET-UP Menu Options (Date/Time Setting, etc)**

| Settings   | Display                        | Factory default | Explanation                                                                                                                                                                                                    |
|------------|--------------------------------|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| POSTVIEW   | ON/OFF                         | ON              | This option specifies whether or not an image checking screen (photography results) is displayed after you take a shot. The photographed image is displayed for a few moments and then automatically recorded. |
| POWER SAVE | ON/OFF                         | ON              | If the camera is not used for approximately 30 seconds, this function temporarily switches off the LCD monitor. See P.74 for details.                                                                          |
| USB MODE   | DSC/PC CAM                     | DSC             | See P.76 for details.                                                                                                                                                                                          |
| DATE/TIME  | SET                            | —               | Use this option to correct the date or time. See P.14 for details.                                                                                                                                             |
| LCD        | ON/OFF                         | ON              | Use this option to specify whether the LCD monitor is automatically switched ON or OFF when the Mode dial is set to "A".                                                                                       |
| BEEP       | LOW/HIGH/OFF                   | LOW             | Allows you to set the camera's operating sound.                                                                                                                                                                |
| LANGUAGE   | ENGLISH/FRENCH/ITALIAN/DEUTSCH | ENGLISH         | Select English, French or German as the language used for screen display.                                                                                                                                      |
| RESET ALL  | OK                             | —               | This resets all the camera settings (including the photography and playback menu settings) other than DATE/TIME and LANGUAGE to the factory default values set at shipment.                                    |



- **Power saving "ON"** (default setting)  
Power consumption is kept to a minimum to prevent battery depletion. You should select the "ON" setting when you are using alkaline batteries.
- If the camera is not used for approximately 30 seconds, the LCD switches off temporarily to reduce power consumption (Sleep mode).
- Once the camera is in Sleep mode, if it is left unused for a further 90 seconds, it is automatically switched off.
- The charging time for the flash increases slightly because the flash charging power is reduced.
- **Power saving "OFF"**  
Batteries are more likely to run flat since no power reduction measures (sleep mode, etc.) are used. However, this function automatically switches the camera off if the camera is not used for approximately 2 minutes.

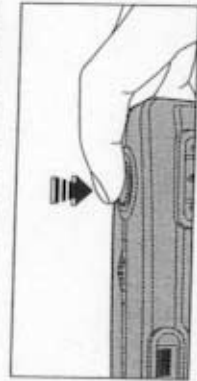

When the camera is in sleep mode, pressing the shutter button down halfway brings the camera back to full operational mode. This function is useful since the camera can be ready for shooting again far quicker than when it is switched off completely.

- Operation can also be restored by pressing buttons other than the shutter button.
- The Power Save and Auto Power Off functions are disabled during USB connection.

The Sleep function does not operate when the LCD monitor is switched off, during setup, or in Playback mode, but the camera still switches off automatically if it is not used for 2 minutes.

## 6 Software Installation

### IN CONNECTION

The "Software Installation" section explains how to connect the camera to your computer using the special USB cable and describes the functions you can use once the camera and computer are connected.

If the power cuts out during data transmission, the data cannot be transmitted correctly. Always use the AC power adapter when connecting the camera to a computer.


#### Using the optional AC Power adapter

Always use a FUJIFILM AC Power Adapter AC-3V (P-98).

Use the AC power adapter to avoid losing power at inconvenient times, such as when you are downloading photographed images to your computer. Using the AC power adapter also allows you to take pictures and play back images without worrying about depleting the batteries.



- See P.103 for notes on using the AC power adapter.
- Only connect or disconnect the AC power adapter when the camera is switched off.
- Connecting or disconnecting the AC power adapter while the camera is switched on temporarily interrupts the power supply to the camera, so that images or movies being shot at the time are not recorded. Failing to switch the camera off first can also result in damage to the XD-Picture Card or malfunctions during PC connection.

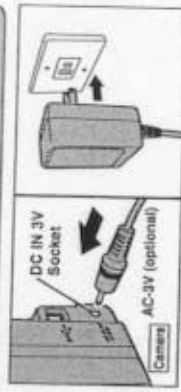

Check that the camera is switched off. Plug the AC power adapter connector into the "DC IN 3V" socket and then plug the AC power adapter into the power outlet.

- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- The shape of the plug and socket-outlet depends on the country of use.

Connecting the AC power adapter does not allow you to charge the Ni-MH batteries. Use the optional charger (P-106) to charge the Ni-MH batteries.

**The first time you connect the camera to your computer**  
You must install all the software before connecting the camera to your computer.



CD-ROM  
(Software for FinePix EX)

#### DSC (Mass storage device) Mode

This mode provides a simple way to read images from a xD-Picture Card and store images on to a xD-Picture Card (P.88).


#### PC CAM (PC Camera) Mode

This function allows you to conduct videoconferencing sessions between PCs connected to the Internet. This function can also be used to record video on a PC (P.91).

- \* Videoconferencing ("PictureHello") is not supported on Macintosh computers.
- \* The PC Camera function cannot be used on Mac OS X (including the Classic environment). Use a Mac OS version between 8.6 and 9.2.



### The Software Components

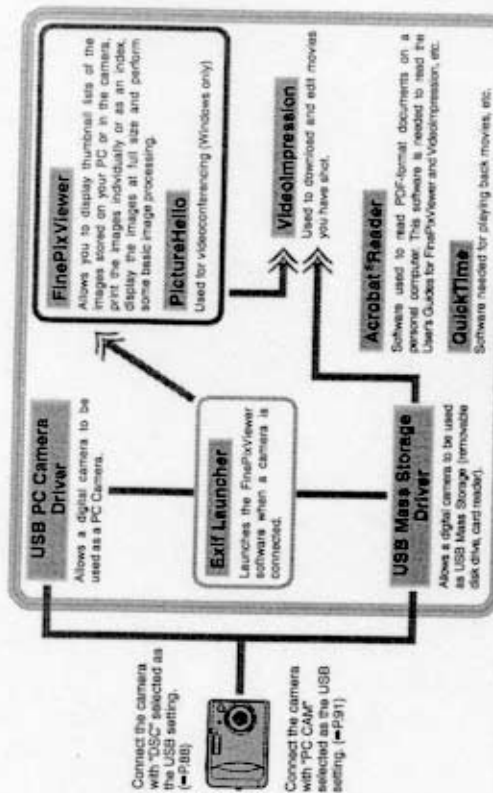

\* Note that the software configuration differs slightly depending on your operating system.

## Installation on a Windows PC

Load the CD-ROM into your PC

Do not connect the camera to your PC until the software installation is completed.

1. Switch on your PC and start up Windows.  
\* If you have already switched on your PC, restart your PC at this point.

### NOTE

Users of Windows 2000 or Windows XP should log in using a system administrator account (e.g. "Administrator").

2. Quit all other active applications until no applications are shown in the taskbar.

### NOTE

If a "....dll file not found." message appears during installation, there is another application running in the background. Forcibly shut down the application. Refer to your Windows manuals for information on how to forcibly shut down an application.

3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.

1. Launching the Installer Manually  
\* Windows XP users should click "My Computer" in the "Start" menu.

2. Right-click "FINEPIX" (CD-ROM drive) in the "My Computer" window and select "Open".

3. Double-click "SETUP" or "SETUP.exe" in the CD-ROM window.


 


SETUP SETUP.exe


\* The way file names are displayed differs as described below depending on your computer settings.

- File extensions (3-letter suffixes indicating the file type) may be shown or hidden. (e.g. Setup.exe or Setup)
- Text may be shown normally or all in uppercase (e.g. Setup or SETUP).

4. Pre-installation checking begins. If any warning messages appear, follow the instructions given on the screen.

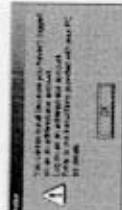

\* The "Add New Hardware Wizard" may be hidden behind the "Note" message. Check the taskbar, move the message window and then click the [Cancel] button.

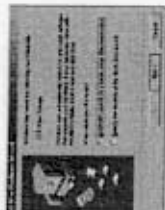

5. A confirmation message appears asking whether you want to continue with the installation. Click the [OK] button.



# From FinePixViewer installation to restart

1. The Setup screen appears. Click the [Install FinePixViewer] button.  
\* For more information on what is installed, click the [Explanation] button.



2. The software version is checked. If the window shown below appears, click the [OK] button to uninstall the software.



3. The USB drivers are installed.

4. Install FinePixViewer.  
① FinePixViewer installation begins and notes and warnings are displayed. When you have confirmed these, click the [Next >] button.




- ② Check the installation destination folder and then click the [Next >] button.  
③ "Confirmation" screen shown may appear. To continue with the settings, click the [Yes] button.

5. Install QuickTime as directed by the on-screen instructions.  
\* If you have already installed QuickTime version 5.0.2 or later, this installation is not performed.



Click [Agree] button in the "Software License Agreement" window.

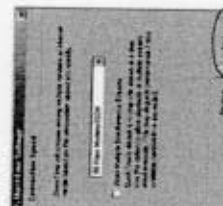

If the "Connection speed" window appears, set the correct speed for your environment of connection and then click the [Next] button.  
\* If you do not know your connection speed, simply click the [Next] button.

6. Install NetMeeting as directed by the on-screen instructions.  
\* If NetMeeting 3.01 or later is already installed on your PC, this installation is not performed.

7. Install Windows Media Player as directed by the on-screen instructions and then restart your PC.  
\* If the latest version of the software is already installed on your PC, this installation is not performed. When next screen appears, click the [Restart] button.



In Windows Media Component Setup window, tick the "I have read the Privacy Statement" checkbox and then click the [Next >] button.  
When you click the [Finish] button, your PC is restarted.

8. After you restart your PC, the "FinePixViewer Help" page appears in the web browser window. Check the details before closing the window and proceeding with the installation.

## Acrobat Reader installation

You must install Adobe Systems' Acrobat Reader software to read the FinePixViewer User's Guide (PDF). If you already have the latest version installed, this step is not required.

1. Open the "My Computer" window, right-click the CD-ROM icon and select "Open" to view the contents of the CD-ROM.



2. Double-click "SETUP" or "SETUP.exe".
3. In the installer window, click the [Install Acrobat Reader] button.



4. Proceed with the installation as directed by the on-screen instructions.

This completes the installation of all the software components. Now proceed to "PC Connection" on page 85.

## Installation on a Mac OS 8.6 to 9.2

### Check the system software settings

- Enable File Exchange

Check whether File Exchange is active. To use a xD-Picture Card that is supported by the camera, the File Exchange utility supplied with Mac OS must be running.

1. Switch on your Macintosh and start up Mac OS 8.6 to 9.2.

#### NOTE

Do not connect the camera to your Macintosh until the software installation is completed.

2. Select the Extensions Manager in the Control Panels and check that the File Exchange check box is ticked. If not, click in the box so that an ☒ appears and then restart your Macintosh.

## From FinePixViewer installation to restart

1. When you load the enclosed CD-ROM into the CD-ROM drive, the "FinePix" window automatically opens.


#### NOTE

If the "FinePix" window does not open automatically, double-click the CD-ROM icon.


2. Double-click "Installer for MacOS8.6-9.2" to launch the installer.
3. A confirmation message appears asking whether you want to continue with the installation. Click the [OK] button.
4. The installer setup screen appears. Click the [Install FinePixViewer] button.
  - \* For more information on what is installed, click the [Explanation] button.



5. Select the installation destination for FinePixViewer.
- Click the [Open] button to open the installation destination folder.

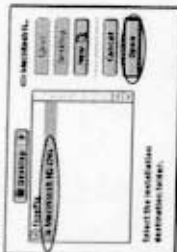

- Click the [Save] button.

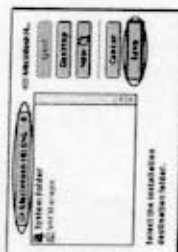

6. Install QuickTime as directed by the on-screen instructions and then restart your Macintosh.

\* If you have already installed QuickTime version 5.0.2 or later, this installation is not performed.



Click [Agree] button in the "License" window.

If the "Connection Speed" window appears after you restart your Macintosh, set the correct speed for your environment of connection and then click the [Next] button.

- If you do not know your connection speed, simply click the [Next] button.

7. After you restart your Macintosh, the "Guidance of FinePixViewer" alias is created on the desktop. Use your browser software to check the details and then proceed with the installation.

## Acrobat Reader installation

You must install Adobe Systems' Acrobat Reader software to read the FinePixViewer User's Guide (PDF).

If you already have the latest version installed, this step is not required.

- Double-click the "Installer for MacOS8.6-9.x" icon to launch the installer.
- A confirmation message appears asking whether you want to continue with the installation. Click the [OK] button.



- The installer setup window appears. Click the [Install Acrobat Reader] button.



This completes the installation of all the software components. Now proceed to "P.C. Connection" on page 85.

- Install Acrobat Reader as directed by the on-screen instructions.

## Installation on a Mac OS X

### From FinePixViewer installation to restart

Only FinePixViewer is installed on Mac OS X.


#### NOTE

AVI movies cannot be played back on version 10.0.4.

1. Switch your Macintosh on and start up Mac OS X. Do not launch any other applications.
2. Load the enclosed CD-ROM into the CD-ROM drive. The "FinePix" window opens.

#### NOTE

If the "FinePix" window does not open automatically, double-click the CD-ROM icon.

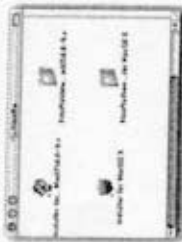

3. Double-click "Installer for Mac OS X".



Installer for Mac OS X

4. Click the "OK" icon.



5. Enter the administrator name and password. Then click the [OK] button.



6. Click the [Continue] button.
7. Quit any other programs that are running and then click the [Continue] button.

8. Select the Mac OS X startup disk as the installation destination and click the [Continue] button.




9. Click the [Install (upgrade)] button.
10. When you have completed the installation, click the [Restart] button.



## PC Connection

### Use this procedure the first time (DSC)

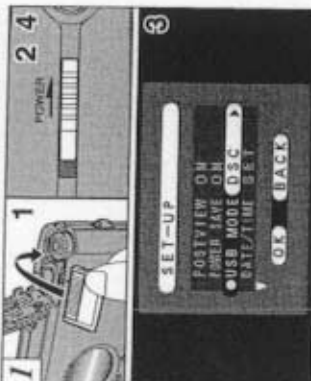

1. Load a xD-Picture Card containing photographed images into your camera. Plug the AC power adapter connector into the DC IN 3V socket on the camera and then plug the adapter itself into the main power outlet.
2. Slide the power switch to the side to turn the camera on.
3. Set the "USB MODE" setting in the "SET-Up" menu to "DSC" (=P.72, 73).

4. Slide the Power switch to the side to turn the camera off.
- \* It is recommended that you connect the AC Power Adapter AC-3V (sold separately) (=P.73). Constant power supply will prevent successive data transfer from trouble caused by power supply.




5. Switch your PC on.
6. Use the special USB cable to connect the camera to your computer.
7. Switch the camera on.

If you are using a Windows PC, the driver settings are specified automatically when installation is completed. No further action is required.

Always use the prescribed procedure when disconnecting or switching off the camera (=P.86).

\* On Windows XP and Mac OS X, you must specify the automatic launch settings the first time you connect the camera to your computer.

- \* Take care to ensure that the special USB cable is connected the correct way around and that the plugs are pushed fully into the connection sockets.

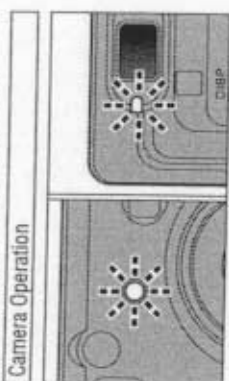

- \* When the camera and computer are exchanging data, the self timer lamp flashes and the viewfinder lamp flashes alternately green and orange.
- \* "DSC" appears on the screen.
- \* Power Save and Auto Power Off are disabled during USB connection.
- \* Before replacing the xD-Picture Card, always disconnect the camera from the PC using the procedure on P.83.
- \* Do not disconnect the USB cable when the camera is communicating with the PC. See P.85 for information on the disconnection procedure.

## PC Operation

- \* FirePixViewer automatically starts up.
- \* Screen for Windows 98 SE
- \* A removable disk icon appears and you can use your PC to transfer files to and from the camera.



If the above operations do not occur, you do not have the required software programs or drivers installed on your PC. Complete the required PC setup procedures. Then reconnect the camera to your PC.

1. The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

■ This step is not required for subsequent connections.



2. Specify the settings shown below in the "AutoPlay" dialog box.

**When FinePixViewer is included in the list of actions to perform**

Select "Viewing images using FinePixViewer" and then select the "Always do the selected action" checkbox. (This checkbox may not be shown in some cases.)

Click the [OK] button to launch FinePixViewer.

**When FinePixViewer is not included in the list of actions to perform**

Select "Take no action" and then select the "Always do the selected action" checkbox. (This checkbox may not be shown in some cases.)

Click the [OK] button and launch FinePixViewer manually.

3. A new removable disk icon appears in the "My Computer" window.


#### ■ TIP

As of the next time you connect the camera, the removable disk drive icon and name change to the "FinePix" icon and name.



Proceed to "Using FinePixViewer" on page 85.

### Use this procedure the first time (PC CAM)

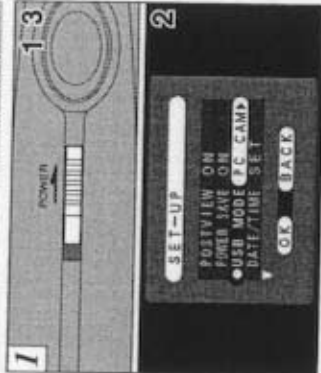


Plug the AC power adapter connector into the DC IN 3V socket on the camera and then plug the adapter itself into the main power outlet.

1. Slide the power switch to the side to turn the camera on.
2. Set the "USB MODE" setting in the "SET-UP" menu to "PC CAM" (P.72, 73).
3. Slide the power switch to the side to turn the camera off.

■ It is recommended that you connect the AC Power Adapter AC-3VH (sold separately) (P.73). Constant

power supply will prevent successful data transfer from trouble caused by power supply.

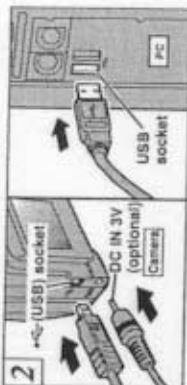


1. Switch your PC on.
2. Use the special USB cable to connect the camera to your computer.
3. Switch the camera on.

If you are using a Windows PC, the driver settings are automatically specified when installation ends. Just wait a few moments.

Always use the prescribed procedure when disconnecting or switching off the camera (P.83).

- Take care to ensure that the special USB cable is connected the correct way around and that the plugs are pushed fully into the connection sockets.

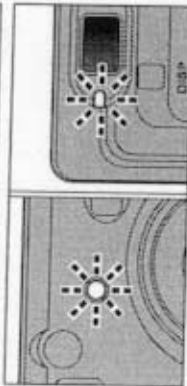

- When the camera and computer are exchanging data, the self timer lamp flashes and the viewfinder lamp flashes alternately green and orange.
- The lens is fixed at the wide-angle zoom setting.
- "PC CAM" appears on the screen.
- Power Save and Auto Power Off are disabled during USB connection.

• Do not disconnect the USB cable when the camera is communicating with the PC. See P.85 for information on the disconnection procedure.

• If the camera is used as a PC camera, a light source such as fluorescent tube stand can be used to illuminate the subject and get a brighter image.

• When the camera is connected to a computer as a PC camera, the color tones on the LCD monitor may change briefly.

## PC Operation

1. FinePixViewer automatically starts up and the PictureHello window opens (Windows only).



• Screen for Windows 98 SE

If the above operations do not occur, you do not have the required software programs or drivers installed on your PC. Complete the required PC setup procedures. Then reconnect the camera to your PC.

2. Check PC operation. The installation procedure differs depending on the operating system running on your PC.
  - \* This step is not required for subsequent connections.

## Windows 98/98 SE/Me

The "New Hardware Found" wizard appears. The wizard will close when the settings are completed. No action is required.



## Windows 2000

If the "Digital Signature Not Found" dialog box appears, click the [Yes] button.



## Windows XP

The USB PC Camera Driver is installed automatically. When the following screen appears, click the [Continue] button.

3. FinePixViewer starts up automatically and the live image is displayed.

## NOTE

If the live image does not appear, refer to "Troubleshooting" in FinePixViewer User's Guide (PDF).

## TIP


The Exit Launcher installed with the FinePixViewer automatically launches FinePixViewer when you connect the camera to your PC.

## Using FinePixViewer

### Saving Images on Your Computer

This section gives a brief overview of how to use FinePixViewer. Refer to these instructions while you are using FinePixViewer.

1. Connect the camera to your computer in DSC mode (→P.85).
2. When you open the folders shown below in order, the images in the camera are displayed in the thumbnail display area.

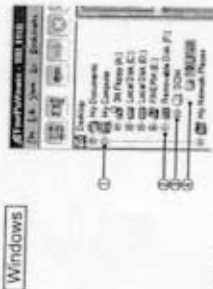

#### NOTE

On Windows XP, the removable disk appears as "FinePix" (for the second and subsequent connections).

Mac OS 9.0.2 or 9.2



Mac OS X



3. Click the [Automatic Taking] button.




4. Check that the files are downloaded from the camera to your computer and that a folder with the photography date is created. Open the folder as shown below.

#### TIP

To open a folder, click on the plus (+) symbol (Windows) or arrow (Macintosh) to the left of the folder.

Windows

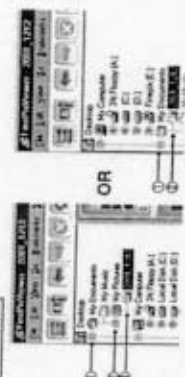


Mac OS




- ① Indicates the folder in which FinePixViewer is installed.

5. Double-click a still-image thumbnail to open an image window.

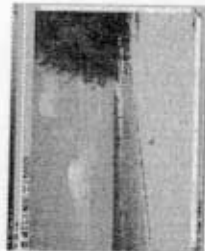

Always use the prescribed procedure when disconnecting or switching off the camera (→P.85).

## Disconnecting the Camera (DSC Connection)

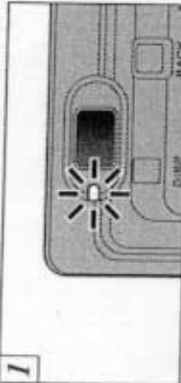

1. Quit all applications (FinePixViewer etc.) that are using the camera.
2. Check that the viewfinder lamp is lit green or that the self timer lamp is off (no data is being exchanged with the computer).

For a DSC connection, proceed to step 2.  
For a PC CAMERA connection, proceed to step 3.

• Even when "Copying" is no longer displayed on the computer, the camera and the computer may still be exchanging data. Always check that the viewfinder lamp is lit green or that the self timer lamp is off.

2. Perform the steps shown below before you switch the camera off. This procedure differs depending on the operating system software (or PC) you are using.

**Windows 98 or 98 SE**  
No PC operation is needed.

**Windows Me/2000 Professional/XP**

1. Right-click the removable disk icon in the "My Computer" window and select Eject. This step is only required in Windows Me.



2. Left-click the Eject icon in the taskbar and eject "USB Disk".



• Screen for Windows Me

3. The menu option shown below appears. Click on this option.



• Screen for Windows Me


4. The "Eject hardware" dialog box appears. Click the [OK] button or the close button.



Drag the "Removable drive" icon on the desktop to the Trash.



• When you drag the icon to the Trash, "CEB5283D" appears on the camera's LCD monitor.

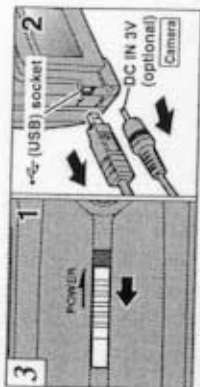

1. Switch the camera off.
2. Unplug the special USB cable from the camera.

## Using the FinePix Internet Service

### NOTE


Mac OS X users should refer to P.89.  
Using FinePixViewer also allows you to access the FinePix Internet Service via the Internet.  
\* A working Internet connection is required.  
\* A FinePix Internet Service fees do not include your Internet service provider (ISP) connection fees or any phone charges incurred in dialing your ISP's access point.

The figure below gives a general overview of the procedure.

## User Registration

### NOTE

Your user ID and password are very important. Make sure you do not forget them.

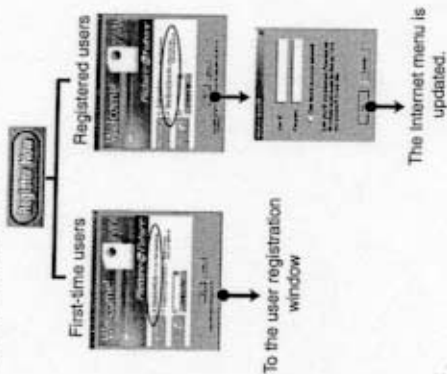

## User Registration (Mac OS 8.6 to 9.2)

To use the FinePix Internet services, users must first register.

\* Follow the steps below to register. Users can be registered for free.

1. Launch FinePixViewer.
2. Click the [Register Now] button.



3. The "User's Registration for Internet Services" dialog box opens. As shown at right, select [Register Here], then select the country or region where you are living and click the [OK] button.

\* If you are not already connected to the Internet, connect now (A dial-up dialog box may be displayed).

\* If you have completed the user registration, select "Already Registered" (E.g. When you want to re-install FinePixViewer after completing user registration).

\* If the country or area where you are living does not appear in the pull-down list, select "OTHERS".



4. When the browser starts up, proceed as directed by the on-screen instructions.

5. Enter the required information in the user registration page.

- ① Enter the name of your choice (nickname, etc.).
- ② Enter a password of your choice using letters and/or numbers. Then enter the password again for confirmation.
- ③ Enter your name.
- ④ Enter your E-mail address.
- ⑤ Enter the remaining required information.
- \* After you register, a confirmation E-mail message is sent to you. Be sure to enter a valid E-mail address at which you can receive the message.
- \* The actual user registration page may differ slightly in appearance from the sample shown here.

6. When you have entered all the required information, click the [Registration] button at the bottom of the page.

Once you complete the registration, a confirmation E-mail is sent. Wait a few moments until the message is sent.

## User Registration (Mac OS X)

To use the FinePix Internet services, users must first register.

- \* Follow the steps below to register. Users can be registered for free.

1. Double-click the "FinePixViewer" icon in the installed folder.
2. Click the [User's Registration] button. The "Operation Selection" dialog box appears.

 


<User's Registration button>



3. Select "User's registration" and click the [OK] button.

- \* If you are not already connected to the Internet, connect now. (A dial-up dialog box may be displayed.)
- \* Only select menu acquisition if you have already completed the user registration process and you have re-installed "FinePixViewer", etc.



4. The User's Registration dialog box opens. Select the country or area where you are living and click the [OK] button.

- \* The actual user registration page may differ slightly in appearance from the sample shown here.
- \* If the country or area where you are living does not appear in the pull-down list, select "OTHERS".

5. When the browser starts up, proceed as directed by the on-screen instructions.

6. Enter the required information in the user registration page.

- ① Enter the name of your choice (nickname, etc.).
- ② Enter a password of your choice using letters and/or numbers. Then enter the password again for confirmation.
- ③ Enter your name.
- ④ Enter your E-mail address.
- ⑤ Enter the remaining required information.
- \* After you register, a confirmation E-mail message is sent to you. Be sure to enter a valid E-mail address at which you can receive the message.
- \* The actual user registration page may differ slightly in appearance from the sample shown here.

7. When you have entered all the required information, click the [Register] button at the bottom of the page.

Once you complete the registration, a confirmation E-mail is sent. Wait a few moments until the message is sent.

## Mastering FinePixViewer

For more information on FinePixViewer functions not fully explained in this manual, refer to "How to Use FinePixViewer" in the Help menu.


■ **To read "How to Use FinePixViewer"...**  
You must install Adobe Systems' Acrobat Reader. See P.74 for information on installing Acrobat Reader.

■ **What is explained in "How to Use FinePixViewer"...**  
"How to Use FinePixViewer" covers a range of topics, including batch processing and ordering prints.

■ **Example: Looking up slide shows**


1. Click "How to Use FinePixViewer" in the FinePixViewer Help menu.

2. Search for relevant articles by clicking the corresponding items in the Help "Bookmarks" or "Contents". Here, click "Viewing Slide Shows".

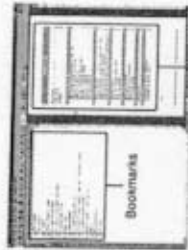

Contents

3. The "Viewing Slide Shows" information is displayed. Press the "←" key to view the previous page or the "→" key to view the next page.

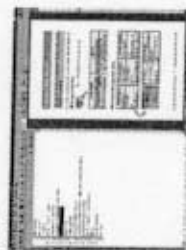

\* For more information on using Acrobat Reader, refer to the Acrobat Reader "Help" menu.

## Uninstalling the Software

Only perform this operation when you no longer require the installed software.

### Windows

1. Switch on your PC.
2. Disconnect the camera (→P.88, 89).
3. Quit all currently running applications.
4. Close all files.
5. Open the "My Computer" window, open the "Control Panel", and double-click "Add/Remove Programs".



6. The "Add/Remove Programs Properties" window appears. Select the software to be uninstalled (FinePixViewer or the driver) and then click the [Add/Remove] button.



«To remove FinePixViewer»  
«To remove the driver software»  
[FUJIFILM USB Driver]

7. When the confirmation message appears, click the [OK] button. Check your selection carefully since the process cannot be cancelled once you click [OK].



8. Automatic uninstallation begins. When uninstallation ends, click the [OK] button.

#### Macintosh

#### NOTE

Only perform this operation when you no longer require the installed software or when the software was not installed correctly.

#### Mac OS 8.6-9.2

#### Uninstalling Mass Storage Driver and PC Camera Driver


1. Check that the camera is not connected to your Macintosh.
2. Drag all the files that begin with "USB04CB..." to the Trash.
3. Restart your Macintosh.
4. Select "Empty Trash" in the "Special" menu.

#### Uninstalling Exif Launcher, FinePixViewer and DP Editor

1. After you have quit Exif Launcher in "Exif Launcher Settings" in the FinePixViewer "Settings" menu, move the Exif Launcher file from the "Startup Items" folder in the System folder to the Trash. Then select "Empty Trash" in the "Special" menu.
2. After you have exited FinePixViewer and DP Editor and then drag the installed FinePixViewer folder to the Trash. Then click "Empty Trash" in the "Special" menu.

## System Expansion Options

- By using the FinePix A203/FinePix A303 together with other optional FUJIFILM products, your system can be expanded to fill a wide range of uses.

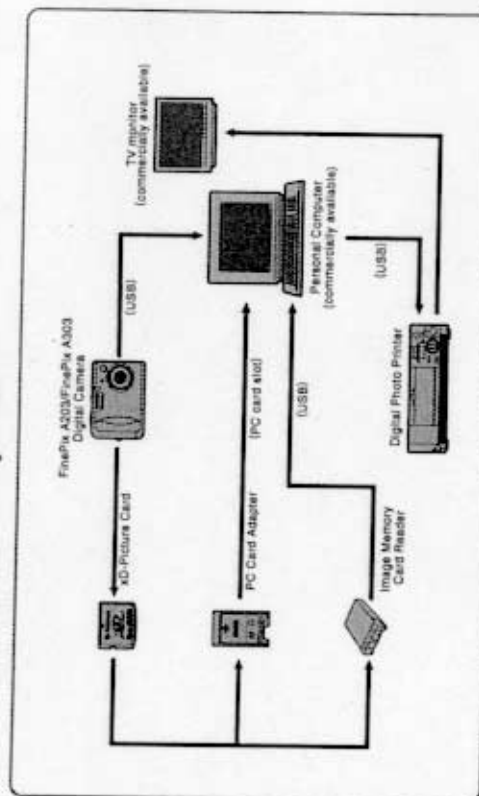

## Accessories Guide

► The optional accessories (sold separately) can make taking pictures with the FinePix A202 even easier. For information on how to attach and use the accessories, refer to the instructions provided with the accessory used. Visit the FUJIFILM web site for the latest information on camera accessories. <http://home.fujifilm.com/products/digital/index.html>

|                                                                                                                                                                                                                                                                                                                                                              |                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>● <b>xD-Picture Card</b></p> <p>These are separately available xD-Picture Card cards.</p> <p>Use the following xD-Picture Card:</p> <ul style="list-style-type: none"> <li>● DPC-16 (16MB)</li> <li>● DPC-32 (32MB)</li> <li>● DPC-64 (64MB)</li> <li>● DPC-128 (128MB)</li> </ul> <p>* Some 3.3V xD-Picture Card are labelled as "3V" or "1D" cards.</p> |  |
| <p>● <b>AC Power Adapter AC-3V</b></p> <p>Use the AC power adapter when you want to take pictures or play back images for long periods or when the camera is connected to a computer.</p> <p>* The shape of the AC power adapter, the plug and socket outlet depend on the country.</p>                                                                      |  |
| <p>● <b>Fujifilm Rechargeable Battery 2HR-3UF</b></p> <p>The 2HR-3UF includes 2 pieces of high-capacity AA-size Nickel Metal Hydride batteries.</p>                                                                                                                                                                                                          |  |
| <p>● <b>Fujifilm Battery charger with Battery BK-NH (With Euro type or UK type plug)</b></p> <p>The BK-NH includes the quick battery charger BCH-NH and 2 Ni-MH batteries. The BCH-NH can charge 2 Ni-MH batteries in approximately 120 minutes. Up to 4 Ni-MH batteries can be charged simultaneously.</p>                                                  |  |
| <p>● <b>SC-FXA101</b></p> <p>This is a special case made of polyester that protects the camera against soiling, dust and minor impacts when it is being carried.</p>                                                                                                                                                                                         |  |

変更予定

## ● DPC-R1 Image Memory Card Reader

The DPC-R1 provides a quick and easy way to transfer images back and forth between your PC and an image memory card (xD-Picture Card, SmartMedia). The DPC-R1 uses the USB interface for high-speed file transfer.

- Windows 98, 98 SE, Me, 2000 Professional and XP
- Macs, iBooks and Power Macintosh (Mac OS) computers with a USB interface as a standard feature.



## ● DPC-AD PC Card Adapter

xD-Picture Cards and SmartMedia are can be used as PC cards (type II) that conform to the PC Card Standard ATA (PCMCIA 2.1). Either of the two media types can be used.



変更予定

## Notes on Using Your Camera Correctly

► Be sure to read this information in conjunction with "Safety Notes" (P.90), to ensure that you use your camera correctly.

- **Places to Avoid**  
Do not store or use the camera in the following types of locations:
  - In the rain or in very humid, dirty or dusty places.
  - In direct sunlight or in places subject to extreme temperature rises, such as in a closed car in summer.
  - Extremely cold places.
  - Places subject to strong vibration.
  - Places affected by smoke or steam.
  - Places subject to strong magnetic fields (such as near motors, transformers or magnets).
  - In contact with chemicals such as pesticides or next to rubber or vinyl products for long periods of time.
- **Notes on Immersion in Water or Sand**  
The FinePix A203/FinePix A303 is particularly adversely affected by water and sand. When you are at the beach or close to water, ensure that the camera is not exposed to water or sand. Take care also not to place the camera on a wet surface. Water or sand inside the camera can cause faults that may be irreparable.
- **Notes on Condensation**  
If the camera is carried suddenly from a cold location into a warm place, water droplets (condensation) may form on the inside of the camera or on the lens. When this occurs, switch the camera off and wait an hour before using the camera. Condensation may also form on the xD-Picture

## Notes on the Power Supply

### Applicable Batteries

- AA-size alkaline, Ni-MH (nickel-metal hydride) can be used with this camera.
  - Do not use AA-size manganese, lithium or nickel-cadmium (Ni-Cd) batteries in your FinePix A203/FinePix A303 because the heat generated by the batteries could damage the camera or cause malfunctions.
  - The operating lives of alkaline batteries vary between brands and the life of batteries you purchase may be shorter than the alkaline batteries provided with the camera.
- ### Notes on the Batteries
- Incorrect use of the batteries could cause them to leak, become hot, ignite or burst. Always observe the precautions given below.
- Do not heat the batteries or throw them into a fire.
  - Do not carry or store a battery with metal objects such as necklaces or hairpins that could come into contact with the metal positive (+) and negative (-) poles of the battery.
  - Do not expose the batteries to fresh or sea water, and take particular care to keep the terminals dry.
  - Do not attempt to deform, disassemble or modify the batteries.
  - Do not attempt to peel off or cut the battery casing.
  - Do not drop, strike or otherwise subject the batteries to strong impacts.
- Do not use batteries that are leaking, deformed, discolored or exhibit any other obvious abnormality.
  - Do not store batteries in very warm or moist locations.
  - Keep the batteries out of reach of babies and small children.
  - When loading the batteries into the camera, ensure that the battery polarity (+ and -) is as indicated on the camera.
  - Do not use new batteries together with used batteries. In the case of rechargeable batteries, do not use charged and discharged batteries together. Do not use batteries of different types or brands together.
  - If you do not intend to use the camera for a long period of time, remove the batteries from the camera. (Note that if the camera is left with the batteries removed, the time and date settings are cleared.)
  - The batteries may feel warm immediately after being used. Before removing the batteries, switch the camera off and wait until the batteries cool down.
  - When replacing the batteries, always fit 2 new batteries. Here, "new batteries" refers to either recently purchased unused alkaline batteries, or Ni-MH (nickel metal hydride) batteries that have recently been fully recharged together.
  - In cold locations (at temperatures of +10°C/+50°F or below), battery performance deteriorates and the time for which they can be used shortens markedly. This is particularly true of alkaline batteries. In cold conditions, 109

put the batteries in your pocket or a similar place to warm them before loading them into the camera. If you use a body warmer to warm the batteries, ensure that they are not in direct contact with the warmer.

- Soak (such as fingerprints) on the battery terminals can markedly reduce the number of available shots. Carefully wipe the battery terminals clean with a soft dry cloth before loading the batteries.

⚠ If any liquid or oil leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.

⚠ If any battery fluid comes into contact with your hands or clothing, flush the area thoroughly with water. Note that battery fluid can cause skin irritation if it gets into your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

## Disposing of Batteries

When disposing of batteries, do so in accordance with your local waste disposal regulations.

## Notes on Small Rechargeable Batteries (Ni-MH batteries)

- Always use the special battery charger to charge AA-size Ni-MH batteries. Charge the batteries as described in the instructions provided with the battery charger.

- Do not use the battery charger to charge batteries other than those specified for use with the charger.
- Note that the batteries may feel warm immediately after being charged.
- Ni-MH batteries are not charged at shipment. Be sure to charge the batteries before using them.
- The camera mechanism is such that it draws a minute amount of current even when the camera is switched off. Take particular care not to leave Ni-MH batteries in the camera for a long period of time as they can become excessively discharged and may no longer be usable even when charged.
- Ni-MH batteries self-discharge even when not used. Always charge Ni-MH batteries before using them. If the time for which a battery provides power shortens markedly when it has been correctly charged, this indicates that the battery has reached the end of its effective life and should be replaced.
- Soiling (fingerprints, etc) on the terminals of Ni-MH batteries can greatly reduce the number of available shots. When this occurs, clean the terminals carefully with a soft dry cloth. Then use up the remaining charge in the batteries and recharge them.
- Newly purchased batteries or batteries that have been left unused for an extended period may not be fully charged. (This is indicated by the immediate display of the battery low warning or a low number of available shots.) This is a normal characteristic of the batteries and does not indicate a fault. Repeatedly charging and using the batteries 3 times or 4 times

- will restore them to a normal condition.
- If you repeatedly charge a Ni-MH battery before it is fully discharged, it will suffer from the "memory effect", causing the battery low warning to appear while there is still ample charge remaining in the battery. To restore the batteries to their normal condition, use up all the charge in the batteries before recharging them.
- Memory effect: A phenomenon affecting the battery characteristics such that the apparent battery capacity decreases.

## AC Power Adapter

Use only the AC-3V AC Power Adapter with your FinePix A203/FinePix A303 Digital Camera. The use of other AC power adapters may result in damage to your camera.

- This AC power adapter is designed exclusively for indoor use.
- Plug the connection cord plug securely into the DC input terminal of the FUJIFILM Digital camera.
- Turn off the power switch of the FUJIFILM Digital camera before disconnecting the connection cord from the FUJIFILM Digital camera's DC input terminal. To disconnect, take hold of the plug and pull it out (do not disconnect it by pulling on the cord).
- Do not use this AC power adapter with any device except the specified device.
- During use, this AC power adapter will become hot to

- touch, but this is normal.
- Do not disassemble the AC power adapter. Doing so could be dangerous.
- Do not use this device in a place with high temperature and high humidity.
- Do not drop or subject this device to strong shocks.
- This device may emit a humming noise, but this is normal.
- If used near a radio, this device may cause static, so play the radio in a distant place.

## Notes on the xD-Picture Card

### ■ xD-Picture Card

The xD-Picture Card supplied with your FinePix A203/FinePix A303 camera is a new image recording medium developed especially for use in digital cameras. Each xD-Picture Card contains a built-in semiconductor memory chip (NAND flash memory) which is used for storing digital image data.

Because the data is stored electronically, the stored image data can be erased from the card and new data recorded.

### ■ xD-Picture Card with IDs

The xD-Picture Card ID is a xD-Picture Card that has an individually assigned identification number. xD-Picture Card ID cards can be used with devices that use ID numbers for copyright protection or other purposes. This camera accepts xD-Picture Card ID cards in the same way as conventional xD-Picture cards.

### ■ Storing Data

In the situations listed below, recorded data may be erased (destroyed). Please note that Fuji Photo Film Co., Ltd. accepts no responsibility whatsoever for the loss (destruction) of recorded data.

- ★ When the xD-Picture Card is used incorrectly by the owner or a third party
- ★ When the xD-Picture Card is exposed to static electricity or electrical noise

112 ★ When the battery cover is opened or the xD-Picture

Card removed and the camera is then switched off during data recording, during data erasing (xD-Picture Card formatting) or during frame advance when images are being played back.

**You should always back up important files onto another media (MO disk, CD-R, CD-RW, hard disk, etc.).**

### ■ Notes on Handling xD-Picture Card

- Take care to hold the xD-Picture Card straight when you load it into your camera.
- Never remove the xD-Picture Card or switch the camera off during data recording, during data erasing (xD-Picture Card formatting) or during frame advance when images are being played back. These actions could result in damage to the xD-Picture Card.
- Use only the xD-Picture Card specified for use with the FinePix A203/FinePix A303. The use of other xD-Picture Card could damage the camera.
- xD-Picture Card are precision electronic devices. Do not bend, drop, or subject xD-Picture Card to excessive shocks.
- Do not use or store xD-Picture Card in environments likely to be affected by strong static electricity or electrical noise.
- Do not use or store xD-Picture Card in very hot, humid or corrosive environments.

### 変更予定

- Take care not to touch the xD-Picture Card's contact area or allow the area to become soiled. Use a dry lint-free cloth to wipe away any soiling that does occur.
- To avoid damage caused by static electricity, always use the special static-free case provided during transportation or storage, or keep the xD-Picture Card in a storage case if available.
- Do not carry xD-Picture Card in locations such as a trouser pocket. This could subject the xD-Picture Card to excessive force when you sit down, thereby damaging the xD-Picture Card.
- The xD-Picture Card may feel warm when it is removed from the camera after extended periods of picture taking or image viewing. This is normal and does not indicate a fault.
- Inserting a xD-Picture Card that is charged with static electricity into your camera may result in a camera malfunction. If this occurs, switch the camera off and then on again.

### ■ Notes on Using xD-Picture Card with a PC

- If you intend to take photos using a xD-Picture Card that has been used on a PC, format the xD-Picture Card on your camera.
- When you format a xD-Picture Card in the camera and then shoot and record images, a directory (folder) is automatically created. Image data is then recorded in this directory.

- Do not change or delete the directory (folder) names or file names on the xD-Picture Card from your PC as this will make it impossible to use the xD-Picture Card in your camera.
- Always use the camera to erase image data on a xD-Picture Card.
- To edit image data, copy the image data to the PC's hard disk and then edit the copied data.
- Do not copy files other than those that will be used by the camera.

### ■ Specifications

|                    |                                                                         |
|--------------------|-------------------------------------------------------------------------|
| Type               | Image memory card for digital cameras (xD-Picture Card)                 |
| Operating voltage  | 3.3V                                                                    |
| Conditions for use | Temperature:<br>0°C to +40°C (+32°F to +104°F)                          |
|                    | Humidity:<br>80% or less (no condensation)                              |
|                    | 37 mm x 45 mm x 0.76 mm<br>(1.45 in. x 1.77 in. x 0.03 in.) (W x H x D) |
| Dimensions         |                                                                         |

## Warning Displays

► The table below lists the warnings that are displayed on the LCD monitor

| Warning Displayed            | Explanation                                                                                                                                                                                                     | Remedy                                                                                                                                                                                                                                                                                |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (Blinking red)               | The batteries in the camera are fully depleted or very low on charge.                                                                                                                                           | Replace the batteries or have new batteries ready.                                                                                                                                                                                                                                    |
| <b>TRG CARD</b>              | No xD-Picture Card is loaded.                                                                                                                                                                                   | Load a xD-Picture Card.                                                                                                                                                                                                                                                               |
| <b>ICARD NOT INITIALIZED</b> | <ul style="list-style-type: none"> <li>The xD-Picture Card is not formatted.</li> <li>The xD-Picture Card contact area is soiled.</li> <li>Camera fault.</li> </ul>                                             | <ul style="list-style-type: none"> <li>Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the error message is still displayed, replace the xD-Picture Card.</li> <li>Contact your FUJIFILM dealer.</li> </ul> |
| <b>ICARD ERROR</b>           | <ul style="list-style-type: none"> <li>The xD-Picture Card contact area is soiled.</li> <li>The xD-Picture Card is damaged.</li> <li>The xD-Picture Card format is incorrect.</li> <li>Camera fault.</li> </ul> | <ul style="list-style-type: none"> <li>Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the error message is still displayed, replace the xD-Picture Card.</li> <li>Contact your FUJIFILM dealer.</li> </ul> |
| <b>ICARD FULL</b>            | The xD-Picture Card is fully recorded.                                                                                                                                                                          | Erase some images or use a xD-Picture Card that has ample free space.                                                                                                                                                                                                                 |

| Warning Displayed    | Explanation                                                                                                                                                                                                                                                           | Remedy                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>READ ERROR</b>    | <ul style="list-style-type: none"> <li>An attempt was made to playback a frame not recorded on this camera.</li> <li>The xD-Picture Card contact area is soiled.</li> <li>You attempted to play back a movie file that was not recorded on this camera.</li> </ul>    | <ul style="list-style-type: none"> <li>Images cannot be played back.</li> <li>Wipe the contact surface on the xD-Picture Card thoroughly with a soft, dry cloth. In some cases, you may have to format the xD-Picture Card.</li> <li>Play back the movie on a computer or on the camera on which it was recorded.</li> </ul> |
| <b>FILE NO. FULL</b> | The playback frame number has reached 999-9999.                                                                                                                                                                                                                       | Take the shots using a formatted xD-Picture Card.                                                                                                                                                                                                                                                                            |
| <b>WRITE ERROR</b>   | <ul style="list-style-type: none"> <li>The data could not be recorded due to a xD-Picture Card error or a connection error between the xD-Picture Card and camera.</li> <li>The photographed image cannot be recorded because the xD-Picture Card is full.</li> </ul> | <ul style="list-style-type: none"> <li>Reload the xD-Picture Card or switch the camera off and then on again.</li> <li>Use a new xD-Picture Card.</li> </ul>                                                                                                                                                                 |
|                      | There is a strong likelihood of camera shake because the shutter speed is slow.                                                                                                                                                                                       | Use flash photography. However, a tripod should be used for some scenes and modes.                                                                                                                                                                                                                                           |

| Warning Displayed        | Explanation                                                                 | Remedy                                                                                                                                                                                         |
|--------------------------|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>! PROTECTED FRAME</b> | A protected frame was erased.                                               | Protected files cannot be erased. Unprotect the image.                                                                                                                                         |
| <b>! AE</b>              | Outside the AE continuous range.                                            | The shot can be taken, but the exposure will not be correct.                                                                                                                                   |
| <b>! AF</b>              | The AF (auto focus) cannot work effectively.                                | <ul style="list-style-type: none"> <li>If the image is too dark, take the picture at a distance of around 2 m (6.6 ft.) from the subject.</li> <li>Use AF lock to take the picture.</li> </ul> |
| <b>! DPOF FILE ERROR</b> | Prints were specified for more than 1000 frames in the DPOF frame settings. | The maximum number of frames for which prints can be specified on the same xD-Picture Card is 999.                                                                                             |
| <b>! FOCUS ERROR</b>     | Camera malfunction or fault.                                                | Switch the camera on again, taking care not to touch the lens.                                                                                                                                 |
| <b>! ZOOM ERROR</b>      |                                                                             | Turn the camera off and on again a few times.                                                                                                                                                  |
| <b>! LENS COVER</b>      |                                                                             |                                                                                                                                                                                                |

## Troubleshooting

► If you think the camera is faulty, check the following once more

| Problem                                                    | Cause                                                                                                                                                                                                                                                                                                                                                                                                            | Remedy                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power.                                                  | <ul style="list-style-type: none"> <li>The battery is exhausted.</li> <li>The AC power adapter plug has come out of the power outlet.</li> </ul>                                                                                                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>Replace the batteries.</li> <li>Plug the adapter back in.</li> </ul>                                                                                                                                                                                                                                                     |
| Power cuts out during operation.                           | <ul style="list-style-type: none"> <li>The battery is exhausted.</li> </ul>                                                                                                                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>Replace the batteries.</li> </ul>                                                                                                                                                                                                                                                                                        |
| Battery runs out quickly.                                  | <ul style="list-style-type: none"> <li>You are using the camera in extremely cold conditions.</li> <li>The terminals are soiled.</li> <li>The battery is flat.</li> </ul>                                                                                                                                                                                                                                        | <ul style="list-style-type: none"> <li>Put the battery in your pocket or another warm place to heat it and then load it into the camera just before you take a picture.</li> <li>Wipe the battery terminals with a clean, dry cloth.</li> <li>Purchase new batteries.</li> </ul>                                                                                |
| No photograph is taken when the shutter button is pressed. | <ul style="list-style-type: none"> <li>No xD-Picture Card is loaded.</li> <li>The xD-Picture Card is fully recorded.</li> <li>The xD-Picture Card is not formatted.</li> <li>The xD-Picture Card contact area is soiled.</li> <li>The xD-Picture Card is damaged.</li> <li>The camera has been switched off because 2 minutes have elapsed since it was last used.</li> <li>The battery is exhausted.</li> </ul> | <ul style="list-style-type: none"> <li>Load a xD-Picture Card.</li> <li>Insert a new xD-Picture Card or erase some unwanted frames.</li> <li>Format the xD-Picture Card.</li> <li>Wipe the xD-Picture Card contact area with a clean dry cloth.</li> <li>Load a new xD-Picture Card.</li> <li>Switch the camera on.</li> <li>Purchase new batteries.</li> </ul> |

## Troubleshooting

► If you think the camera is faulty, check the following once more

| Problem                                                        | Cause                                                                                                                                                                                                 | Remedy                                                                                                                                                                                                                          |
|----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Can't use the flash to take pictures.                          | <ul style="list-style-type: none"> <li>The flash is set to Suppressed Flash mode.</li> <li>You pressed the shutter button while the flash was charging.</li> <li>The battery is exhausted.</li> </ul> | <ul style="list-style-type: none"> <li>Set the flash to Auto, Red-Eye Reduction or Forced Flash mode.</li> <li>Wait until charging is completed before pressing the shutter button.</li> <li>Purchase new batteries.</li> </ul> |
| The playback image is too dark even though the flash was used. | <ul style="list-style-type: none"> <li>The subject is too far away.</li> <li>Your fingers are obscuring the flash or flash control sensor.</li> </ul>                                                 | <ul style="list-style-type: none"> <li>Move closer to the subject.</li> <li>Hold the camera correctly.</li> </ul>                                                                                                               |
| The image is blurred.                                          | <ul style="list-style-type: none"> <li>The lens is dirty.</li> <li>The photographed subject was too dark.</li> </ul>                                                                                  | <ul style="list-style-type: none"> <li>Clean the lens.</li> <li>Try standing approx. 2 m (6.6 ft.) from your subject to take the picture.</li> </ul>                                                                            |
| There is speckling on the image.                               | <ul style="list-style-type: none"> <li>The shot was taken with a slow shutter speed (long exposure) in a high-temperature environment.</li> </ul>                                                     | <ul style="list-style-type: none"> <li>This is a characteristic of CCDs and does not indicate a camera fault.</li> </ul>                                                                                                        |
| I can't format the xD-Picture Card.                            | <ul style="list-style-type: none"> <li>The xD-Picture Card contact area is soiled.</li> </ul>                                                                                                         | <ul style="list-style-type: none"> <li>Wipe the xD-Picture Card contact area with a clean dry cloth.</li> </ul>                                                                                                                 |

| Problem                                                                                                       | Cause                                                                                                                                                       | Remedy                                                                                                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The ERASE ALL function does not erase all the frames.                                                         | <ul style="list-style-type: none"> <li>Some frames may be protected.</li> </ul>                                                                             | <ul style="list-style-type: none"> <li>Unprotect frames using the camera on which the protection was first applied.</li> </ul>                                                                                                 |
| Frame erase does not erase the frame.                                                                         | <ul style="list-style-type: none"> <li>Camera malfunction.</li> </ul>                                                                                       | <ul style="list-style-type: none"> <li>Briefly remove the batteries or disconnect the AC power adapter. Then reload the batteries or reconnect the AC power adapter and try again.</li> <li>Purchase new batteries.</li> </ul> |
| Nothing happens when I use the Mode dial.                                                                     | <ul style="list-style-type: none"> <li>The batteries exhausted.</li> </ul>                                                                                  | <ul style="list-style-type: none"> <li>Set up the camera and USB cable correctly.</li> <li>Switch the PC on.</li> </ul>                                                                                                        |
| When the camera is connected to a personal computer (PC), the shot image appears on the camera's LCD monitor. | <ul style="list-style-type: none"> <li>The special USB cable is not connected correctly to the PC or camera.</li> <li>The PC is not switched on.</li> </ul> | <ul style="list-style-type: none"> <li>Set up the camera and USB cable correctly.</li> <li>Switch the PC on.</li> </ul>                                                                                                        |
| The camera no longer works correctly.                                                                         | <ul style="list-style-type: none"> <li>The camera has suffered an unforeseen problem.</li> </ul>                                                            | <ul style="list-style-type: none"> <li>Remove the batteries briefly and then reload the batteries and try again.</li> </ul>                                                                                                    |

## System

- Model: Digital Camera FinePix A203
- Number of effective pixels: 2.1 million pixels
- CCD sensor: 1/2.7-inch square pixel CCD with RGB Filter
- Number of total pixels: 2.11 million pixels
- Number of effective pixels: 2.0 million pixels
- Resolution: 1600 x 1200 pixels/1280 x 960 pixels/640 x 480 pixels
- File format: JPEG (Exif Ver. 2.2), DPOF-compatible
- Movie: AVI format, Motion JPEG
- Design rule for Camera File system Compliant
- Viewfinder: Real image optical; Frame coverage: 80%
- Lens: Fujinon 3x optical zoom lens
- Storage media: xD-Picture Card (16MB to 128MB)
- Aperture: F2.8-F4.5/F7.0-11.6 (automatically selected)
- Focus distance: 14.5-71.7 mm (equivalent to 38 mm on a 114mm camera)
- Standard number of available shots/recording time per xD-Picture Card

Standard number of available shots/recording time per xD-Picture Card

| File Size (Quality Mode) | 2M • F         | 2M • N         | 1M             | 0.3M           | 320               | 160               |
|--------------------------|----------------|----------------|----------------|----------------|-------------------|-------------------|
| Image Data Size          | Approx. 770 KB | Approx. 360 KB | Approx. 320 KB | Approx. 130 KB | —                 | —                 |
| DPC-16 (16 MB)           | 25             | 39             | 49             | 122            | Approx. 84 sec.   | Approx. 5 min.    |
| DPC-32 (32 MB)           | 50             | 79             | 99             | 247            | Approx. 191 sec.  | Approx. 10.1 min. |
| DPC-64 (64 MB)           | 101            | 159            | 199            | 497            | Approx. 6.4 min.  | Approx. 20.2 min. |
| DPC-128 (128 MB)         | 204            | 319            | 399            | 997            | Approx. 12.9 min. | Approx. 40.6 min. |

## Input/Output Terminals

- ~ (Special USB) socket
- USB (1) for image data output with a personal computer
- DC IN 3V (Power Input) socket
- Socket for specified AC power adapter (sold separately)

## Power Supply and Others

- Power supply: Use one of the following:
  - 2AA-size alkaline batteries
  - 2AA-size Ni-MH (nickel metal hydride) batteries (sold separately)
  - AC Power Adapter AC-3V (sold separately)
- No. of available shots using battery (battery life)

| Battery type       | With LCD monitor ON | With LCD monitor OFF |
|--------------------|---------------------|----------------------|
| Alkaline batteries | Approx. 120 frames  | Approx. 150 frames   |
| Ni-MH batteries    | Approx. 180 frames* | Approx. 360 frames*  |

\*Condition: Power saving mode ON, with fully charged battery (Ni-MH)  
This indicates the number of available frames shot consecutively at room temperature with a flash use rate of 50%. Note that these figures may vary depending on the ambient temperature and the amount of charge in the battery. The number of available shots of charge in the shooting time will be lower in cold conditions.

- Conditions for use:
  - Temperature: 0°C to +40°C (-32°F to +104°F); 80% humidity or less (no condensation)

- Camera dimensions (W/H/D): 98.5 mm x 40.5 mm x 3.9 in. x 2.5 in. x 1.6 in. (not including accessories and attachments)
- Camera mass (weight): Approx. 132 g/4.7 oz. (not including accessories, batteries or xD-Picture Card)
- Weight for photography: Approx. 190 g/6.7 oz. (including batteries and xD-Picture Card)
- Accessories: See P.7
- Optional Accessories: See P.106, 107

These specifications are subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in the Owner's Manual.  
The LCD monitor on your digital camera is manufactured using advanced high-precision technology. Even so, small bright points and anomalous colors (particularly around text) may appear on the monitor. These are normal display characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.  
The operation error may be caused in a digital camera by the strong radio interference (i.e., electric fields, static electricity, line noise, etc.).  
Due to the nature of the lens, the edges of photographed images may appear distorted. This is normal and does not indicate a fault.

## System

- Model: Digital Camera FinePix A303
- CCD sensor: 1/2.7-inch square pixel CCD with RGB Filter
- Number of effective pixels: 3,344,000 pixels
- Number of total pixels: 3,344,000 pixels
- Number of effective pixels: 3,240,000 pixels
- Resolution: 2048 x 1536 pixels/1600 x 1200 pixels/1280 x 960 pixels
- File format: Still image: JPEG (Exif Ver. 2.2), DPOF-compatible
- Movie: AVI format, Motion JPEG
- Design rule for Camera File system Compliant
- Viewfinder: Real image optical; Frame coverage: 80%
- Lens: Fujinon 3x optical zoom lens
- Storage media: xD-Picture Card (16MB to 128MB)
- Aperture: F2.8-F4.8 F7.0-11.6 (automatically selected)
- Focus distance: 1.6-7.7/17.1 mm (equivalent to 36 mm on a 1/4-inch camera)

Standard number of available shots/recording time per xD-Picture Card

| File Size (Quality Mode) | 3M • F          | 3M • N         | 2M             | 1M             | 0.3M           | 320               | 160               |
|--------------------------|-----------------|----------------|----------------|----------------|----------------|-------------------|-------------------|
| Image Data Size          | Approx. 1300 KB | Approx. 590 KB | Approx. 390 KB | Approx. 200 KB | Approx. 130 KB | —                 | —                 |
| DPC-16 (16 MB)           | 12              | 26             | 30             | 49             | 122            | Approx. 94 sec.   | Approx. 5 min.    |
| DPC-32 (32 MB)           | 25              | 53             | 79             | 99             | 247            | Approx. 191 sec.  | Approx. 10.1 min. |
| DPC-64 (64 MB)           | 50              | 107            | 159            | 199            | 497            | Approx. 6.4 min.  | Approx. 22.2 min. |
| DPC-128 (128 MB)         | 102             | 215            | 319            | 398            | 987            | Approx. 12.5 min. | Approx. 42.8 min. |

## Input/Output Terminals

- 4x (special USB) socket
- USB (1) for image data output with a personal computer
- DC IN 3V (power input) socket
- Socket for specified AC power adapter (sold separately)

## Power Supply and Others

- Power supply: Use one of the following:
  - 2AA-size alkaline batteries
  - 2AA-size Ni-MH (nickel metal hydride) batteries (sold separately)
  - AC Power Adapter AC-3V (sold separately)
- No. of available shots using battery (battery life)
 

| Battery type       | With LCD monitor ON | With LCD monitor OFF |
|--------------------|---------------------|----------------------|
| Alkaline batteries | Approx. 100 frames  | Approx. 120 frames   |
| Ni-MH batteries    | Approx. 100 frames  | Approx. 120 frames   |
| Li-ion batteries   | Approx. 150 frames* | Approx. 270 frames*  |

\*Condition: Power saving mode ON, with fully charged battery (its level). This indicates the number of available frames shot consecutively at room temperature with a flash use rate of 50%. Note that these figures may vary depending on the ambient temperature and the amount of charge in the battery. The number of available shots or available shooting time will be lower in cold conditions.

- Conditions for use:
  - Temperature: 0°C to +40°C (+32°F to +104°F); 80% humidity or less (no condensation)

- Camera dimensions (W/H/D): 64.5 mm x 64.5 mm x 40.5 mm/2.5 in. x 2.5 in. x 1.6 in. (not including accessories and attachments)
- Camera mass (weight): Approx. 132 g/4.7 oz. (not including accessories, batteries or xD-Picture Card)
- Weight for photography (including battery and xD-Picture Card): Approx. 190 g/17.0 oz.
- Accessories: See P.7
- Optional Accessories: See P.106, 107

\*These specifications are subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this Camera's Manual.

\*The LCD monitor on your digital camera is manufactured using advanced high-precision technology. Even so, small bright points and anomalous colors (particularly around text) may appear on the monitor. These are normal display characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.

\*The operation error may be caused in a digital camera by the strong radio interference (i. e. electric fields, static electricity, line noise, etc.).

\*Due to the nature of the lens, the edges of photographed images may appear distorted. This is normal and does not indicate a fault.

## Explanation of Terms

**DPOF:** Digital Print Order Format

DPOF is a format used for recording information on a storage media (image memory card, etc.) that allows you to specify which of the frames shot using a digital camera are printed and how many prints are made of each image.

**EV:**

A number that denotes exposure. The EV is determined by the brightness of the subject and sensitivity (speed) of the film or CCD. The number is larger for bright subjects and smaller for dark subjects. As the brightness of the subject changes, a digital camera maintains the amount of light hitting the CCD at a constant level by adjusting the aperture and shutter speed. When the amount of light striking the CCD doubles, the EV increases by 1. Likewise, when the light is halved, the EV decreases by 1.

**JPEG:** Joint Photographic Experts Group

A file format used for compressing and saving color images. The compression ratio can be selected, but the higher the compression ratio, the poorer the quality of the expanded image.

**Motion JPEG:**

A type of AVI (Audio Video Interleave) file format that handles images and sound as a single file. Images in the file are recorded in JPEG format. Motion JPEG can be played back by QuickTime 3.0 or later.

**PC Card:**

A generic term for cards that meet the PC Card Standard.

**PC Card Standard**

A standard for PC cards determined by the PCMCIA.

**PCMCIA:**

Personal Computer Memory Card International Association (US).

**White Balance:**

Whatever the kind of the light, the human eye adapts to it so that a white object still looks white. On the other hand, devices such as digital cameras see a white subject as white by first adjusting the color balance to suit the color of the ambient light around the subject. This adjustment is called matching the white balance. A function that automatically matches the white balance is called an **Automatic White Balance function**.

## Safety Notes

- To ensure that you use your FinePix A202 camera correctly, read these Safety Notes and your Owner's Manual carefully beforehand.
- After reading these Safety Notes, store them in a safe place.

### About the icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

**⚠ WARNING** This icon indicates that death or serious injury can result if the information is ignored.

**⚠ CAUTION** This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.

**△** Triangular icons notify the user of information requiring attention ("Important").

**⊘** Circular icons with a diagonal bar notify the user that the action indicated is prohibited ("Prohibited").

**ⓘ** Filled circles with an exclamation mark notify the user of an action that must be performed ("Required").

|                                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>⚠ WARNING</b></p> <p>When a fault arises, switch the camera off and then remove the batteries and disconnect the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.</p> <p>● Contact your FUJIFILM dealer.</p> | <p><b>⊘</b></p> <p>Do not allow water or foreign objects to enter the camera.</p> <p>If water or foreign objects get inside the camera, switch the camera off, remove the battery and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock.</p> <p>● Contact your FUJIFILM dealer.</p> |
| <p><b>⊘</b></p> <p>Do not place the camera on an unstable surface.</p> <p>This can cause the camera to fall or tip over and cause injury.</p>                                                                                                                                                                                                  | <p><b>⚠</b></p> <p>Do not use the camera in the bathroom or shower.</p> <p>This can cause a fire or electric shock.</p> <p>Do not use the bathroom for shower.</p>                                                                                                                                                                           |

| <p><b>WARNING</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <p><b>WARNING</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Never attempt to modify or disassemble the camera. (Never open the casing.)<br/>Do not use the camera when it has been dropped or the casing is damaged.<br/>This can cause a fire or electric shock.<br/>● Contact your FUJIFILM dealer.</p> <p>Never attempt to take pictures while in motion.<br/>Do not use the camera while you are walking or operating a moving car or other vehicle.<br/>This can result in you falling down or being involved in a traffic accident.</p> <p>Do not heat, modify or attempt to disassemble the batteries.<br/>Do not drop or subject the batteries to impacts.<br/>Do not attempt to recharge lithium or alkaline batteries.<br/>Do not store the batteries with metallic products.<br/>Any of these actions can cause the batteries to burst or leak and cause fire or injury as a result.</p> | <p>Do not touch any metal parts of the camera during a thunderstorm.<br/>This can cause an electric shock due to induced current from the lightning discharge.</p> <p>Do not use the batteries except as specified.<br/>Load the batteries with the poles positioned as indicated by the ⊕ and ⊖ marks.</p> <p>Use only the batteries or AC power adapter specified for use with this camera.<br/>The use of other power sources can cause a fire.</p> <p>If the battery leaks and fluid gets into your eyes or comes into contact with your skin or clothing, this can cause injury or loss of eyesight. Immediately flush the affected area thoroughly with clean water and seek medical treatment.</p> <p>When discarding or storing batteries, cover the battery terminals with insulating tape.<br/>● Contact with other metallic objects or batteries could cause the batteries to ignite or burst.</p> |

| <p><b>WARNING</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <p><b>CAUTION</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Keep xD-Picture Cards out of the reach of small children.<br/>Because xD-Picture Cards are small, they can be accidentally swallowed by small children. Be sure to store xD-Picture Cards out of the reach of small children. If a child accidentally swallows an xD-Picture Card, seek medical advice immediately.</p> <p>When an xD-Picture Card is removed, the card may fly completely out of the slot. Use your finger to stop the card flying out before removing the card.<br/>If an xD-Picture Card is allowed to fly out, it could hit someone and cause injury.</p> | <p>Keep out of the reach of small children.<br/>This product could cause injury in the hands of a child.</p> <p>Do not use this camera in locations severely affected by oil fumes, steam, humidity or dust.<br/>This can cause a fire or electric shock.</p> <p>Do not leave this camera in locations subject to extremely high temperatures.<br/>Do not leave the camera in locations such as a parked vehicle or in direct sunlight.<br/>This can cause a fire.</p> <p>Do not place heavy objects on the camera.<br/>This can cause the heavy object to tip over or fall and cause injury.</p> <p>Do not move the camera while the AC power adapter is still connected.<br/>This can damage the power cord or cables and cause a fire or electric shock.</p> |

|                                                                                                                                                                                   |                                                                                                                                                                                                                                             |                                                                                                                                                                            |                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>CAUTION</b></p> <p>Do not cover or wrap the camera or the AC power adapter in a cloth or quilt. This can cause heat to build up and distort the casing or cause a fire.</p> | <p><b>!</b></p> <p>Remove the batteries and disconnect the AC power adapter when you are cleaning the camera or if you intend to leave the camera unused for a long period.</p> <p>Failure to do so can cause a fire or electric shock.</p> | <p><b>!</b></p> <p>Using a flash too close to a person's eyes may temporarily affect the eyesight. Take particular care when photographing infants and young children.</p> | <p><b>!</b></p> <p>Request regular internal testing and cleaning for your camera.</p> <p>Build-up of dust in your camera can cause a fire or electric shock.</p> <ul style="list-style-type: none"> <li>• Contact your FUJIFILM dealer to request internal cleaning every 2 years.</li> </ul> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## EC Declaration of Conformity

We  
Name : Fuji Photo Film (Europe) G.m.b.H.  
Address : Heidenstrasse 31  
40549 Dusseldorf, Germany

declare that the product

Product Name : FUJIFILM DIGITAL CAMERA Finapix A202  
Manufacturer's Name : Fuji Photo Film Co., Ltd.  
Manufacturer's Address : 28-30, Nishiazabu 2-chome, Minato-ku,  
Tokyo 106-8620, Japan

is in conformity with the following Standards

Safety : EN60950  
EMC : EN55022 : 1998 Classe B  
EN55024 : 1998  
EN61000-3-2 : 1995 + A1:1998 + A2:1998

following the provision of the EMC Directive (89/336/EEC, 92/31/EEC and 93/68/EEC) and Low Voltage Directive (73/23/EEC).

CE

*M. Gnagide*

Dusseldorf, Germany September 1, 2002  
Place Date  
Signature/Managing Director



Bij dit produkt zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.





**FUJIFILM**

**FUJI PHOTO FILM CO., LTD.**  
26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106-8620, Japan

Printed in Japan

Printed on recycled paper.

FGS-204107-FG