



DIGITAL CAMERA

FinePix F401



digital
Tools for the Photographers

Exif Print



- Getting Ready
- Basic Photography
- Advanced Features Photography
- Advanced Features Playback
- Settings
- Connection

OWNER'S MANUAL


This manual will show you how to use your FUJIFILM DIGITAL CAMERA FinePix F401 correctly. Please follow the instructions carefully.

BL00156-200 (1)



Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

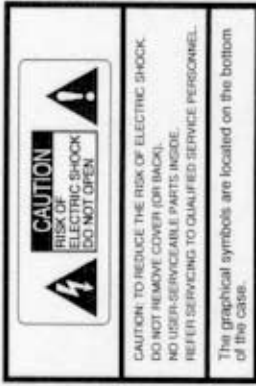

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant:

To comply with Part 15 of the FCC rules, this product must be used with a Fujifilm-specified ferrite-core USB cable and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes (→P.108) and make sure you understand them before using the camera.

Contents

Warning	2
Preface	6
Camera Features and Accessories	7
Nonremovable/Attaching the strap/Sample display	8

1 Getting Ready

LOADING THE BATTERY AND SmartMedia™	11
CHARGING THE BATTERY	14
Using the AC Power Adapter	14
SWITCHING ON AND OFF	15
SETTING THE DATE AND TIME	17
Changing the date and time	17

2 Basic Photography

BASIC OPERATION GUIDE	18
■ MODE	
TAKING PICTURES (CAM AUTO MODE)	21
■ Viewfinder Lamp Display	25
Number of Available Frames	26
USING AF/AE LOCK	27
FRAMING GUIDELINE FUNCTION	29
■ MODE	
USING THE ZOOM	30
■ MODE	
4 ■ MACRO (CLOSE-UP) PHOTOGRAPHY	31

FLASH	32
Auto Flash Mode (no icon)	32
■ Red-Eye Reduction	33
■ Forced Flash	33
■ Suppressed Flash	34
■ Slow Synchro	34
■ MODE	
VIEWING YOUR IMAGES (PLAYBACK)	35
Fast Forwarding Images	35
MULTI-FRAME PLAYBACK	36
PLAYBACK ZOOM	37
Saving Trimmed Images	38
ERASING SINGLE FRAME	39

3 Advanced Features Photography

■ MODE	
SELECTING CAM AUTO OR CAM MANUAL	41
PHOTOGRAPHY MENU OPERATION/	
PHOTOGRAPHY MENU OPTIONS	42
■ PHOTOGRAPHY MENU	
◀ SETTING THE FILE SIZE (NO. OF RECORDED	
PIXELS FOR STILL IMAGES)	44
○ SELF-TIMER PHOTOGRAPHY	45
○ CONTINUOUS SHOOTING	47
○ Final 4-frame Continuous Shooting	48

■ SENSITIVITY	49
■ EV (EXPOSURE COMPENSATION)	50
■ WHITE BALANCE	51
(SELECTING THE LIGHT SOURCE)	
■ MODE	
■ MOVIE (VIDEO)	52
Resolution settings for movies	55

4 Advanced Features Playback

■ MODE	
PLAYING BACK MOVIES (VIDEO)	56
■ PLAYBACK MENU	
ERASING SINGLE • ALL FRAMES/	
FORMATTING	58
○ PROTECTING IMAGES FRAME/ALL	62
■ HOW TO SPECIFY PRINT OPTIONS (DPOF)	66
■ DPOF SET FRAME	67
■ RECORDING VOICE MEMOS	71
■ MODE	
PLAYING BACK VOICE MEMOS	74

5 Settings

■ ADJUSTING THE MONITOR BRIGHTNESS	76
■ ADJUSTING THE VOLUME	77
■ USING SET-UP	78
■ SET-UP Menu Options (Date/time setting, etc.)	79

SET-UP	
■ POWER SAVE	80
6 Connection	
IN CONNECTION	81
CONNECTING AT DSC MODE	82
CONNECTING AT PC-CAMERA MODE	84
DISCONNECTING FROM THE PC	
(important — always use this procedure.)	86

System Expansion Options	88
Accessories Guide	89
Notes on Using Your Camera Correctly	91
Notes on the Power Supply	92
Notes on Using the Battery (NP-40)	94
AC Power Adapter	94
Notes on the SmartMedia™	95
Warning Displays	97
Troubleshooting	100
Explanation of Terms	103
Specifications	105
Safety Notes	108

Preface

■ **Test Shots Prior to Photography**
For particularly important photographs (such as weddings and overseas trips), always take a test photograph and view the image to make sure that the camera is functioning normally.

■ **Fuji Photo Film Co., Ltd.** cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless released only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

■ Liquid Crystal

If the LCD monitor or display panel is damaged, take particular care with the liquid crystal in the monitor or panel. If any of the following situations arise, take the urgent action indicated.

■ If liquid crystal comes in contact with your skin
Wipe the area with a cloth and then wash thoroughly with running water and soap.

■ If liquid crystal gets into your eye

Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.

■ If liquid crystal is swallowed

Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

■ Notes on Electrical Interference

If the camera is to be used in hospitals or aircraft, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

■ Handling Your Digital Camera

This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

■ Trademark Information

■ IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.

■ Mac and Macintosh are registered trademarks of Apple Computer, Inc.

■ Windows is a registered trademark of the Microsoft Corporation of the U.S. registered in the U.S.A. and other countries. Windows is an abbreviated term referring to the Microsoft Windows Operating System.

■ SmartMedia is a trademark of Toshiba Corporation.

■ Other company or product names are trademarks or registered trademarks of the respective companies.

Camera Features and Accessories

Camera Features



- 2.1 million effective pixels
- 1/2.7-inch Super CCD provides high quality images with 2204 × 1728 (3.68 million) recorded pixels
- High-performance 3× optical zoom
- Compact and lightweight aluminum-magnesium alloy body
- Quick, responsive operation with a 2.5-second startup and 1.3 seconds between shots
- Auto focus with macro function
- Manual photography mode lets you set your own photography settings
- High-variability photography (M mode only)
- Image checking function automatically plays back the image for about 2 seconds after you take a picture
- Maximum 4.4× seamless digital zoom
- Playback zoom function (up to 14.4×)
- Continuous shooting function
- Move shooting function (with sound)
- Voice Memo function for easy photography information recording
- 1.5-inches 114,000-pixels low temperature polysilicon TFT LCD monitor
- Recharge or connect to your PC simply by placing the FinePix F401 in its cradle (sold separately)
- Easy high-speed image file transfer via the USB connection
- Conforms to "Design for Camera File system" standard and Exif ver 2.2 for digital cameras
- *Design for Camera File system* standard and Exif format are formulated by the Japanese Electronic and Information Association (JEITA)

Accessories


- **SmartMedia (16MB, 3.3V) (1)**
Supplied with:
• Anti-static case (1)
• Index label (1)
- **NP-60 Rechargeable Battery (1)**
Soft case included
- **AC-SVS/AC-SVHS AC Power Adapter (1)**
Approx. 2 m (6.6 ft.) connection cord
- **Strap (1)**
- **USB Interface Set (1)**
 - CD-ROM: Software for FinePix EX (1)
 - FinePix F401 Special USB cable with Noise Suppression core (1)
 - Software Quick Start Guide (1)
- **Owner's Manual (this manual) (1)**

Nomenclature

* Refer to the pages in parentheses for information on using the camera features.

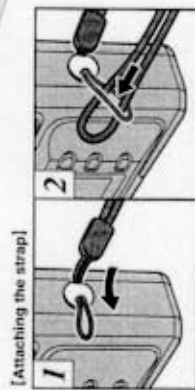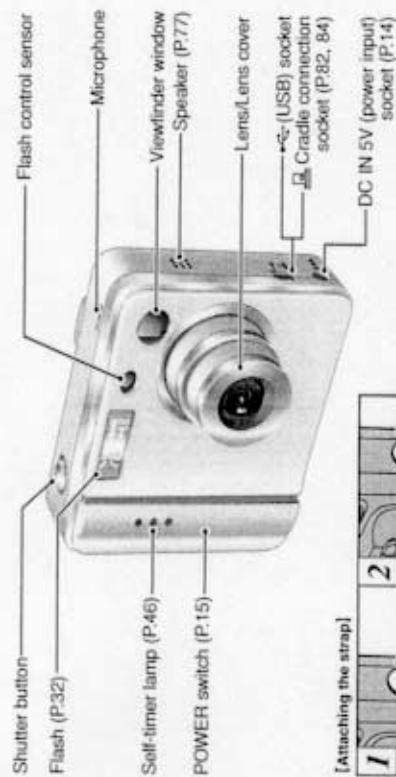


8

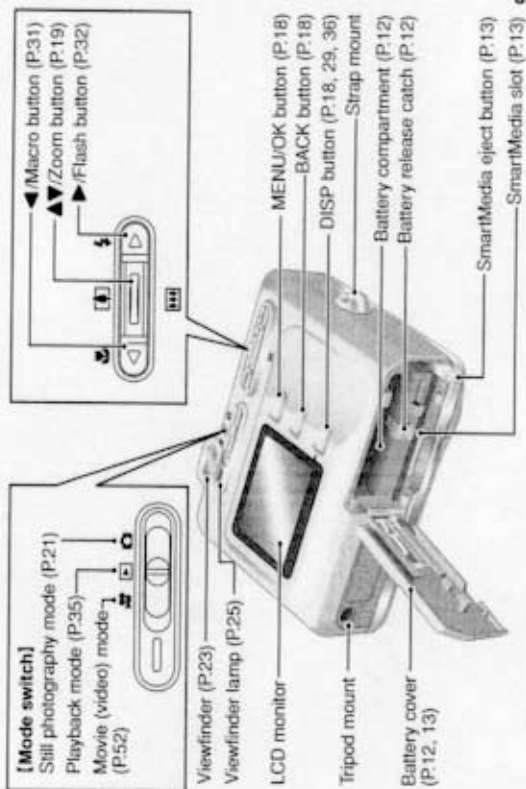


9

Nomenclature (Sample display)

Example of LCD Monitor Text Display: Still photography mode

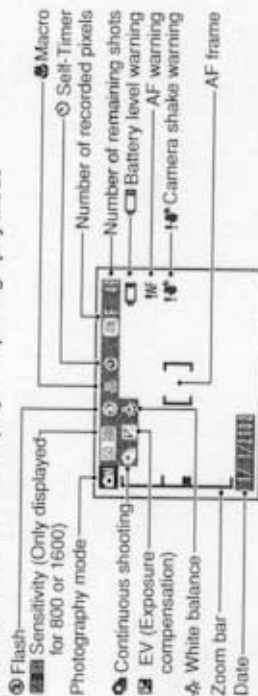

Example of LCD Monitor Text Display: Playback mode

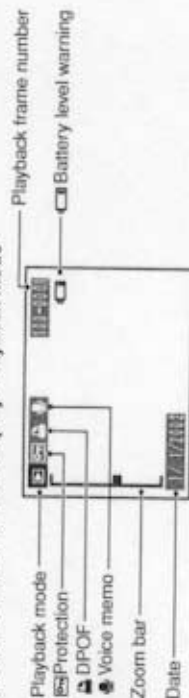


1 Getting Ready LOADING THE BATTERY AND SmartMedia™

Compatible Batteries

Use only the special Rechargeable Battery NP-60. The use of other brands of rechargeable battery could cause faults or damage to the camera.

NP-60 Rechargeable Battery (1)

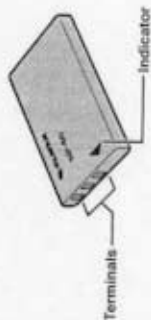

SmartMedia™ (sold separately)

- Only use 3.3V SmartMedia
 - MG-4S (4MB), MG-16SW (16MB, ID)
 - MG-8S (8MB), MG-32SW (32MB, ID)
 - MG-16S (16MB), MG-64SW (64MB, ID)
 - MG-32S (32MB), MG-128SW (128MB, ID)
 - MG-64S (64MB)



- The battery is not fully charged at shipment and must be charged up before being used.
- Do not stick labels onto the battery as this could cause the battery to become jammed inside the camera.
- See P.92-93 for note on the battery.
- Image files cannot be recorded or erased if a write-protect sticker is affixed to the SmartMedia.
- Operation of this camera is only guaranteed when it is used with FUJIFILM SmartMedia.
- Some 3.3V SmartMedia are labelled as "3V" or "ID" cards.
- See P.95-96 for note on SmartMedia.

LOADING THE BATTERY AND SmartMedia™



- 1 Slide the battery cover out to open it.
- 2 Hold the battery so that the arrow markings are aligned, use your finger to pull the battery release catch in the direction shown and insert the battery. Check that the battery is locked in place.

Do not apply excessive force to the battery cover.


Never open the battery cover while the camera is still switched on. This could damage the SmartMedia or corrupt the image files on the SmartMedia.

To remove the battery

Open the battery compartment cover and pull the battery release catch in the direction indicated to release the battery.



Always switch the camera off when removing the battery.

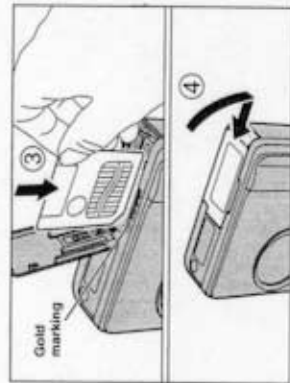


- 3 Align the contact area (the gold-colored section) on the SmartMedia with the gold marking on the SmartMedia slot and firmly push the SmartMedia all the way into the slot.
- 4 Close the battery cover.

If you open the battery cover while the camera is switched on, the camera automatically switches off to protect the data on the SmartMedia.

The SmartMedia will not slide fully into the slot if it is inserted facing the wrong way. Be careful not to apply undue force to the SmartMedia.


To protect the SmartMedia, always store it in the special anti-static case.

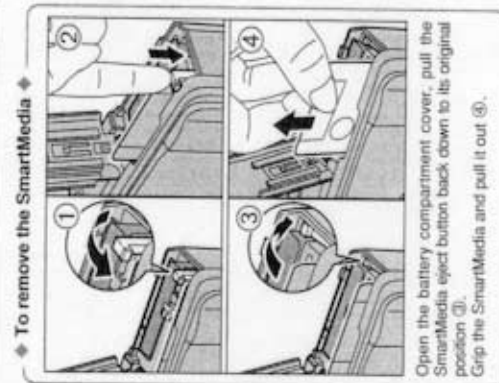

To remove the SmartMedia

Open the battery compartment cover, pull the SmartMedia eject button back down to its original position. Grip the SmartMedia and pull it out.


CHARGING THE BATTERY

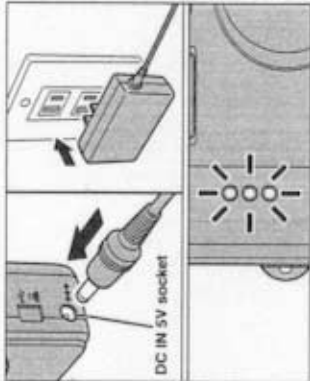

Check that the camera is switched off. Plug the AC power adapter connector into the DC IN 5V socket on the camera and then plug the adapter itself into the main power outlet.
The self timer lamp lights (blue) and battery charging begins. When charging is completed, the self timer lamp switches off.


A fully discharged battery takes roughly 3 hours to fully recharge (at an ambient temperature of +21°C to +25°C (+70°F to +77°F)).

SWITCHING ON AND OFF • SETTING THE DATE AND TIME

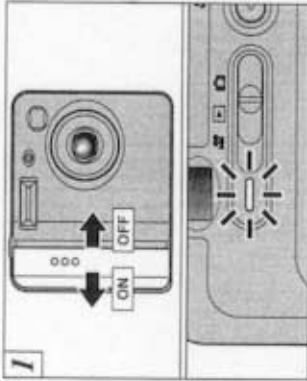

Slide the Power switch to turn the camera on and off. When you switch the camera on, the viewfinder lamp lights (green).


If the "O.I.S." mode is selected, the lens cover opens and the lens slides out. Avoid pressing on the lens so as not to damage precision components. Obstructing the lens will cause a malfunction or fault and the "O.I.S. Error" or "L.I.F.E. Error" message will appear. Take care also not to get fingerprints on the camera lens as this will result in impaired image quality in your shots.

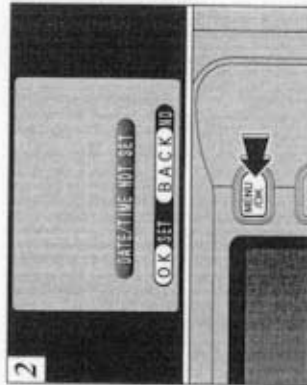

When you first switch the camera on, the date is cleared. Press the "MENU/OK" button to set the date and time.

- To set the date and time later, press the "BACK" button.
- If you do not set the date and time, this confirmation screen will appear each time you switch the camera on.
- When you switch the camera on, the self timer lamp lights for about 5 seconds.
- If you load the battery while the camera's Power switch is set to ON, the viewfinder lamp/self timer lamp lights briefly. This is normal and does not indicate a fault.


SWITCHING ON AND OFF • SETTING THE DATE AND TIME

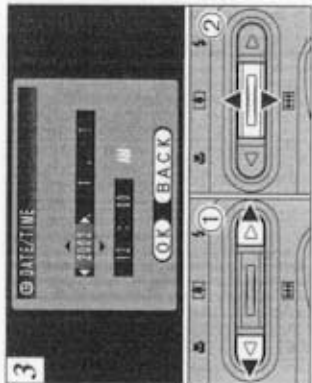

- ① Use "←" and "→" to select Year, Month, Day, Hour or Minute.
- ② Press "▲" or "▼" to set the number.

- ⚡ If you hold down "▲(↑)" or "▼(↓)", the numbers change continuously.
- ⚡ When the time displayed passes "12:00", the AM/PM setting automatically switches.


16

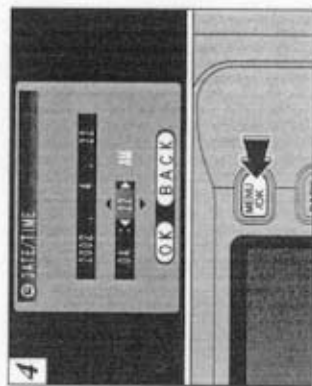

Once you have set the date and time, press the "MENU/OK" button. Pressing the "MENU/OK" button switches the camera to Photography or Playback mode.

- ⚡ To set the time precisely, press the "MENU/OK" button when the time is at zero seconds.
- ⚡ If at least 2 hours have passed since the AC power adapter was connected or the battery inserted and the date and time set, then those settings will be maintained for roughly 5 hours even when the camera has no power supply (when the AC power adapter is disconnected and the battery is removed).

Changing the date and time

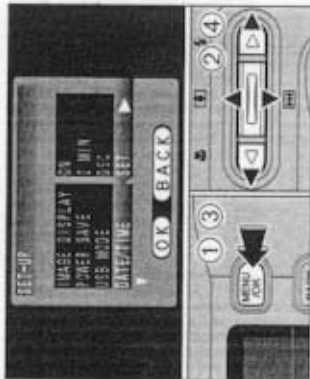

To change the date and time:

- ① Press the "MENU/OK" button.
- ② Use "←" or "→" to select "SET-UP", and then use "▲" or "▼" to select "SET-UP".
- ③ Press the "MENU/OK" button.
- ④ Select "DATE/TIME" and press "→".

See P.16 for information on setting the date and time.

◆ **Checking the remaining battery charge** ◆
Switch the camera on and check that no battery level warning (⚡, ⚡ or ⚡) is displayed on the LCD monitor. If no icon is displayed, there is ample charge left in the battery.

• **⚡ Lit white:**

The battery is approximately half charged.

• **⚡ Lit red:**

Battery charge low. Replace or recharge the battery as it will run out shortly.

• **⚡ Blinking red:**

The battery is exhausted. The display will shortly go blank and the camera will stop working. Replace or recharge the battery.



⚡ The above estimates are for the photography modes. In Playback mode, the transition from "⚡" to "⚡" may take less time.

◆ **Power Save Function** ◆

If the camera is not used in any way for approx. 30 seconds when the camera functions are enabled, this function temporarily switches features such as the LCD monitor off to reduce power consumption (→ P.80). If the camera is then left unused for a further period (2 or 5 minutes), the Power Save function automatically switches the camera off. To restore power to the camera, switch the camera off and then back on again.

17

This section describes the camera's functions.

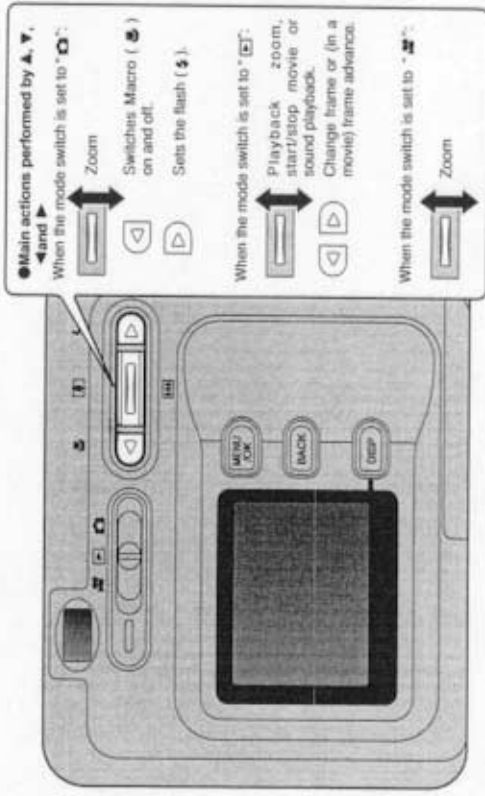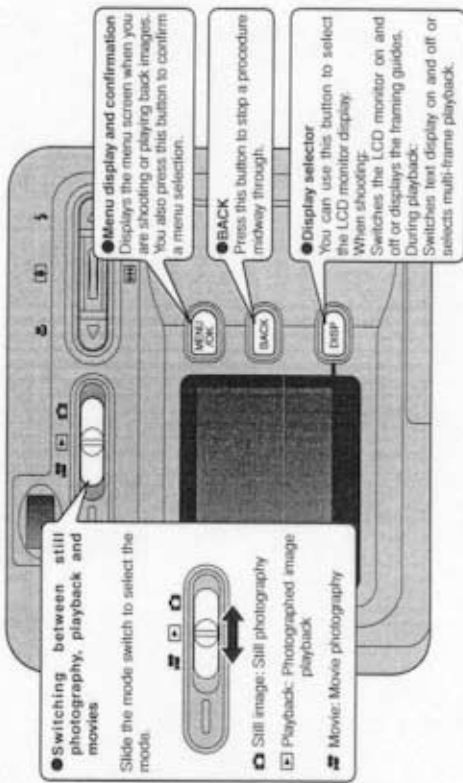

Using the Menu


- Display the menu.
Press the "MENU/OK" button.
- Select a menu option.
Press the "▲" or "▼" button.
- Select a setting.
Press the "▲" or "▼" button.




- Confirm your selection.
Press the "MENU/OK" button.



In the Owner's Manual back triangles are used to indicate up/down/left and right. "▲" is used to indicate up/down. Left and right are indicated by "◀" and "▶" respectively.

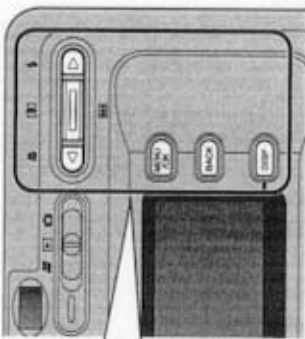


 Displaying the On-screen Help
Instructions for the next step in the procedure are displayed at the bottom of the LCD monitor. Press the button indicated.



Press the "DISP" button to use the zoom or the "MENU/OK" button to turn the image.

You've read the chapter on getting ready and the camera is now set up and ready to take pictures. The Basic Photography section explains the three basic steps of "taking pictures", "viewing pictures", and "erasing pictures". Master the basic steps by actually trying them out on the camera as you go.

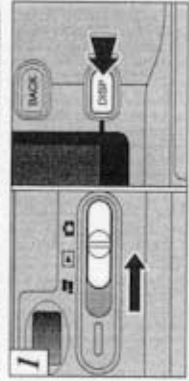

Set the mode switch to "Q".
When you are taking shots using the viewfinder, you can make the battery last longer by pressing the "DISP" button to switch the LCD monitor off. (Note that you cannot switch the LCD monitor off in Macro mode.)

- Photography range: Approx. 60 cm (2 ft.) to infinity
- If a "FLASHING" or "WHITE BALANCE" message appears, see P.97, 98.



Brace your elbows against your sides and hold the camera with both hands. Position the thumb of your right hand so that it is handy for using the zoom.

- For subjects closer than 60 cm (2 ft.), use Macro photography (P.31).
- You should use the viewfinder to take pictures (switch the LCD monitor off) to make the battery last longer.
- Particularly for shots in dark locations when the flash is set to Suppressed Flash mode, you should use a tripod to avoid camera shake.




3

Take care to hold the camera so that your fingers or the strap do not cover the lens, flash or flash control sensor. If the lens, flash or flash control sensor is obscured by your fingers or the camera strap, you may not be able to obtain the correct brightness (exposure) for your shot.

There may be some unevenness in the brightness at the lower edge of the LCD monitor. This is normal and does not indicate a fault. This does not affect the photographed image.

Check that the lens is clean. If it is dirty, clean the lens as described on p.51.

If you use the flash in very dusty conditions or when it is snowing, white dots may appear in the image due to the flash reflecting off the dust particles or snowflakes. Try taking the shot with the flash switched off.

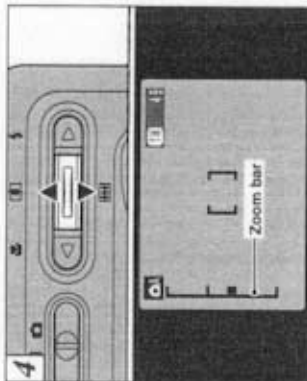


To zoom in on the subject, press "▲" (BITELE). To zoom out, press "▼" (BIDELE). A "zoom bar" appears on the LCD monitor when you zoom in or out.

Optical zoom focal length (35mm camera equivalent)

Approx. 38 mm-114 mm (1.5 in. to 4.5 in.)


Maximum zoom scale: 3x

Zooming stops briefly when the camera switches between optical zoom and digital zoom (p.30). Press the same zoom button again to switch zoom modes.

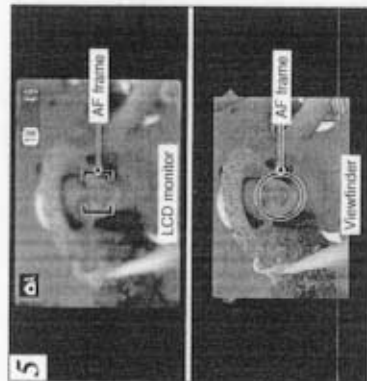

Using the viewfinder or LCD monitor, frame your shot so that the subject fills the entire AF (Auto Focus) frame.

If your subject is not in the center of the picture, use AF/AE lock to take the picture (p.27).

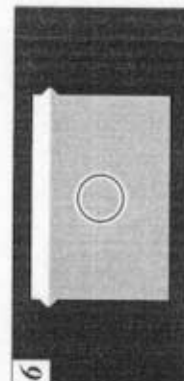

6

When you are using the viewfinder to take a picture at a distance of 0.6 m to 1.5 m (2.0 ft. to 4.9 ft.), only the shaded area in the figure is photographed.


2

To center the photographed area accurately, you should use the LCD monitor to take the shot.

In some conditions it may be difficult to see your subject clearly on the LCD monitor (Such as in sunny weather outdoors or when you are shooting dimly lit scenes). In such situations, use the viewfinder to take the shot.

The image shown on the LCD monitor before you take the shot may differ in its brightness, color, etc. from the image actually recorded. If necessary, play back the recorded image to check it (p.35).

23

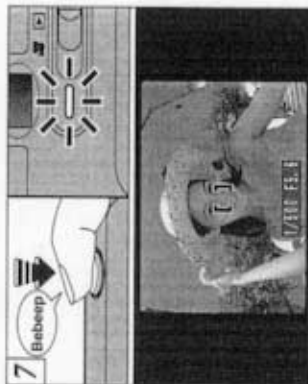

When you press the shutter button down halfway, the camera emits a short double-beep and focuses on your subject (the viewfinder lamp (green) changes from blinking to steady). At that point, the AF frame on the LCD monitor becomes smaller and the camera sets the shutter speed and aperture.

• If the camera does not emit a short double-beep and appears on the LCD monitor, the camera is out of focus.

• When you press the shutter button down halfway, the image on the screen freezes temporarily. However, this image is not the recorded image.

• If the AF is displayed on the screen (e.g. the shot is too dark for the camera to focus, depending about 2 m (6.6 ft.) from your subject to take the picture).



If you press the shutter button down fully without releasing it, the camera makes a clicking noise and takes the picture. The camera then records the photographed image.

- You can adjust the volume of the camera operation noises ("beep" and "click") or switch them off altogether in the SET-UP menu (P.76, 77).
- There is a slight delay between the shutter button being pressed and the shot being taken. If necessary, play back the shot to check the image.
- If you press the shutter button down fully in one motion, the shot is taken without the AF frame changing.
- When you take a picture, the viewfinder lamp lights orange (camera not ready) before switching back to green to indicate that the camera is again ready for shooting.
- The viewfinder lamp flashes orange while the flash is charging. If the LCD monitor is switched on, the screen may go dark for a moment. This is normal and does not indicate a fault.

See P.97-99 for information on the warning displays.

Viewfinder Lamp Display

Display	Status
Lit green	Ready to shoot.
Blinking green	AF/AE operating or camera shake/AF warning (ready to shoot).
Blinking green and orange alternately	Recording data to the SmartMedia (ready to shoot).
Lit orange	Recording data to the SmartMedia (not ready to shoot).
Blinking orange	Charging the flash (flash will not fire).
Blinking red	• SmartMedia-related warning. - The SmartMedia is not loaded, is not formatted, is incorrectly formatted or has a write-protect slider attached. SmartMedia full. SmartMedia fault. • Lens operation error.

* Detailed warning messages are displayed on the LCD monitor (P.97-99).

Subjects Not Suitable for Autofocus

Though the FreePic F401 uses an accurate autofocus mechanism, it may have difficulty focusing or not be able to focus at all for the types of subject and situation listed below. In such cases, the image may be out of focus.

- Very shiny subjects such as a mirror or car body.
- Subjects photographed through glass.
- Subjects that do not reflect well, such as hair or fur.
- Subjects with no substance, such as smoke or flames.
- When the subject is dark.
- When there is very little contrast between the subject and the background (such as white walls or subjects dressed in the same color as the background).

For subjects of this type, use AF/AE lock (P.27).

Number of Available Frames

The number of available shots is displayed on the LCD monitor.

- See P.44 for information on changing the resolution.
- The default resolution "4" set at shipment is 4.

Standard number of shots per SmartMedia

Because the amount of data recorded varies depending on the subject, the number of available shots may not decrease when recording ends, or may decrease by 2 frames. The discrepancy between the standard number of available shots and the actual number of available shots increases in proportion to the capacity of the SmartMedia.

File Size	4M • F	4M • N	2M	1M	0.3M
No. of recorded pixels	2304 × 1728		1600 × 1200	1280 × 960	640 × 480
Image Data Size	Approx. 1.0MB	Approx. 750KB	Approx. 370KB	Approx. 320KB	Approx. 130KB
MG-4S (4MB)	2	5	10	12	30
MG-6S (6MB)	4	10	21	25	61
MG-16S5W (16MB)	9	20	42	49	122
MG-32S5W (32MB)	20	41	86	99	247
MG-64S5W (64MB)	40	84	172	198	497
MG-128S5W (128MB)	81	169	346	398	997

* Number of available shots displayed on the camera for a new SmartMedia formatted in the camera.



In a shot with this type of composition, the subjects (two people in this case) are not in the AF frame. If the shot is taken at this point, the subjects will not be in focus.




Move the camera slightly so that one of the subjects in the AF frame.

Continued on page 27

AF (Autofocus)/AE (Auto exposure) Lock


On the FinePix F401, when you press the shutter button down half way, the focus and exposure settings are fixed (AF/AE lock). If you want to focus on a subject that is off to one side of the image or if you want to set the exposure before you compose the final shot, lock the AF and AE settings and then compose and shoot your picture to get the best results.

3

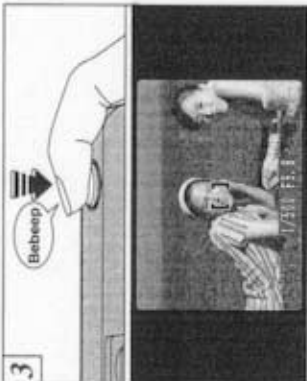


Without moving the camera, press the shutter button down halfway (AF/AE lock). Check that the AF frame on the LCD monitor has shrunk and the green viewfinder lamp has stopped flashing and is now lit.

4

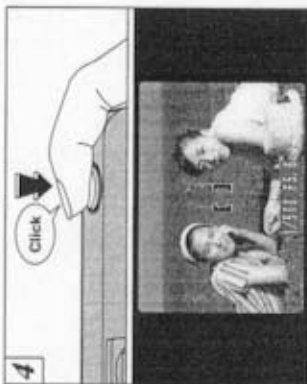

Continue to hold the shutter button down halfway. Move the camera back to the original image and then fully press down on the shutter button.

- ✓ You can reapply the AF/AE lock as many times as you like before releasing the shutter.
- ✓ The AF/AE lock operates in all photography modes and can be used to ensure excellent results.

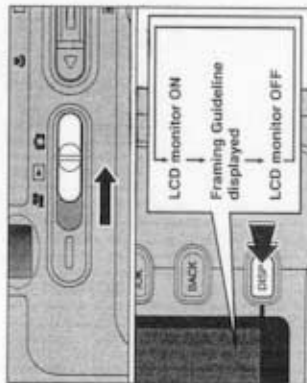


You can select the Framing Guideline function in the "O" still photography mode. The LCD monitor display changes each time you press the "DISP" button. Press the "DISP" button until "Framing Guideline" appears.

- ✓ The framing guideline is not recorded on the image.
- ✓ The lines in the scene frame roughly divide the recorded pixels into three equal parts horizontally and vertically. When the image is printed, the resulting print may be shifted slightly from the scene frame.


Scene

Use this frame when you want to position your main subject in the center of the frame or when you want to align your shot with the horizon. This feature provides a clear guide to the subject size and the overall balance of the shot so that you get exactly the shot you want.

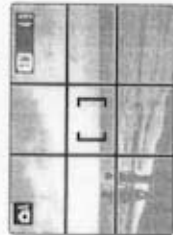

Important

Always use the AF/AE lock to compose your picture. Failing to use the AF/AE lock may result in the image being out of focus.

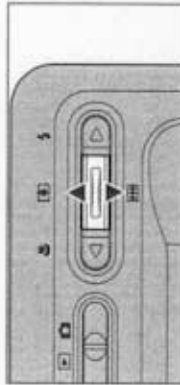

You can operate the optical zoom using the zoom buttons. You can also use the digital zoom when the resolution setting is "18", "10", "10" or "MOVIE" (18 or 10). However, this only applies when you are using the LCD monitor to take pictures.

• Digital zoom focal distance

- 35 mm camera equivalent
- 1: Equivalent to approx. 114 mm-164 mm (1.4x)
- 2: Equivalent to approx. 114 mm-205 mm (1.8x)
- 3: Equivalent to approx. 114 mm-410 mm (3.6x)
- 4: Equivalent to approx. 114 mm-410 mm (3.6x)
- 5: Equivalent to approx. 114 mm-820 mm (7.2x)

* You cannot use the digital zoom for resolutions of 18. The digital zoom cannot be used in high-sensitivity photography (1800).

* See P.44, 55 for information on changing the file size setting.

Selecting Macro mode allows you to take close-up shots.


• Effective Photography Range:

Approx. 10 cm to 80 cm (3.9 in to 31.5 in).

Macro photography is automatically cancelled in the following situations:

- When you have switched photography modes.
- When the camera is switched off.
- When you set the mode, the "M" icon is briefly displayed larger.
- To fire the flash, press "A" and select "S". Forced Flash or "S" Slow Synchro (P.33, 34). However, in some cases the correct brightness (exposure) may not be obtained.
- If you are shooting in a dark location (when the "L" camera shake warning icon is displayed), use a tripod to prevent camera shake.

If you use the viewfinder to take a picture in Macro mode, the field visible through the viewfinder does not match the field actually photographed because the viewfinder and lens are in different positions. Accordingly, you should use the LCD monitor to take pictures in Macro mode.

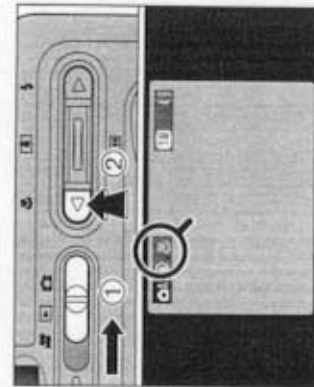

1 Set the mode switch to "M".


2 Press the "M" Macro button (M). The "M" icon appears on the LCD monitor indicating that you can take close-up shots.

To cancel Macro mode, press the "M" Macro button (M) again.

The LCD monitor automatically switches on.

You cannot switch the LCD monitor off.

When you cancel Macro mode, the LCD monitor remains on.

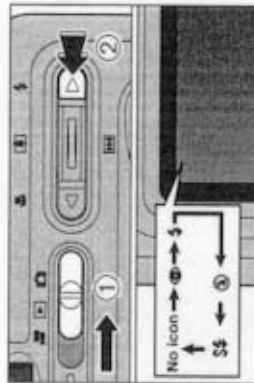

You can choose from 5 flash modes according to the type of shot.

- 1 Set the mode switch to "S".
- 2 The flash setting changes each time you press the "S" Flash button (▶). The last flash mode displayed is selected.

• Effective flash range (for **AI AUTO**)

Wide-angle: Approx. 0.4 m to 3.5 m (1.3 ft. to 11.5 ft.)
Telephoto: Approx. 0.4 m to 2 m (1.3 ft. to 6.6 ft.)

- The selected flash icon is briefly displayed larger.
- If you use the flash in very dusty conditions or when it is snowing, white dots may appear in the image due to the flash reflecting off the dust particles or snowflakes.



Auto Flash Mode (no icon)

Use this mode for ordinary photography. The flash fires automatically as required by the shooting conditions.

- The flash charging time may increase if the charge remaining in the batteries is low.
- When you take a shot using the flash, you may see the video image disappear and the screen go dark as the flash charges. The viewfinder lamp flashes orange while the flash is charging.



Red-Eye Reduction

Use this mode to ensure that the subject's eyes appear natural when photographing people in low-light conditions.
The flash fires a pre-flash just before the picture is taken and then fires again to take the actual picture.

• Red-Eye Effect •

When you use the flash to photograph people in low-light conditions, their eyes sometimes appear red in the picture. This is caused by the light of the flash reflecting off the inside of the eye. Use Red-Eye Reduction flash to effectively minimize the likelihood of the red-eye effect.
Take the following measures to make Red-Eye Reduction more effective:

- Get the subjects to look at the camera.
- Get as close as possible to the subjects.



Forced Flash

Use this mode to photograph backlit scenes, such as a subject against a window or in the shade of a tree, or to obtain the correct colors when you are shooting under lighting such as fluorescent tubes. In this mode, the flash fires in bright as well as dark conditions.



③ Suppressed Flash

Use this mode for photography using indoor lighting, for shots taken through glass, and for photography in venues such as theaters or at indoor sporting events where the distance is too great for the flash to be effective. When you use Suppressed Flash, the Automatic White Balance function (P.104) operates so that natural colors are captured along with the ambience of the available light.


- ⚠ If you are shooting in Suppressed Flash mode in dark conditions, use a tripod to prevent camera shake.
- ⚠ See P.25, 97 for information on the camera shake warning.



S/S Slow Synchro

This is a flash mode that uses a slow shutter speed (slowest shutter speed: 1/4 sec.). This allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop.

- ⚠ The image may be overexposed when you shoot bright scenes.
- ⚠ Because a slow shutter speed is used, a tripod should be used to prevent camera shake.

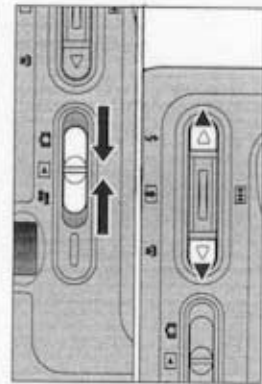


Set the Mode switch to "[P]". You can "◀" and "▶" button to move forward and backward respectively through your images.

- ⚠ When you set the Mode switch to "[P]", the last image shot is displayed.
- ⚠ If the lens is extended during playback, the camera retracts the lens as a protective measure if the camera is not used for approximately 8 seconds.

◆ Images That Can be Viewed on the FinePix F401 ◆


You can use this camera to view (excluding some uncompressed data) images recorded on an FinePix F401 or images recorded onto a 3.3V SmartMedia using a FLUFIUM FinePix series, MX series and DX series digital camera.

Fast Forwarding Images

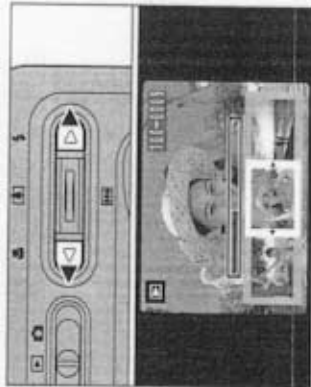

You can fast forward through the frames by holding down "▶" or "▶" button for about 1 second during playback.

- ⚠ A progress bar is displayed to show the approximate playback position on the SmartMedia.

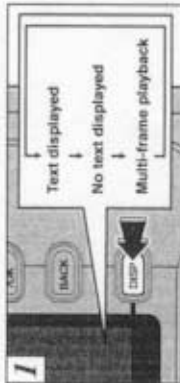

In playback mode, the display shown on the LCD monitor switches each time you press the "DISP" button. Press the "DISP" button until the multi-frame playback screen (9 frames) appears.

The LCD monitor text display disappears after approximately 3 seconds.

Playback zoom cannot be used with multi-frame playback.



Pressing the "▲" or "▼" button during single-frame playback zooms in (enlarges) or out on a still image. When you use this function, a zoom bar is displayed. On-screen help is also displayed at the bottom of the screen.

• Zoom scales:

2304 x 1728 pixel images: Max. 14.4x

1600 x 1200 pixel images: Max. 10x

1280 x 960 pixel images: Max. 8x

640 x 480 pixel images: Max. 4x

Pressing the "◀" or "▶" button during zooming cancels zooming and moves to the next image.


After you have zoomed in on your image,
 ① Press the "DISP" button.
 ② Use "▲" and "▼" to zoom in on different parts of the image.

③ Press the "DISP" button again to revert to zoomed display.

Press the "BACK" button to return to normal unscaled display.

▶ MODE PLAYBACK ZOOM


Saving Trimmed Images

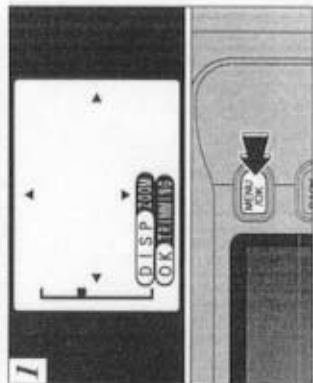

After using playback zoom, press the "MENU/OK" button to trim the image.


The size of the saved image varies, depending on the zoom scale. In 0.3M mode, "DOT TRIMMING" is displayed in yellow. At recorded pixels below 0.3M, "DOT TRIMMING" is no longer displayed.

▶ MODE ERASING SINGLE FRAME

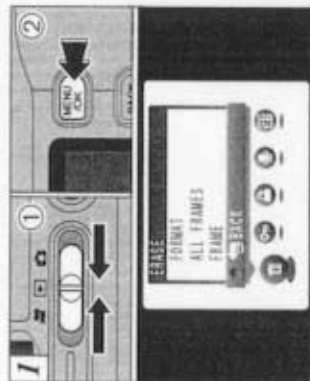

① Set the Mode switch to "▶".
② Press the "MENU/OK" button to display the Menu screen on the LCD monitor.

③ To revert to image playback without erasing the image, select "BACK" and press the "MENU/OK" button.

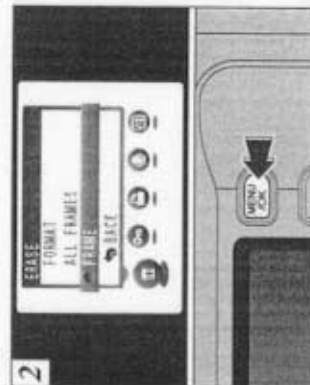

Select "FRAME" in the "ERASE" menu and press the "MENU/OK" button. See P.58 for more information on "ALL FRAMES" and "FORMAT".