 


Configuring the P Button

In the **P Button Setting** section, you can assign a function to the P button.

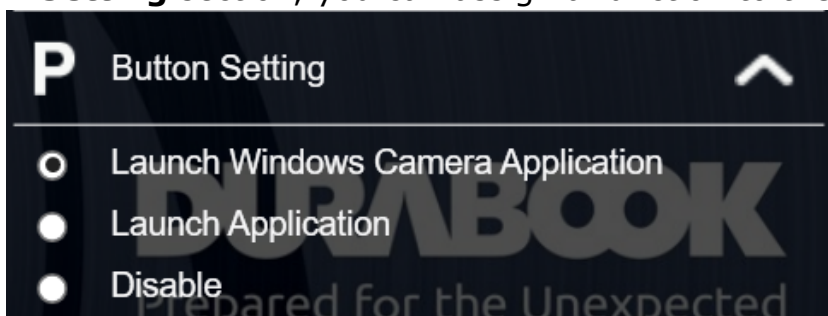 


There are three available options:


- **Launch Windows Camera Application:** Shortcut for launching the Camera application.
- **Launch Application:** Shortcut for launching a specific application. To assign an application, refer to the *"Assigning an Application to the Programmable Buttons."*
- **Disable:** Disable the P button.

Accessing the Mobility Center

To access the Mobility Center, open the Quick Menu and tap on the **Mobility Center** tab.

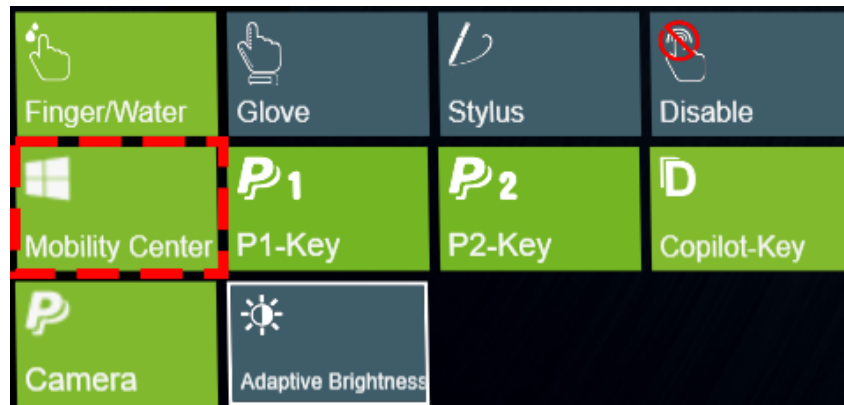


 Using the Mobility Center, you can adjust or configure the brightness, volume level, battery status, screen orientation, external display, sync, and presentation settings.

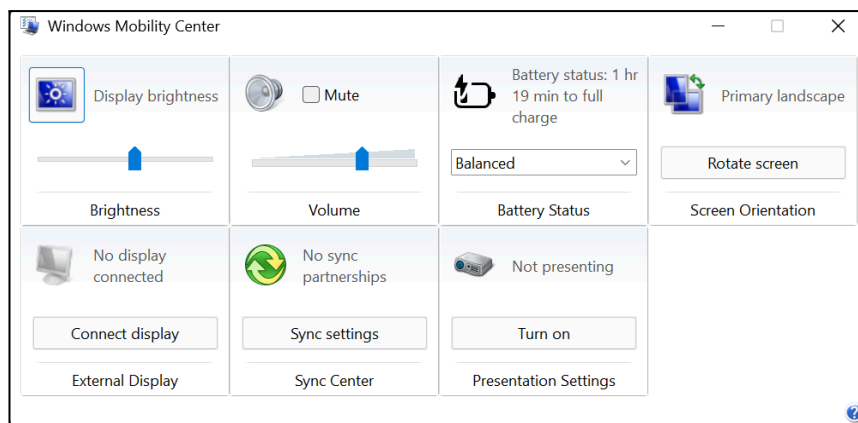

Enabling Adaptive Brightness

 To toggle Adaptive Brightness, open the Quick Menu and tap on the **Adaptive Brightness** tab.

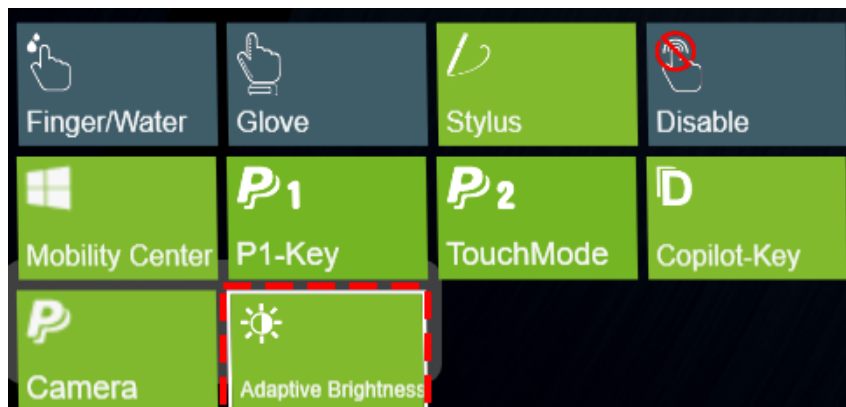

The Adaptive Brightness function adjusts the brightness of your tablet PC's screen according to the light in the surrounding environment. This setting can also be toggled on and off in **Settings** > **System** > **Display** > **Brightness** > **Change brightness automatically when lighting changes**.

Configuring the Touchscreen Settings

Your tablet PC is equipped with a touchscreen. Using the touchscreen, you can navigate the screen by using touch gestures (any input from your finger, a glove, or a stylus).

CAUTION!

 
To prevent scratches, do not use any sharp object, such as a pen or pencil, on the touchscreen.



NOTE

- An optional protective film has been attached to the screen before shipment. You should change the film when it gets worn out.

To configure the touchscreen settings, open the Quick Menu.

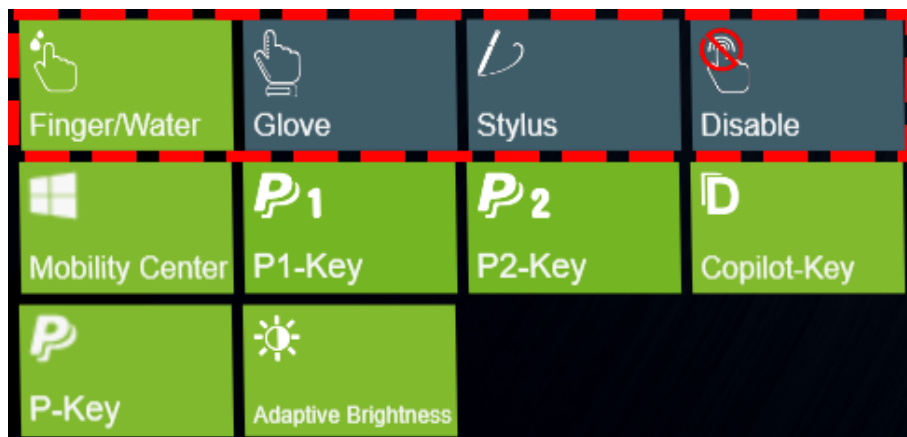

Select one of the available options:

- Select **Finger/Water** if you are using your fingertips.
- Select **Glove** if you are wearing gloves.
- Select **Stylus** if you are using a stylus.
- Select **Disable** if you don't want to use the touch function. When the confirmation message appears, select **Yes** to disable the touch function.



NOTE

- If the touchscreen mode is set to **Glove** or **Stylus** and the touchscreen is wet (i.e. from a spilled liquid), the touch function will not respond to any input. Make sure to keep the screen dry to ensure proper operation.
- If you assign the **P2** button as **Touch Screen Mode** (refer to page), you can easily switch the touchscreen mode by simply pressing the **P2** button.
- If you select "**Disable**", the touch screen function could only be resumed by using mouse, or **P2** button (if it is set to "**Touch Screen Mode**" selection).

Enabling Cellular/GPS Function (for LTE SKU only)

To enable the cellular/GPS function, open the Quick Menu and tap on the **LTE Antenna** or **GPS Antenna** tab.



- Tap the **LTE Antenna** tab to enable/disable the mobile network function.
- Tap the **GPS Antenna** tab to enable/disable GPS functionality and identify the location using the mobile network.



NOTE

 
- If the tab is green, the corresponding function is active.

Using the Camera

Using the Camera application, you can use this tablet PC to take photos or videos.


Opening Camera App

To access the Camera application, search for “camera” and tap **Open**.

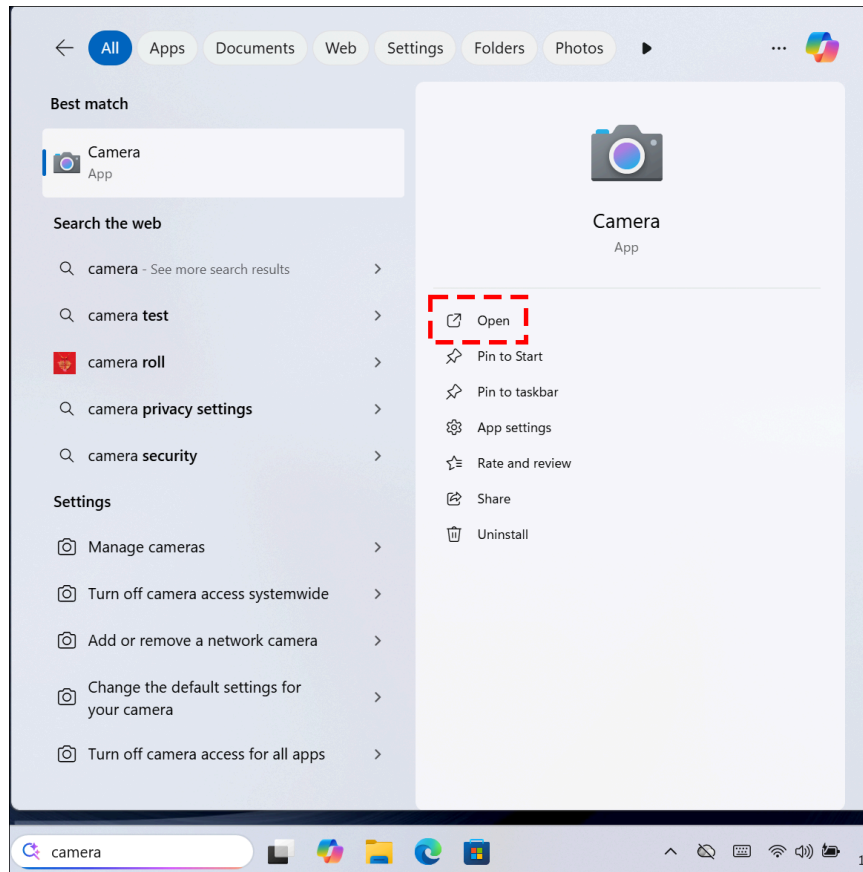

Taking Photos

 Tap  to capture a photo.

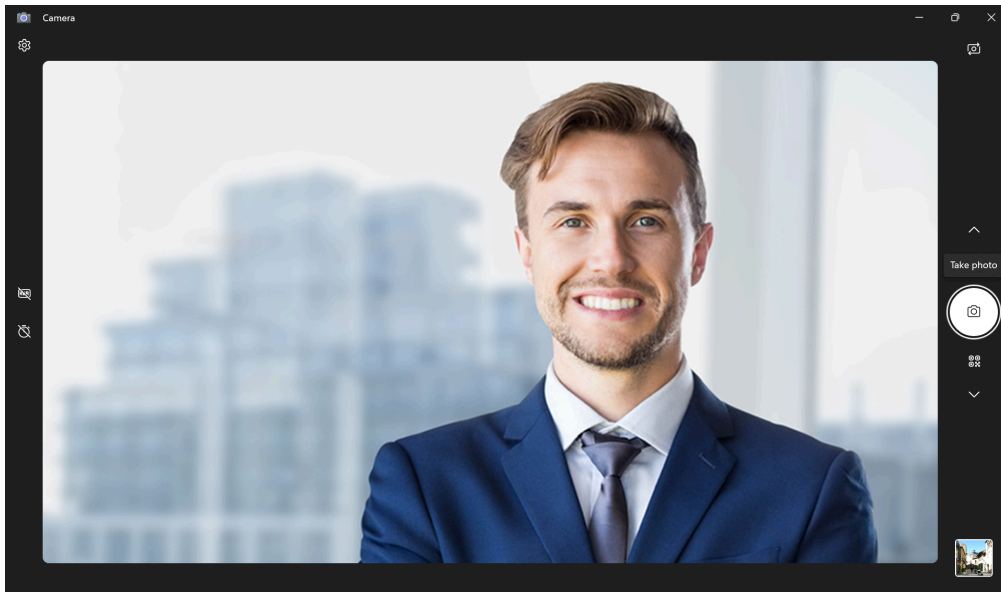


NOTE

- To switch between the front and rear cameras, tap  .

Recording Videos

 1. Tap  to switch to Video mode.

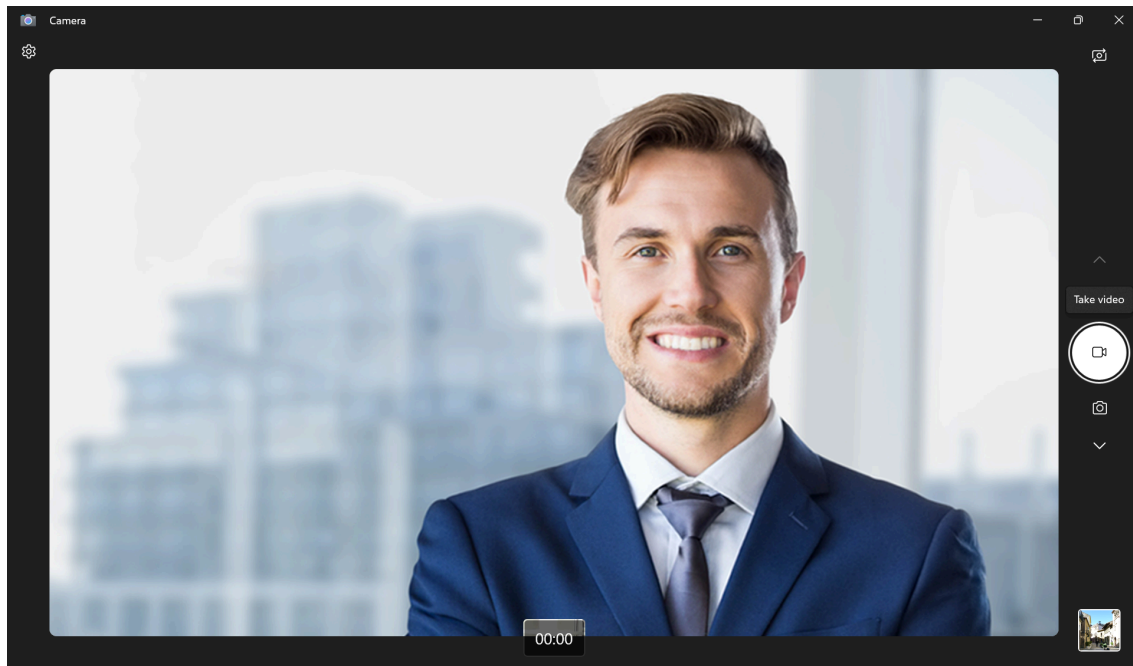

NOTE

- You can also toggle / to switch between modes.
2. Tap  to start recording a video.
The recording time appears on the bottom of the screen.