 


3. During the video recording, you can do the following:

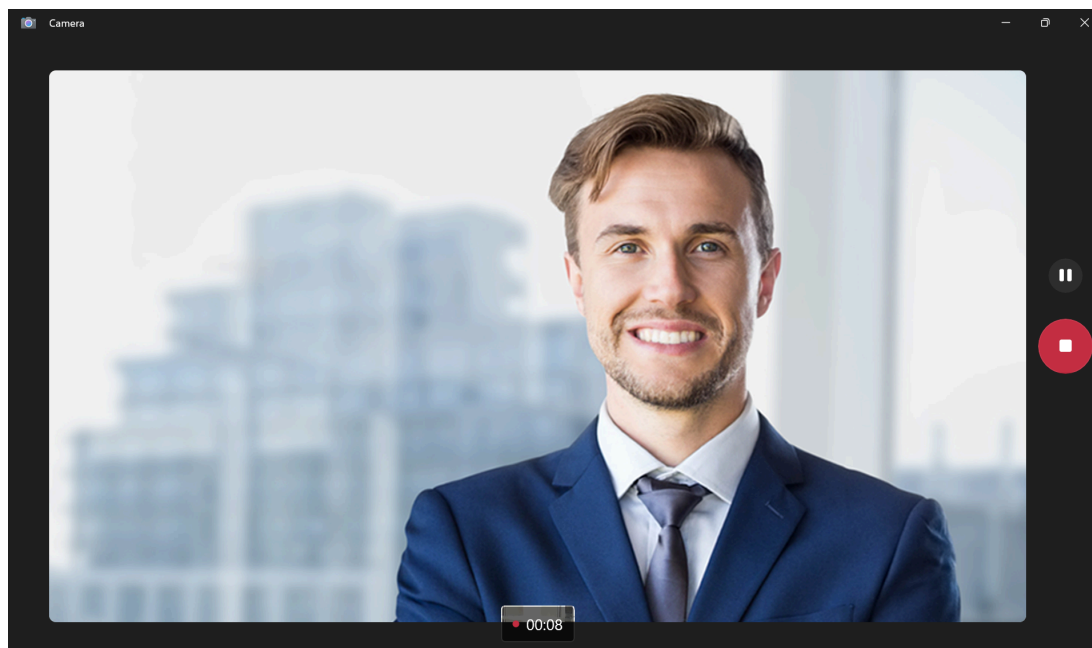

- Tap  to pause the recording. To resume, tap .
- Tap  to stop recording the video.

Switching Between Modes

Tap on your preferred shooting mode. If the mode is not visible, tap / to see more shooting modes:

- : Record a video.
- : Take a photo.
- : Scan a barcode (if supported).

Enable HDR Function

Tap  to enable HDR function.

- To disable this function, simply tap .



 
Setting Photo Timer

Tap  to toggle the desired time delay.

-  : Self-timer is off
-  : 2-second self-timer
-  : 5-second self-timer
-  : 10-second self-timer

Configuring Camera Settings

1. Tap  to enter the Settings menu.

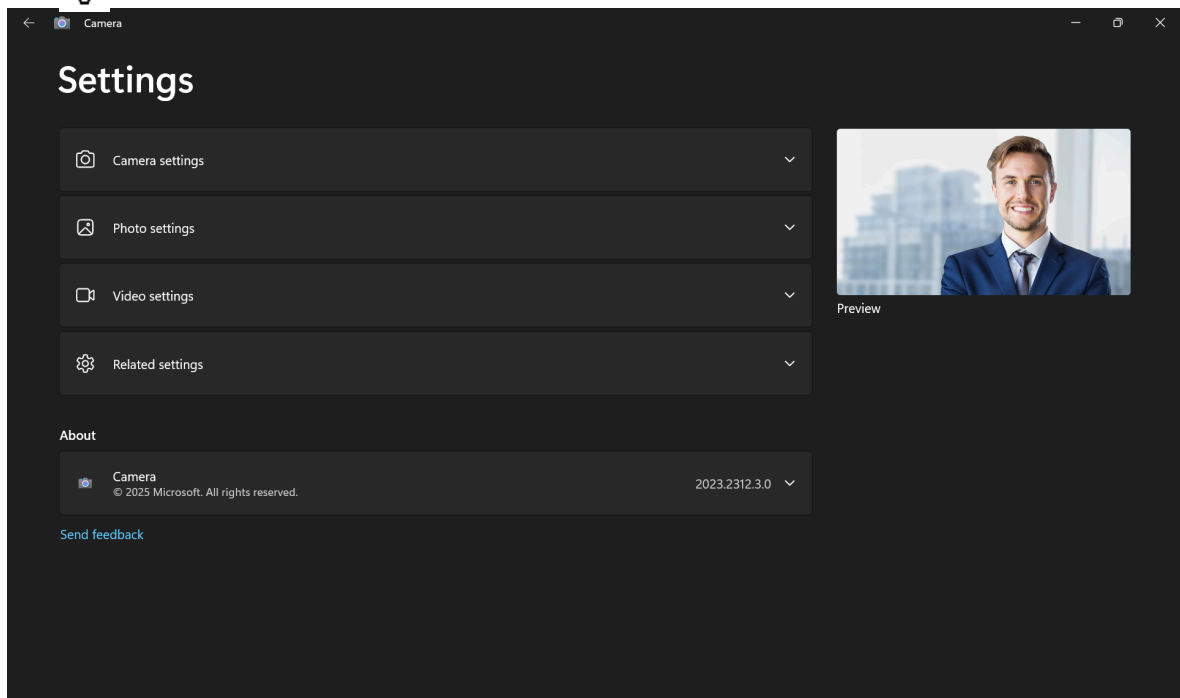


2. Select the desired menu option and setting.

Camera settings	
Show advanced controls for photos and videos	Enable or disable to show advanced controls for photos and videos.
Framing grid	Hide the framing grid lines or select the framing grid type.
Default settings	Select between custom in-app settings and system settings. These settings apply to the Camera app at the start of each session.
Open camera system settings/Open audio system settings	Open Windows Settings for configuring camera or adjusting audio respectively.
Photo settings	

Photo quality	Select the photo resolution and aspect ratio.
Time lapse	Enable or disable taking photos continuously until the camera button is pressed again.
Videos settings	
Video quality	Set the video resolution, aspect ratio, and frame rate.
Flicker reduction	Select the suitable frequency rate (50Hz or 60Hz) to reduce the flicker effect when recording video under fluorescent light.
Related settings	
Choose whether camera can use location info, or change privacy settings. Choose whether to try out experimental features.	
About	
Camera	Check the camera version and read the related regulatory information.
Send feedback	Send feedback about the Camera app.
Help	Access a user guide on how to use the Camera app.

Viewing Photos/Videos

 After taking a photo or recording a video, tap the thumbnail in the bottom-right corner to view the most recent photo or video taken.

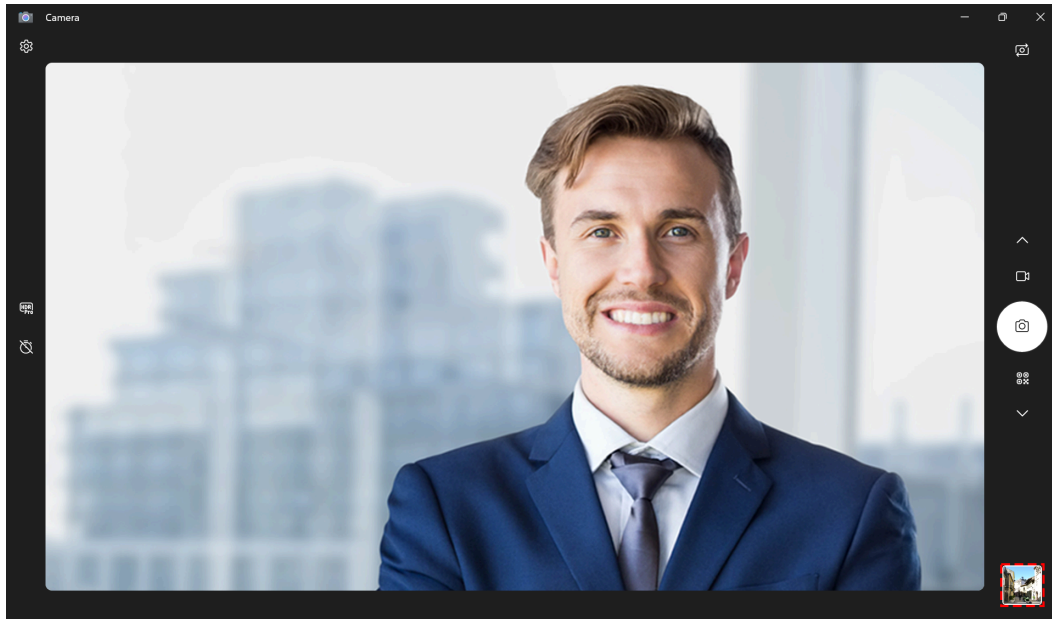

Swipe right to see other photos or videos in your collection.

Making Connections

This chapter will guide you on installing peripheral devices to maximize the use of your tablet PC.

Installing the Memory Card

Your tablet PC supports different types of memory cards to provide faster data transfer.

Supported types: MicroSDHC, MicroSDXC

1. Remove the battery pack. Refer to the "Removing the Battery" section.
2. Pull open the I/O port cover on the left side of the tablet PC.



3. Push a valid memory card into the memory card slot until it clicks into place.



Installing the SIM Card

You can use a SIM card for wireless internet access.



NOTE

- Check the availability of service and data plan rates with your network service provider.

1. Remove the battery pack. Refer to the "Removing the Battery" section.
2. Pull open the I/O port cover on the left side of the tablet PC.



 
3. Push a valid SIM card into the SIM card slot until it clicks into place.



Connecting the Headset/Microphone

Your tablet PC is equipped with an audio combo jack that enables you to use the headset or microphone.

- ❖ To connect a headset, pull open the I/O port cover on the left side of the tablet PC. Plug the stereo headphone cable into the audio combo jack.

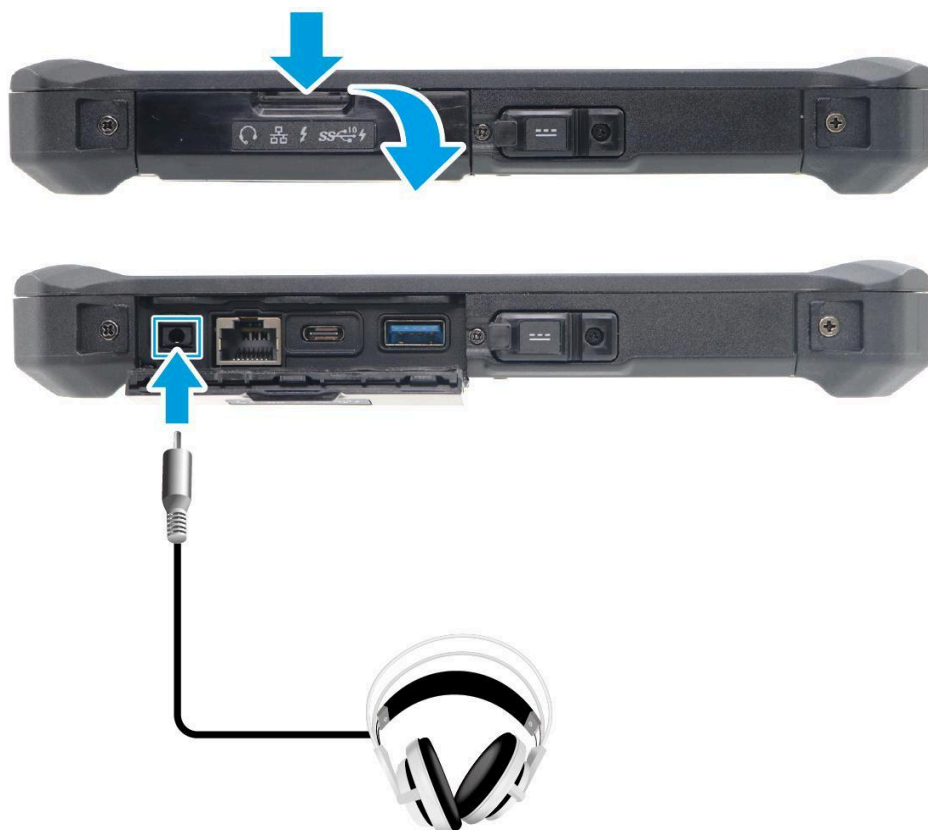

- ❖ To connect to a microphone, pull open the I/O port and plug the microphone cable into the audio combo jack.



NOTE

 
- The headset and microphone are not included in the package.

Attaching the Stylus Holder


Your tablet PC is equipped with a stylus. For an easy access to the stylus, install the stylus holder to the side of the device.

To attach the stylus holder:

1. Remove the 2 screws from the right side of the tablet PC.

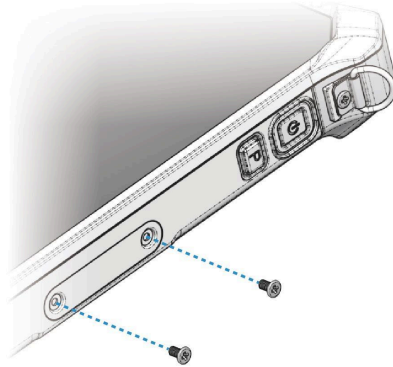

 2. Align and secure the stylus holder to the tablet PC with the supplied screws.

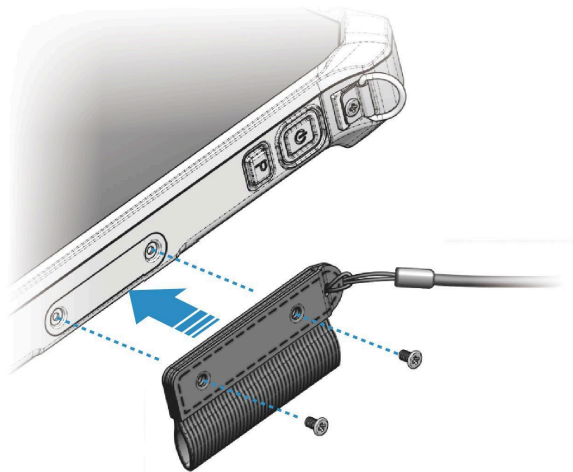

3. Insert the stylus to the stylus holder.



 
Connecting USB Devices

You can connect your tablet PC to other USB devices, such as a mouse, keyboard, digital camera, printer, or an external hard disk drive.

1. Pull open the I/O port cover on the left side of the tablet PC.



2. Connect one end of the USB cable to the USB port of your device.

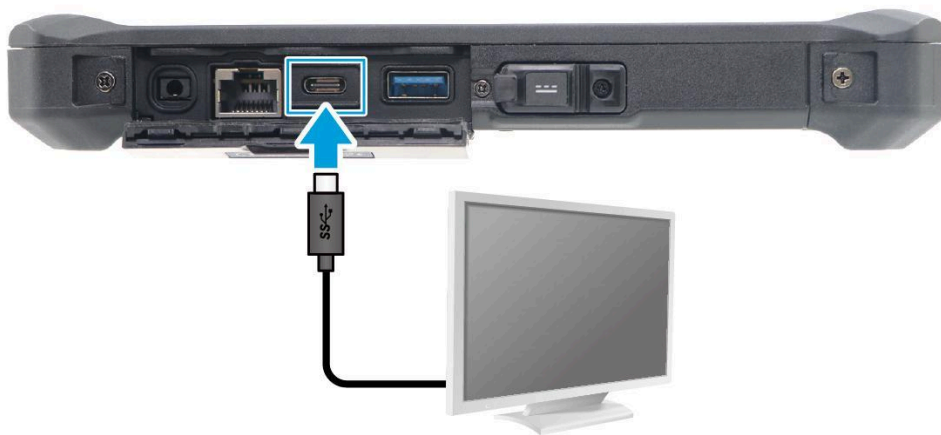

3. Connect the other end of the cable to the USB device (if necessary).



NOTE

- The USB cable is not included in the package. It is sold separately or it may come with your USB device.

 
Connecting to External Displays

You can connect an additional display to your tablet PC by using the USB Type-C cable.

1. Pull open the I/O port cover on the left side of the tablet PC.



2. Connect one end of the USB Type-C cable to the USB Type-C port of your device.

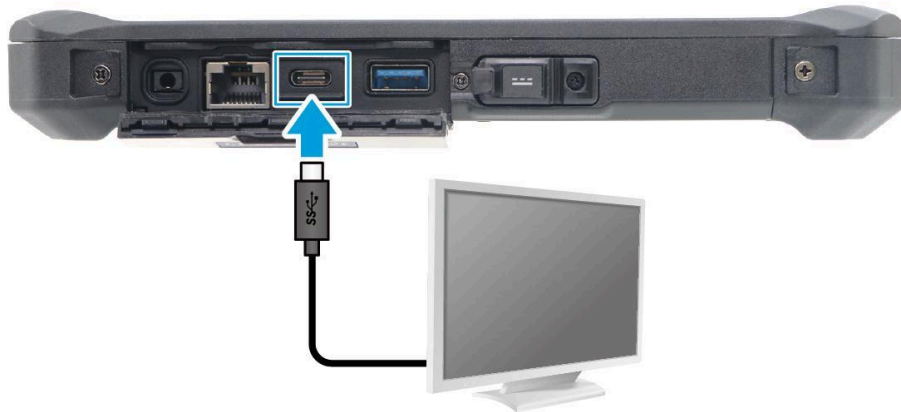

3. Connect the other end of the cable to the external display.



NOTE

 
- The USB Type-C cable is not included in the package.

Connecting to Wireless Devices


Your tablet PC can connect to and communicate with other Bluetooth-enabled devices.

Opening the Quick Settings Menu

To open the Quick Settings menu, tap the status icons (wireless/cellular connection, volume level/mute, and battery) set in the lower-right corner of the screen.

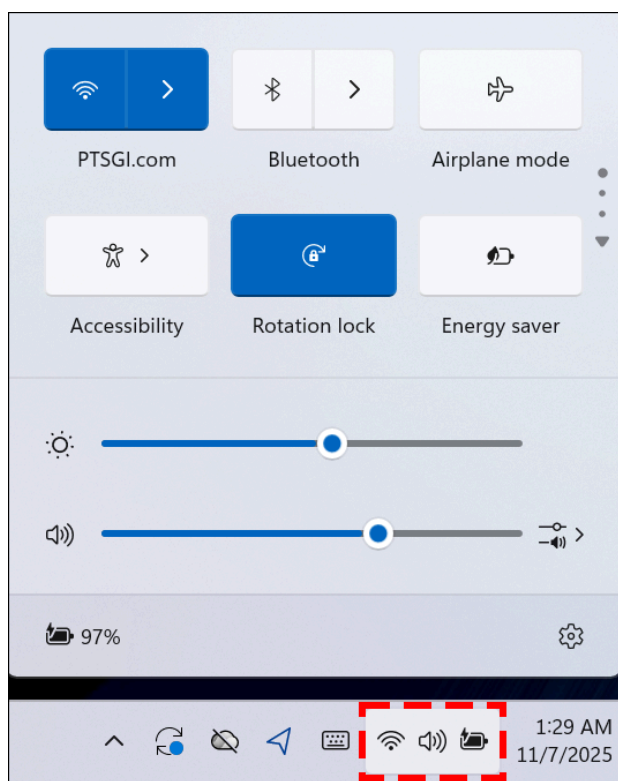

(Wi-Fi SKU)

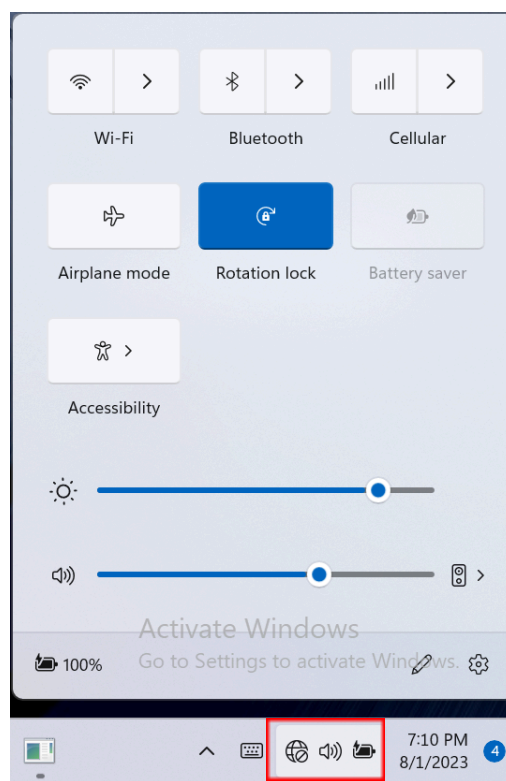 

(LTE SKU)