



INNOVATIONS IN WIRELESS COMMUNICATIONS
965 SHULAM AVE • SANTA CLARA • CA • 95050
VOCIE (408) 727-4889 FAX (408) 727-3025
WWW.SWINTEK.COM • ssales@swintek.com

OPERATING INSTRUCTION FOR MARK7559 ® FLAT PACK XT

- 1) *The 7559 body wire transmitter is designed to be powered from three AAA volt Alkaline Batteries. The transmitter will not work properly when using zinc Carbon batteries.*
- 2) *Hold the transmitter in your hand with the batteries facing up.*
- 3) *Insert three fresh AAA Alkaline batteries. Observe the battery snaps for proper insertion.*
- 4) *Screw into the microphone input a **SWINTEK TLM-S** microphone which has a **LOCKING** collar on the plug end. Normally only one or two revolutions is required. Do not use pliers to tighten the connector or you will rane the connector.*
- 5) *The following controls and Indicators are present:*
 - a) *Power Switch: When set to the ON position, the transmitter will turn on and the green power LED will glow.*
 - b) *Power LED*
 - c) *Removing the optional cord microphone will activate the internal microphone. This allows the 7559 to be completely self contained. The external microphone is not required as an external antenna.*
- 6) *Always test the range of the unit before using. The transmitter should be taped vertically down the leg. The microphone wire should be taped to the chest area. Always use a pouch for the transmitter, as it gets warm. Never re-use your batteries. Always use NEW batteries! Typical runtime at .5 Watt is 1.5 to 2 hours for Alkaline and 3-4 hours for lithium.*

FCC ID: FLC200020

PAGE 6 OF 6
