

2400MHz DSSS DIGITAL CORDLESS TELEPHONE

MODEL : CR-201

USA VERSION

User's Manual

2400MHz DSSS DIGITAL CORDLESS TELEPHONE

MODEL : CR-201

USA VERSION

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basis safety precautions should always be followed to reduce the risk of life electric shock, and injury to persons, including the following.

1. *Read and understand all instructions.*
2. *Follow all warnings and instructions marked on the product.*
3. *Unplug this product from the outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.*
4. *Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or Laundry tub in a wet Basement or near a swimming pool.*
5. *Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.*
6. *Slots and openings in the cabinet and the back or bottom are provide for ventilation, to protect it from overheating. These openings should never be blocked or covered. The opening should never should never be placed near or over a radiator or heat register. This product should not be placed in a built in installation unless proper ventilation is provided.*
7. *This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.*
8. *Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.*
9. *Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.*
10. *Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a of fire or electric shock. Never spill liquid of any kind on the product.*
11. *To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service contractor when some service or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.*
12. *Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:*
 - A. *When the power supply cord or plug is damaged or frayed.*
 - B. *If liquid has been spilled into the product.*
 - C. *If the product has been exposed to rain or water.*

2400MHz DSSS DIGITAL CORDLESS TELEPHONE

MODEL : CR-201

USA VERSION

- D. *If the product does not operate normally by following the operating instruction. Adjust only those control that are covered by the operating instructions. Improper adjustments of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.*
- E. *If the product has been dropped or the cabinet has been damaged.*
- F. *If the product exhibits a distinctive change in performance.*
- 13. *Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.*
- 14. *Do not use the telephone to report a gas leak in the vicinity of the leak.*

FCC (Federal Communications commission) Notice

The FCC requires that you be advised of certain requirements involving the use of this telephone

- 1. This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.*
- 2. The REN is useful to determine the quantity of devices you may connect to your telephone Line and still have all of those devices ring when your number is called. In most, but not all areas, the sum of the(5.0)To be certain of the number of devices you may connect to your line, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.*
- 3. If your telephone causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.*
- 4. Your telephone company may make change to its facilities, equipment, operations or procedures that could affect the proper operation of your equipment. If they do, you an opportunity to maintain uninterrupted service.*
- 5. If you experience trouble with the telephone, please contact CHERISH TELECOM for repair warranty information. The telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or you are sure that the equipment is not malfunctioning.*
- 6. This equipment may not be used on coin service provided by the telephone company. Connection to part lines is subject to state tariffs.(Contact your state pubic utility commission or corporation commission for information.)*

✓ IMPORTANT

Read this manual before attempting to setup or use this instrument. It contains important information regarding safe installation and use. Keep this manual for future reference. Also save the carton, packing and proof of purchase to simplify and accelerate any needed action.

✓ WARNING

To prevent fire or shock hazard, do not expose this product to rain or any type of moisture. If accidentally dropped into water, this product should immediately be unplugged from the AC outlet and telephone wall jack.

THIS SYMBOL IS INTENDED TO ALERT THE USER OF THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE OWNER'S MANUAL.

☞ INSTALLATION PRECAUTION

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specially designed for wet locations.
3. Never touch insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

☞ MAINTENANCE

1. Use a damp cloth to clean the plastic cabinet. A mild soap will help to remove grease or oil. Never use polish, solvents, abrasives or strong detergents since these can damage the finish.
2. Your phone should be situated away from heat sources such as radiators, heater, stoves or any other appliance that produces heat.

2400MHz DSSS DIGITAL CORDLESS TELEPHONE

MODEL : CR-201

USA VERSION

CAUTION

To reduce the risk of fire or injure to persons, read and follow these instructions:

1. Use only the following type and the size battery 500mAh, 3.6V.
2. Do not dispose of the battery in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may be toxic if swallowed.
4. Exercise care in handling in order not to short the battery with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause burns
5. Recharge only the battery type that is provided with or identified for use with this product. If a different type of battery is used, it may leak or explode.
6. Do not attempt to rejuvenate the battery provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur, causing burns or irritation to eyes or skin.
7. When inserting the battery into this product, the proper polarity or direction must be observed. Reverse insertion of battery may result in leakage or explosion.
8. Remove the battery from this product if the product will not be used for a long period of time (several months or more) since during this time they could leak in the product.
9. Discard the "dead" battery as soon as possible since "dead" battery are more likely to leak in a product.
10. Do not store this product, or the battery provided with or identified for use this product, in high-temperature areas. Battery that are stored in a freezer or refrigerator for the purpose of extending shelf life should be stabilized at room temperature prior to use after cold storage.
11. Always disconnect all telephone line cords from the wall modular jacks before installing or replacing the battery.

2400MHz DSSS DIGITAL CORDLESS TELEPHONE

MODEL : CR-201

USA VERSION

CARTON CONTENTS

1. CR-201 Basestation and Handset.
2. Rechargeable Ni-MH Battery (3.6V, 500mAh)
3. AC Adaptor (AC 120V / DC9V, 300mA)
4. Telephone Line Cord
5. User's Manual
6. Warranty Card
7. Headphone