

DELETING RECORDS

Use the DELETE button to erase the record currently shown in the display or all records.

DELETING THE CURRENT RECORD

 
1. Press DELETE. The display shows *DELETE?*
2. Press DELETE again to erase the record.

DELETING ALL RECORDS

1. Press and hold DELETE. The display shows *DELETE ALL?*
2. Press DELETE again to erase all records.

DIALING A CALLER ID NUMBER

1. Make sure the phone is **OFF**.
2. Use the arrow buttons to display the desired Caller ID record.
3. Press the DIAL button to dial the number.

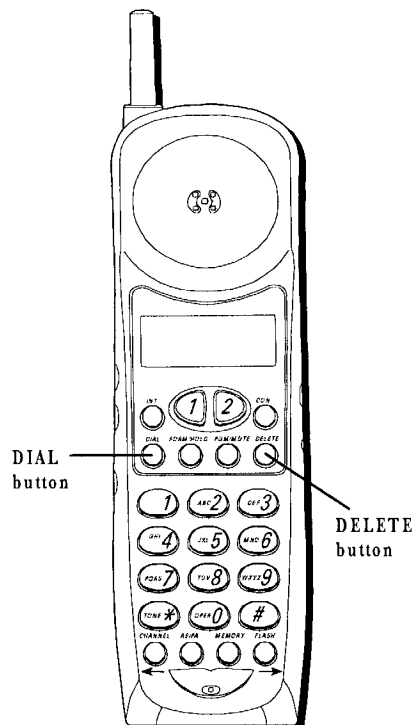

CHANGING THE NUMBER

 
 
FORMAT

The FORM/HOLD button lets you change the format of the displayed number. The available formats are as follows.

- 7-digit** 7-digit telephone number.
- 10-digit** 3-digit area code + 7-digit telephone number.
- 11-digit** long distance code "1" + 3-digit area code + 7-digit telephone number.

1. Use the arrow buttons (CHANNEL and FLASH) to scroll to the number you want to call back.
2. If the number will not dial as shown, press the FORM/HOLD button. Repeat if necessary, until the correct number of digits are shown.
3. Press DIAL.

NOTE: If you find it necessary to dial all local calls with the area codes included, press PROGRAM on the base until ENTER AREA CODE shows on the display. Then enter "000".

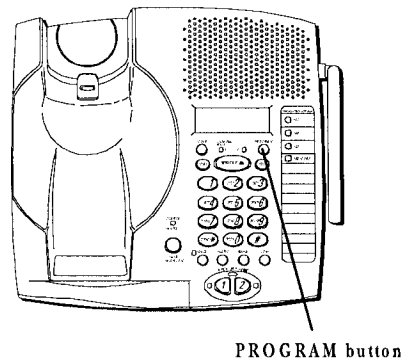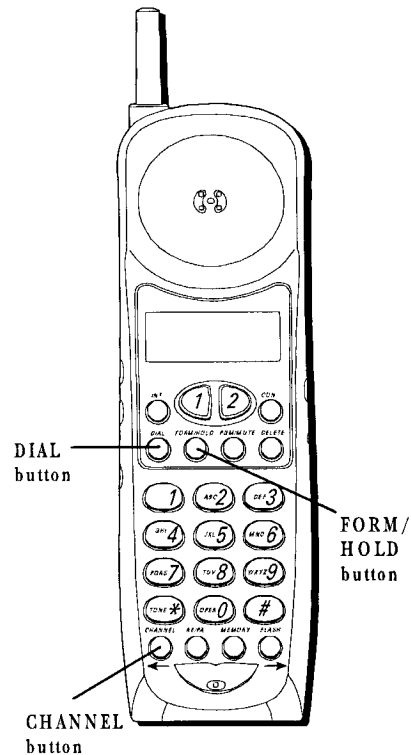


SPECIAL FEATURES

CALLER ID WITH CALL WAITING

Provided your telephone company is able to intergrate Caller ID with Call Waiting services, from your phone company, you will see who is calling you when you hear the call waiting beep. The caller identification information appears in the display after you hear the tone.

- Press the FLASH button to put the person to whom you're talking on hold and answer the incoming call.

 NOTE: You may notice a slight delay after FLASH is pressed. This is normal operation and is necessary for the Call Waiting Deluxe feature.

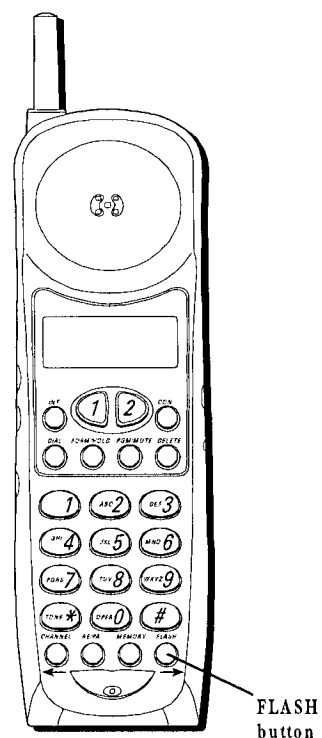


THE MEMORY FEATURE

Store up to twenty one 24-digit numbers in memory for quick dialing. The memory locations for the base and handset are separate, with 9 locations for each. The base also has 3 additional one-touch memory locations. This memory feature is in addition to the 40 Caller ID records that can be stored in memory.

STORING A NUMBER IN MEMORY

The phone must be **OFF** when you store numbers.

 1. Press the MEMORY button.
2. Press the memory location number (1-9).
3. Press MEMORY again. The display shows *ENTER NAME*.
4. Use the keypad to store a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Joe Smith, press 5 for J; press 6 three times for O; press 3 two times for E; press 1 to enter

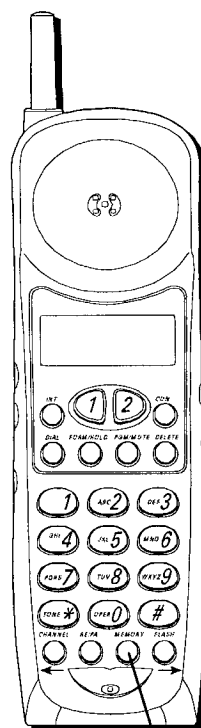


MEMORY button

NOTE: If you don't want to enter the name, skip step 4.

a space before you start entering the last name; press 7 four times for S; press 6 for M; press 4 three times for I; press 8 for T; and 4 two times for H. If you're using two letters consecutively that are stored in the same number key, you must press the CHANNEL and FLASH arrow buttons between the letters. For example, if you enter Barb, press 2 two times for B; press FLASH (right arrow); press 2 for A; 7 three times for R; and 2 two times for B. You need to press FLASH (right arrow) between the B and the A since they are stored within the same number key.

 5. Press MEMORY. The display shows *ENTER TEL NUMBER*.
6. Use the keypad to enter the number you want to store (up to 24 digits).
7. Press MEMORY again to store the number.
8. Record whose number is stored in the location on the memory label provided. You will also be able to view the name and number in the phone's display.

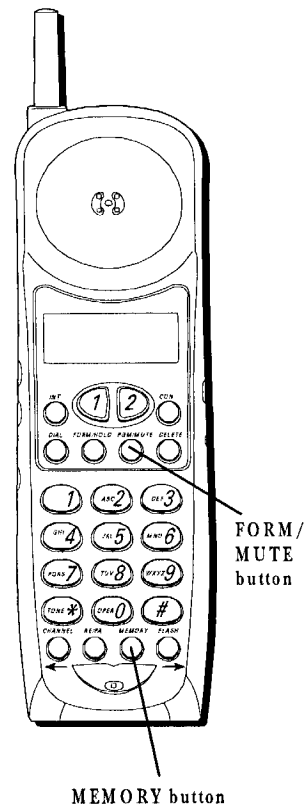

STORING A QUICK DIAL NUMBER

 
This procedure is the same as for "Storing a Number in Memory" except for step 2. Instead of pressing the memory location number, press the quick dial button on the base.

CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number—you're just replacing the phone number with a different one.

DIALING A STORED NUMBER

1. Make sure the phone is **ON** by pressing the TALK button.
2. Press MEMORY.
3. Press the number (1-9) for the desired memory location. The number dials automatically.

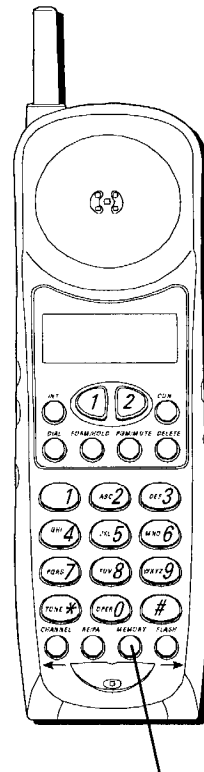

MEMORY button

DIALING A ONE-TOUCH MEMORY DIAL NUMBER

 
1. Make sure the phone is **ON** by pressing the TALK button.
2. Press the quick dial button where the number is stored. The number automatically dials.

USING DIAL


This feature allows you to call back Caller ID records that were previously stored.

1. Make sure the phone is **OFF**.
2. Use the arrow buttons to scroll through the numbers stored in memory until the desired number is shown.
3. Press DIAL to dial the number.

IMPORTANT: If you make test calls to emergency numbers stored in memory, remain on the line and briefly explain the reason for the call to the dispatcher. Also, it's a good idea to make these calls in off-peak hours, such as early morning or late evening.

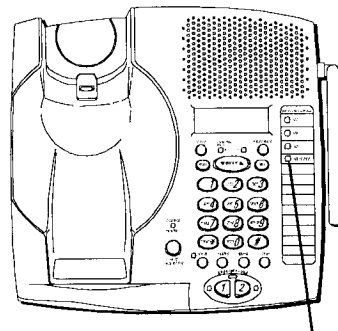

Quick dial
buttons

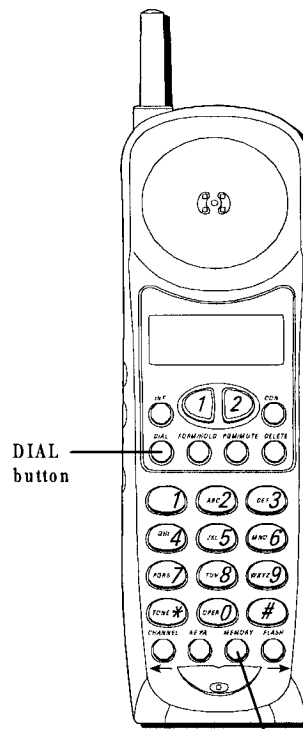 

MEMORY button


CHAIN DIALING FROM MEMORY

Use this feature to make calls which require a sequence of numbers such as using a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service:

<i>The Number For</i>	<i>Memory Location</i>
Long distance access number	7
Authorization code	8
Frequently called long distance number	9

1. Make sure the phone is **ON**.
2. Press MEMORY and then press 7.
3. When you hear the access tone, press MEMORY and then press 8.
4. At the next access tone, press MEMORY and then press 9.

 TIP: Wait for the access tones before pressing the next memory button, or your call might not go through.

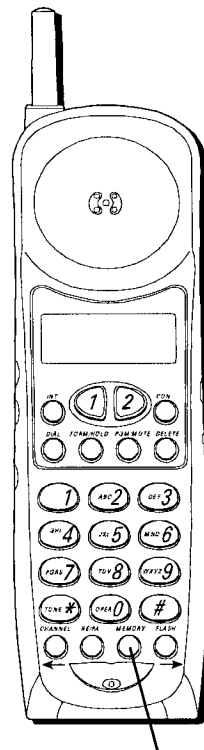


MEMORY button

INSERTING A PAUSE IN THE DIALING SEQUENCE

Press the RE/PA button to insert a delay in the dialing sequence of a stored telephone number when a pause is needed to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). Each pause counts as 1 digit in the dialing sequence.

REVIEWING AND DELETING STORED NUMBERS

 
1. Press MEMORY, then press the arrow keys to view the entry.
2. While the entry is displayed, press DELETE to delete the entry. The display shows *ERASE MEMO?*
3. Press DELETE a second time to delete the entry.

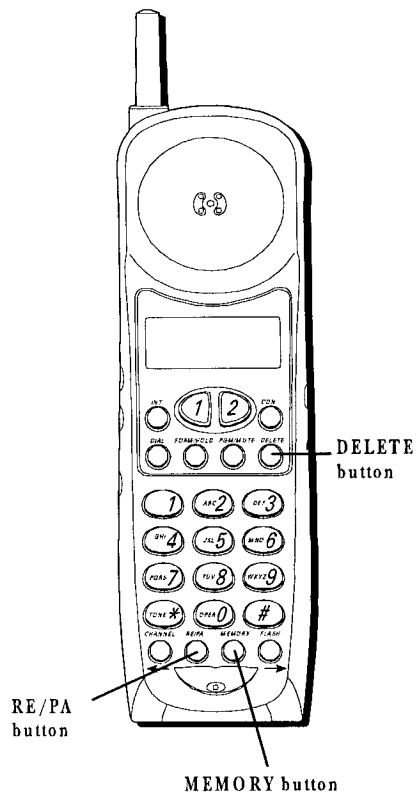

CHANGING THE BATTERY


Make sure the telephone is **OFF** before you replace battery.

 1. Remove the battery compartment door.
2. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
3. Insert the new battery pack and connect the cord into the jack inside the handset.
4. Put the battery compartment door back on.
5. Place handset in the base to charge. **If you don't charge the handset battery properly (for 12 hours) when you first set up the phone and/or when you install a new battery pack, the battery's long-term performance will be compromised.**

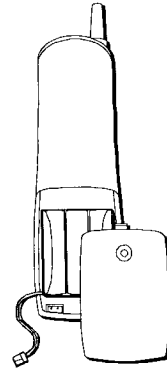

BATTERY SAFETY PRECAUTIONS

 - Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in the User's Guide.
- Keep batteries out of the reach of children.

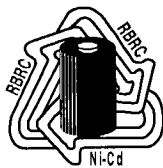

NOTE: The RBRC seal on the battery used in your Thomson Consumer Electronics product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States. Please call 1-800-8-BATTERY for information or contact your local recycling center.

GENERAL PRODUCT CARE

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a clean pen or pencil eraser.

MESSAGE INDICATORS

The following indicators show the status of a message or of the unit.

ERROR	Caller information has been interrupted during transmission or the phone is excessively noisy.
ENTER NAME	Prompt telling you to enter name one of the 10 memory locations.
DELETE ALL?	Prompt asking you if you want to erase all Caller ID records.
DELETE?	Prompt asking you if you want to erase the current Caller ID record that is shown on the display.
END OF LIST	Indicates that there is no additional information in Caller ID memory.
NEW	Indicates call or calls have not been reviewed.
UNKNOWN	The incoming call is from an area not serviced by Caller ID or the information was not sent
PAGING YOU	Someone has pressed the PAGE/FIND INTERCOM button on the base.
BLOCKED	The person is calling from a number that has been blocked from transmission.
NONE	No caller ID information was recieved..