

EXHIBIT A
[FCC Ref. 2.1033(b)(3)]

**"Installation and Operating Instructions
Furnished to the User"**


Exhibit A(1) - User's Guide

When storing information in memory, press the **A** pause button twice within one second to insert a delay in the dialling sequence of a stored telephone number when a pause is required to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). PAUSE shows on the display as a "P". Each pause counts as 1 digit in the dialling sequence.

- Press MEM (memory), then use the $\leftarrow$ or $\rightarrow$ button to view the entry.
- While the entry is displayed, press the CHNDELETE button to delete the entry. The display shows **DELETE?**
- Press $\rightarrow$ (OK/CANCEL), to add, or press CHNDELETE again to delete the entry. **DELETED** shows in the display.

The Number For	Memory Location
long distance access number	7
Authorization code	8
frequency called long distance number	9

CHANGING THE BATTERY

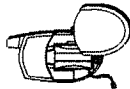

CAUTION: To reduce the risk of fire or explosion, do not use the battery to power any equipment that may be damaged by overcharging or over-discharging. Do not use the battery to power any equipment that may be damaged by overcharging or over-discharging.

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment to the phone.
- Clean with a soft cloth.

CAUSES OF POOR RECEPTION

- Beam is installed in the basement or lower floor of the house.
- Basic is plugged into an AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Battery is low.
- You're out of range of the base.

The following indicators show the status of a message or of an unit.

INCOMPLETE DATA	CALLER INFORMATION HAS BEEN INTERRUPTED DURING TRANSMISSION OF THE PHONE LINE IS EXCESSIVELY NOISY
ENTER NAME	PROMPT TELLING YOU TO ENTER THE NAME FOR ONE OF THE 10 MEMORY LOCATIONS
ENTER TEL NUMBER	PROMPT TELLING YOU TO ENTER THE

DELETE ALL?
the 10 numbers stored in the phone's outgoing memory.
Prompt: asking if you want to erase all Caller ID records.
Prompt: confirming the Caller ID Memory record is erased.
END OF LIST
Indicates that there is no additional information in Caller ID memory.

CALLER/NUMBER	an area not serviced by Caller ID or the information was not sent.
PAGING	Someone has pressed the pign button on the base.
BLOCKED CALL	The person is calling from a number that has been blocked from transmission.
BLOCKED NAME	The person's name is blocked

NO DATA	No Caller ID information was received.
EMPTY	Indicates a memory location is vacant.
NO CALLS	Indicates no CID records have been stored.
MESSAGE WAITING	Indicates a message is available.

PRESS TALK KEY	Prompt indicating the Caller ID number is a direct dial number (DDN) that can not be formatted.
UNABLE TO DIAL	Indicates the Calling number is incomplete and can not be dialed out.

A long warbling tone (with ringer on)	Signals an incoming call
Two long beeps	Confirmation tone
One short and one long beep	Page signal
One short beep every seven seconds	Low battery warning

CALLER ID SOLUTIONS

No Display

- Ensure the battery is fully charged. Try replacing the battery. Make sure the battery is properly installed and connected.
- If you are using AC power, make sure that the unit is connected to a non-switched electrical outlet. Disconnect the unit from the plug and plug

Caller ID Error Message

- The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. The message indicates the presence of noise on the line.

TELEPHONE SOLUTIONS

No dial tone

- Check installation:

- Ensure the headset is correctly plugged into the dialing pad.
- The dialing pad may be out of range of the base. Move closer to the base.
- Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.

CALL BACK button? Did the display indicator turn on? The battery may need to be recharged. Dial tone is OK, but can't dial out Make sure the tone/pulse setting is programmed correctly.	Unit does not ring Make sure the RINGER switch on the dialing pad is turned to ON.
---	---

- Change channels
- The dialing pad may be out of range of the base. Move closer to the base.
- Relocate the base.
- Charge battery.
- Ensure the headset is correctly plugged into the

- Place dialling pad in base for 20 seconds to reset the security code. If that doesn't work, charge battery for 12 hours.
- Clean charging contacts on dialling pad and base with a soft cotton cloth.
- Sm solutions for "No dial tone."
- Replace the battery.

- Make sure the toner/paper setting is programmed correctly.
- Did you reprogram numbers into memory after power up/down or battery reconnection?

SERVICE

If trouble is experienced with this equipment, for repair or warranty information, please contact customer service at

Do not inquire to:
ATLINKS USA, Inc.
Manager, Consumer Relations
P.O. Box 1875

Purchase date _____
Name of store _____

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a "helpful booklet, 'How to Identify and Resolve Radio/TV Interference Problems.'" This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00145-5 when ordering copies.

- Defects in materials or workmanship. For how long after your purchase:
- One year, from date of purchase. (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

How you get service:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service." For rental firms, proof of

• Pay any charges billed to you by the Exchange Center for services not covered by the warranty.

• Insure your shipment for loss or damage. ATLUNKS accepts no liability in case of damage or loss.

• A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NON-VERBAL OR WRITTEN

* REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ATLUNKS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE TERMS OF THIS WARRANTY.

PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and

THIS WARRANTY DOES NOT APPLY. SEE YOUR DEALER FOR WARRANTY INFORMATION.

	black	white
Shell clip	2-2508	2-2509
Headset	2-2508	2-2507
Replacement battery	2-2522	2-2522
Power supply	2-2518	2-2508

For credit card purchases

Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.

Copy your complete account number from your VISA card.

Copy your complete account number from your Master Card or Discover.

Copy the number above your name on the Master Card.

Prices are subject to change without notice.

Authorized Signature _____

Total Merchandise..... \$ 5

Sales Tax..... \$

We are required by law to collect the appropriate sales tax for each individual.

Shipping/Handling.....\$ \$5.00

Total Amount Enclosed.....\$

Mail order form and money order or check (in U.S. currency) made payable to Thomson to:

Thomson

Mail Order Department

Name _____ Apt. _____
Address _____
City _____ State _____ Zip _____
Daytime Phone Number () _____

Please make sure that this form has been filled out completely.