


CIRCUIT DIAGRAM.

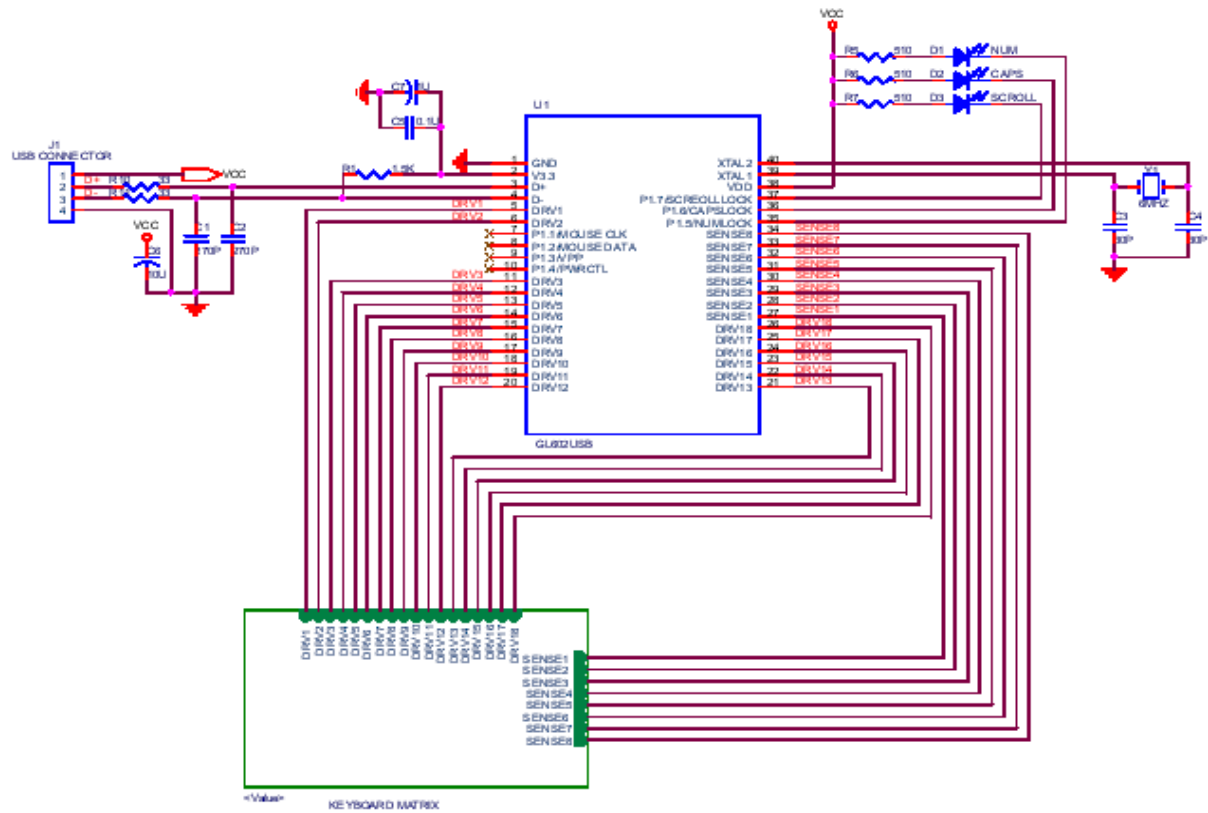

35	G	21	T	3	%	5	\$	4	30	B	39	V	34	F	20	R	DRV10
36	H	22	Y	7	^	6	&	7	31	N	38	M	37	J	23	U	DRV16
41	'	27	[	12	-	11	0	0	35	/	42	(K42)	40	:	26	P	DRV18
30	L-Alt	00	000						32	R-Alt	36	(K56)			14	(K14)	DRV3
116	F5	15	Back Space	20	F9	121	F10		31	Space	43	Enter	29	\ (101)	125	Scrdl Lock	DRV9
33	Up	107	(K107)	30	Home	31	End		79	Left	126	Pause Break	108	Enter (Num)	106	+	DRV6
38	0 (Ins)	37	5 (Num)	75	Insert	123	F12		39	Right	35	/ (Num)	38	2 (Down)	36	8 (Up)	DRV8
124	Print Screen	32	4 (Left)	76	Delete	122	F11		34	Down	30	Num Lock	33	1 (End)	31	7 (Home)	DRV11
35	(K45)	30	Caps Lock	112	F1	3	@ 2		131	(K131)	37	X	32	S	18	W	DRV13
115	F4	114	F3	113	F2	4	# 3		132	(K132)	48	C	33	D	19	E	DRV12
		118	F7	119	F8	10	(9		163	APP	34	> -	39	L	35	O	DRV7
117	F6	28	]]	13	+ =	9	* 8		151	KOR_L	53	< -	38	K	24	I	DRV17
104	(Del)	102	6 (Right)	15	Page Up	35	Page Down		105	(Num)	300	(Num)	103	3 (Page Dn)	101	9 (Page Up)	DRV15
	ACPI Sleep	FN		58	L-Ctrl		Euro Key		106	ACPI Wakeup	34	R-Ctrl		ACPI Power			DRV1
110	Esc	26	Tab	1	-	2	1		150	KOR_R	36	Z	31	A	17	Q	DRV14
133	(K133)	44	L-Shift		WWW Forward		WWW Stop				57	R-Shift		WWW Favorites		WWW Refresh	DRV5
161	L-Win		Media Play		Media Previous		Media			Volume -		Media Next		Volume +		Media Mute	DRV2
	Media Select		My Computer		R-Win		Calculator			WWW Back		WWW Mail		WWW Home		WWW Search	DRV4

