



Operational Description

Operating System Environment

PC/AT, PS/2 and Windows 95/98/2000/ME/XP compatible

Installation

1. Turn the power to your computer off.
2. Disconnect the existing Keyboard and mouse cable from your PC.
3. Connect output of Keyboard to Keyboard' s PS/2 port on your PC.