




REMOTE START QUICK REFERENCE

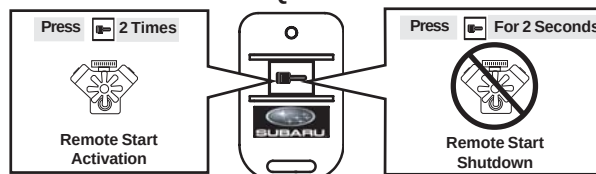

Starting Your Vehicle

The remote control start function is activated by pressing the START (key icon) button twice within 3 seconds on your remote control transmitter. The system will check certain pre-conditions before starting, and if all safety parameters are correct, the engine will start within 5 seconds. If the vehicle's starter cranks but does not start or starts and stalls, the remote engine start system will power off then attempt to start the vehicle an additional four times.

WARNING: TO AVOID DANGER OF CARBON MONOXIDE, NEVER REMOTE START A VEHICLE IN A CLOSED SPACE SUCH AS A CLOSED GARAGE.

Turning Your Vehicle Off

Press and hold the START (key icon) button again to turn the vehicle off. If the vehicle is left running the remote start system will allow the vehicle to run for a total of 15 minutes and then automatically turn off.

Entering the Vehicle While it is Running via Remote Start

1. Unlock the vehicle doors using the factory keyless remote. If the vehicle's doors are unlocked manually using the key, the vehicle's security system will trigger and the remote start system will turn off. Inserting the ignition key into the ignition cylinder and turning it to the ON or RUN position will disarm the security system.
2. Enter the vehicle. Do not press the brake pedal.
3. Insert the key into the ignition and turn to the ON position. If the ignition key is accidentally turned to the start position, the system's "starter anti-grind" feature will prevent the starter from re-cranking.
4. Press the brake pedal. The remote starter disengages, the vehicle's power window features are re-enabled and the vehicle will operate normally.



To engage the service mode, turn the ignition key to the ON or RUN position, depress and hold the brake pedal then, press and release the START (key icon) button on the remote control transmitter three (3) times. The system will pause for one second and then flash the parking lights three (3) times indicating that the system is in service mode. When attempting to activate the remote start system while in service mode, the parking lights will flash three (3) times and will not start.

To disengage the service mode, turn the ignition key to the ON or RUN position, depress and hold the brake pedal, then press and release the START (key icon) button on the remote control transmitter three (3) times. The system will pause for one second and flash the parking lights one (1) time indicating that the system has exited service mode.

Important Note: When taking your vehicle in for service, it is recommended that you inform the service personnel that your vehicle is equipped with a remote start system.

Remote Transmitter Programming Mode

1. Open the driver's door (the driver's door must remain opened throughout the entire process).
2. Insert the ignition key into the vehicle's ignition cylinder and turn to the ON or RUN position.
3. Locate the small black programming button behind the fusebox cover on the left side of the driver's side lower dashboard.
4. Press and hold the black programming button for 10-15 seconds. The horn will honk and the parking lights will flash three times to indicate that the system has entered transmitter programming mode.
5. Press and release the START (key icon) button on each transmitter. The horn will honk and the parking lights will flash one time to indicate a successful transmitter learn each time the START (key icon) button is pressed.
6. To exit transmitter programming mode, turn the Ignition key to the OFF position, remove the ignition key from the ignition cylinder and test operation of the remote transmitter(s).

Enabling / Disabling Confirmation Horn Honks

1. Follow steps 1-4 in "Remote Transmitter Programming Mode" above.
2. Pressing the vehicle's brake pedal will enable the confirmation horn honk feature. The vehicle's horn will honk 1 time to indicate that confirmation horn honks have been disabled and honk 2 times to indicate that confirmation horn honks have been enabled.
3. To exit programming mode, turn the ignition key to the OFF position, remove the ignition key from the ignition cylinder and test operation of the remote transmitter(s).

See your owner's manual for additional information on the remote engine start system.





This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Per FCC 15.21, you are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

