

EXHIBIT C

User Manual

Getting Start For Using Wireless Mouse

1. Following the direction marked in the battery compartment to insert two AAA batteries.
2. Plug the receiver into the USB port.
3. Microsoft® Windows® Millennium Edition and Windows 2000 Professional will automatically recognize the Receiver. Windows 98 will require manual prompting. Click **Next** on all prompts and then click **Finish**. Follow the on screen instruction, you may also need to insert your Windows 98 CD and browse the necessary files for complete installation.
4. Move the mouse to confirm movement. If the above does not work, go to step 5. Otherwise, go to step 6.
5. First, press the channel search button on the end of the receiver and note the green LED will blink slowly. Then, press the channel change button on the rear side of mouse to a new channel. Note the green LED on the receiver will blink faster to notify a new channel is identified. Press any mouse key (left, right, or middle) to confirm the channel matching process.
6. See your system User's Guide for instructions on how to use your Wireless Mouse.

De-Activate and Activate of Wireless Mouse

Your wireless mouse can be deactivated to save battery power and to avoid unintentionally RF transmission.

1. To de-activate your wireless mouse, hold down the middle button then press the channel selection button.
2. To activate your wireless mouse, hold down either Left button or Right button then press down the channel selection button for three seconds.

Frequent Ask Question:

1. Q: Why the mouse doesn't work?
A: 1) See step 5 above for the channel matching process.
2) Check your system's User Guide for correct USB installation.
3) Follow the step above to activate your wireless mouse.
2. Q: Why the movement not smooth.
A: 1) Current channel may be interfered. See step 5 above to select a new channel.
2) This wireless mouse is designed to work with your notebook computer. It has the best sensitivity when the mouse and receiver are in the same horizontal plane.
3. Q: Why the receiver LED is red?
A: Batteries in the mouse is getting out of power. Please replace new batteries.

FCC GUIDELINES

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, Uses and can radiated radio frequency energy and if not installed and used in accordance with the instructions," may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Printed in Taiwan © Copyright Lite On Group - Silitek Corporation 2001

Microsoft and Windows are trademarks or registered trademarks of the Microsoft Corporation in the United States, other countries or both.