

Figure 7
Inside Configuration of the EUT

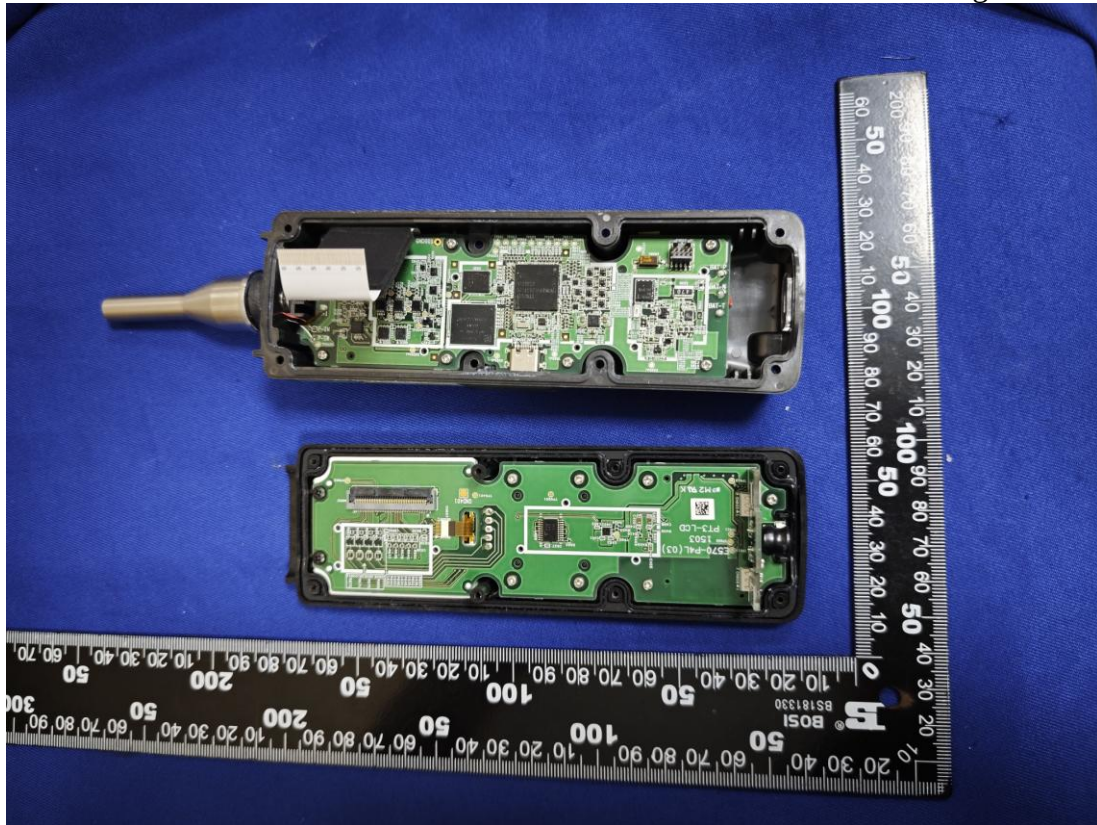


Figure 8
Inside Configuration of the EUT

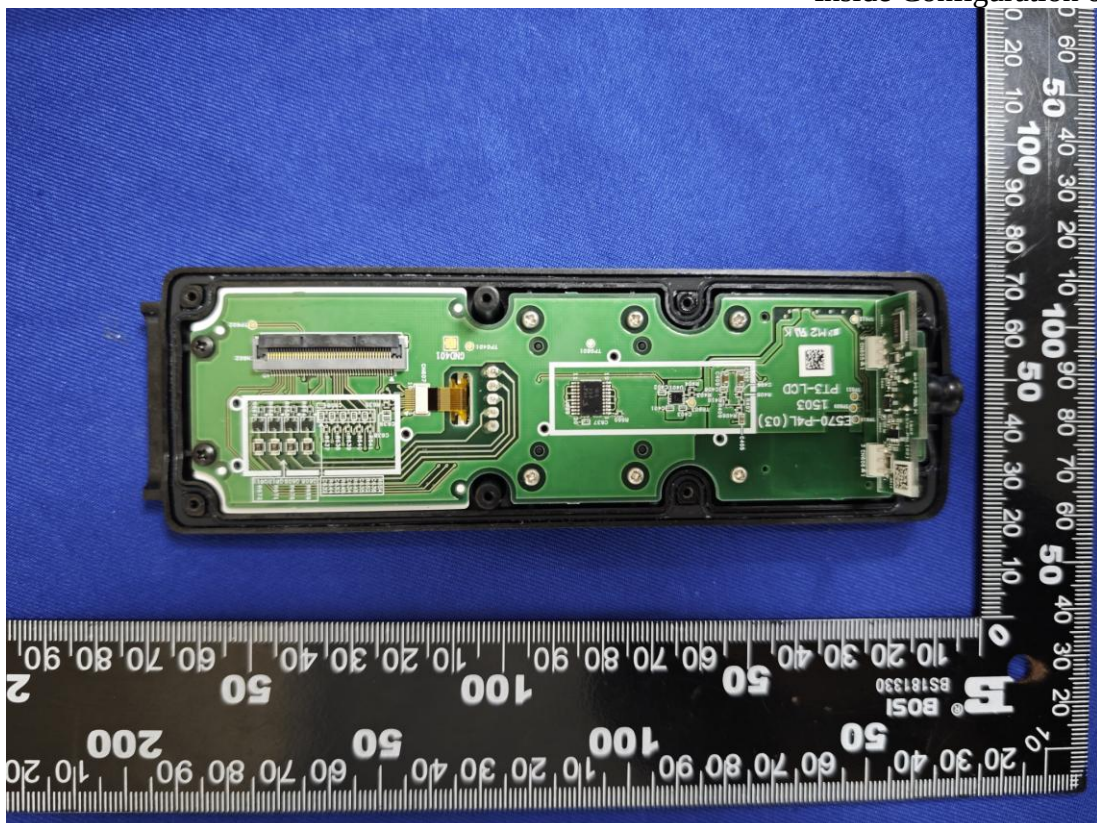


Figure 9
Inside Configuration of the EUT

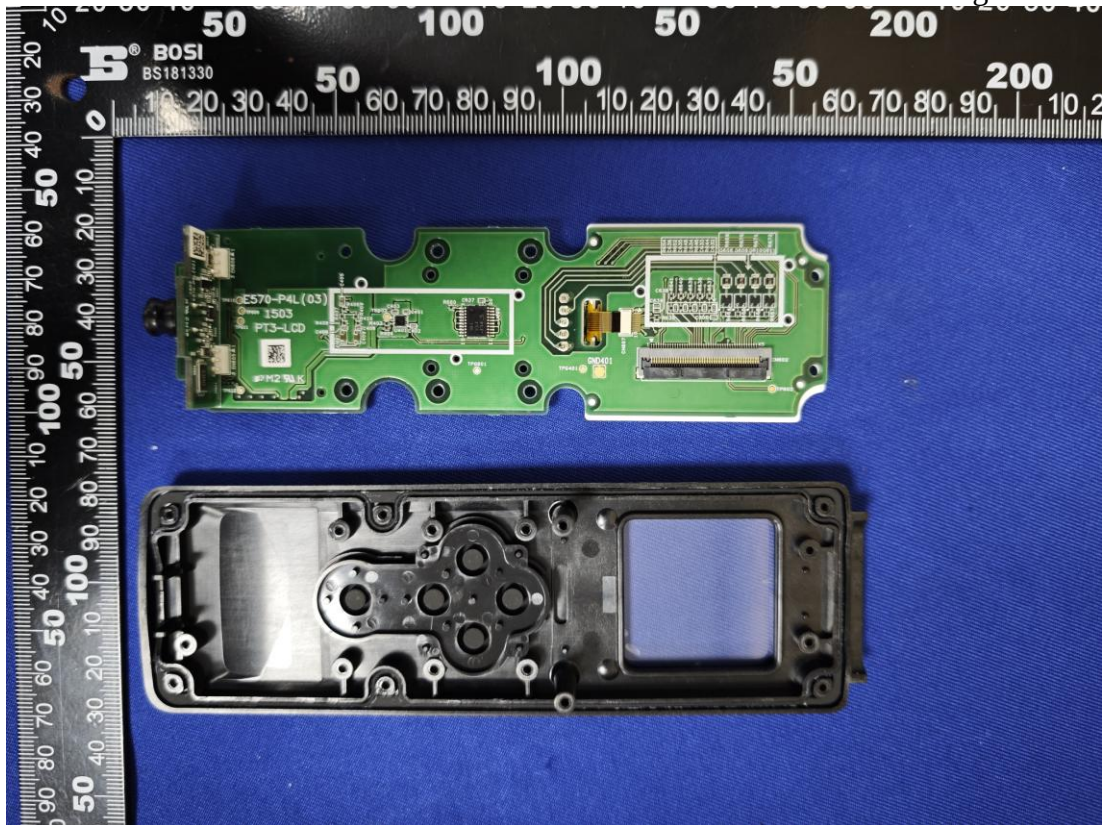


Figure 10
Inside Configuration of the EUT

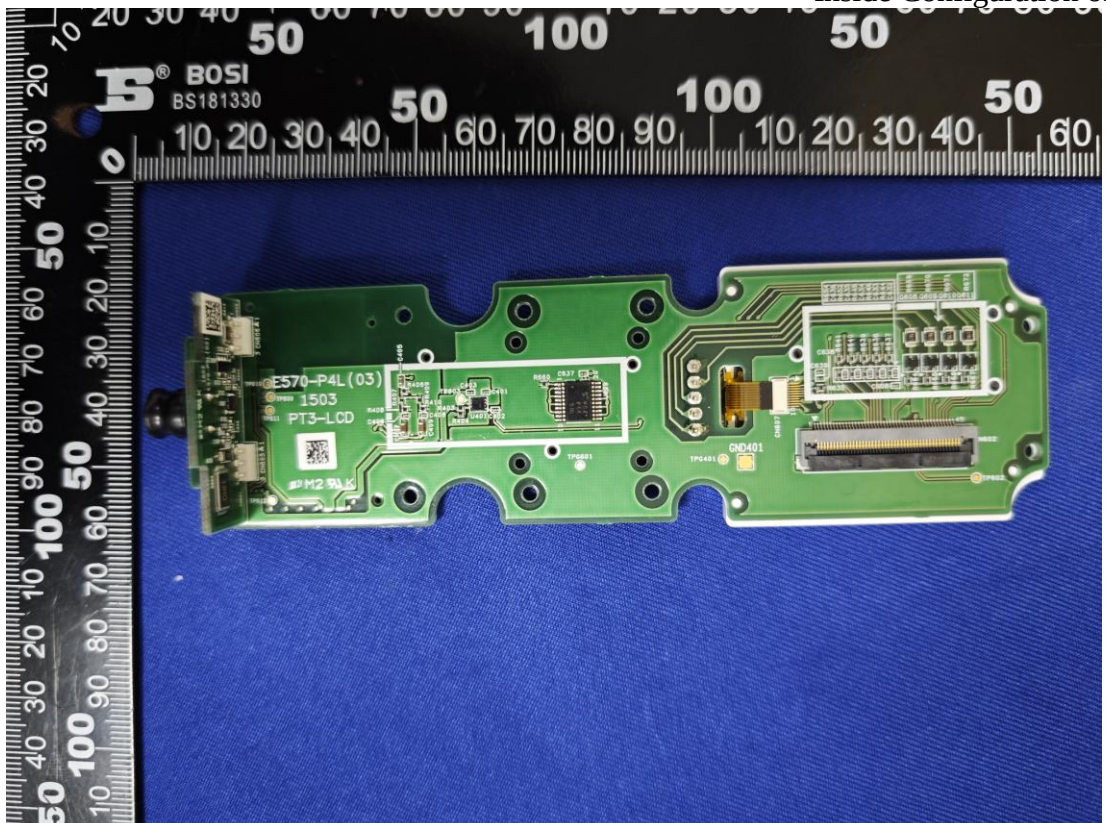


Figure 11
Inside Configuration of the EUT

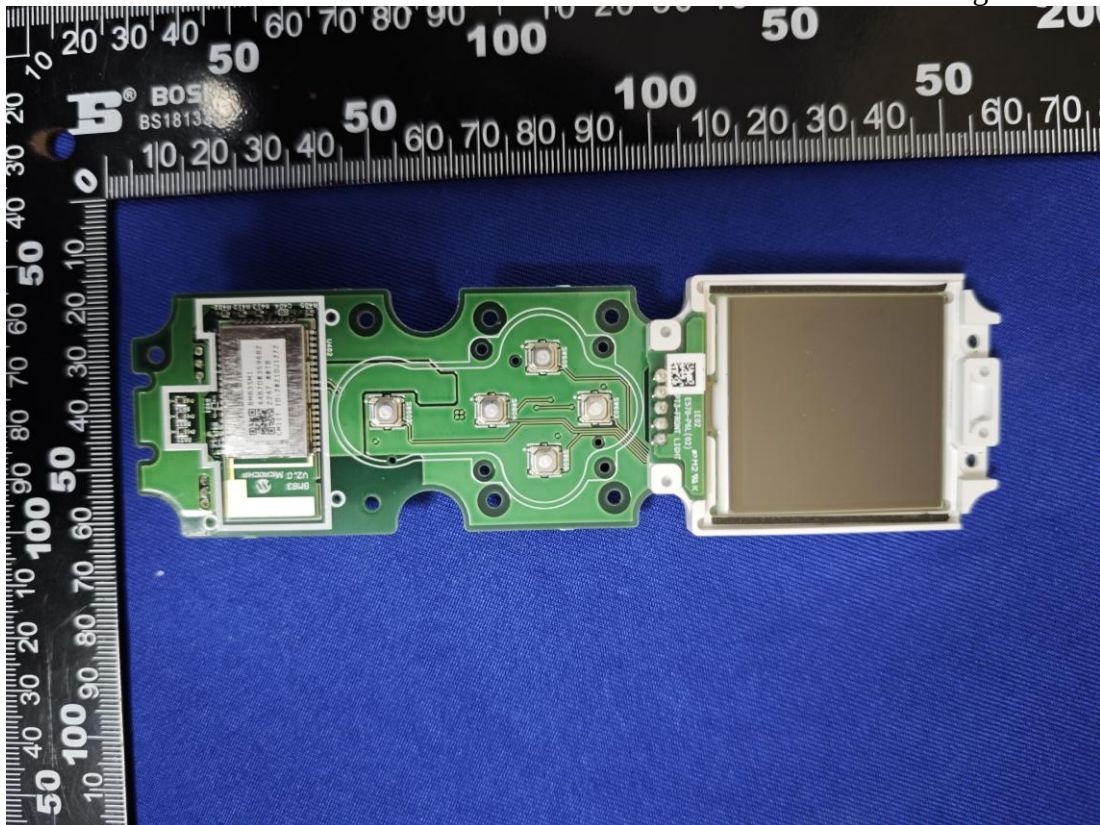


Figure 12
Inside Configuration of the EUT

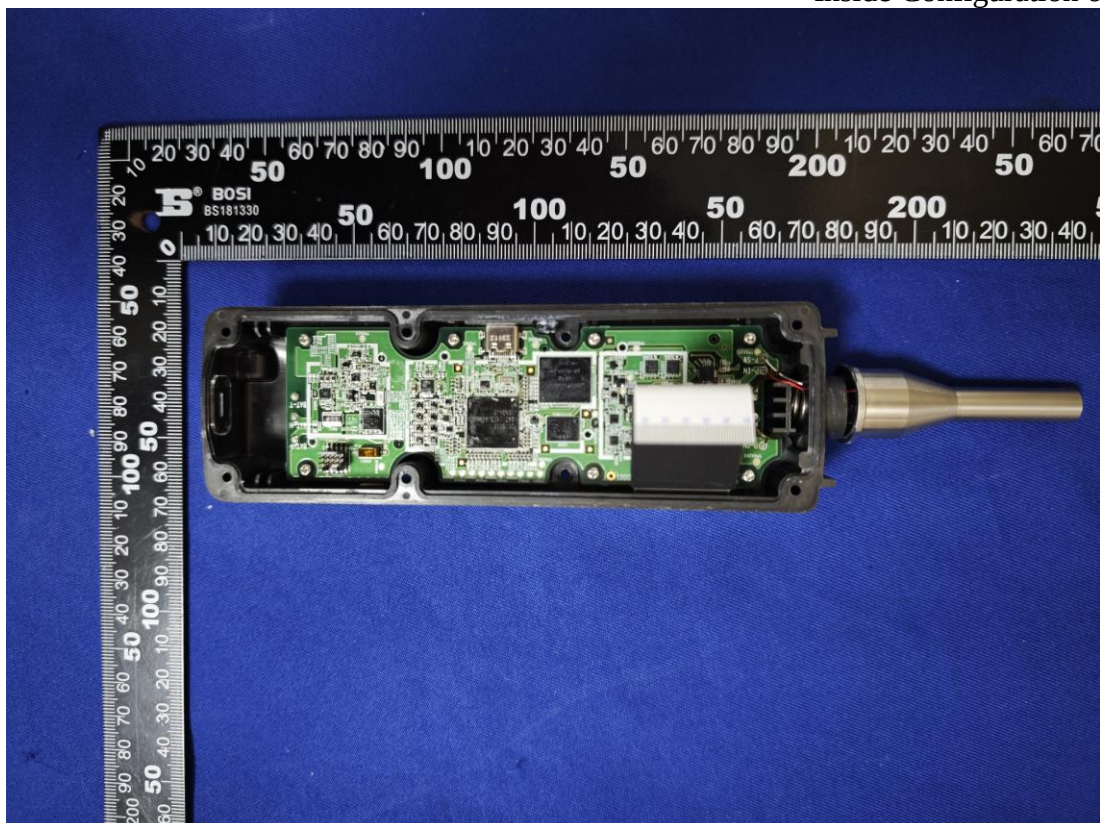


Figure 13
Inside Configuration of the EUT

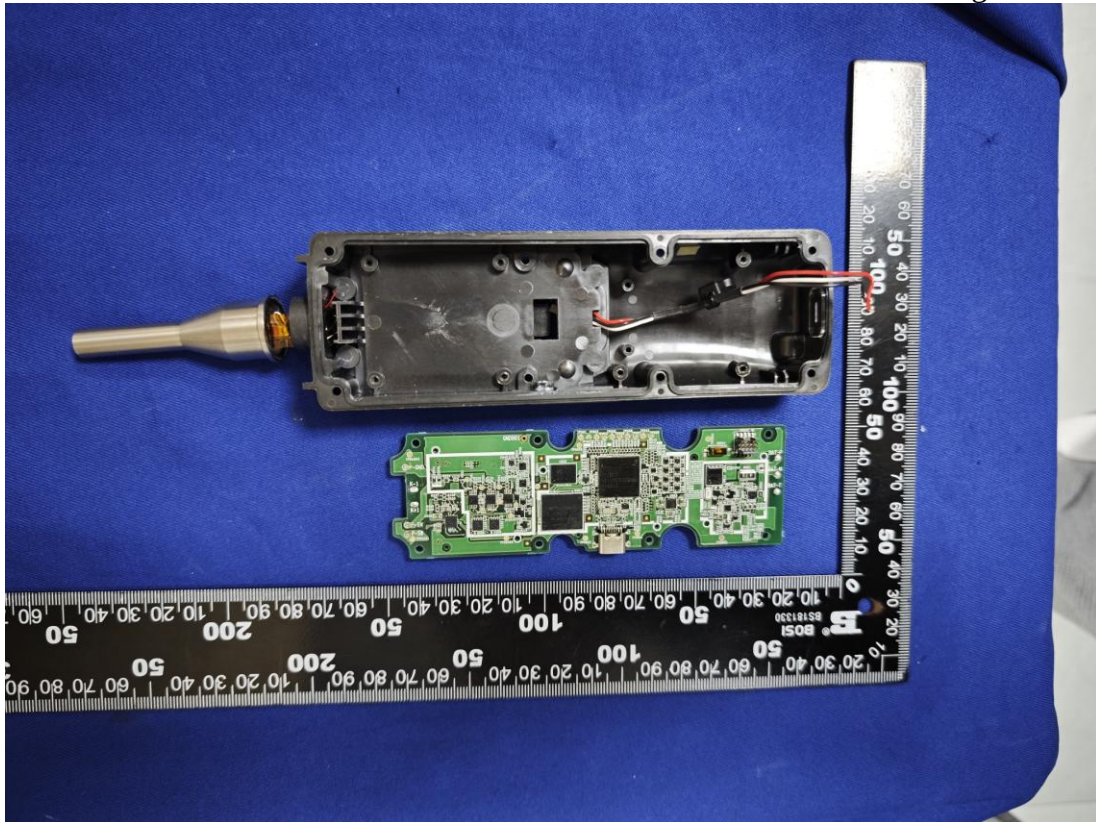


Figure 14
Inside Configuration of the EUT

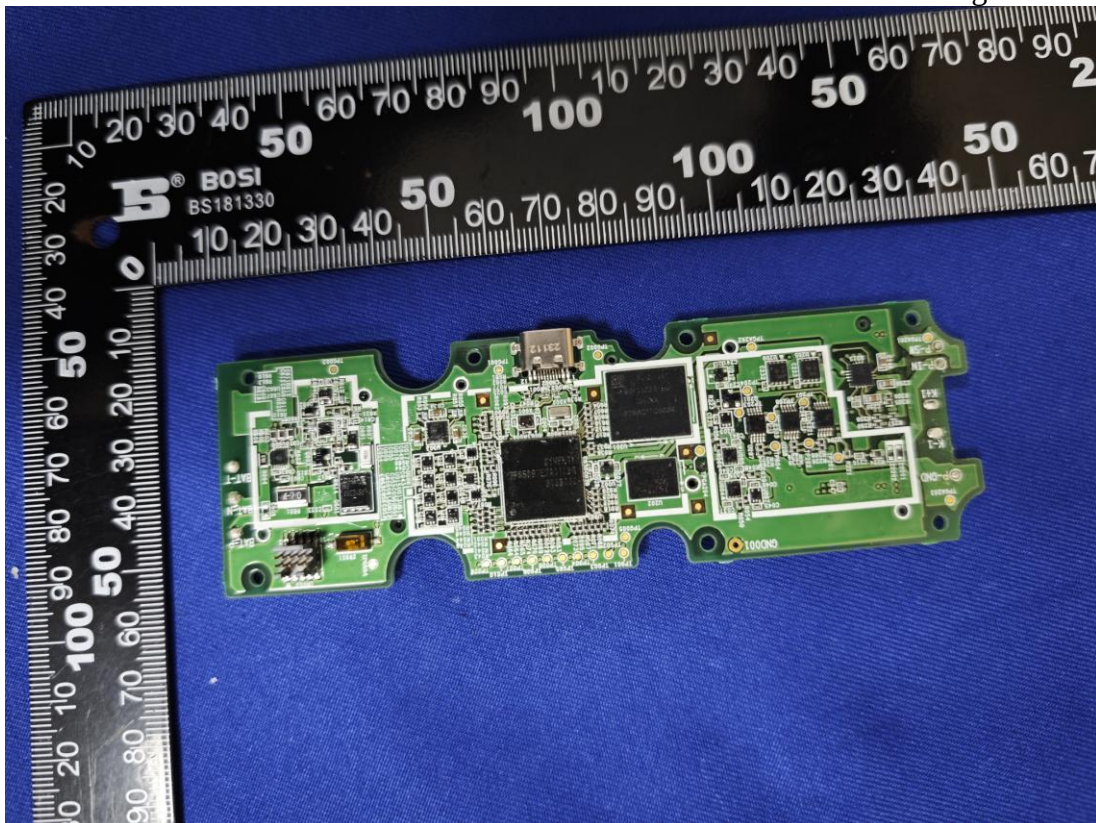


Figure 15
Inside Configuration of the EUT

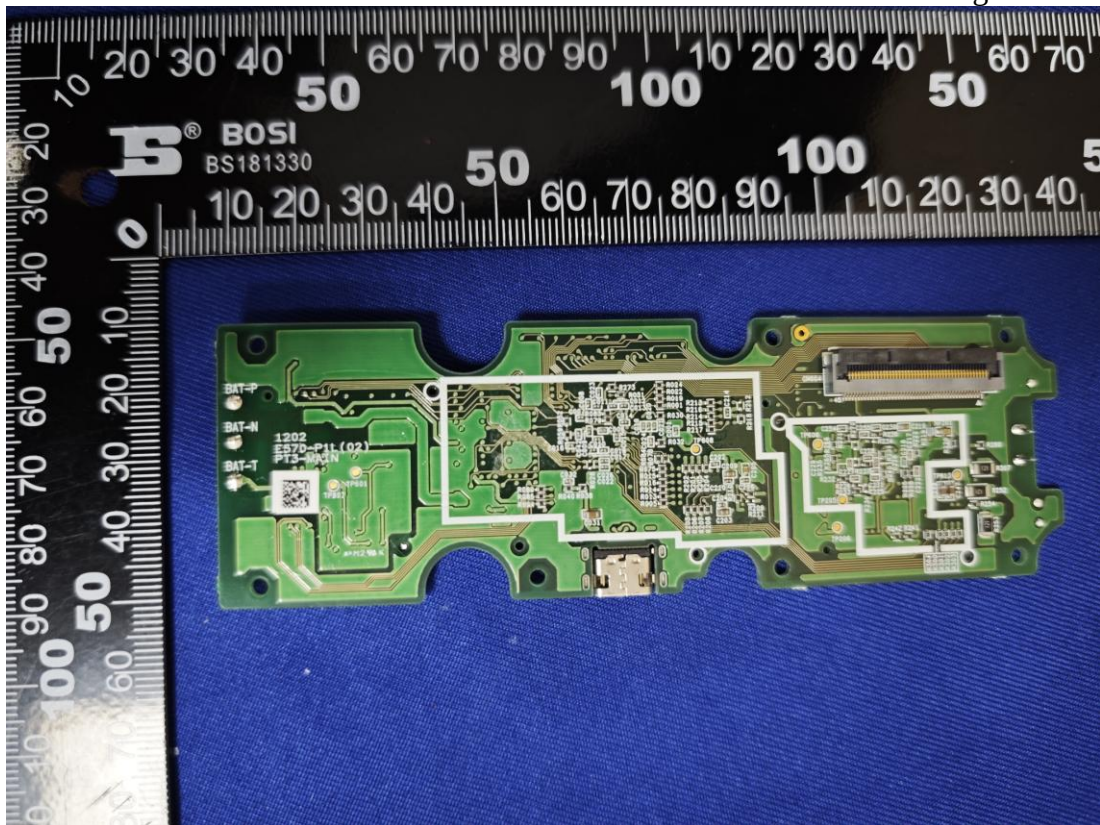


Figure 16
Inside Configuration of the EUT

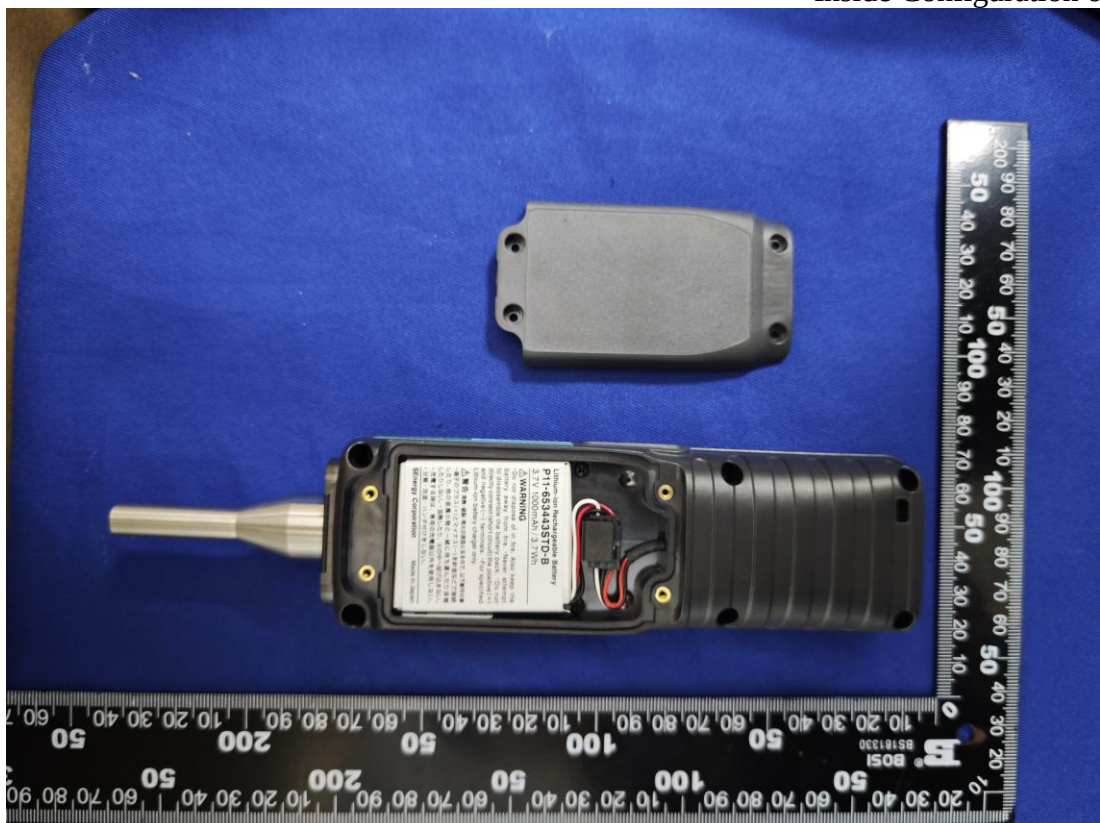


Figure 17
Inside Configuration of the EUT

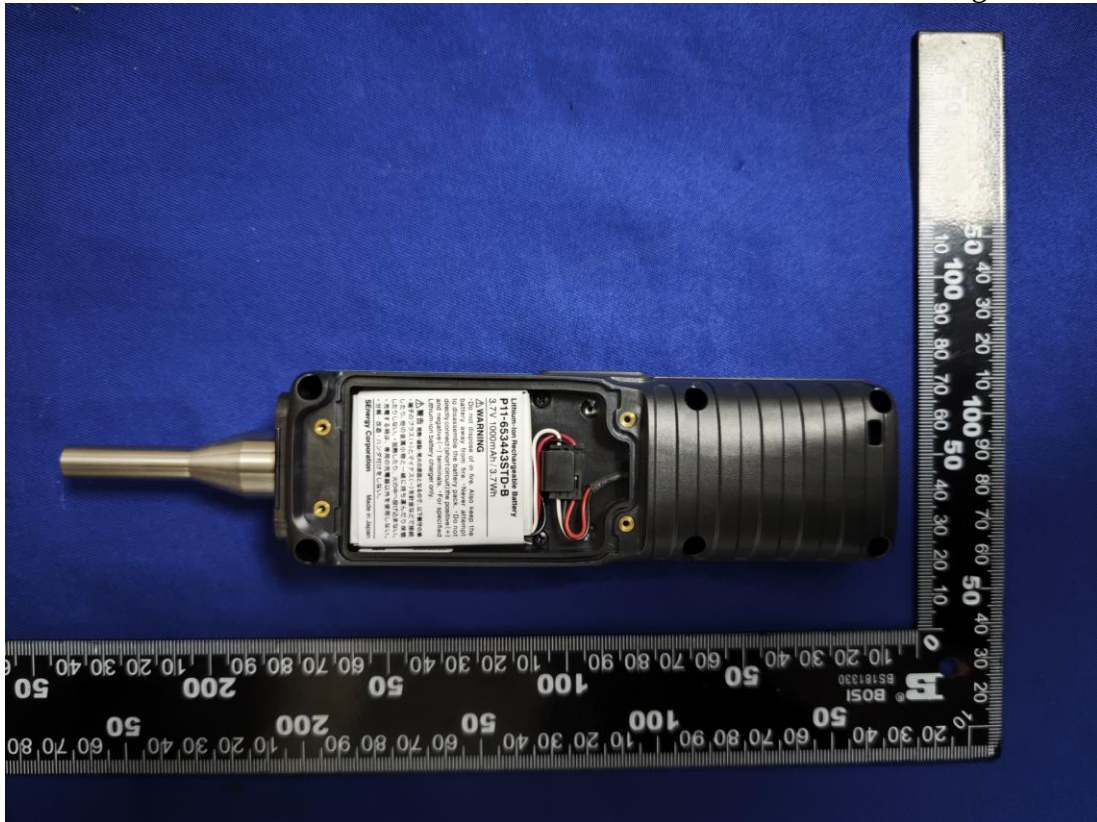


Figure 18
Inside Configuration of the EUT



Figure 19
Inside Configuration of the EUT



Figure 20
Battery of the EUT

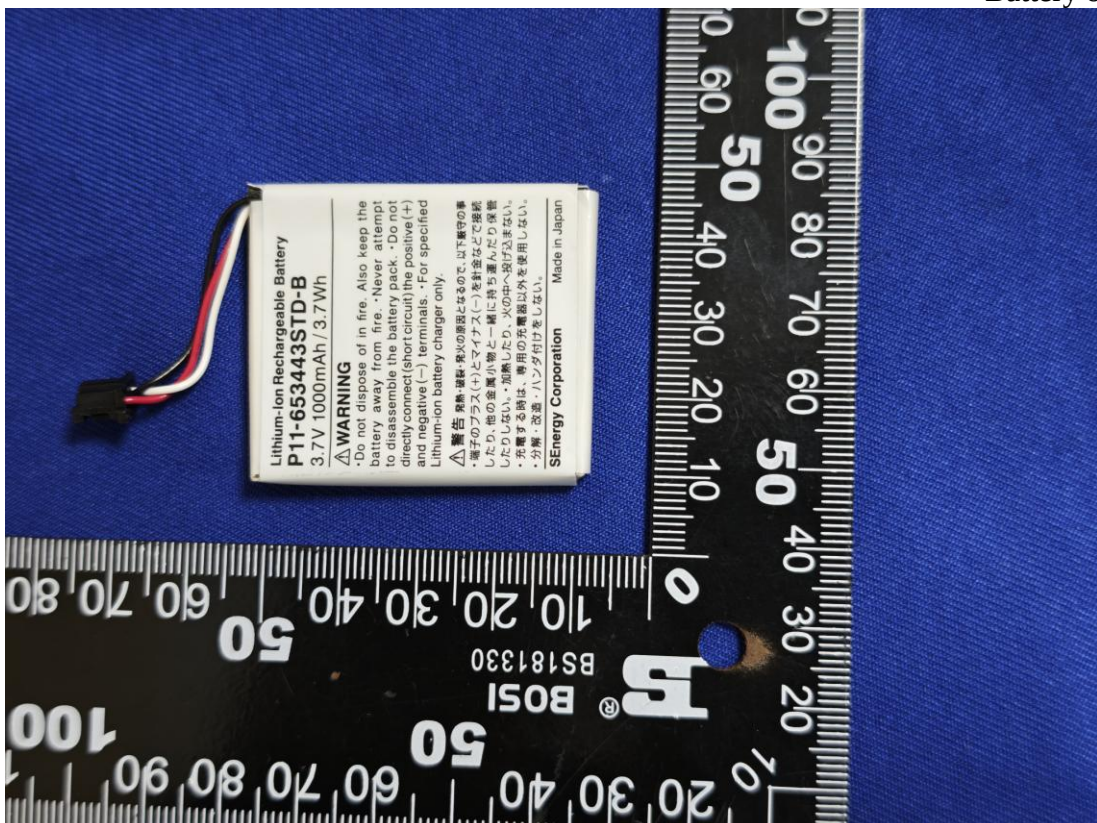


Figure 21
Battery of the EUT

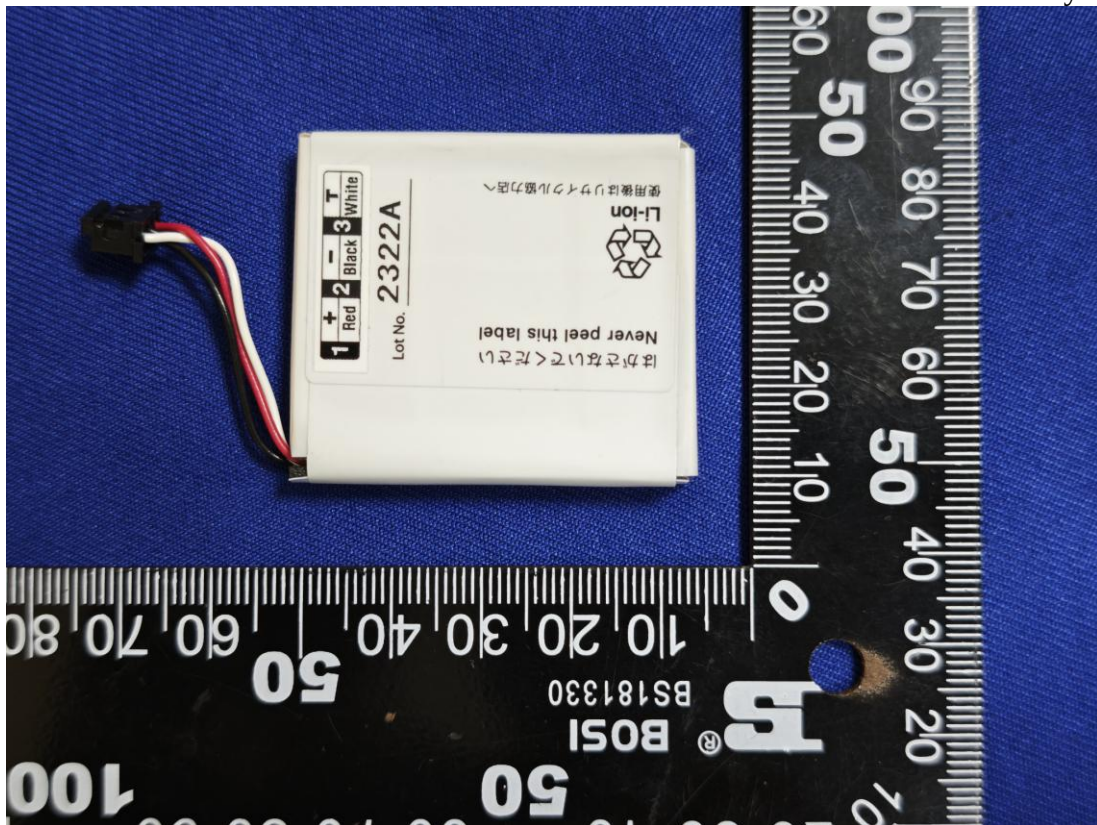


Figure 22
Module of the EUT


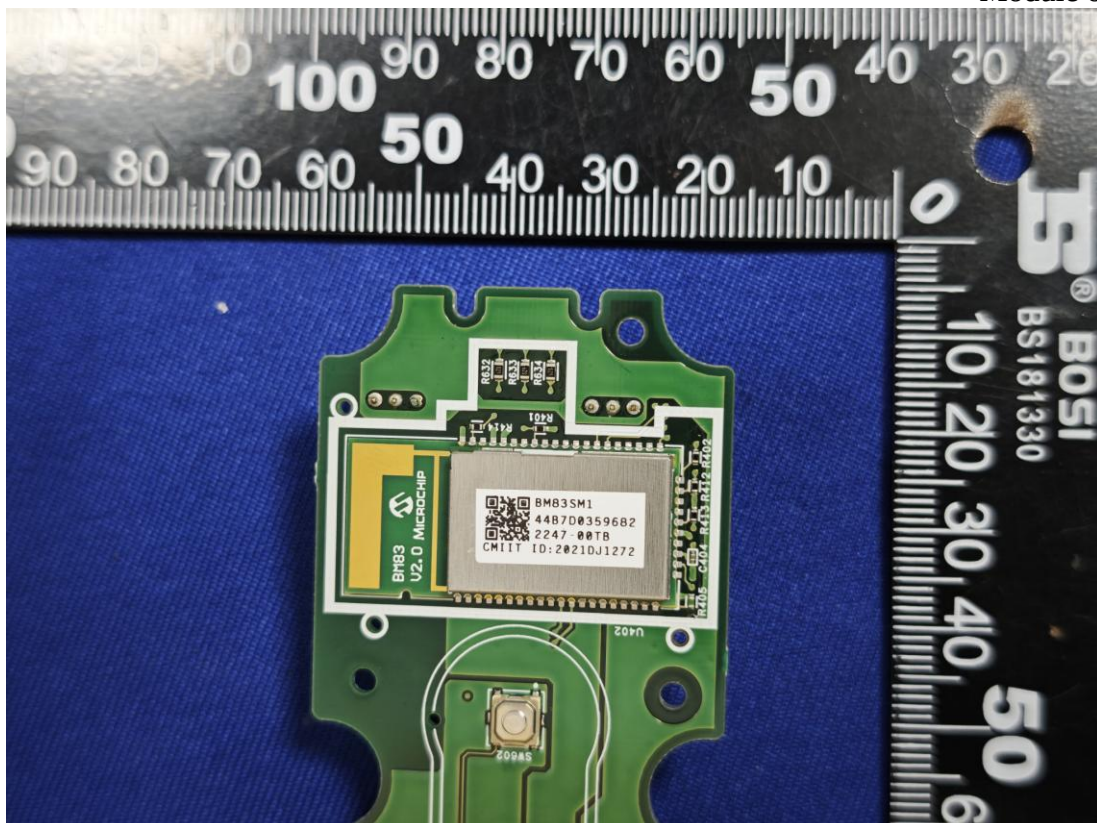


Figure 23
Module of the EUT

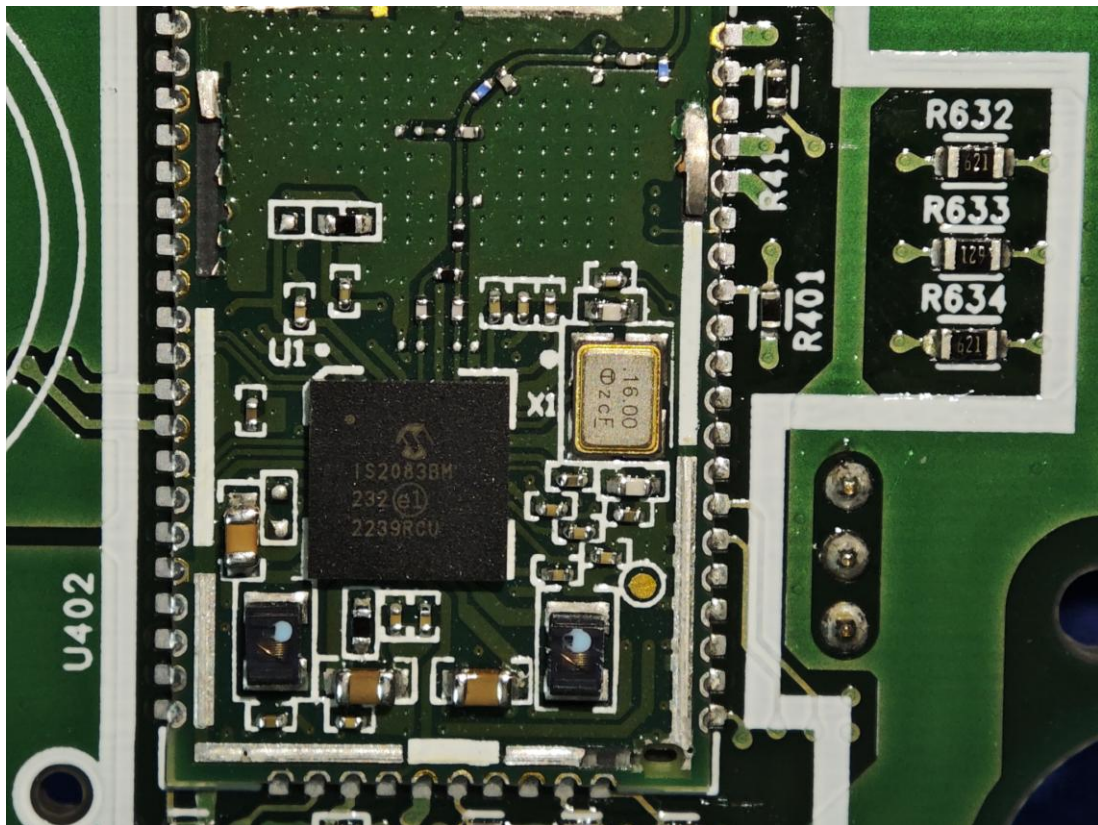

THE END