


Quick Start Guide



EAI2620P, EAI2620P-CE
ASKEY


LED Indicator

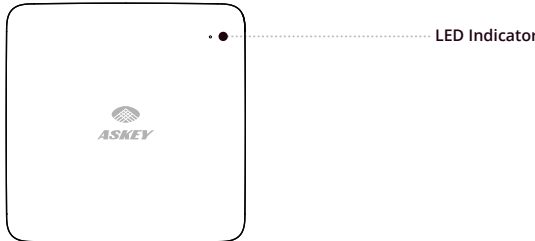


LED Behavior:

COLOR	STATUS	DESCRIPTION
AMBER	Blinking	Device is being powered on
RED	Blinking	Device is receiving insufficient PoE power
AMBER ↔ RED	Blinking	Device is in firmware upgrade process
GREEN	Solid on	Device is connected in Agent role
AMBER	Solid on	Device is out of service
RED	Solid on	Device is abnormal with serious error
BLUE	Solid on	Device is connected in Controller or Standalone role


In the Box

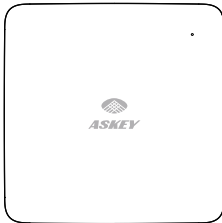

Device

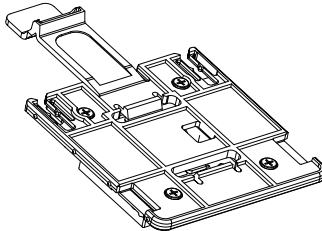

Ceiling mount kit bracket

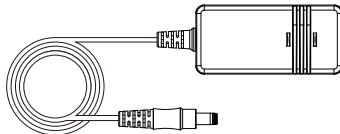

12V-3.5A DC Adaptor
(Optional Accessory)

Let's get started

1 Ceiling mount step 1 – Remove the screw in the middle and set it aside for later reassembly.

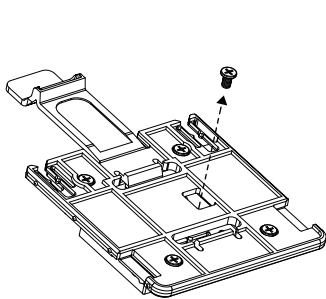


Fig.1-1

2 Ceiling mount step 2 – attach ceiling mount bracket to Ceiling T-Bar

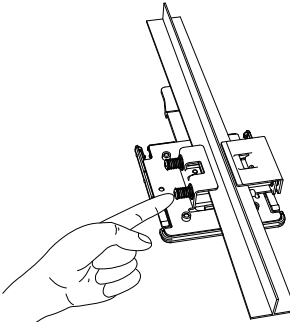


Fig.2-1

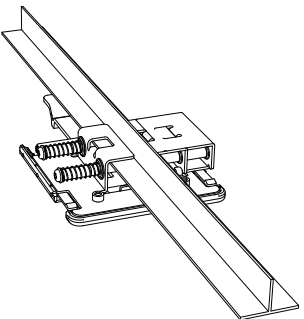


Fig.2-2

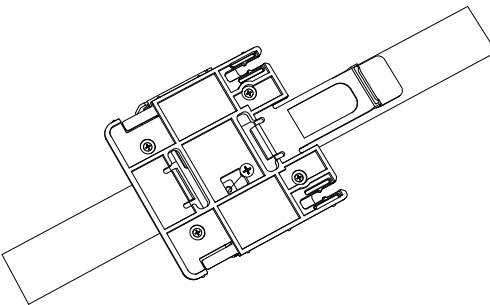


Fig.2-3

- 3 Ceiling mount step 3 – connect the ethernet with POE to the 10GE port or connect the DC12V and check LED indication for device boot up

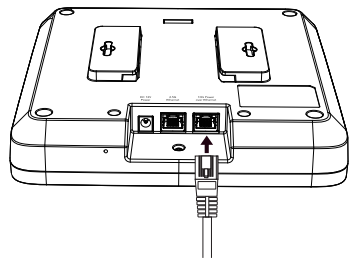


Fig.3-1

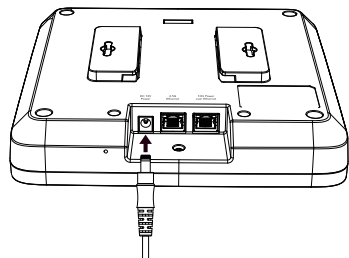


Fig.3-2

- 4 Ceiling mount step 4 – attach the device to the ceiling mount bracket

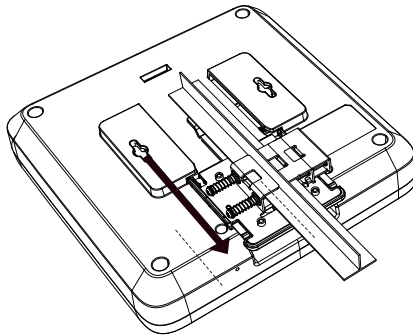


Fig.4-1

Remove device from bracket

- 1 Step 1 – Lift the latch

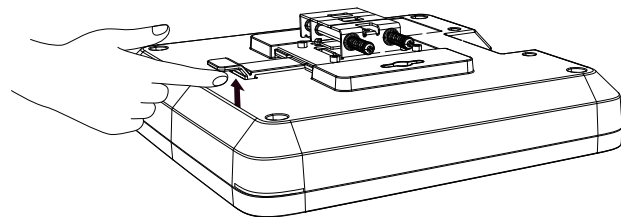


Fig.1-1

- 2 Step 2 – Push the device out of bracket

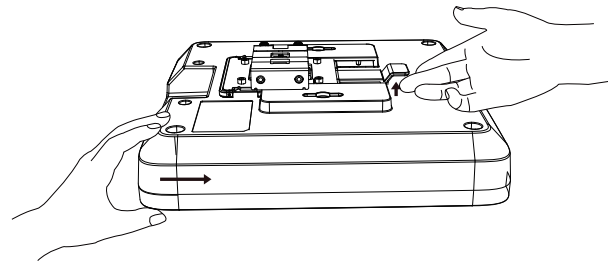


Fig.1-2

Wall Mount Installation


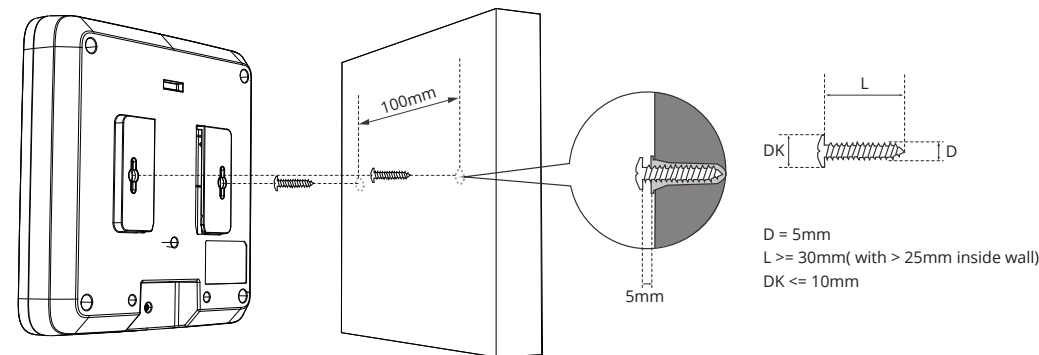


Fig.1-1

Web UI sign-in

- 1 Customer can use WebUI to configure EAI2620P. In order to login WebUI, please
- Open a web browser and enter the URL <https://192.168.0.1> in the address bar to access to the Access Point.
 - Log in to the Web UI using the default username: admin and password (Located on bottom of your Access Point).

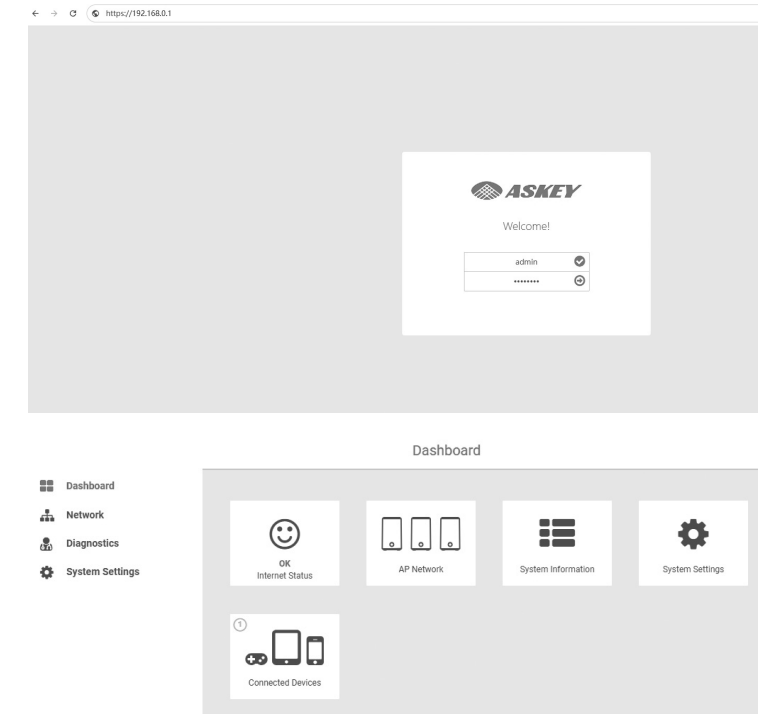

Regulatory Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC regulations restrict the operation of this device to indoor use only.

The operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet in the 5.925-6.425 GHz band.

Transmitters in the 5.925-7.125 GHz band are prohibited from operating to control or communicate with unmanned aircraft systems.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.