 
 
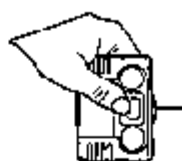 



OPERATING INSTRUCTION




- PRESS BUTTON:
CAR GOES FORWARD.



 - RELEASE BUTTON:
CAR TURNS REVERSE.

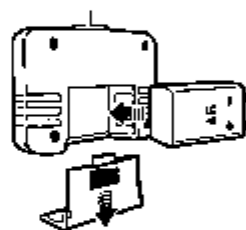

USE A COIN TO OPEN

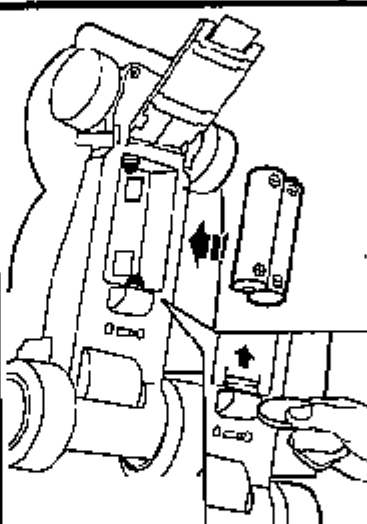 


YOUR HOT RODS PERFORMS BEST ON HARD, FLAT, UNCARPETED SURFACE.

USE 2 "AA" SIZE BATTERIES FOR CAR BODY (NOT INCLUDED).

USE 1 "9V" BATTERY FOR CONTROLLER (NOT INCLUDED).

 ALKALINE BATTERIES RECOMMENDED.

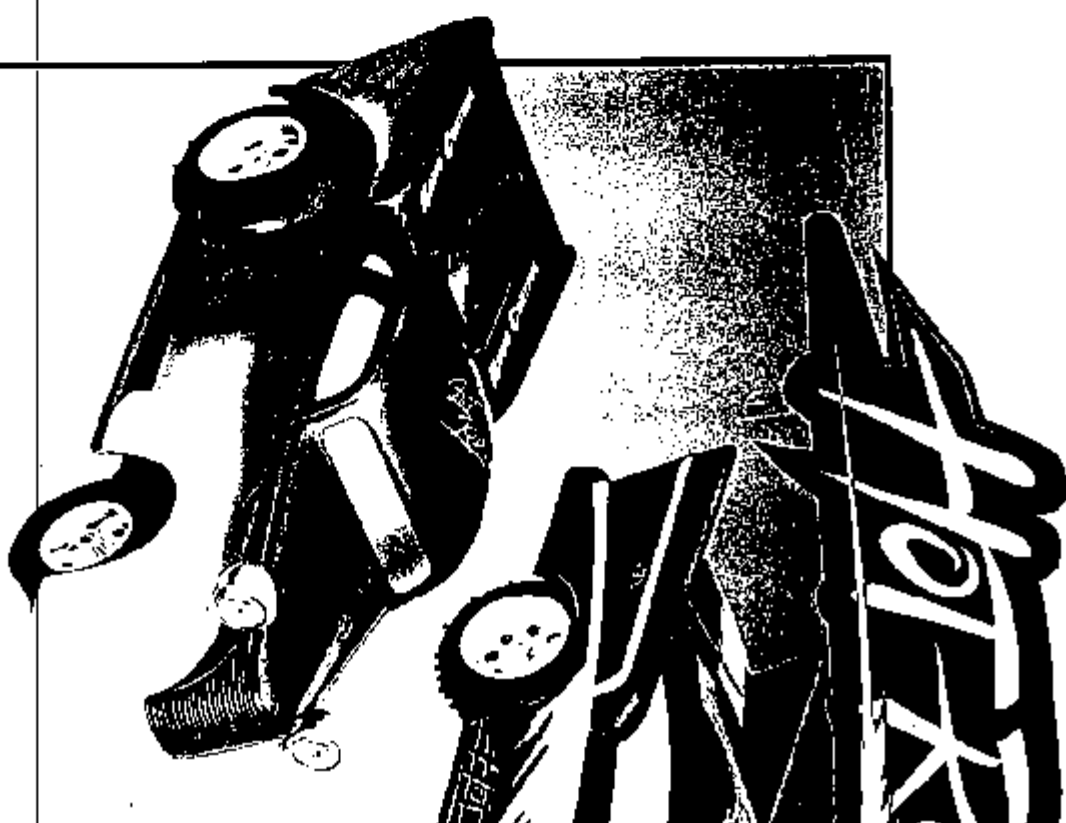

MINOR VARIANCES MAY OCCUR IN ACTUAL PRODUCTION FROM ITI



 
©1999 ECHO TOYS LTD. ALL RIGHTS RESERVED
8A & B, TAI PING INDUSTRIAL CENTRE,
BLOCK 1, 57 TING KOK ROAD, TAI PO, NT, HONG KONG.

Made in China for
Kmart Corporation
Troy, Michigan 48084

CAUTION:
DO NOT MIX ALKALINE, STANDARD
(CARBON-ZINC) OR RECHARGEABLE
(NICKEL-CADMIUM) BATTERIES.
DO NOT MIX OLD AND NEW BATTERIES.
OBSERVE CORRECT POLARITY.
REMOVE BATTERIES WHEN NOT IN USE.

2X

BUTTON:
REVERSE.

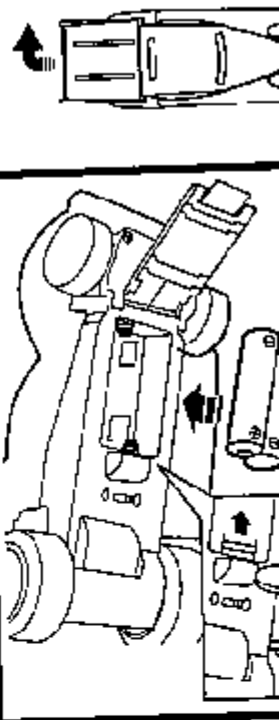

DS PERFORMS BEST ON HARD, FLAT, UNCARPETED SURFACE.

**SIZE BATTERIES FOR CAR BODY (NOT INCLUDED).
BATTERY FOR CONTROLLER (NOT INCLUDED).**

IE BATTERIES RECOMMENDED.

**H999 ECHO TOYS LTD. ALL RIGHTS RESERVED
A & B, TAI PING INDUSTRIAL CENTRE,
LOCK 1, 57 TING KOK ROAD, TAI PO, NT, HONG KONG.**

**Made In China for
Kmart Corporation
Troy, Michigan 48064**

MINOR VARIANCES MAY OCCUR IN ACTUAL PRODUCTION FROM ITEMS DEPICTED.



CAUTION:
DO NOT MIX ALKALINE, STANDARD
(CARBON-ZINC) OR RECHARGEABLE
(NICKEL-CADMIUM) BATTERIES.
DO NOT MIX OLD AND NEW BATTERIES.
OBSERVE CORRECT POLARITY.
REMOVE BATTERIES WHEN NOT IN USE.



**NO - 9
MADE**



DON'T THROW THE BOX AWAY, IF YOU DO NOT FIND AN INSTRUCTION SHEET INCLUDED, YOU MAY FIND THE INFORMATION ON THE BOX.

- Carefully read your operating instruction every time before you play with your HOT RODS.
- Check all batteries before installation. Replace all batteries if anyone is damaged.
- Observe correct polarity marking in battery compartment during installation.
- When you finish operating your HOT RODS, set the ON/OFF switch to OFF. This saves battery power.
- If your HOT RODS moves slowly, or does not move at all, replace the batteries with fresh ones.
- For better performance, hold transmitter antenna up-right and not pointing at the vehicle.
- If the motor runs, but the HOT RODS does not respond to the controller, replace the controller's 9-volt battery.
- When you're not planning to play with the HOT RODS for a few days, remove the batteries from the HOT RODS and the controller. Never leave weak or dead batteries in either unit. The batteries might leak damaging chemicals.
- Do not use the HOT RODS on a wet floor or in mud or sand. Never play in streets with traffic.
- If a CB transceiver is being operated nearby, it might interfere with your control of the HOT RODS. If this happens, move your HOT RODS to a new location or wait until the CB unit stops transmitting.
- **CAUTION:** The user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.