

CONNECTING YOUR SOUNDBAR USING BLUETOOTH (OPTIONAL)

Pairing your devices

- 1 Turn on your soundbar.
- 2 Place your Bluetooth device within 30 ft. (10 m) of your soundbar.
- 3 Press the  button on your soundbar or the **SOURCE** button on the remote control repeatedly until the source indicator blinks blue.
- 4 Navigate to your device's Bluetooth settings, turn on Bluetooth, then search for available devices. See the documentation that came with your audio source device for more information on pairing.
- 5 On your Bluetooth device, select **NS-HTSB22** from the device list. Repeat steps 1-4 if **NS-HTSB22** is not displayed.
- 6 If a PIN code is requested, enter **0000**.
- 7 When pairing is completed the LED lights solid blue.

Notes:

- Some devices, such as an iPhone, connect immediately after pairing so the Bluetooth indicator on your soundbar remains on. Other devices, such as notebook computers, may ask you if you wish to connect. In this instance, the Bluetooth indicator continues to blink until a connection is established.
- When you turn on your soundbar, it automatically connects to the last connected device if that device is in range. To connect to a different paired device, turn off Bluetooth or unpair from the currently paired device and manually connect to the other paired device.
- When a call is received while playing music through a phone, the music stops automatically.
- When the call ends, depending on the setting of your phone, the current track may resume playback.

Disconnecting your devices


Turn off the Bluetooth function on your device.

Note: For more information about using Bluetooth, see the documentation for your Bluetooth devices.

3 USING YOUR SOUNDBAR

Using the remote control

- 1 Install two AAA batteries into the battery compartment.
- 2 Point the remote control directly at the remote control sensor on the front of your soundbar. You must be within approximately 50 ft. (15 m) of your soundbar.

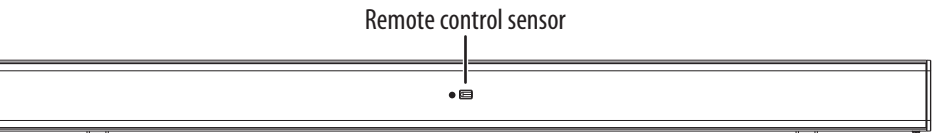

Listening to your soundbar

- 1 Press the  button on your soundbar or remote control. The power indicator turns off and the source indicator lights.
- 2 Turn on the audio source device connected to your soundbar and begin playback.
- 3 Press the  button on your soundbar repeatedly to select the audio source or press the selected source button on the remote control until you hear sound from your soundbar.
Note: If you use the **HDMI (ARC)** or **OPTICAL** jack, you must change your device's audio output setting to **PCM** format. Refer to the manual that came with your audio source device for additional information.
- 4 Adjust the volume on your soundbar or the audio source device to a comfortable level.
WARNING: Continuous use of high volume sound may permanently damage your hearing.
- 5 Press the  button to turn off your soundbar. The power indicator lights red.

IR remote learning function (optional)

Your soundbar can learn 12 button codes from most remote controls, so you can easily control the sound with both the soundbar remote and the TV remote. You can also replace the soundbar remote with another remote.

Programming using the Manual Sequence Learning Mode:

- 1 Point your soundbar's remote control (or the remote you want to program) within 4 inches (10 cm) of the the remote control sensor on your soundbar.
- 2 Press and hold the soundbar's power button from standby for five seconds to turn on the Manual Sequence Learning mode. The Status indicator blinks red rapidly and the soundbar starts to learn
- 3 Short press the button on your soundbar's remote control that you want the other remote control to learn. The Status indicator blinks blue once.
- 4 Short press the button on the other remote control you want to teach. The Status indicator blinks green once. The other remote control has learned the remote function.

Repeat steps 3 and 4 to learn more remote buttons you want.

Programming using the Preset Sequence Learning Mode:

- 1 Point your soundbar's remote control (or the remote you want to program) within 4 inches (10 cm) of the the remote control sensor on your soundbar.
- 2 Press and hold your soundbar's power button from standby for two seconds to turn on the Preset Sequence Learning mode. The Status indicator blinks red slowly and your soundbar starts to learn the buttons in the following sequence: VOL -, VOL +, MUTE, BASS, POWER, THEATER, STANDARD, NEWS, SOURCE, PLAY / PAUSE, PREVIOUS, NEXT
- 3 Short press the other remote control button and the status indicator blinks blue once when your soundbar receives this button.
- 4 Short press the same button again. The status indicator blinks green once when your soundbar learns this remote button.

Repeat steps 3 and 4 to learn more remote buttons you want.

Deleting all learned remote codes:

Press and hold the power button for 10 seconds to clear all learned codes. The Status Indicator blinks white two times when all the learned remote codes are cleared.

Notes:

- If the Status indicator blinks orange, your soundbar can't learn the button code. Try another button or another remote control.
- During IR learning mode, short press the SOURCE button to skip current learning button code. Press and hold the SOURCE button two seconds to exit the learning mode.

4 MOUNTING YOUR SOUNDBAR

If you want to mount your soundbar below a wall-mounted flat screen TV, see our online *User Guide*. Or follow the instructions on the mounting template (included) using the mounting hardware (included).

TROUBLESHOOTING

The power doesn't come on.

- Make sure that the AC power cord is securely plugged into the power outlet and your soundbar.
- Make sure that your soundbar is turned on. It doesn't turn on automatically when you turn on your TV or other sound source.

The remote control doesn't work.

- Remove any obstacles between the remote control and the IR sensor on your soundbar.
- The remote control batteries may be exhausted. Replace them.
- Move closer to your soundbar. The remote control is only effective to approximately 50 ft. (15 m) from your soundbar and within 30° on either side.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

The sound is breaking up or buzzing.

- Make sure that you are connected to an audio out jack on your sound source. The jack doesn't send audio out if it is an input jack.
- Make sure that all connections are secure and cables are not broken or damaged.
- If you're using the **HDMI (ARC)** or **OPTICAL** jack, make sure that the source device's audio source is set to the PCM format. See the documentation that came with the audio source device (such as a TV or DVD/Blu-ray player) for additional information.
- Connect to a different source device (such as a TV or DVD/Blu-ray player) to see if the buzzing still occurs. If it doesn't, this may indicate an issue with the original source device.
- Use a different connection method (for example, try **HDMI (ARC)** or **OPTICAL** jack instead of the **AUX IN** jack) between your soundbar and the source device to make sure that the jacks on both devices are still working.
- Make sure that the audio cable you're using is not damaged or broken. Try using another one.

I can hear sound from both my TV and my soundbar.

- Turn off or mute the internal speakers of your TV. See your TV's *User Guide* for instructions.

My TV remote doesn't control my soundbar.

- Make sure that your soundbar has learned your TV remote's button codes. See IR Remote Learning Functions for instructions for setup.
- Universal remotes only control your soundbar's volume. Use the controls on your soundbar or the remote that came with it to change your soundbar's audio source or sound mode.

- Make sure that you aim your universal remote at the remote sensor on the front of your soundbar.
- Make sure that you select the correct source on your universal remote.

There is no sound or very low sound.

- Make sure that you're connected to an audio out jack on your sound source. The jack doesn't send audio out if it is an input jack.
- Make sure that the volume level of your soundbar is set to an adequate level.
- If you're using Bluetooth, turn up the volume on your Bluetooth device.
- If you're using Bluetooth, make sure that your Bluetooth device isn't paired with another device.
- Make sure that the volume level isn't muted. Press the  button on the remote control to restore the sound output.
- Make sure that the correct audio source is selected. Press the  button on your soundbar or the **SOURCE** button on your remote control repeatedly to switch to the correct audio source.
- Make sure that the power is on and all connections are secure.
- Make sure that the volume is turned up on your sound source.
- If you are using the **HDMI (ARC)** or **OPTICAL** jack, make sure that the source device's audio source is set to the PCM format. See the documentation that came with the audio source device (such as a TV or DVD/Blu-ray player) for additional information.
- Make sure that the audio cable you're using isn't damaged or broken. Try using another one.
- Make sure that the sound source device is outputting sound to your soundbar.

There is no sound or low volume in Bluetooth mode.

- Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and NS-HTSB22 is selected.
- Turn up the volume on your soundbar.
- Turn up the volume on your Bluetooth device.
- Make sure that your Bluetooth device is not muted.
- Make sure that you're playing music from your Bluetooth device.
- Make sure that you have selected the Bluetooth source on your soundbar.
- Make sure that your Bluetooth device is not paired to a different Bluetooth speaker or other device.

My soundbar won't connect to my Bluetooth device.

- Shorten the distance between your soundbar and your Bluetooth device.
- Turn your devices off, then on. Re-pair your soundbar and your Bluetooth device.
- Make sure that your soundbar isn't paired to another Bluetooth device.
- Make sure that your soundbar and Bluetooth device are both in pairing mode.
- Make sure that you have selected NS-HTSB22 on your Bluetooth device.

My Bluetooth device keeps unpairing.

- Shorten the distance between your soundbar and your Bluetooth device.
- If the battery on your Bluetooth device is low, recharge the battery.

"NS-HTSB22" doesn't appear on my Bluetooth device.

- Shorten the distance between your soundbar and your Bluetooth device.
- Put your soundbar into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.
- Make sure that your Bluetooth device is visible to other devices. For more information, see the documentation that came with your Bluetooth device.

The sound is lagging or I hear an echo.

- Turn off or mute the internal speakers of your TV. See your TV's *User Guide* for instructions.

LEGAL NOTICES

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC and Industry Canada radiation exposure limits set forth for an uncontrolled environment.

Industry Canada Compliance IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Conformité à Industrie Canada Déclaration d'IC

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC et du Canada établies pour un environnement non contrôlé.

IFETEL Statement

La operación de este equipo está sujeta a las siguientes dos condiciones: 1. es posible que este equipo o dispositivo no cause interferencia perjudicial y 2. este equipo debe aceptar cualquier interferencia, incluyendo la que pueda causar su propia operación no deseada.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003;

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This Transmitter must be installed to provide a separation distance of at least 50mm from all persons.

Cet émetteur doit être installé pour fournir une distance de séparation d'au moins 50mm de toute personne.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada)
or 01-800-926-3000 (Mexico)

www.insigniaproducts.com



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries



12. 005. 0004. 04395

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2020 Best Buy. All rights reserved.