 





20" 2.0 Soundbar
Model:100024201

Wall Mounting Template

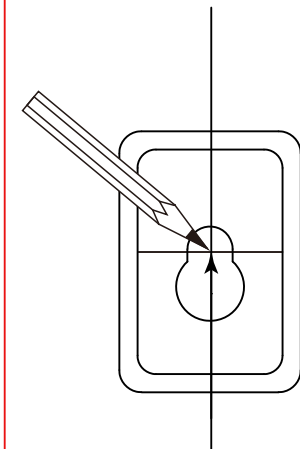


How to Wall-mount the Soundbar

 1. Place the included wall mounting template against to the wall. Mark the two bracket holes using a pencil (not included).

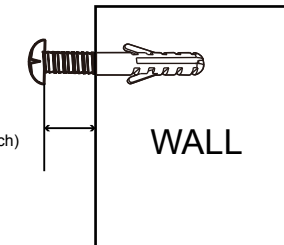

2. Fasten the screws and screw brackets to the wall on the bracket holes
Screw Size: 47 x 4mm (1.85 x 0.157inch)
Screw Bracket Size: 40 x 8mm (1.575 x 0.315inch)

 - ### 3. Hang the soundbar on the screws

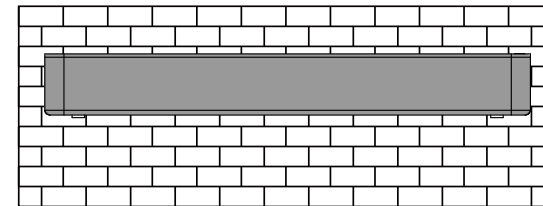

INSERTS FOR FCC ID

1. **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the user experiences interference while using this equipment, the user is advised to take the following steps to correct the interference by one or more of the following measures:
- ☐ Reorient or relocate the receiving antenna.
 - ☐ Increase the separation between the equipment and receiver.
 - ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - ☐ Consult the dealer or an experienced radio/TV technician for help.
3. **FCC Exposure Statement**
- To maintain compliance with FCC's RF Exposure guidelines, this equipment is designed to be used with the supplied antenna cable and antenna. The maximum permitted exposure is limited to 20cm from the radiator body of use. Only the supplied antenna

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not use any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. The plug is designed to fit into one of two types of power outlets. If you have a two-pronged plug, it will fit into a two-pronged outlet having one blade twice the width of the other blade and a third grounding prong. The wide blade or the third prong will not fit into a standard two-pronged outlet. To avoid fire or electric shock, do not attempt to force the plug into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the point of exit from the appliance, and at the point where they exit from the appliance.



IMPORTANT SAFETY INSTRUCTIONS

19. The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



IMPORTANT SAFETY INSTRUCTIONS

20. The equipment shall be used at maximum 35 degree C ambient temperature.
21. **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- 
22. Batteries should not be exposed to excessive heat such as sunshine, fire or the like.
- WARNING:** Danger of explosion if the remote control batteries are incorrectly replaced. Replace only with the same or equivalent type.

IMPORTANT SAFETY INSTRUCTIONS

- CAUTION:**
- Risk of explosion if the battery is replaced by an incorrect type
 - replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
 - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
 - leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
 - a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

480x80mm folding to 80x80mm
18.9x3.15in folding to 3.15x3.15in

		时 间	20201203	订 单 号		尺寸/套装数	480X80mm(展开尺寸) 80x80mm(成型尺寸)
品 牌	ONN	公司型号	SB2125	客户型号		材质/厚度	80g书纸
版 本	A0	设计内容	挂墙示意卡	料 号		盒型/页码/条码	6页 风琴折页
电 子 软 件		结 构 电 声	林全华	业 务	陈琳云	字体要求	如文件
设 计 者	李莹	标 准 化	李洪波	项 目 经 理 产 品 经 理	肖贞钊	印刷/表面处理	双面印刷
备 注						工艺/单双泊/AB同版	风琴折页
						公差/用量	正负公差≥0.02mm 用量1