 




USER GUIDE

2.1 Channel Soundbar

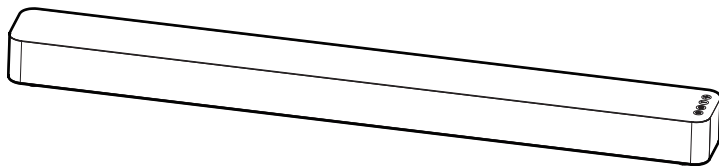

36017626

Contents & Information

CONTENTS & INFORMATION

OVERVIEW	1
WHAT'S IN THE BOX?	3
WALL MOUNTING SETUP (OPTIONAL)	4
ASSEMBLY	5
FIRST TIME SETUP	7
OPERATION	9
CLEANING & CARE	13
SPECIFICATIONS	13
TROUBLESHOOTING	14

Features

- 2.1 Channels
- 2 Internal speakers + 1 built-in subwoofer
- Dolby Atmos®
- Roku TV Ready®
- Bluetooth®

Connections

- 1 HDMI® (eARC)
- 1 Optical
- 1 USB
- 1 AUX

Overview

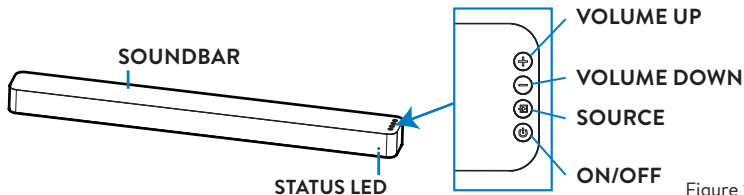 


Figure 1

Standby	Solid Red
Optical	Solid Purple
Aux in	Solid White
USB	Solid Green
HDMI(eARC)	Solid Yellow
Bluetooth pairing mode	Flashing Blue
Bluetooth device connected	Solid Blue
Volume up/down	Corresponding source color flash 1 time
Maximum/minimum volume	Corresponding source color flash 3 times
Mute	Slow flash
Movie mode	Corresponding source color flash 2 times
Talk mode	Corresponding source color flash 2 times
Music mode	Corresponding source color flash 2 times
Bass +/-	Corresponding source color flash 1 time

Table 1

REMOTE CONTROL

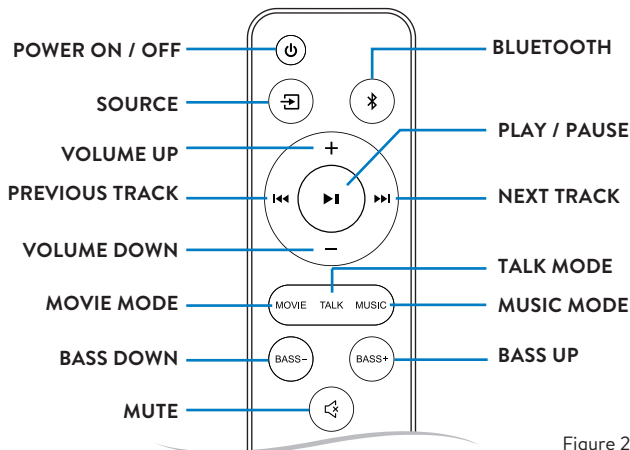 


Figure 2

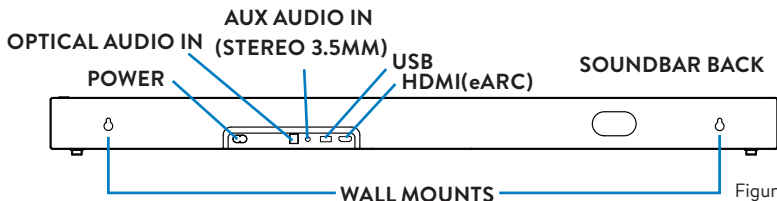 


Figure 3

What's in the Box?

PARTS

Part	Description	Qty
1	Soundbar	1
2	Power cable	1
3	HDMI cable	1
4	Optical cable	1

Part	Description	Qty
5	3.5mm AUX cable	1
6	Remote control (2 AAA batteries)	1
7	Wall mounting template	1
8	Wall mounting kit	1

Table 2

PARTS DIAGRAM

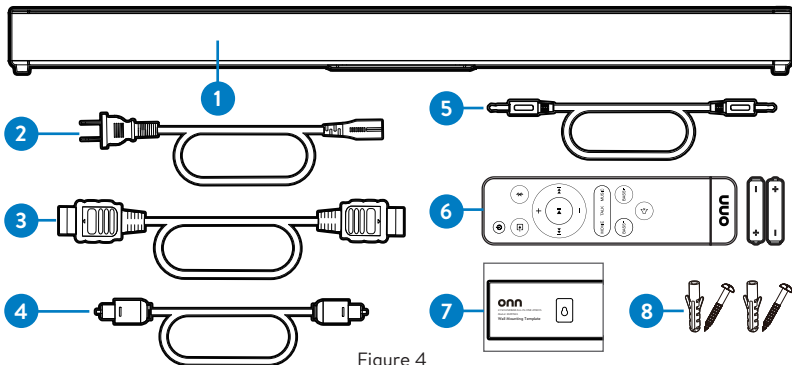 


Figure 4

Wall Mounting Setup (Optional)

SETUP		TOOLS NEEDED	
		 Drill bit	 Drill
		 Ruler	 Level
			 #1 Phillips Screwdriver
			 Hammer

Table 3

ACCESSORIES NEEDED (SUPPLIED)

Part	Description	Picture	Qty
A	Anchor		2
B	Screws		2

Table 4

 ONN Tools & Hardware Wall Mounting Template		Wall mounting template	
---	---	------------------------	---

(Wall mounting, optional)

Figure 5

Assembly

ON A SURFACE

1A. CENTER

1. Center the soundbar below the TV, close to ear level.
2. Go to First Time Setup for further instructions.

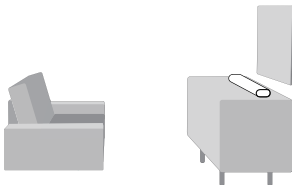


Figure 6

ON A WALL

1B. PLACE

1. Place wall mounting template on wall under TV.
2. Mark Bracket holes (Ensure enough space between Soundbar and TV) See 3B. HANG

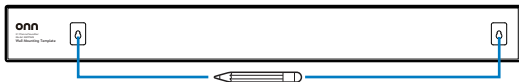



Figure 7

- Be sure screws will be attached to wood studs or use anchors for drywall, or anchors for concrete or brick walls.

First Time Setup

1. CHOOSE CABLE

Connect one cable to Soundbar and TV

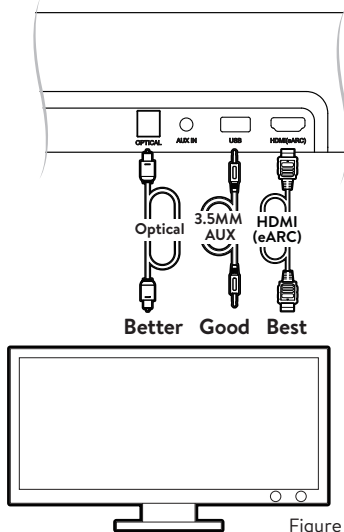

- To Enjoy **Dolby** Atmos content, your TV must support the HDMI-CEC and Audio Return Channel (eARC) function.
- Enable CEC and ARC/eARC on TV
- Settings for CEC and ARC/eARC may differ by TV manufacturer. See TV's user guide for more.
- To control soundbar volume on TV remote, enable System Audio Control in CEC menu.
- CEC Function naming may differ by TV Manufacturer. See TV's user guide for more.
- Only HDMI 2.0 cables (and higher) support eARC.
- * If no Audio using Digital Inputs see troubleshooting.

Tips: If you have a Roku TV®, setup will be easy. Just use the included HDMI cable to connect your soundbar to the HDMI (ARC/eARC) port on your TV and follow the on-screen instructions.

2. CONNECT POWER


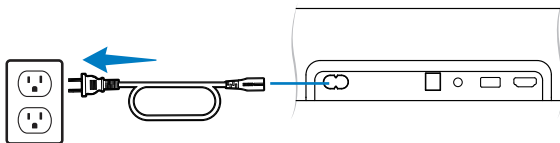



Figure11

3. INSTALL BATTERIES


In remote control

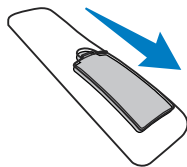

Remove battery door

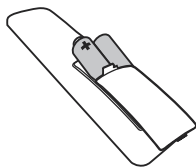

Insert batteries

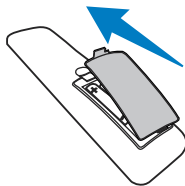

Close battery door

Figure12



WARNING

Do not mix old
and new batteries.



WARNING

Do not mix alkaline, standard (carbon-zinc) or
rechargeable (ni-cad, ni-mh, etc.) batteries.

onn

For product assistance &
missing or replacement parts:

WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am- 9:00pm CST

**THIS GUIDE CONTAINS
IMPORTANT SAFETY
INFORMATION.**

PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Find more at **Walmart.com**

 
Operation

BLUETOOTH® OPERATION



1. POWER ON/OFF

Remote Control or Soundbar

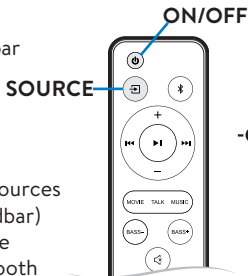

-OR-


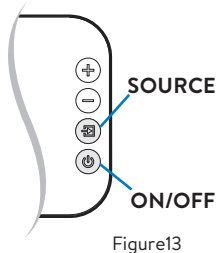


Figure13

2. SELECT SOURCE

To switch between audio sources
(Remote Control or Soundbar)
Or press $\times 1$ on the remote control to go to the Bluetooth source directly

Press and hold

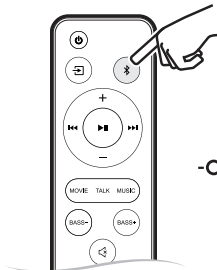

-OR-

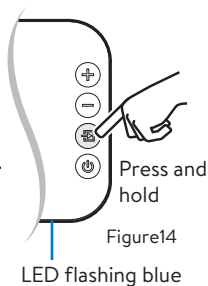




Figure14

3. PAIR DEVICE

Press and hold the $\times 1$ button on remote control or the $\square$ button on the soundbar

4. SEARCH ON DEVICE

Select "onn 36" Soundbar" on device

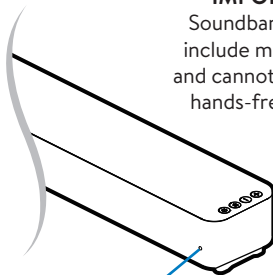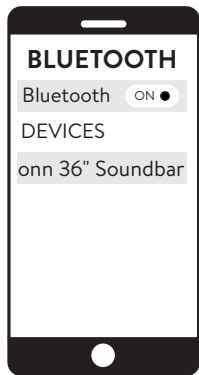

Device is connected when
Blue LED stops flashing
and becomes solid.



IMPORTANT

Soundbar does not
include microphone
and cannot operate as a
hands-free device.

Figure15

5. PLAY AUDIO

From device

6. VOLUME

Controlled by Device, Remote Control
or Soundbar



WARNING

High volume levels can
damage your hearing.
Reduce the volume levels
before pressing Play.

Bluetooth use

Your Soundbar supports music streaming from smartphones, tablets, and computers with Bluetooth capability.

Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the Soundbar, as long as you stay within range of the Soundbar, your device should remain paired.

If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.

A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.

USB OPERATION



1. INSERT THE USB DEVICE

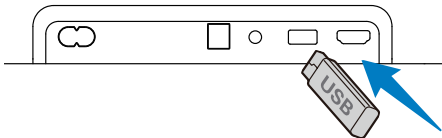


Figure 16

2. SELECT SOURCE

Select USB Mode(Remote Control or Soundbar  button)

3. PLAY AUDIO

Tips: Support USB music of MP3 format.

Button	Action
▶	Play, pause or resume play.
◀◀/▶▶	Skip to the previous or next track.
+/-	Increase/decrease the volume.

Table 6

Cleaning & Care

CLEANING

- Wipe down surfaces with a light cloth.
- Never use abrasive pads to clean device.
- Avoid using liquids to clean device.



CAUTION

Ensure the unit is fully unplugged from the power supply before cleaning.

Specifications

Assembled LxWxH

36 x 4.1 x 2.5 Inches

Troubleshooting

Problem	Cause	Solution
No power	Power off	Press " ⏻ " button on remote control or on Soundbar
	Loose power cord	Ensure the power cord is securely connected
	Faulty outlet	Plug a different device into the electrical outlet to verify that the outlet is working correctly
No audio	Low Volume / Mute	Press " 🔊 "
		Increase volume
	Some TVs do not Pass through Digital Audio*	Change TV output to PCM
	Input source	Select different Input source
	Not All TVs have Audio outputs listed	Connect directly to another device (Blu-Ray, Game System, etc.)
	TV set to variable audio output*	Set audio output to fixed or standard, NOT variable
	Bluetooth source device	Increase volume / unmute source device

*Consult your TV's user manual for more detailed information.

Table 7

Problem	Cause	Solution
Bluetooth break-up or disconnect	Source too far	Move the source device closer to soundbar
	Solid obstruction	Move source device into line-of-site of soundbar
	Other wireless devices	Turn off / move devices away (wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens)
No voice prompt	Disabled the voice prompt	Press & hold + and - buttons simultaneously on the unit or remote control for 5 seconds to enable the voice prompt
Voice prompt is too noisy	Enabled the voice prompt	Press & hold + and - buttons simultaneously on the unit or remote control for 5 seconds to disable the voice prompt

Table 8

2B. INSTALL

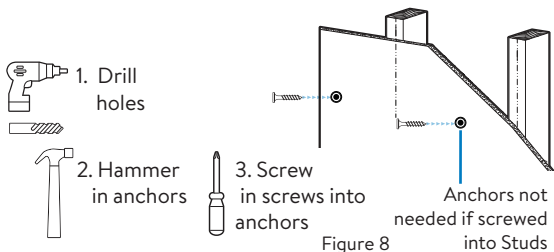 


Figure 8

REQUIRED

(A) Anchors x2



(B) Screws x2



Table 5



CAUTION

If you are unfamiliar with power tools or layout of electrical wiring in the walls of your home, consult a professional installer.

3B. HANG

1. Go to First Time Setup to connect the cables.
2. Mounting hooks on screws then slide down to lock in place.

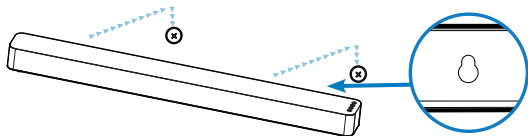 


Figure 9

Note: Make sure wall mount orientation matches example



WM_ONN
Fenda
100043851
36 in. 2.1 Soundbar - Built-in Sub & ROKU TV Ready
OPT01_QSG
12/25/2024

 
Filename: WM_ONN_Fenda_100043851_36 in. 2.1 Soundbar - Built-in Sub & ROKU TV Ready_OPT01_QSG_A
Date: 25 Dec 2024
Stock: 157g C2S
Size: 22" x 5.5"

5.5"
139.7mm

QUICK START GUIDE

onn

2.1 Channel Soundbar

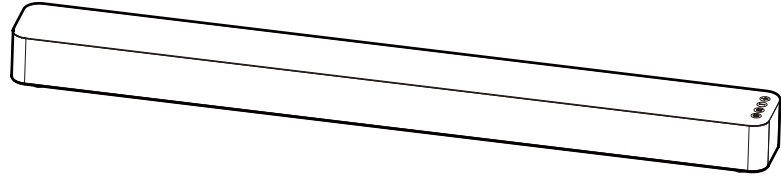

36017626

Overview

SOUNDBAR

STATUS LED

VOLUME UP

VOLUME DOWN

SOURCE

ON/OFF

Figure 1

Standby	Solid Red
Optical	Solid Purple
Aux in	Solid White
USB	Solid Green
HDMI (ARC)	Solid Yellow
Bluetooth pairing mode	Flashing Blue
Bluetooth device connected	Solid Blue
Volume up/down	Corresponding source color flash 1 time
Maximum/minimum volume	Corresponding source color flash 3 times
Mute	Slow flash
Movie mode	Corresponding source color flash 2 times
Talk mode	Corresponding source color flash 2 times
Music mode	Corresponding source color flash 2 times
Bass +/-	Corresponding source color flash 1 time

Table 1

REMOTE CONTROL

POWER ON / OFF

SOURCE

VOLUME UP

PREVIOUS TRACK

VOLUME DOWN

MOVIE MODE

BASS DOWN

MUTE

BLUETOOTH

PLAY / PAUSE

NEXT TRACK

TALK MODE

MUSIC MODE

BASS UP

Figure 2

AUX AUDIO IN (STEREO 3.5MM)

USB

HDMI(ARC)

SOUNDBAR BACK

WALL MOUNTS

Figure 3

For product assistance:
WE CAN HELP
1-888-516-2630
7 DAYS/WEEK 7:00am- 9:00pm CST

SEE USER GUIDE FOR:

• Contents & Information

• Overview

• What's in the Box?

• Wall Mounting Setup (Optional)

• Assembly

• First Time Setup

• Operation

• Cleaning & Care

• Specifications

• Troubleshooting

Find more at [Walmart.com](#)

Manufactured in Vietnam for Walmart Inc. Version_08282025

 
5.5"
139.7mm

5.5"
139.7mm

5.5"
139.7mm

5.5"
139.7mm

22"
558.8mm

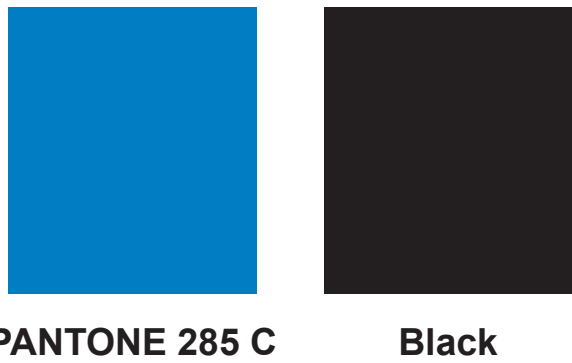

First Time Setup

! WAIT

See User Guide for full installation on a wall.

! NOTE

*See User Guide for accessing Dolby Atmos Content

1. CHOOSE CABLE

Connect one cable to Soundbar and TV

Optical

3.5MM AUX

HDMI (ARC)

Better Good Best

Figure 4

2. CONNECT POWER

Figure 5

3. INSTALL BATTERIES

In remote control

Remove battery door

Insert batteries

Close battery door

Figure 6

! WARNING

Do not mix old and new batteries.

! WARNING

Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Bluetooth® Operation

1. POWER ON/OFF

Remote Control or Soundbar

ON/OFF

SOURCE

Figure 7

2. SELECT SOURCE

To switch between audio sources (Remote Control or Soundbar) Or press  x1 on the remote control to go to the Bluetooth source directly

Press and hold

Press and hold

LED flashing blue

Figure 8

3. PAIR DEVICE

Press and hold the  button on remote control or the  button on the soundbar

Figure 9

4. SEARCH ON DEVICE

Select "onn 36" Soundbar " on device

! IMPORTANT

Soundbar does not include microphone and cannot operate as hands-free device.

! WARNING

High volume levels can damage your hearing. Reduce the volume levels before pressing Play.

5. PLAY AUDIO

 
From device

6. VOLUME


Controlled by Device, Remote Control or Soundbar

- Cut line
- Fold line
- Copy safe area
- Outside Bleed
- Glue area


This document is intended only for use as a reference for the individual or entity to which it is being presented and may contain information which is privileged and confidential. No reproduction or distribution is permitted without the consent of r-pac International Corporation.

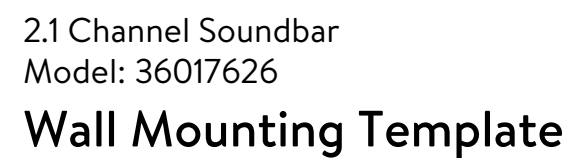

 1. Place the included wall mounting template against the wall. Mark the two bracket holes using a pencil (not included).



14~15mm
(0.55~0.59 inch)

 

Category	Percentage
100%	100%



1. Read these instructions – The safety and operating instructions should be read before this product is operated.
2. Read these instructions – The safety and operating instructions should be retained for future reference.
3. Read all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this appliance near water – The appliance should not be used near water or moisture – For example, in a wet bathroom or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other appliances.
9. Do not use the appliance if it has been damaged (e.g. by fire, water, etc.) or if it has been dropped.
10. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, do not attempt to use the appliance. Consult your local electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at the plugs, convenience



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

California Prop 65 Warning :

 WARNING This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov

WARNING: Danger of explosion if the remote control batteries are incorrectly replaced. Replace only with the same or equivalent type.

LEGAL & COMPLIANCE

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

This device complies with part 15 of the FCC Rules.

RF Exposure Statement: This equipment has been tested and found to comply with the following RF exposure requirements: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3. RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator and your body.

Dolby Atmos
Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works.
Copyright © 2012 2014 Dolby Laboratories. All rights reserved.

HDMI
The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Bluetooth
The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Walmart Inc. is under license. Other trademarks and trade names are those of their respective owners.

Roku TV
Roku, the Roku logo, Roku TV Ready, and the Roku TV Ready logo are trademarks of Roku, Inc.

F&D 奋达科技			规格与工艺要求		环保要求	公差与说明
产品型号	SB2636	料号	12.005.0004.09118		■ RoHs2.0、Reach	说明书类说明： 1、公差（mm）：0<a≤50 （+0.3/-0.2），50<a≤150（+1/-0.5），>150（+1.5/-1。有特殊要求的，按标示公差执行。 2、要求图文清晰可辨，内容完整，折叠正确，无重影，墨屎、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
部件名称	挂墙示意图卡	尺寸（mm）	成型尺寸：160x80mm		■ TPCH（美国）	
设计版本	A 0	材质	80g书纸		■ 包装指令94/62/EC	
变更原因	初版发行	页码P数	12P		☐ 油墨中禁止使用矿物油（法国）	
		颜色	单黑印刷			
包装工程师	黄敏慧	表面处理	■ 无 ☐ 无光油 ☐ 哑油 ☐ 水性光油 ☐ 水性哑油 ☐ UV油 ☐ 光胶 ☐ 哑膜 ☐ 防刮花哑膜		☐ 大豆油墨印刷	
平面工程师	杨改改	工艺要求	■ 无 ☐ 封二 ☐ 封三 ☐ 封底 ☐ 按图纸排版 ☐ 其他		☐ 无氯漂白工艺	
审核	李宏	条码要求	■ 无条码 ☐ 有条码(清晰易扫描)		☐ 粘合剂为非石油基	
批准	李继华	装订方式	■ 风琴折 ☐ 包心折 ☐ 骑马钉 ☐ 胶装 ☐ 线装 ☐ 其他		☐ 其他	
日期	2025.10.28	参考	☐ 无 ☒ 有：12.005.0004.08963			