


Back of the EUT

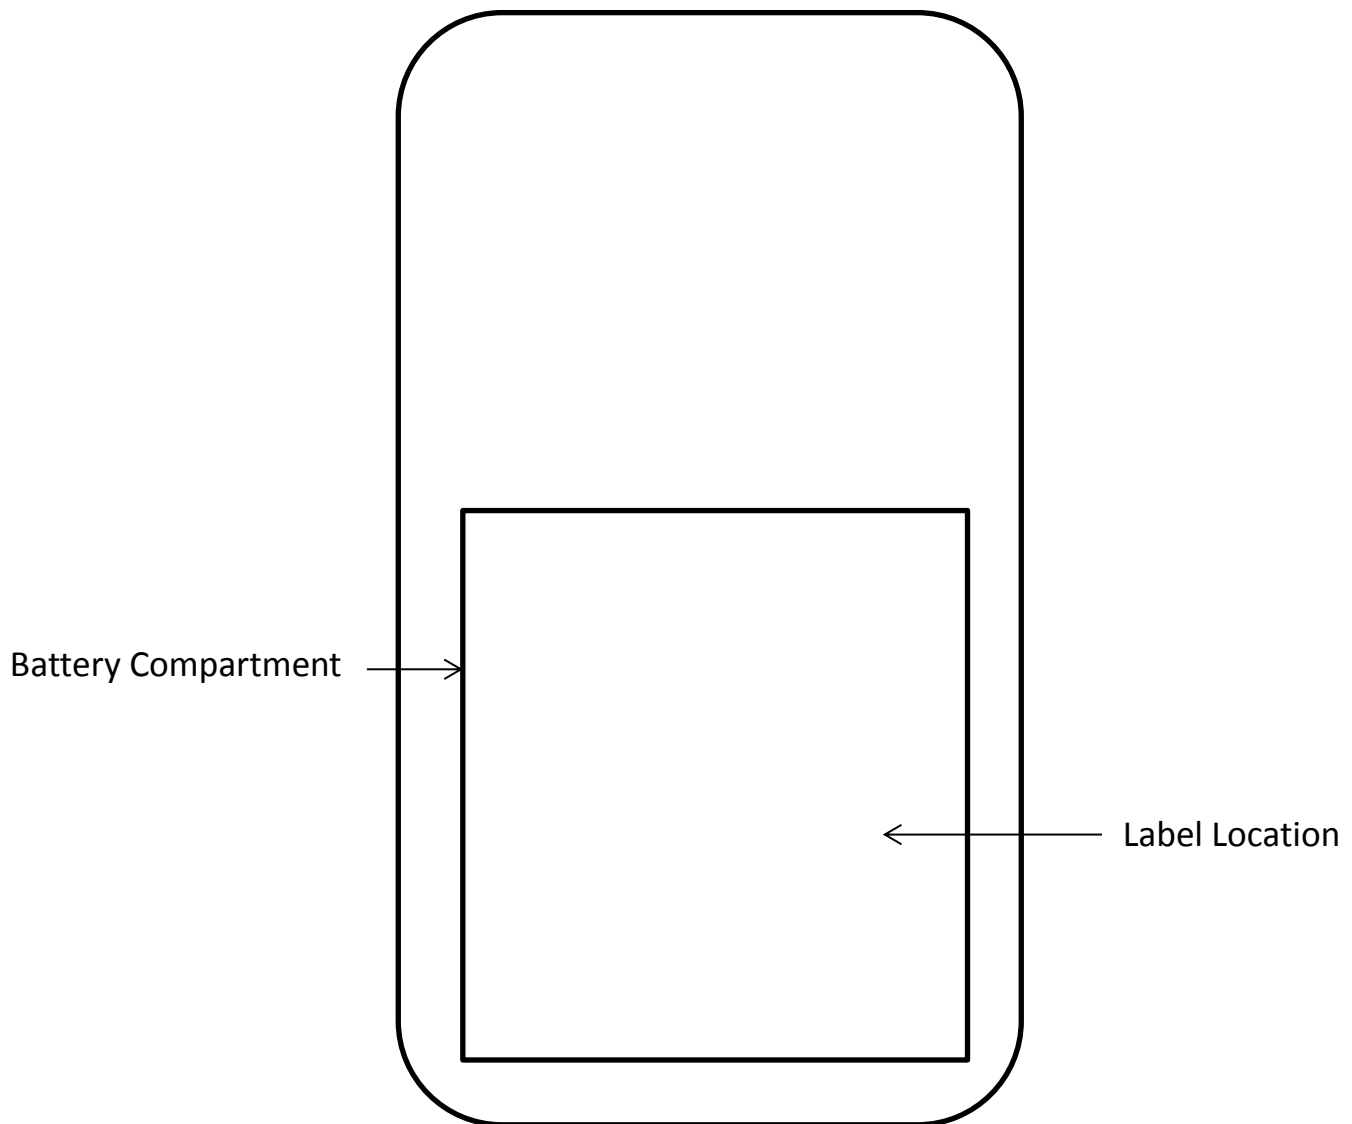

Label locates in the battery compartment and is visible to the users as they install the SIM card.