


3. Setup photo

Open mode

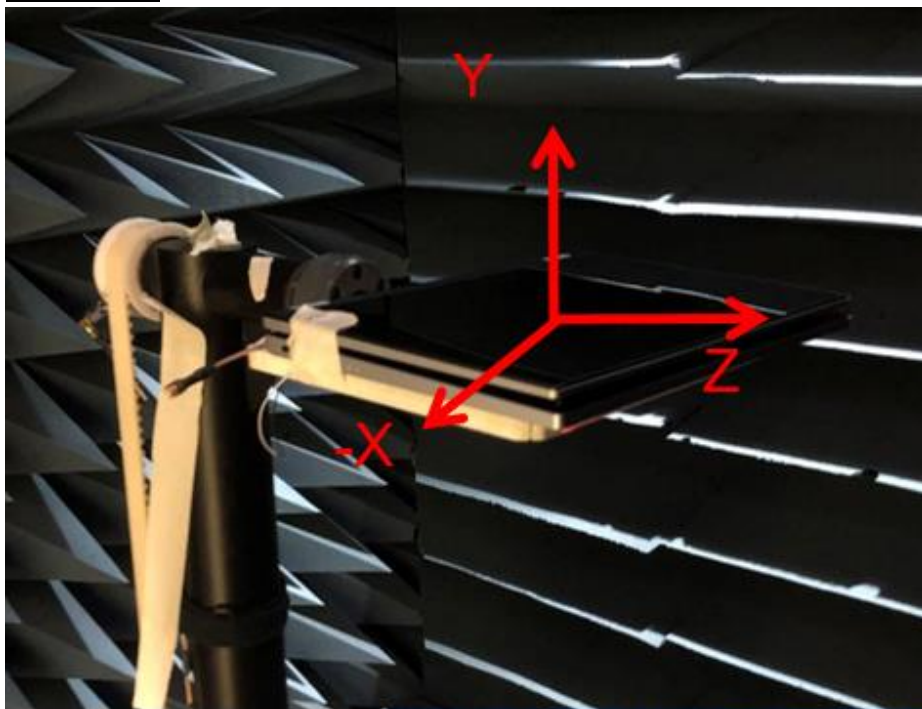


Tablet mode




Main Antenna Drawing:



Aux Antenna Drawing:

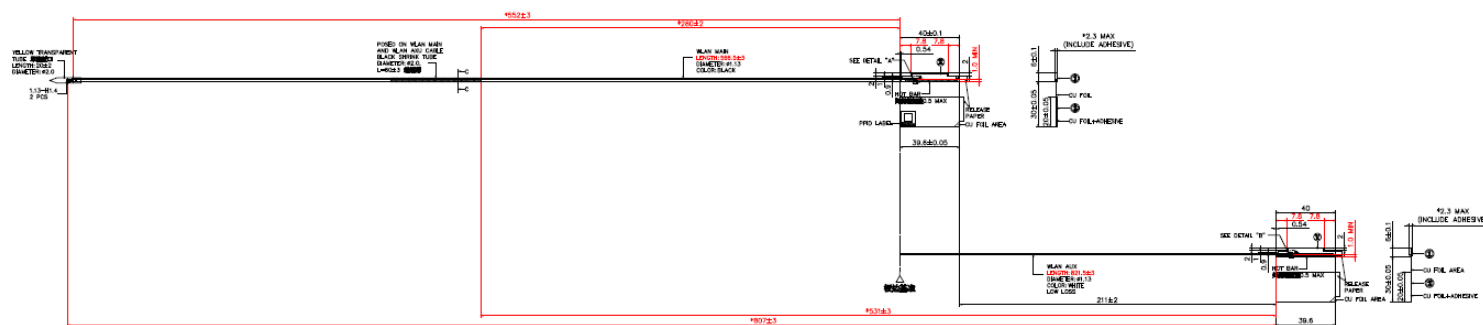

Aux Antenna Photo (Front/Back):

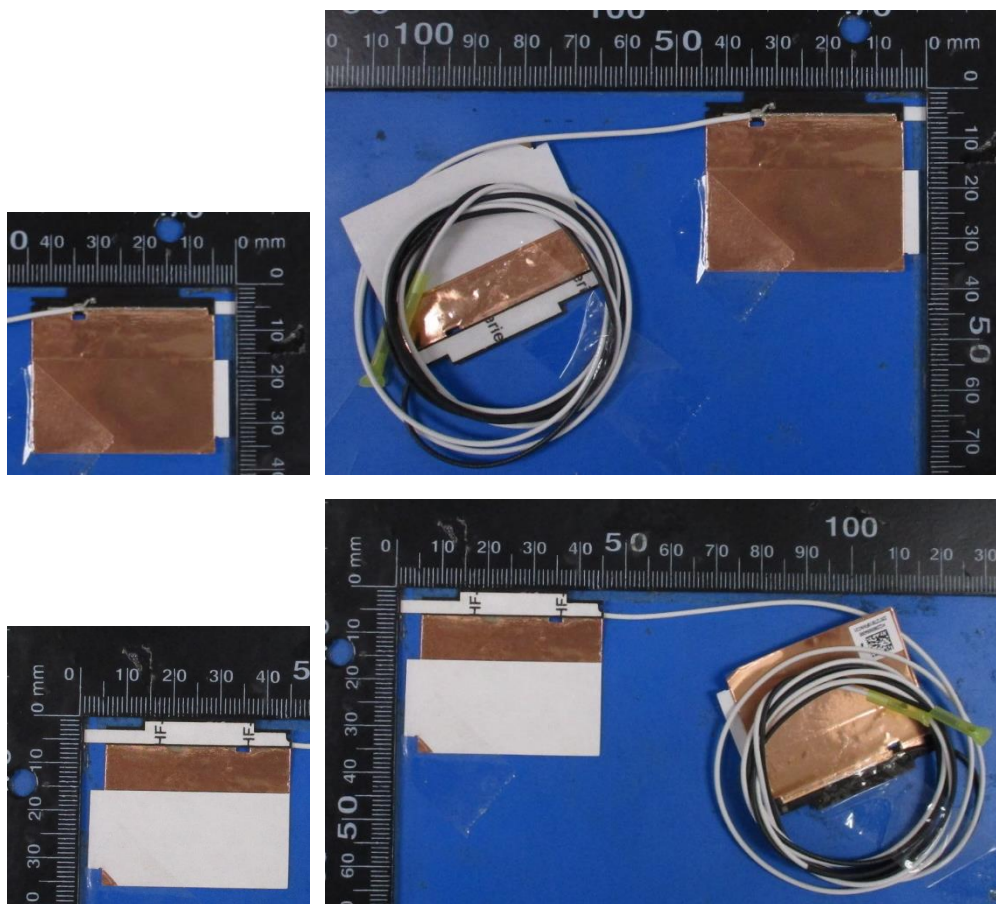

Note: antenna photo should include L type ruler